INPUT CLUTCH ASSEMBLY (Continued)

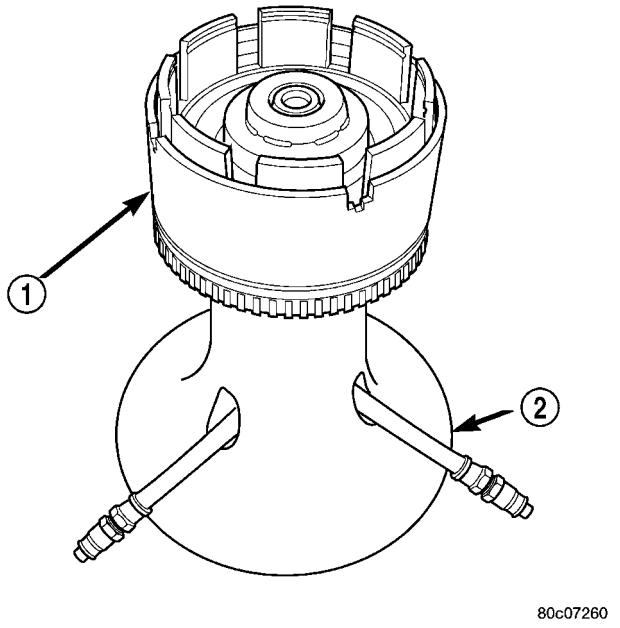

Fig. 202 Input Clutch Assembly on Pressure Fixture Tool - 8391

1 - INPUT CLUTCH ASSEMBLY
2 - INPUT CLUTCH PRESSURE FIXTURE - 8391

(18) Install input clutch assembly (1) to the Input Clutch Pressure Fixture 8391 (2) (Fig. 202).

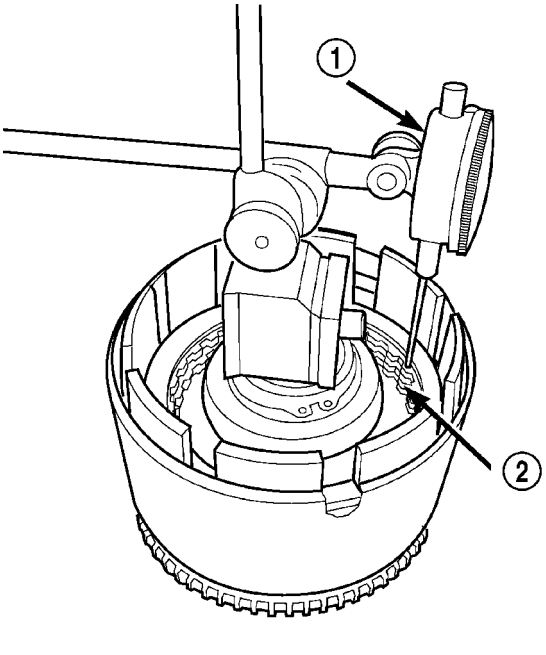

Fig. 203 Set Up Dial Indicator to Measure UD Clutch Clearance

1 - DIAL INDICATOR
2 - UNDERDRIVE CLUTCH

(19) Set up dial indicator (1) on the UD clutch pack (2) (Fig. 203).

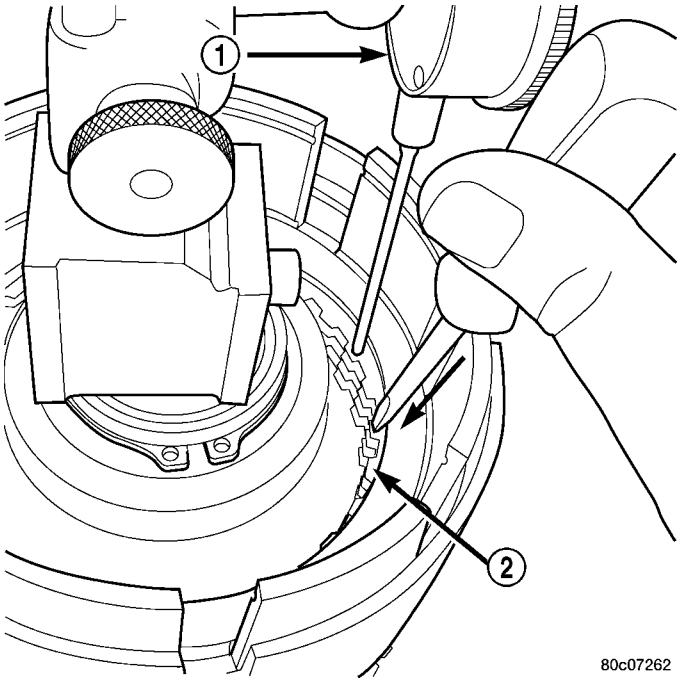

Fig. 204 Press Down on UD Clutch Pack and Zero Dial Indicator

1 - DIAL INDICATOR
2 - UNDERDRIVE CLUTCH

(20) Using moderate pressure, press down and hold (near indicator) the UD clutch pack (2) with screwdriver or suitable tool and zero dial indicator (1) (Fig. 204). When releasing pressure on clutch pack, indicator reading should advance 0.005-0.010 inches.

CAUTION: Do not apply more than 30 psi (206 kPa) to the underdrive clutch pack.

(21) Apply 30 psi (206 kPa) to the underdrive hose on Tool 8391 and measure UD clutch clearance. Measure and record UD clutch pack measurement in four (4) places, 90° apart.

(22) Take average of four measurements and compare with UD clutch pack clearance specification. **Underdrive clutch pack clearance must be 0.94-1.50 mm (0.037-0.059 in.).**

(23) If necessary, select the proper reaction plate to achieve specifications.

(24) Install the OD clutch pack (four fibers/three steels) (1) (Fig. 205).

(25) Install OD reaction plate waved snap ring (1) (Fig. 206).

(26) Install the OD/Reverse reaction plate (1) with large step down (towards OD clutch pack) (Fig. 207).

(27) Install OD reaction plate flat snap ring (3) (Fig. 208).