VALVE BODY (Continued)

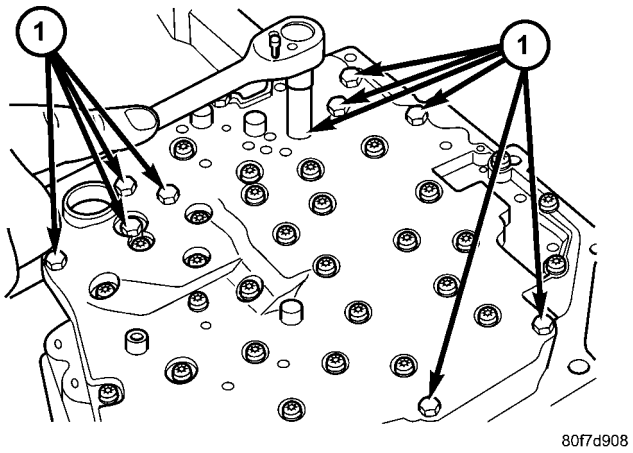


Fig. 269 Remove Valve Body Bolts

1 - BOLTS

(7) Remove valve body bolts-to-case (1) (Fig. 269).

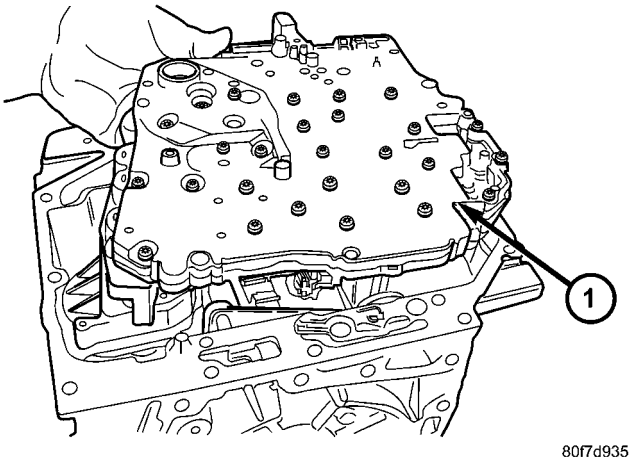


Fig. 270 Remove Valve Body From Transmission

1 - VALVE BODY

CAUTION: The overdrive and underdrive accumulators and springs may fall out when removing the valve body.

(8) Carefully remove valve body assembly (1) from the transmission (Fig. 270).

DISASSEMBLY

NOTE: If the valve body is being reconditioned or replaced, it is necessary to perform the Quick Learn Procedure using the DRBIII® Scan Tool (Refer to 8 - ELECTRICAL/ELECTRONIC CONTROL MODULES/ TRANSMISSION CONTROL MODULE - STANDARD PROCEDURE)

(1) Remove manual shaft seal.

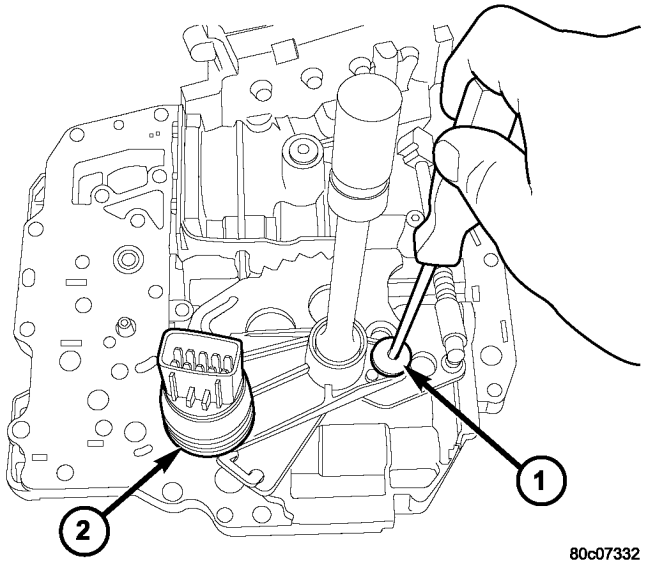


Fig. 271 Manual Shaft Retaining Screw

1 - SCREW
2 - TRS

(2) Remove manual shaft screw (1) (Fig. 271).

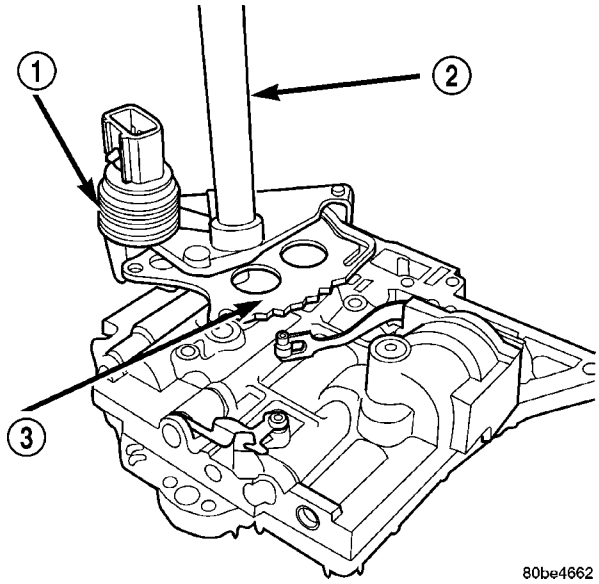


Fig. 272 Manual Shaft/Rooster Comb and Transmission Range Sensor

1 - TRANSMISSION RANGE SENSOR
2 - MANUAL SHAFT
3 - ROOSTER COMB

(3) Remove Transmission Range Sensor (TRS) (1) and manual shaft (2) (Fig. 272).