VALVE BODY (Continued)

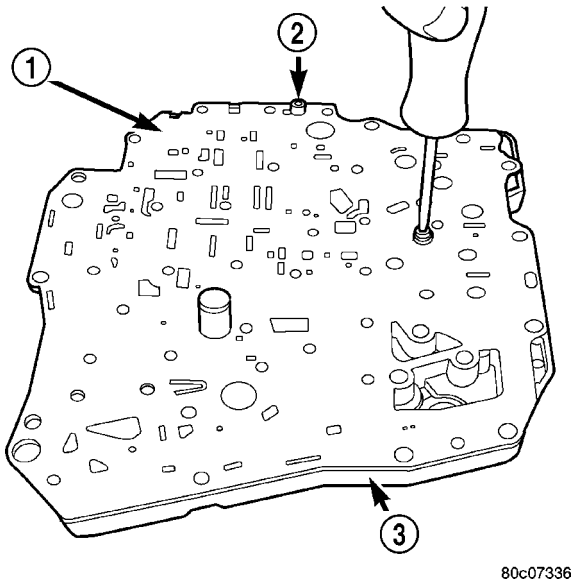


Fig. 277 Remove Separator Plate-to-Transfer Plate Screws

1 - SEPARATOR PLATE
2 - SCREW (2)
3 - TRANSFER PLATE

(8) Remove separator plate-to-transfer plate screws (2) (Fig. 277).

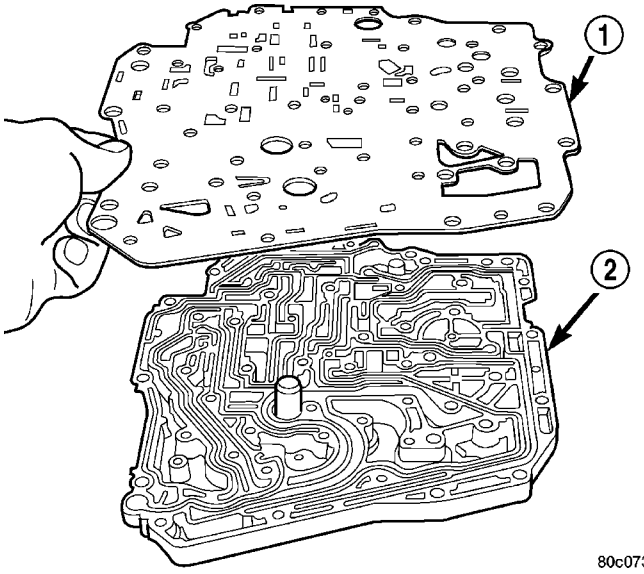


Fig. 278 Remove Separator Plate to Transfer Plate

1 - SEPARATOR PLATE
2 - TRANSFER PLATE

(9) Remove separator plate (1) from transfer plate (2) (Fig. 278).

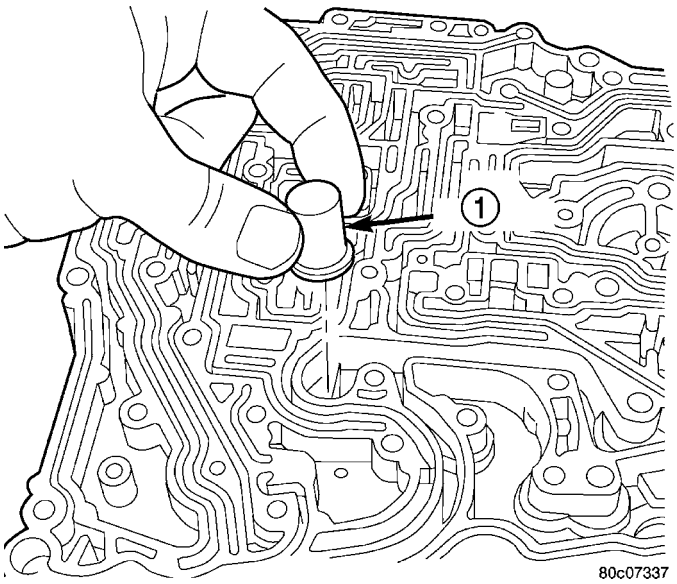


Fig. 279 Remove Oil Screen to Transfer Plate

1 - OIL SCREEN

(10) Remove the oil screen (1) from the transfer plate (Fig. 279).

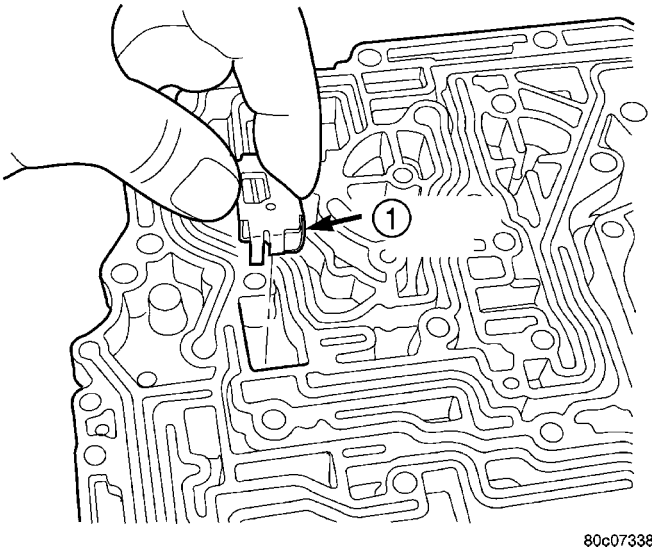


Fig. 280 Remove Thermal Valve to Transfer Plate

1 - THERMAL VALVE

(11) Remove thermal valve (1) (Fig. 280) from transfer plate.