VALVE BODY (Continued)

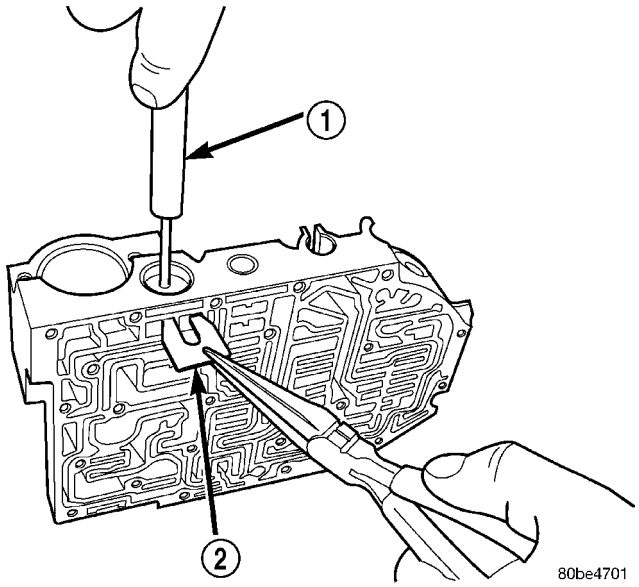

Fig. 284 Remove Regulator Valve Spring Retainer using Tool 6302

1 - TOOL 6302
2 - RETAINER

(15) Remove regulator valve spring retainer (2) (Fig. 284).

(16) Remove remaining retainers (1, 2) (Fig. 285).

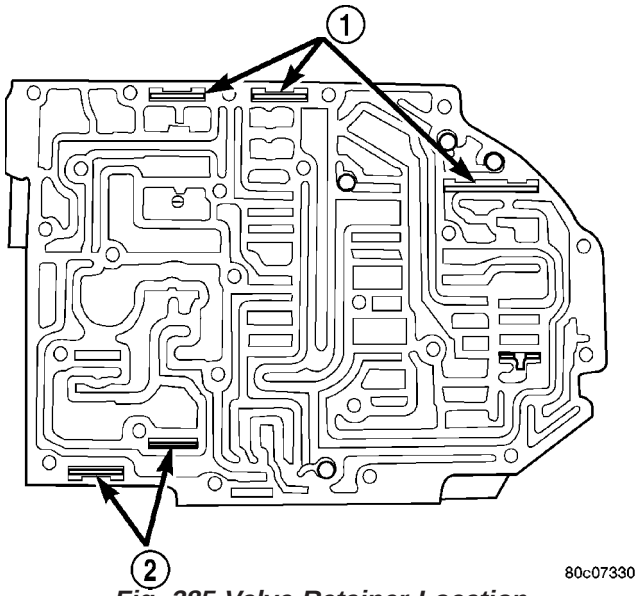

Fig. 285 Valve Retainer Location

1 - RETAINER
2 - RETAINER

(17) Remove all valves and springs (Fig. 286).

(18) Cleanliness through entire disassembly and assembly of the valve body cannot be overemphasized. When disassembling, each part should be washed in a suitable solvent, then dried by com-

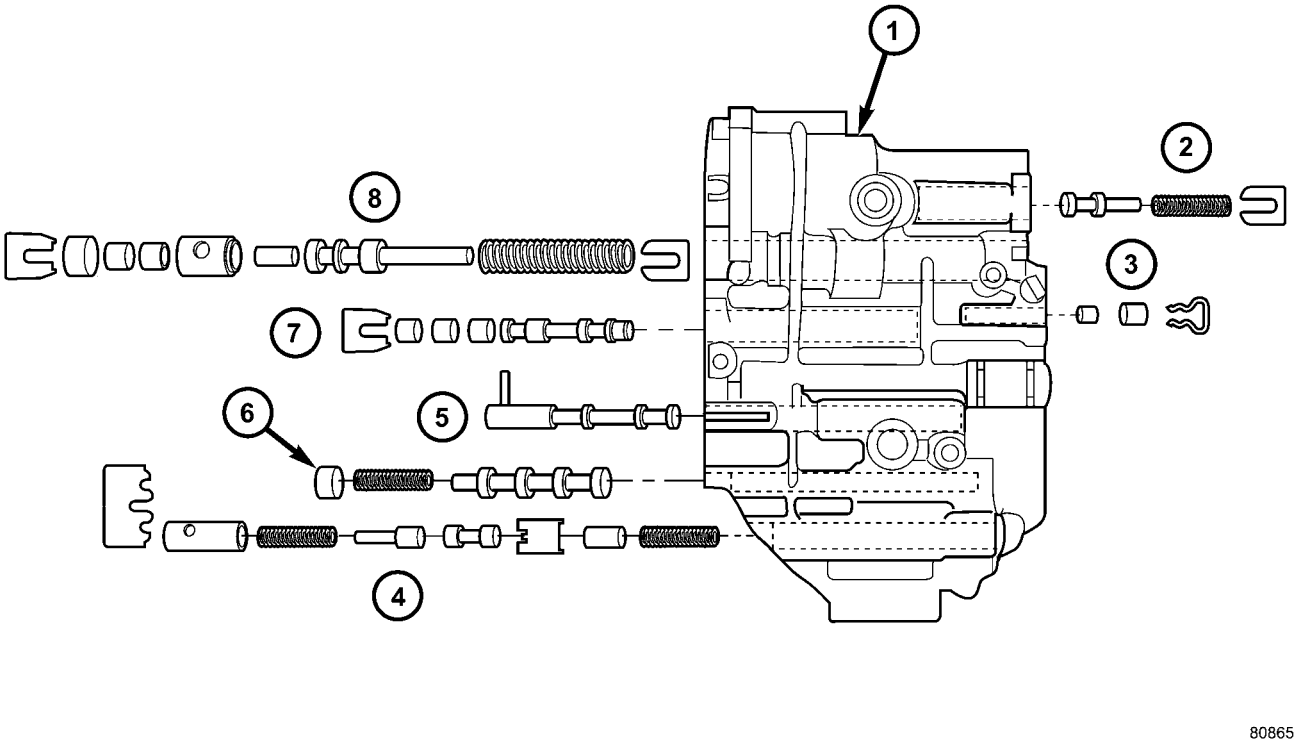

Fig. 286 Valve Body Assembly

1 - VALVE BODY
2 - T/C REGULATOR VALVE
3 - L/R SWITCH VALVE
4 - CONVERTER CLUTCH CONTROL VALVE
5 - MANUAL VALVE
6 - CONVERTER CLUTCH SWITCH VALVE
7 - SOLENOID SWITCH VALVE
8 - REGULATOR VALVE