SYSTEM DIAGRAM

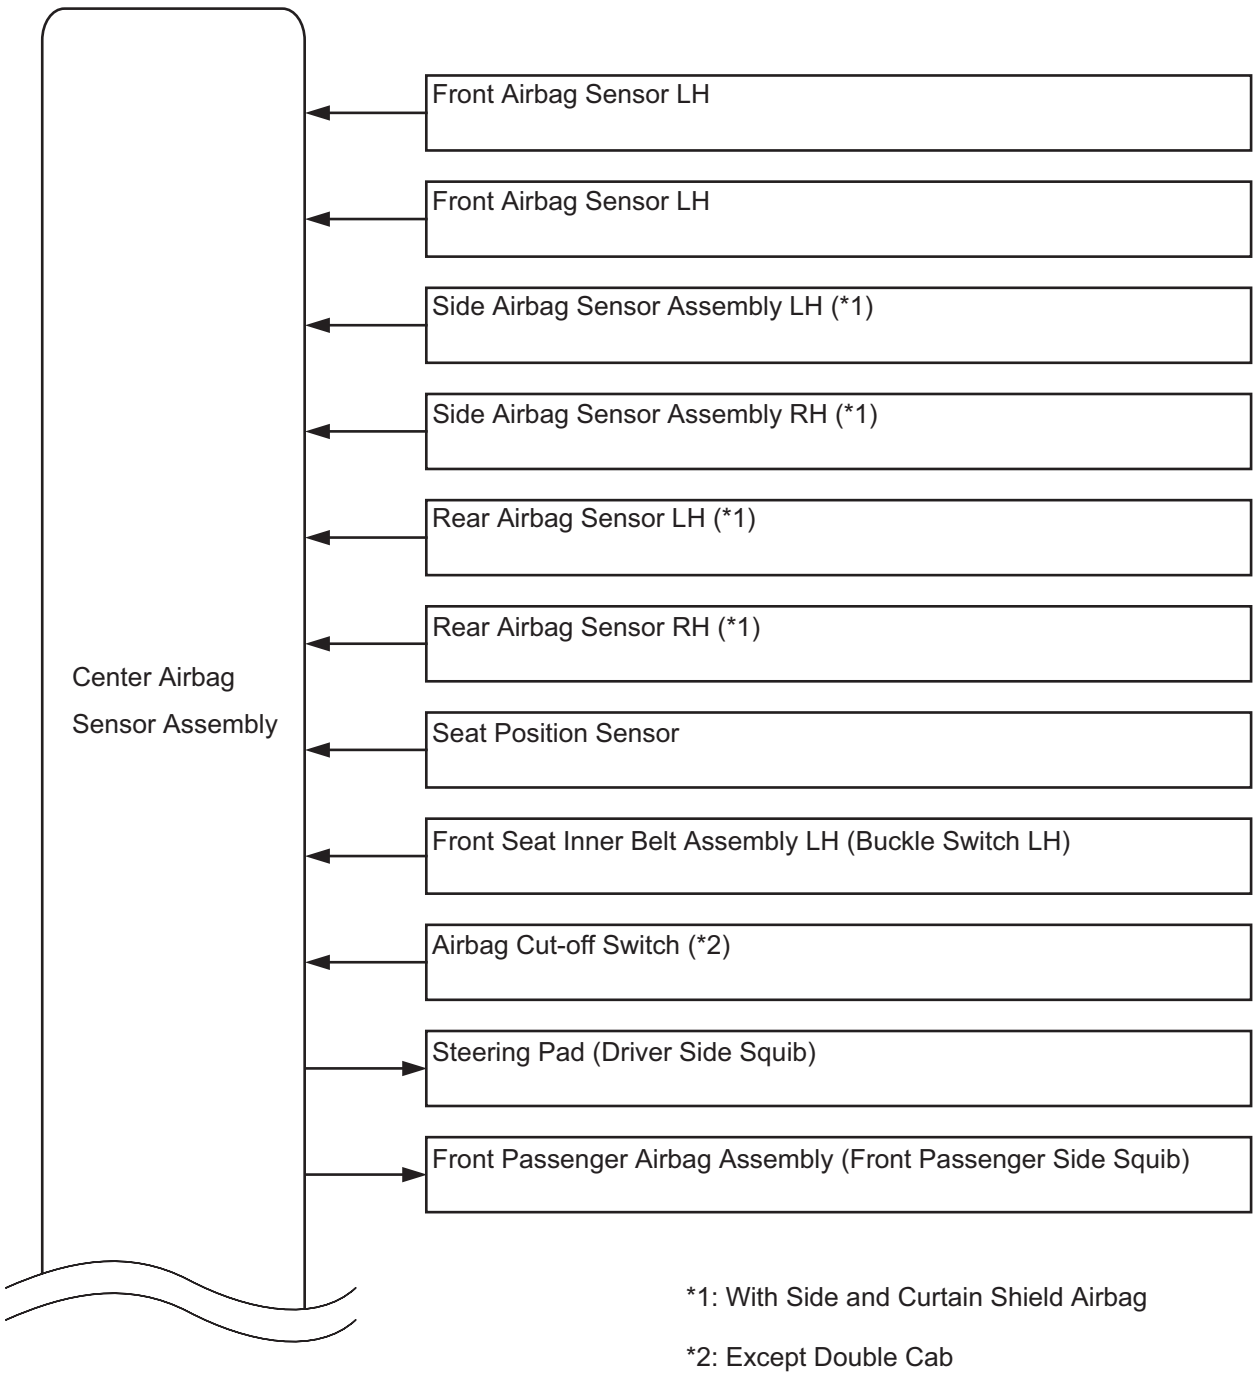

RS

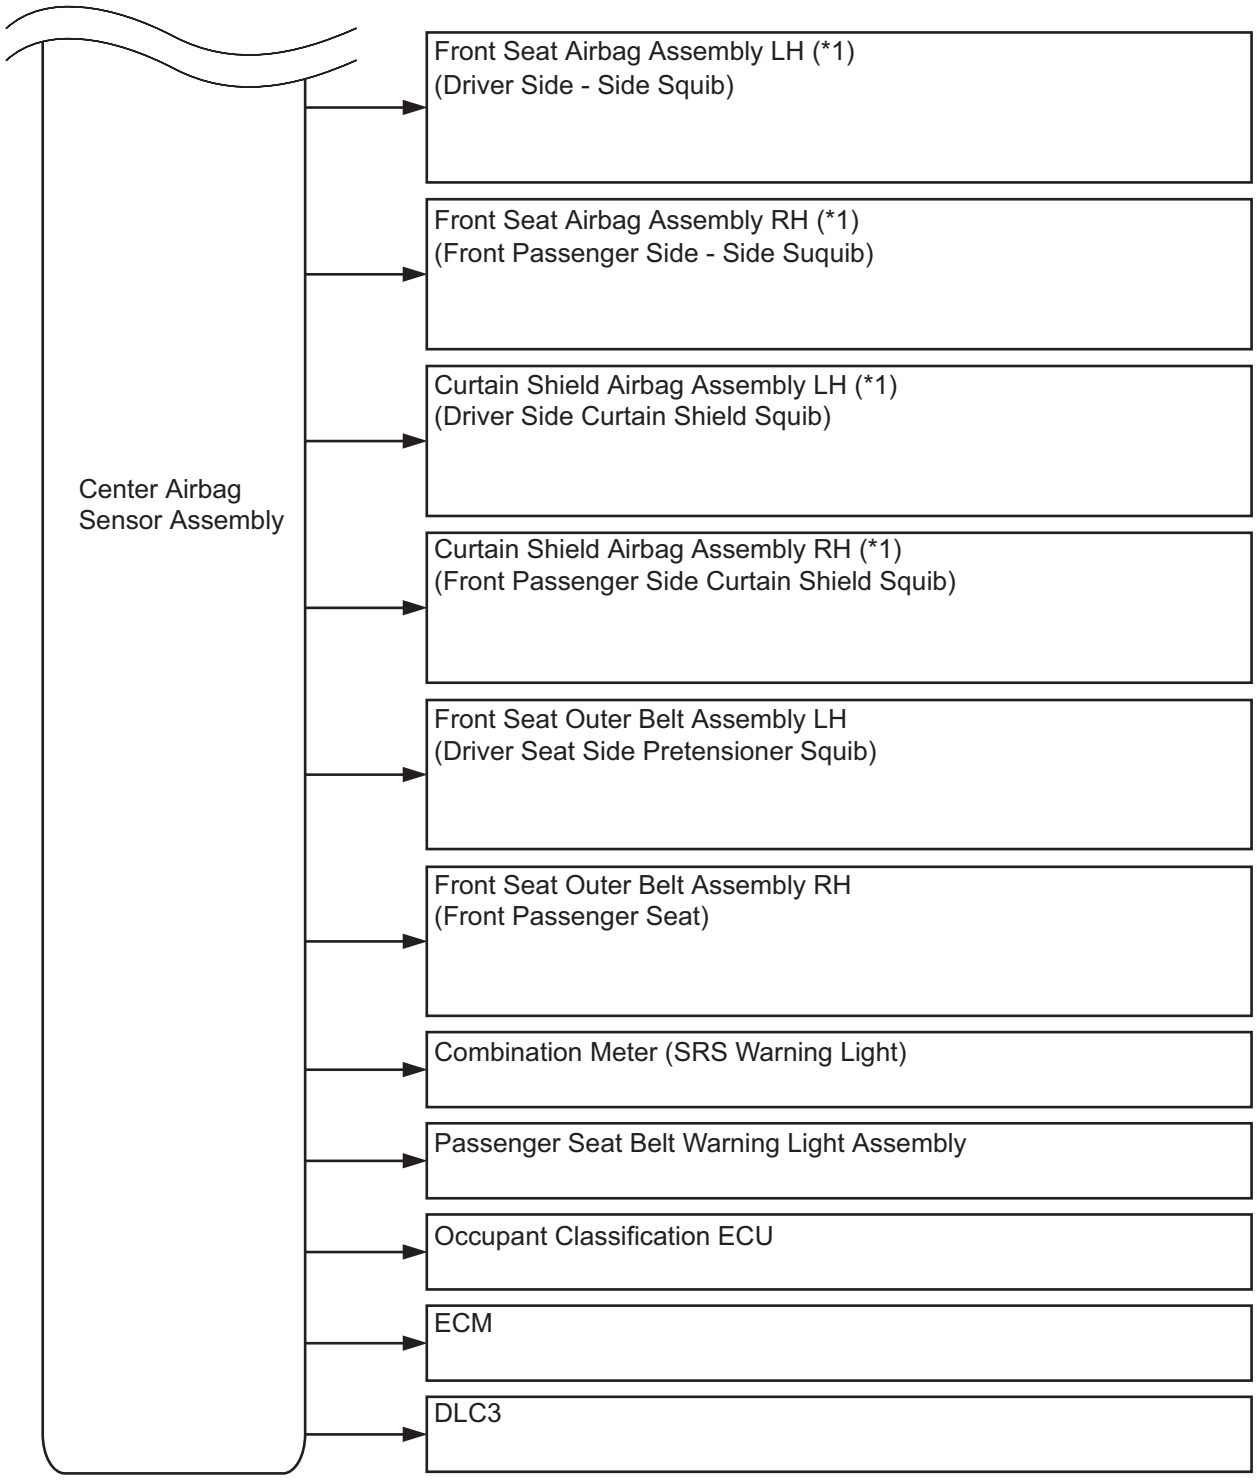
Center Airbag Sensor Assembly
Front Seat Airbag Assembly LH (*1)
(Driver Side - Side Squib)
Front Seat Airbag Assembly RH (*1)
(Front Passenger Side - Side Suquib)
Curtain Shield Airbag Assembly LH (*1)
(Driver Side Curtain Shield Squib)
Curtain Shield Airbag Assembly RH (*1)
(Front Passenger Side Curtain Shield Squib)
Front Seat Outer Belt Assembly LH
(Driver Seat Side Pretensioner Squib)
Front Seat Outer Belt Assembly RH
(Front Passenger Seat)
Combination Meter (SRS Warning Light)
Passenger Seat Belt Warning Light Assembly
Occupant Classification ECU
ECM
DLC3
*1: With Side and Curtain Shield Airbag
H101931E01

RS