

Yamato

取扱い説明書
INSTRUCTIONS


&

ILLUSTRATED SPARE PARTS LIST

“BF4” DEVICE

FOR

VCU2700, 2730 & VC2611, 2711

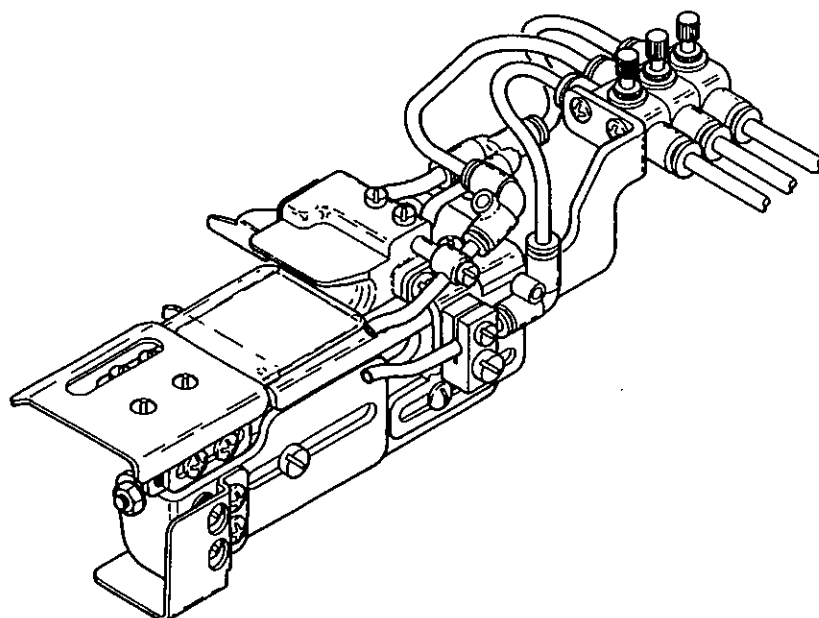

目 次

	ページ
1. 仕様	1
2. 取付け方法	1
3. エア配管図	3
4. モータコントロールボックスのプログラム	4
5. 縫製の手順("BF"装置作動確認)	6
6. 調整	6
6-1 定規(左)の位置の調節	6
6-2 ヘム幅の調節	7
6-3 定規の調節	8
6-4 定規(右)の調節	9
6-5 ノズルの調節	9
6-6 カール防止エアノズルの調節	9
6-7 エア量の調節	9

CONTENTS

	Page
1. Specifications	10
2. Installation	10
3. Air piping diagram	12
4. Programs of Control Box for Motor	13
4-1 For using the Mitsubishi Motor B36K	13
4-2 For using the Mitsubishi Motor EY100	14
5. Sewing procedure (Confirmation of "BF" Device operations)	15
6. Adjustment	15
6-1 Adjusting position of Edge Guide(Left)	15
6-2 Adjusting hemming width	16
6-3 Adjusting Folder	17
6-4 Adjusting Edge Guide(Right)	18
6-5 Adjusting Air Nozzle	18
6-6 Adjusting Uncurler Air Nozzle	18
6-7 Adjusting air flow	18


***** ILLUSTRATED SPARE PARTS LIST *****

1. 仕様


型 式	B F 4 (VC2611, VCU2700クラスのUT-A装置と併用)
名 称	エア式へムフォルダ
へ ム 幅	“BF4”装置・・・15～40mm
制 御 方 式	三菱ミシンモータのコントロールボックス使用 B36K又はEY100

2. 取付け方法


- (1) ミシンモータの電源を「OFF」にして下さい。

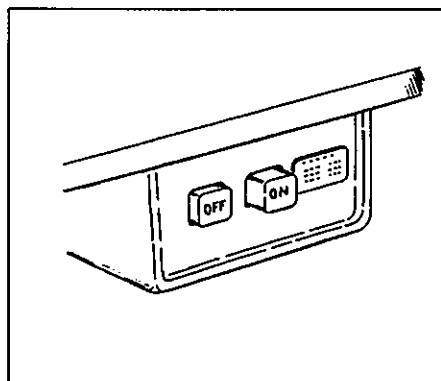


- (2) エアの圧力を「0」にして下さい。

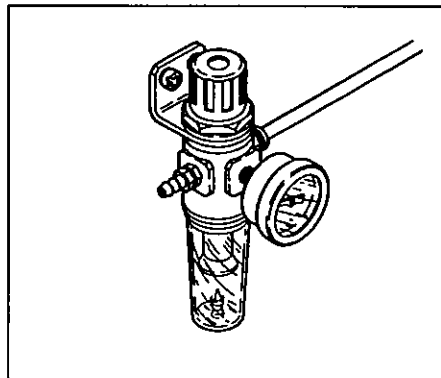


- (3) 図を参考にして、膝スイッチ、電磁弁、エアオペレートバルブをミシンテーブルの下側に取付けて下さい。(図は標準の位置です。)

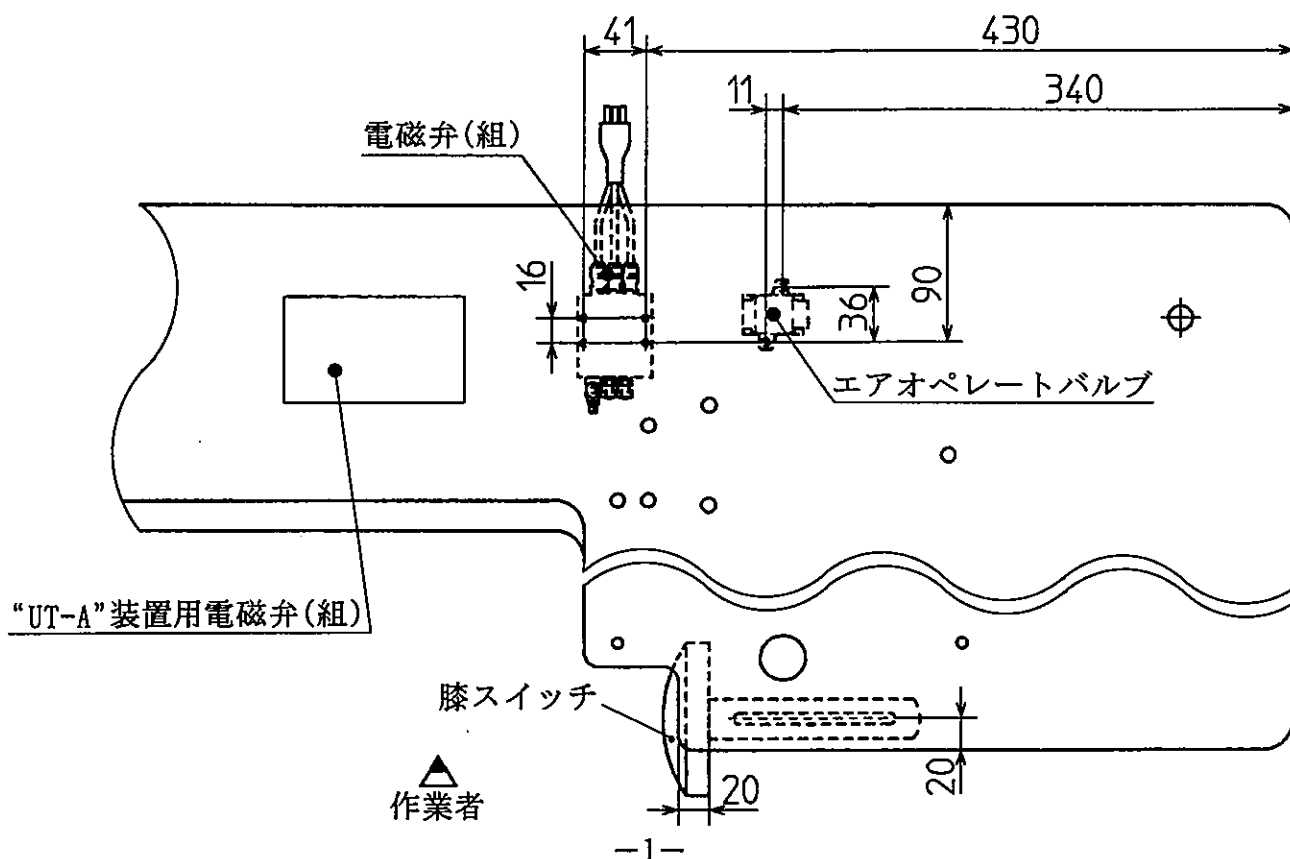

- (4) 止ネジ①とワッシャ②を前開キカバー③に取付けて下さい。
- (5) ヘムフォルダ(組)を前開キカバー③に止ネジ④で取付けて下さい。
- (6) 止ネジ①を締付けて下さい。

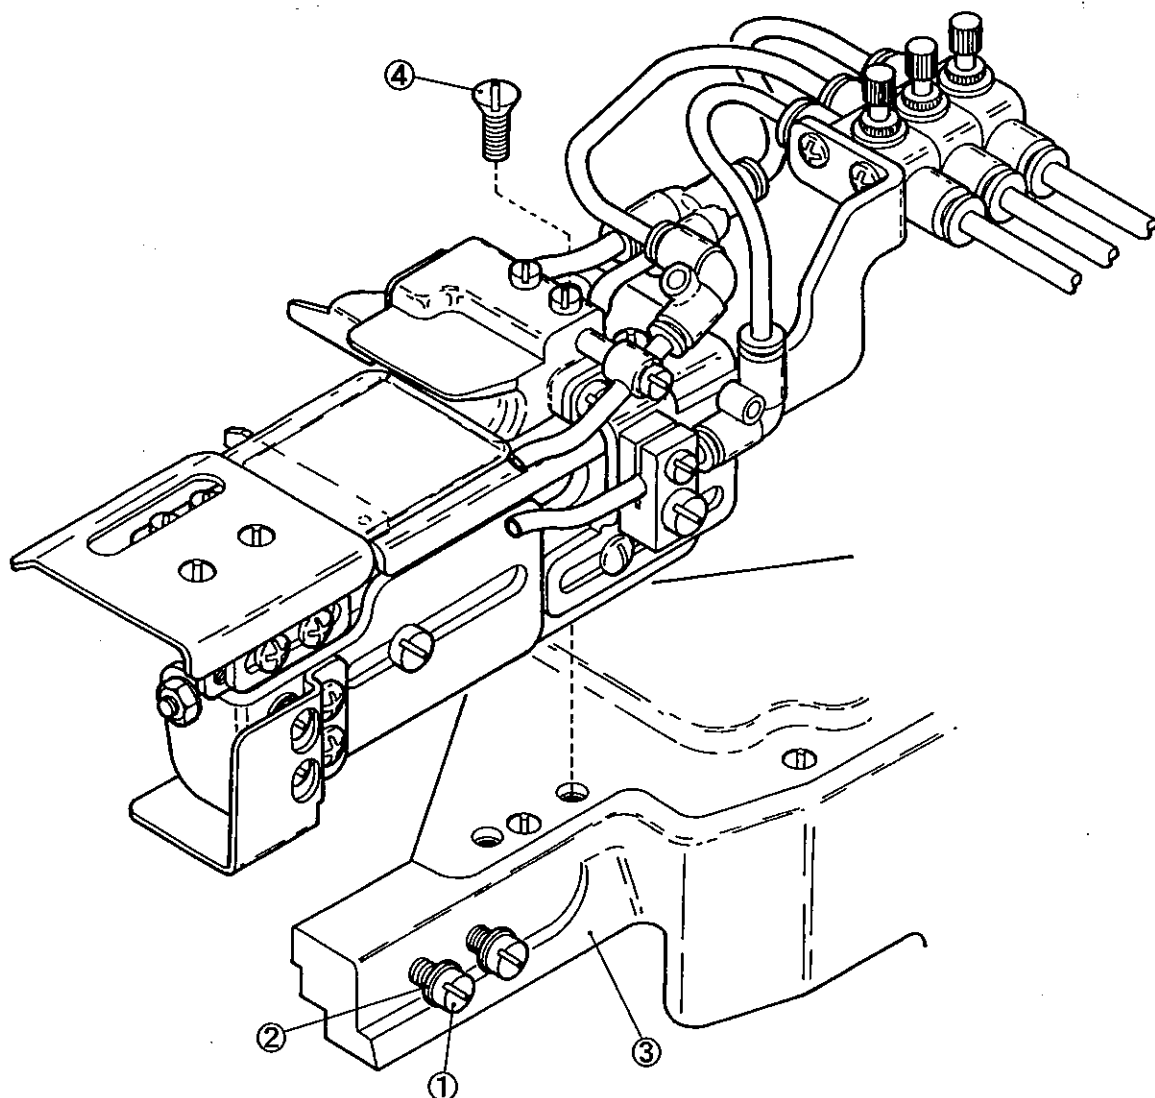


- (7) ビニールパイプを接続して下さい。(3. エア配管図参照)
- (8) 電磁弁、膝スイッチのコネクタをモータコントロールボックスのコネクタに合わせ、接続して下さい。
- (9) 電源を「ON」にし、モータコントロールボックスのプログラムを変更して下さい。
(4. モータコントロールボックスのプログラム参照)
- (10) エアの圧力を0.45~0.5MPa(4.5~5.0kgf/cm²)にして下さい。

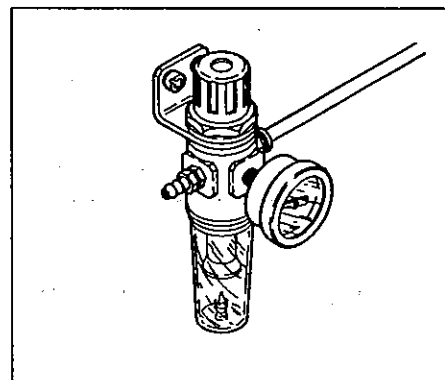


3. エア配管図

図を参考にして正しく接続して下さい。

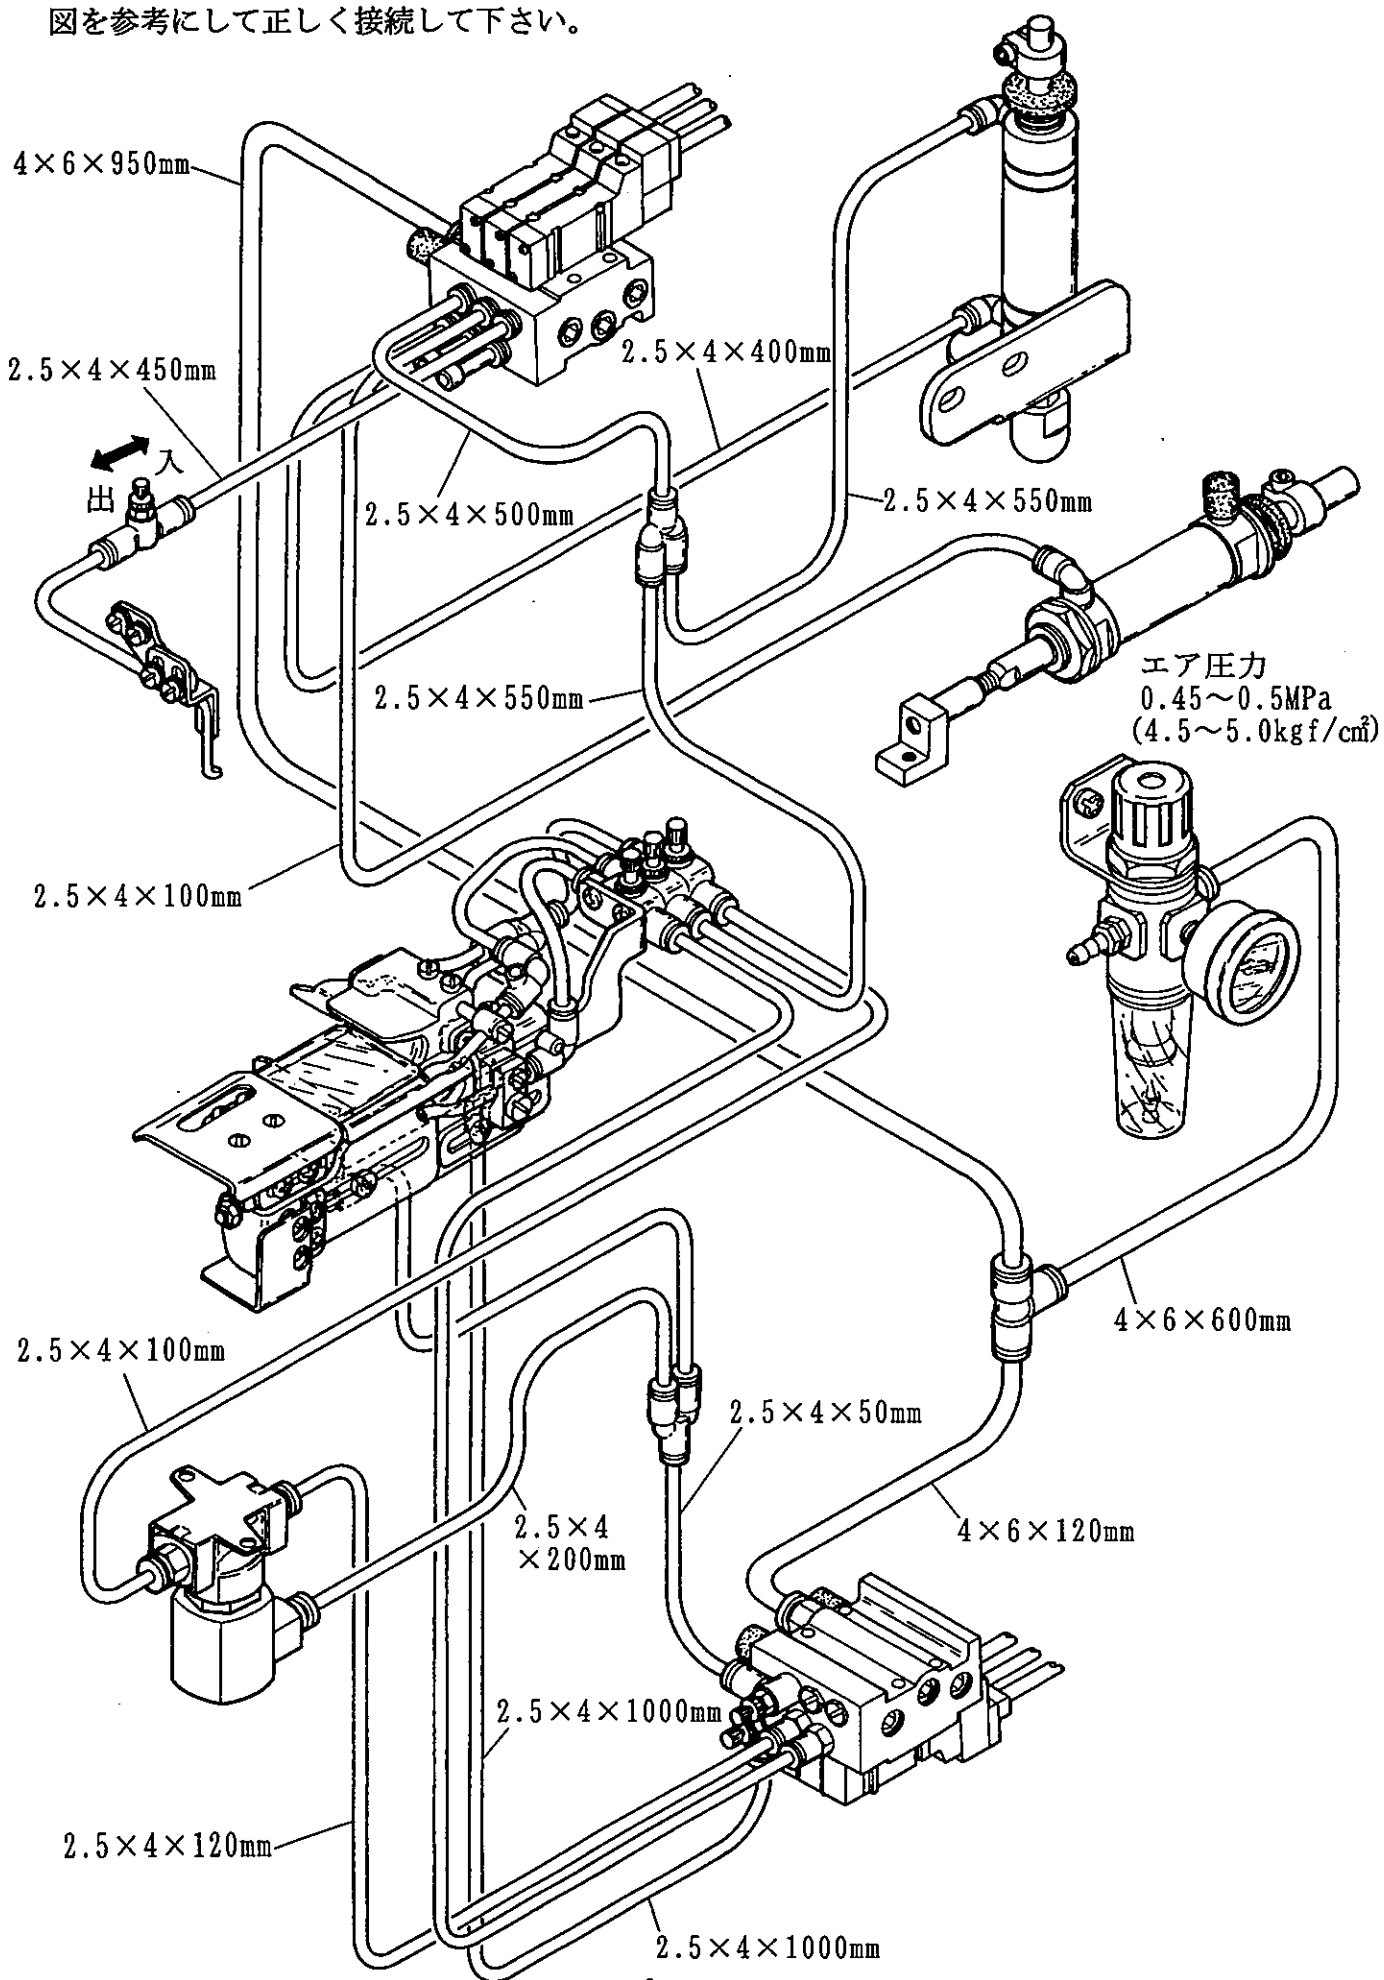

4. モータコントロールボックスのプログラム

4-1 三菱モータB36Kの場合

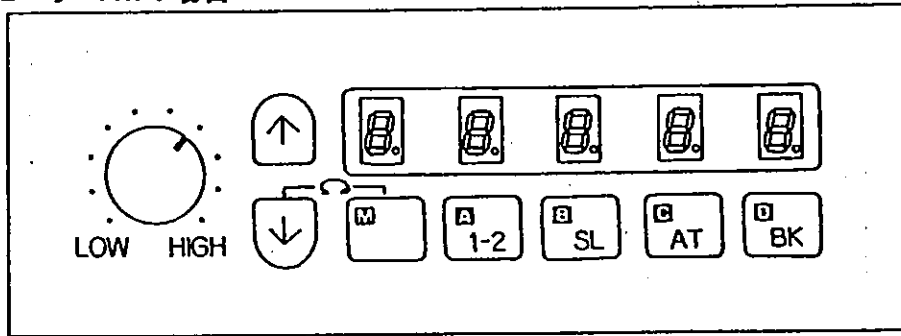

プログラムモードを“BF”装置用に設定して下さい。
下記の手順で行います。

☆ プログラムモードCに変える。




↓ を押しながら C_{AT} を同時に2秒以上押す。

☆ 機能をI Cにする。



↓ か ↑ を押して左2桁をI Cにする。

☆ 設定値をI 0 1にする。



D_{BK} を押して右3桁をI 0 1にする。

☆ 機能をI C Aにする。



↓ か ↑ を押して左3桁をI C Aにする。

☆ 設定値をONにする。



D_{BK} を押して右2桁をonにする。

☆ 機能をO Cにする。



↓ か ↑ を押して左2桁をo Cにする。

☆ 設定値をO T 1にする。



D_{BK} を押して右3桁をo T 1にする。


☆ 通常モードにする。



↓ と ↑ を同時に押して通常モードにする。

(注) プログラムモードを“BF”装置用に設定した後で簡易設定をすると、“BF”装置用の設定が無効になります。

4-2 三菱モータEY100の場合

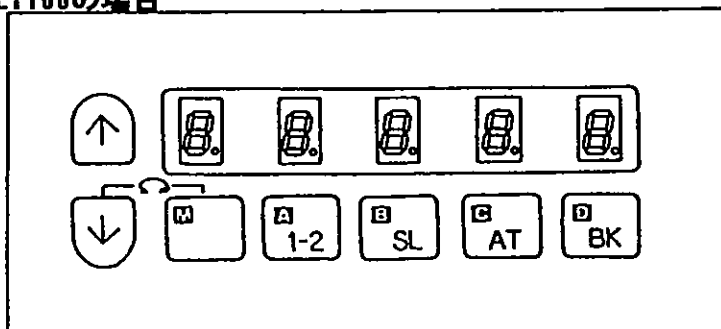

プログラムモードを“BF”装置用に設定して下さい。
下記の手順で行います。

☆ プログラムモードCに変える。




↓ を押しながら $\begin{matrix} C \\ A \\ T \end{matrix}$ を同時に2秒以上押す。

☆ 機能をICにする。



↓ か ↑ を押して左2桁をICにする。

☆ 設定値をI01にする。



$\begin{matrix} D \\ B \\ K \end{matrix}$ を押して右3桁をI01にする。

☆ 機能をICAにする。



↓ か ↑ を押して左3桁をICAにする。

☆ 設定値をONにする。



$\begin{matrix} D \\ B \\ K \end{matrix}$ を押して右2桁をonにする。

☆ 機能をOCにする。




↓ か ↑ を押して左2桁をoCにする。

☆ 設定値をOT1にする。



$\begin{matrix} D \\ B \\ K \end{matrix}$ を押して右3桁をoT1にする。

☆ 通常モードにする。



↓ と ↑ を同時に押して通常モードにする。


(注) プログラムモードを“BF”装置用に設定した後で簡易設定をすると、“BF”装置用の設定が無効になります。

5. 縫製の手順(BF装置作動確認)

丸物を縫製する場合


- (1) モータのスイッチを「ON」にする。
- (2) エア圧力を0.45～0.5MPa(4.5～5.0kgf/cm²)にする。
- (3) ミシンペダルを踏み返して押エを上げる。
- (4) 定規(右)、ノズル及びカール防止エアノズルからエアが吹き出す。
- (5) 生地端を定規の上を滑らせ、生地端が定規(左)に沿うまで生地を前後に動かし、生地をセットする。
(ヘム幅の調節方法は6-2項参照)
- (6) ペダルをニュートラルにする。
- (7) 押エが降りる。各エアは止まる。
- (8) ミシンペダルを踏み込み、縫製する。
定規(右)とカール防止エアノズルからエアが出る。
- (9) 縫始めが定規の手前にきたとき、膝スイッチを押す。
エアシリンダが働いて、定規が左へスライドする。
- (10) そのまま縫終わりまで縫製する。
- (11) ペダルを踏み返す。
糸切りが動き、押エが上がる。
- (12) 生地を取外す。(縫製終了)
- (13) ニュートラルにする。エアが止まる。
- (14) 膝スイッチを押して定規を右へスライドさせる。
- (15) 次の縫製の準備完了。

(注) 開きの裾引きの場合は、上記(9)及び(14)が不要です。

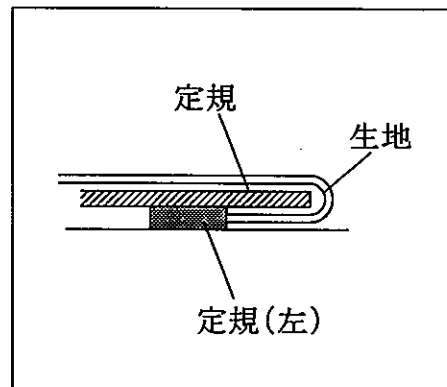


6. 調整

- (注) 出荷時のヘム幅は約30mmになるように、エアシリンダのストッパカラーで調整されています。
エアシリンダのロッドが右へ戻ったとき、図のように27.4mmに調整されています。

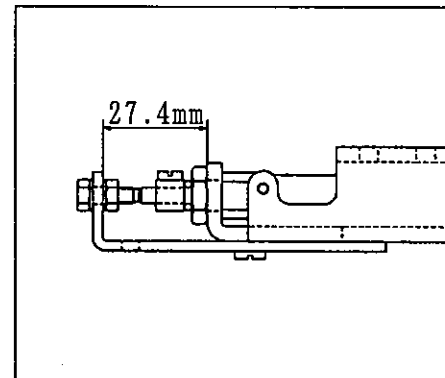

6-1 定規(左)の位置の調節

折り曲げた生地端の縫う位置に合わせ、止ネジ①を緩めて定規(左)②の位置を決めて下さい。

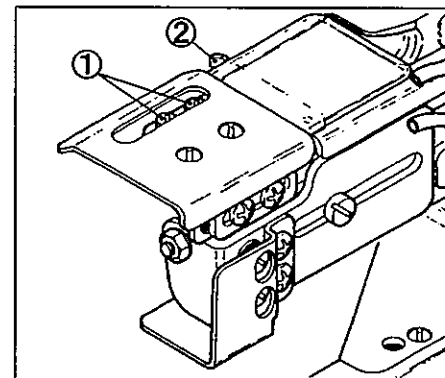


6-2 ヘム幅の調節

☆ ヘム幅を40mmにする場合


調節は下記の順序で行って下さい。

(1) 止ネジ③を緩め、定規(右)④を右へ10mm移動させる。

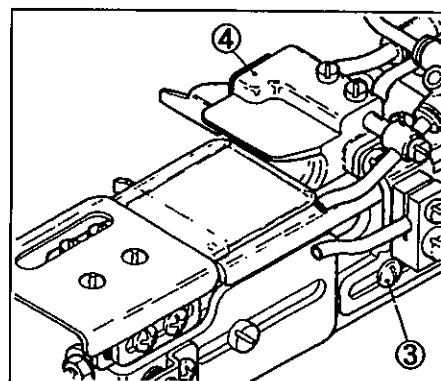


(2) 止ネジ⑤を緩め、エアシリンダのロッドが右へ戻ったとき、図のように17.4mmにする。

(3) 止ネジ⑤を締付ける。

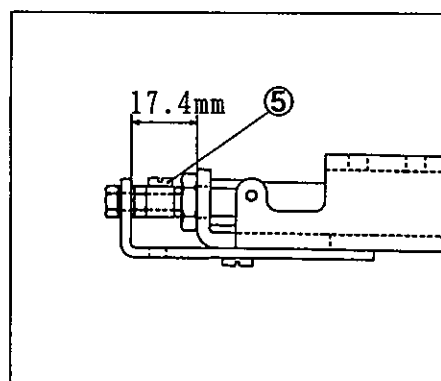


(4) ヘム幅がスムーズにできるように、定規⑥と定規(右)④とのすき間を調節する。

(5) 止ネジ③を締付ける。

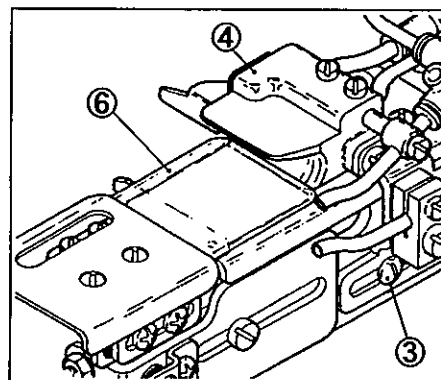


☆ ヘム幅を20mmにする場合

- (1) 止ネジ⑤を緩め、エアシリンダのロッドが右へ戻ったとき、図のように37.4mmにする。
- (2) 止ネジ⑤を締付ける。

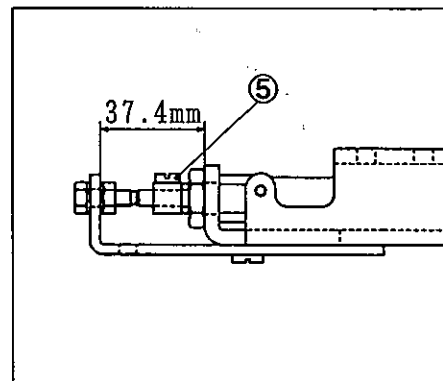


- (3) 止ネジ③を緩める。
- (4) ヘム幅がスムーズにできるように、定規⑥と定規(右)④とのすき間を調節する。
- (5) 止ネジ③を締付ける。

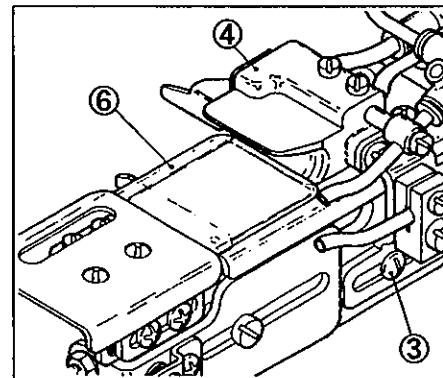

☆ ヘム幅の微調節


ヘム幅の微調節を行う場合は、止ネジ⑦を緩め、定規⑥の位置を調節して下さい。

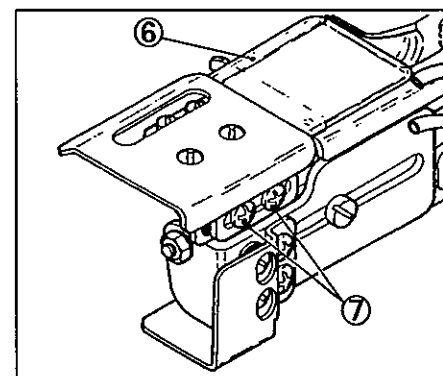

6-3 定規の調節


☆ 左の位置

エアシリンダが作動して、定規⑥が左へスライドしたとき、定規の端が定規(左)②の右端より必ず左側になるようにして下さい。

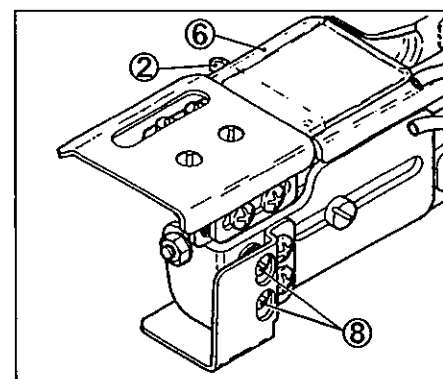


☆ 高さの調節

定規⑥が定規(左)②の上を左右へスムーズにスライドするように、止ネジ⑧を緩めて定規の高さを調節して下さい。

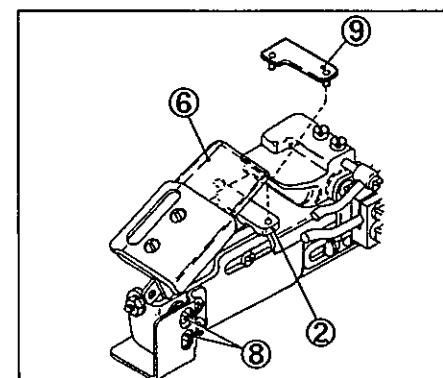


☆ 厚い生地を縫製する場合

- (1) 止ネジ⑧を緩める。
- (2) 1mm又は2mmのスペーサ⑨を定規(左)②の上に乗せる。
- (3) 定規⑥をスペーサ⑨の上面に当て、左右にスムーズにスライドするようにして、止ネジ⑧を締付ける。

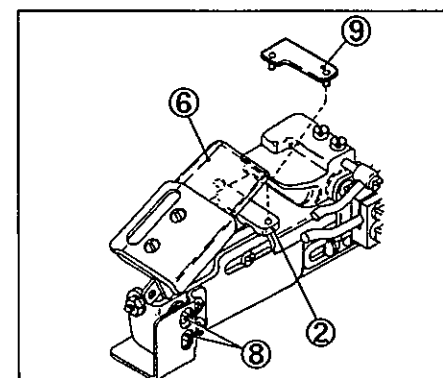


6-4 定規(右)の調節

- (1) 止ネジ③を緩める。
- (2) 生地をセットして、ヘム幅がスムーズにできるように定規⑥と定規(右)④とのすき間を決める。
- (3) 止ネジ③を締付ける。

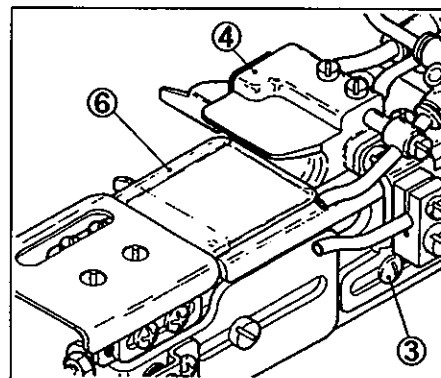


6-5 ノズルの調節

生地をセットしたとき、生地端が折り込まれ、ヘム幅がスムーズにできるように、止ネジ⑩及び⑪を緩め、ノズル⑫の位置を調節して下さい。

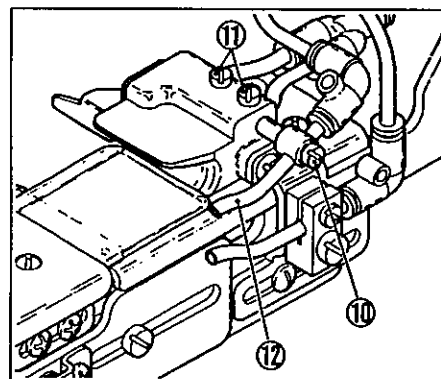


6-6 カール防止エアノズルの調節

生地が外カールするときは、ヘム幅が安定するように止ネジ⑬を緩め、ノズル⑭の位置を調節して下さい。

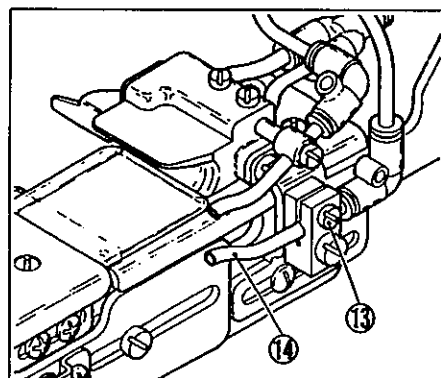

6-7 エア量の調節

エア量は、スピードコントローラ⑮で調節します。ナットを緩め、調節ネジを時計方向に回すとエア量は少なくなり、反時計方向へ回すと多くなります。

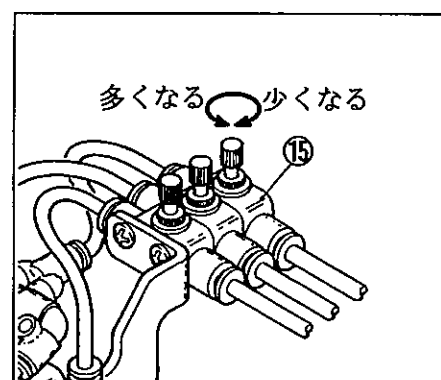


1. Specifications


Model	"BF4" Device (combined with "UT-A" Device for VC2611 and VCU2700 class)
Description	Pneumatic Hemming Folder
Hemming width	"BF4" Device: 15 - 40 mm (shipping time: 30 mm)
Control system	Control Box of the Mitsubishi Motor is used. B36K or EY100

2. Installation


- (1) Turn OFF the Power Supply Switch of Motor.

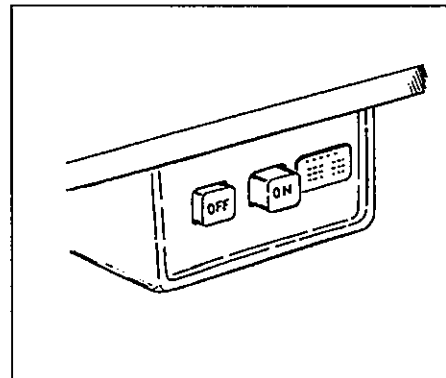


- (2) Set air pressure to '0'.

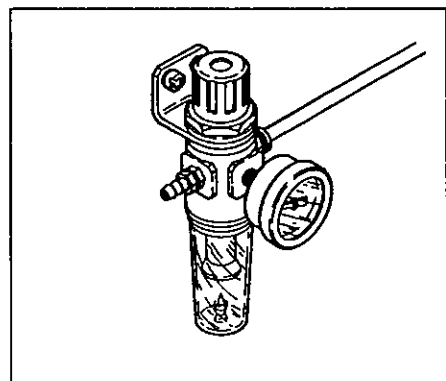


- (3) Refer to the figure and install Knee Switch, Solenoid Valve, and Air Operate Valve under Machine Table. (The figure shows the standard positions.)

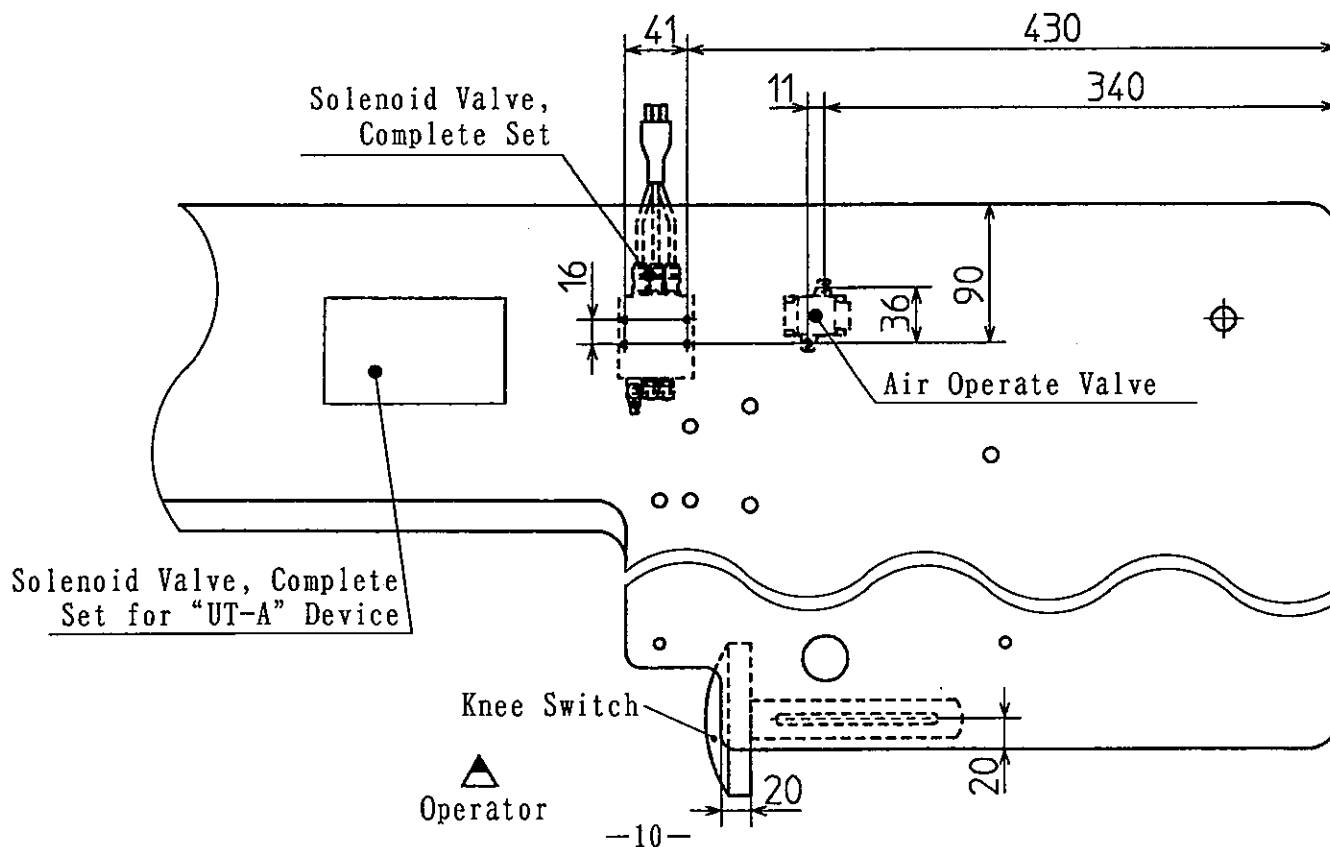

- (4) Fix Screws① and Washers② to Front Cover③ lightly.
- (5) Install Hemming Folder, Complete Set to Front Cover③ with Screws④.
- (6) Tighten Screws① securely.

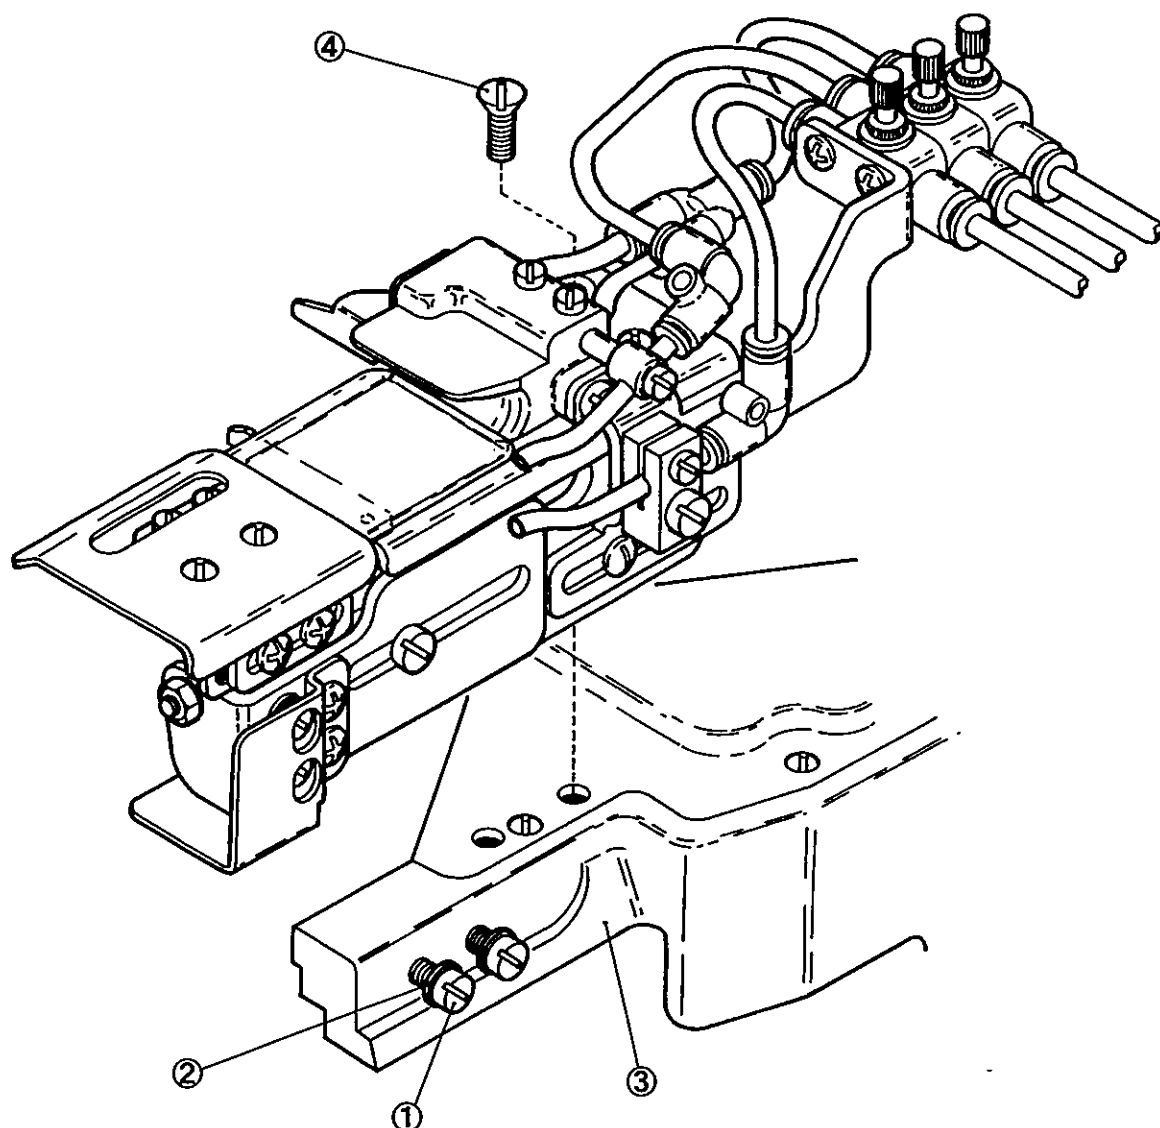


- (7) Connect Vinyl Tubes. (Refer to '3. Air piping diagram'.)
- (8) Connect Plugs for Solenoid Valve and Knee Switch to Connectors which correspond to on Control Box for Motor.
- (9) Turn ON the Power Supply Switch and change the programs of Control Box for Motor. (Refer to '4. Programs of Control Box for Motor'.)
- (10) Set air pressure to 0.45 - 0.5 MPa (4.5 - 5.0 kgf/cm²).

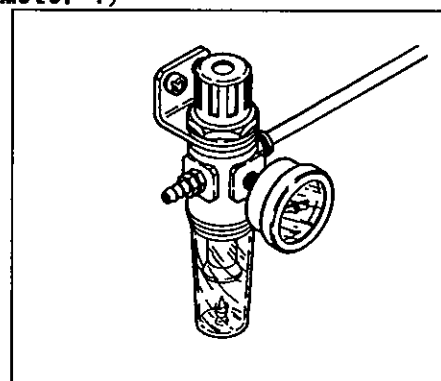


3. Air piping diagram

Refer to the figure and connect properly.

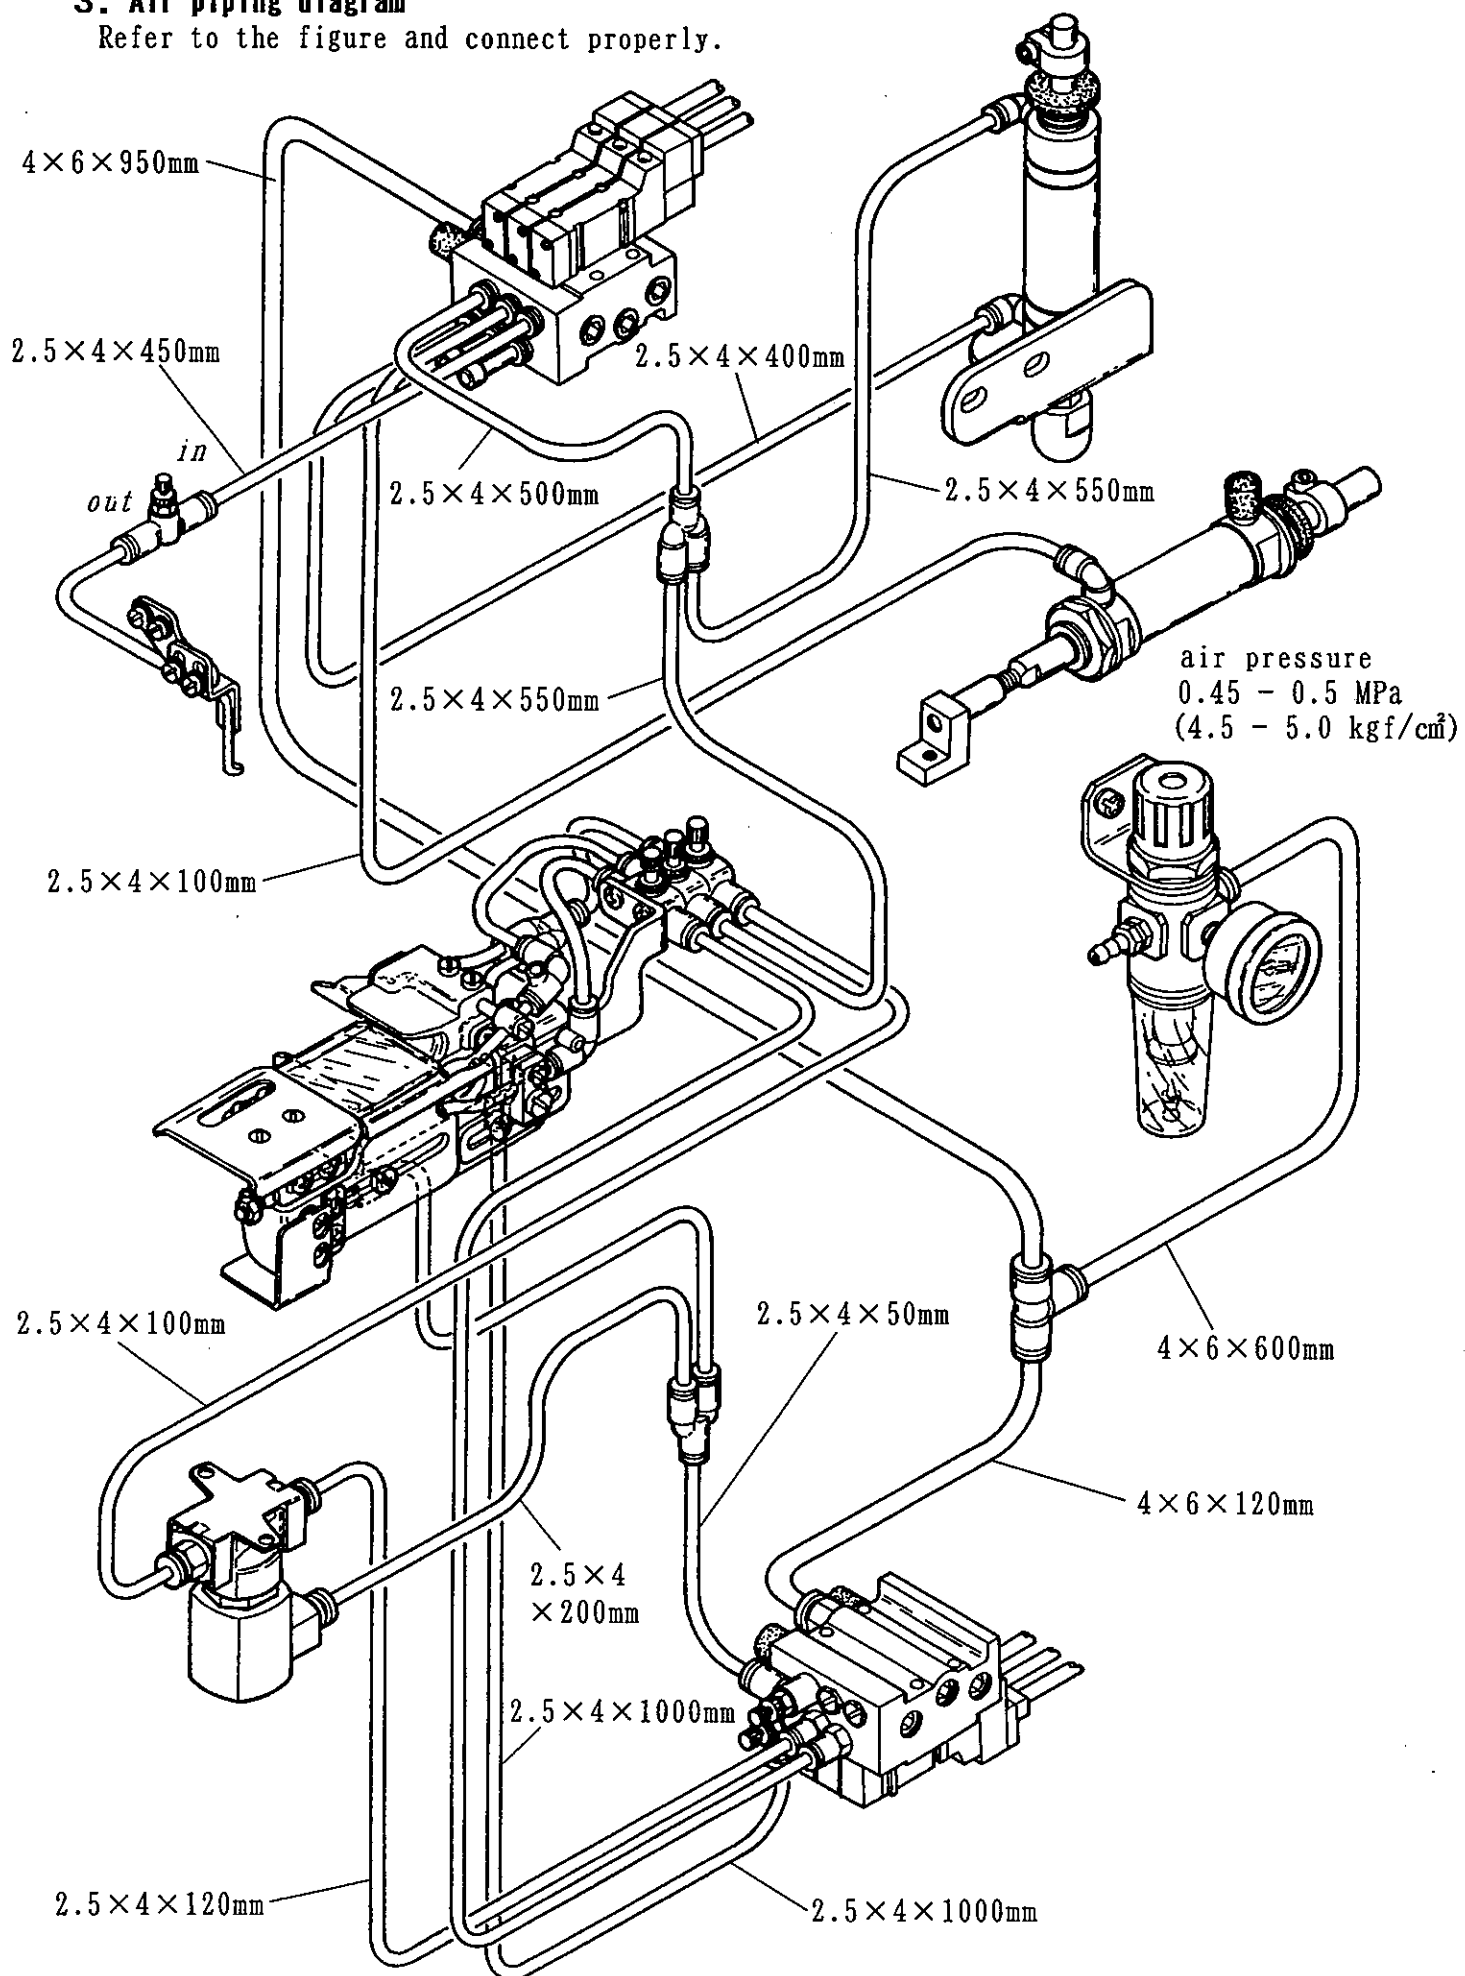

4. Programs of Control Box for Motor

4-1 For using the Mitsubishi Motor B36K

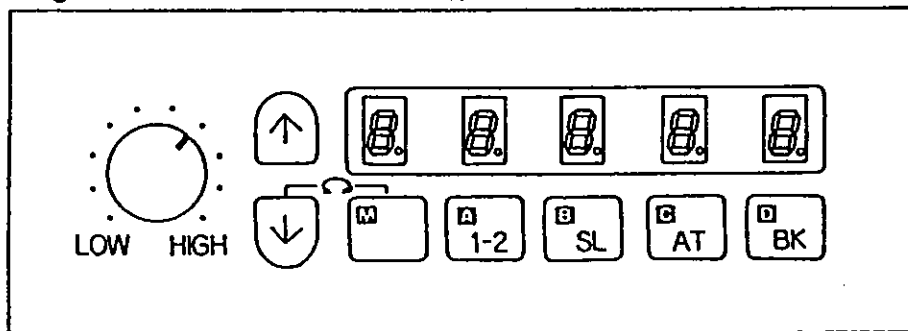

Enter the program mode for "BF" Device.
The procedure is as follows:



- ☆ Change the program mode to 'C'.
While pressing key, press key for 2 seconds or more.



- ☆ Set the function to 'IC'.
Press or key to set 'IC' to two displays on the left side.



- ☆ Set the setting value to 'I01'.
Press key to set 'I01' to three displays on the right side.



- ☆ Set the function to 'ICA'.
Press or key to set 'ICA' to three displays on the left side.




- ☆ Set the setting value to 'ON'.
Press key to set 'on' to two displays on the right side.



- ☆ Set the function to 'OC'.
Press or key to set 'oC' to two displays on the left side.




- ☆ Set the setting value to 'OT1'.
Press key to set 'oT1' to three displays on the right side.



- ☆ Enter the normal mode.
Press key and key at the same time to set the normal mode.

Note: After setting the program mode for "BF" Device, if the Motor is set in simple setting, the settings of the program mode become ineffective.

4-2 For using the Mitsubishi Motor EY100

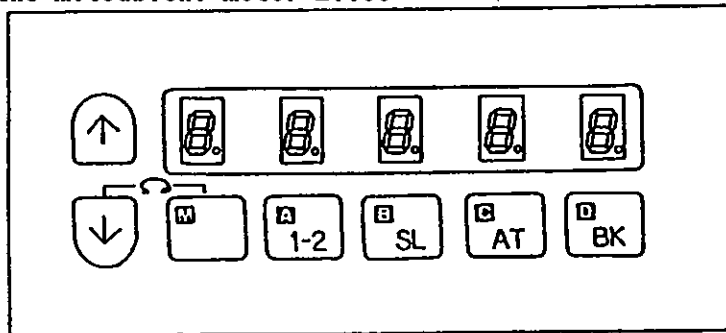


Enter the program mode for "BF" Device.
The procedure is as follows:



- ☆ Change the program mode to 'C'.
While pressing key, press key for 2 seconds or more.



- ☆ Set the function to 'IC'.
Press or key to set 'IC' to two displays on the left side.



- ☆ Set the setting value to 'I01'.
Press key to set 'I01' to three displays on the right side.



- ☆ Set the function to 'ICA'.
Press or key to set 'ICA' to three displays on the left side.




- ☆ Set the setting value to 'ON'.
Press key to set 'on' to two displays on the right side.



- ☆ Set the function to 'OC'.
Press or key to set 'oC' to two displays on the left side.



- ☆ Set the setting value to 'OT1'.
Press key to set 'oT1' to three displays on the right side.



- ☆ Enter the normal mode.
Press key and key at the same time to set the normal mode.

Note: After setting the program mode for "BF" Device, if the Motor is set in simple setting, the settings of the program mode become ineffective.

5. Sewing procedure (Confirmation of "BF" Device operations)


For hemming tubular material:

- (1) Turn ON the Power Supply Switch of Motor.
- (2) Set air pressure to 0.45 - 0.5 MPa
(4.5 - 5.0 kgf/cm²).
- (3) Heel back Pedal to raise Presser Foot.
- (4) Air blows from Edge Guide(Right), Air Nozzle,
and Uncurler Air Nozzle.
- (5) Slide the fabric on Folder to right. When the
fabric edge goes down by touching Edge Guide
(Right), slide the fabric back and forth until
its edge fits along Edge Guide(Left) as shown in
the figure.

Note: For adjusting hemming width, refer to 6-2.


- (6) Release Pedal to neutral.
- (7) Presser Foot lowers and air flows are stopped.
- (8) Press down Pedal to start sewing.
- Air blows from Edge Guide(Right) and Uncurler Air Nozzle.
- (9) When the position started sewing is in front of Folder, press Knee Switch.
Air Cylinder operates and the Folder slides to left.
- (10) Keep sewing to the end.
- (11) Heel back Pedal. Under Trimming Device operates and Presser Foot rises.
- (12) Remove the fabric. (Sewing performance is finished.)
- (13) Release Pedal to neutral. Air flows are stopped.
- (14) Press Knee Switch to slide Folder to right.
- (15) Preparation for the next sewing performance is finished.

Note: For hemming flat material, the above (9) and (14) are not necessary.

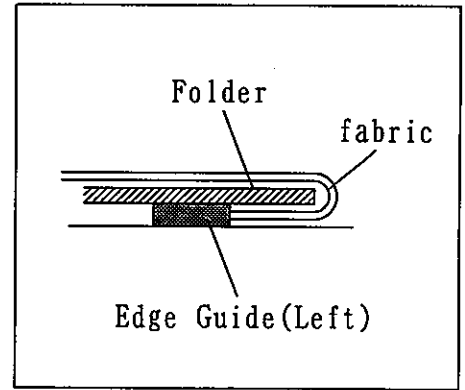


6. Adjustment

Stroke of Air Cylinder has been adjusted by Collar so that hemming width is about 30 mm at the shipping time. When returned Air Cylinder Rod to right, the distance has been adjusted to 27.4 mm between Bracket(Left) and Folder Support as shown in the figure.

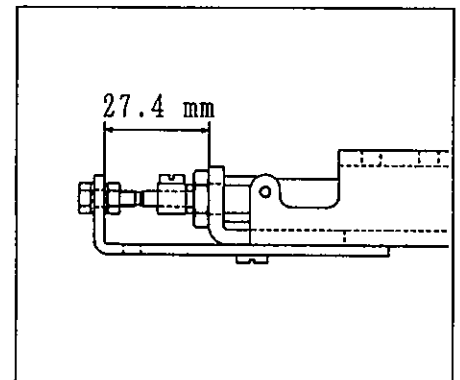

6-1 Adjusting position of Edge Guide(Left)

According to the position to be sewn on the fold fabric edge, loosen Screws① and position Edge Guide(Left)②.

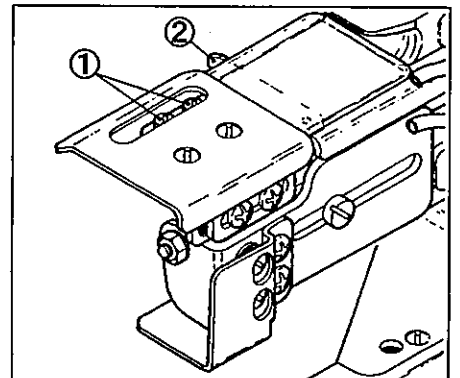


6-2 Adjusting hemming width


☆ For hemming width of 40 mm

The procedure is as follows:


- (1) Loosen Screws③ and slide Edge Guide(Right)④ to right by 10 mm.

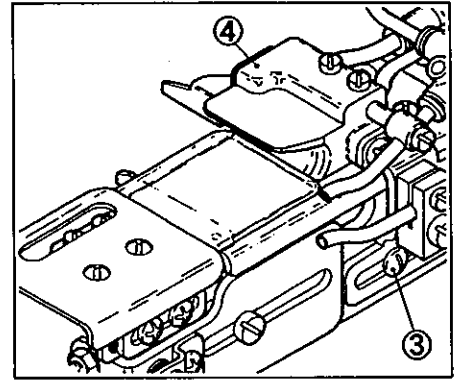

- (2) Loosen Screw⑤. When returned Air Cylinder Rod to right, make a distance of 17.4 mm between Bracket(Left) and Folder Support as shown in the figure.
- (3) Tighten Screw⑤.

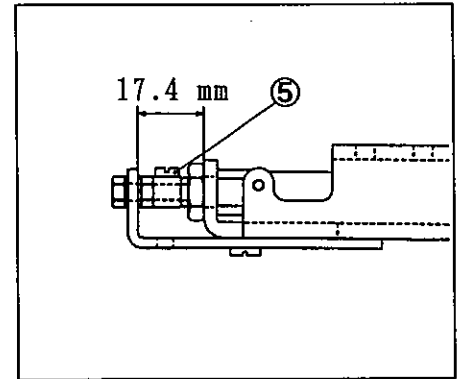


- (4) Adjust the clearance between Folder⑥ and Edge Guide(Right)④ so that hemming width can be made easily.
- (5) Tighten Screws③.

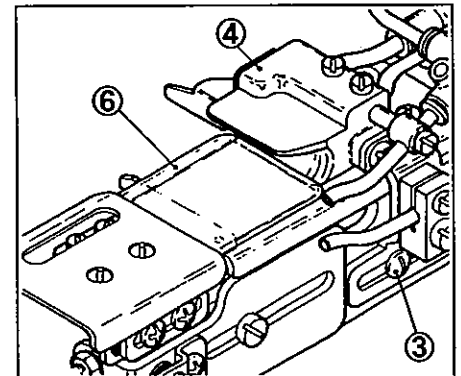


☆ For hemming width of 20 mm.

- (1) Loosen Screw⑤. When returned Air Cylinder Rod to right, make a distance of 37.4 mm between Bracket(Left) and Folder Support as shown in the figure.
- (2) Tighten Screw⑤.

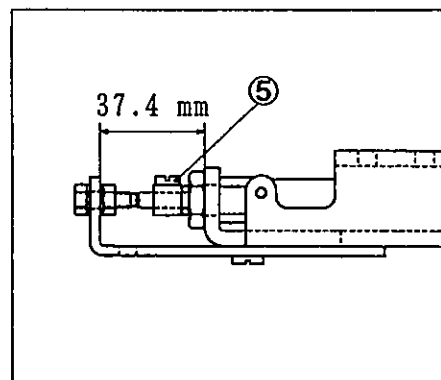


- (3) Loosen Screws③.
- (4) Adjust the clearance between Folder⑥ and Edge Guide(Right)④ so that hemming width can be made easily.
- (5) Tighten Screws③.

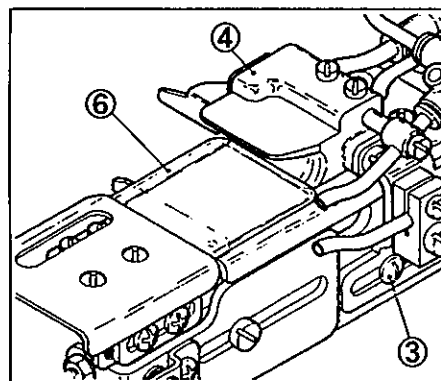

☆ Fine adjustment of hemming width


For fine adjustment of hemming width, loosen Screws⑦ and adjust the position of Folder⑥.

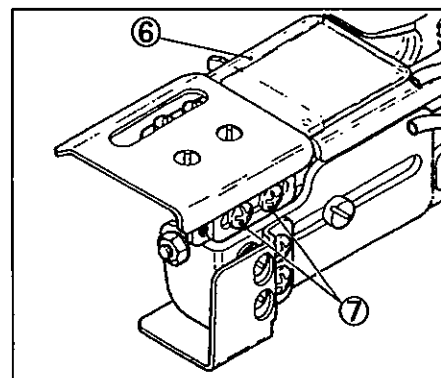

6-3 Adjusting Folder


☆ Left position

When Air Cylinder operates to slide Folder⑥ to left, adjust so that the edge of Folder⑥ is on the left hand of the right side of Edge Guide (Left)②.

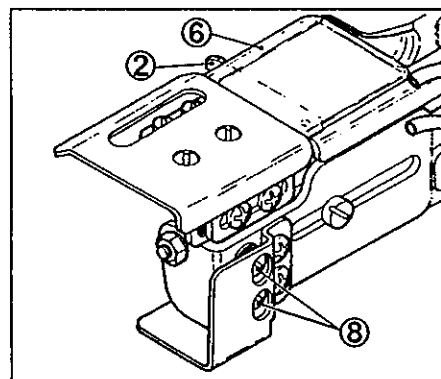

☆ Height adjustment

Loosen Screws⑧ to adjust the height of Folder⑥ so that Folder⑥ can slide on Edge Guide(Left)② right and left smoothly.

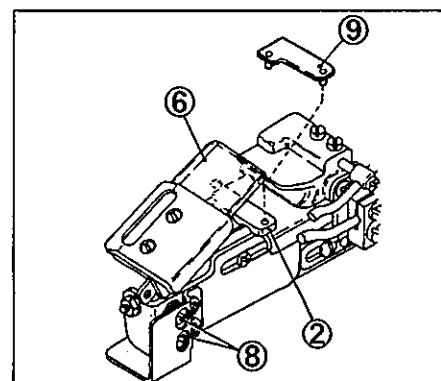


☆ For hemming heavy-weight fabric

- (1) Loosen Screws⑧.
- (2) Put Spacer⑨ of 1 mm or 2 mm in thickness on Edge Guide(Left)②.
- (3) Touch Folder⑥ to the top of Spacer⑨ and adjust so that Folder⑥ can slide smoothly, and then tighten Screws⑧.


6-4 Adjusting Edge Guide(Right)

- (1) Loosen Screws③.
- (2) Set the fabric and adjust the clearance between Folder⑥ and Edge Guide(Right)④ so that the hemming width can be made easily.
- (3) Tighten Screws③.

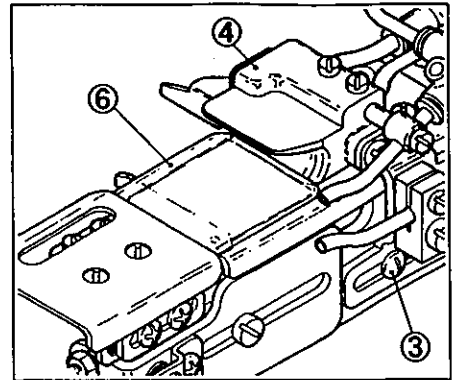


6-5 Adjusting Air Nozzle

Loosen Screws⑩ and ⑪ and adjust the position of Air Nozzle⑫ so that the fabric edge can be folded and the hemming width can be made smoothly when the fabric is set.

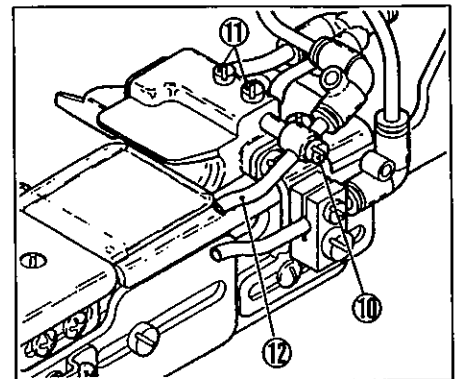

6-6 Adjusting Uncurler Air Nozzle

If the fabric is curled outside, loosen Screw⑬ and adjust the position of Air Nozzle⑭ so that the hemming width can be made uniformly.

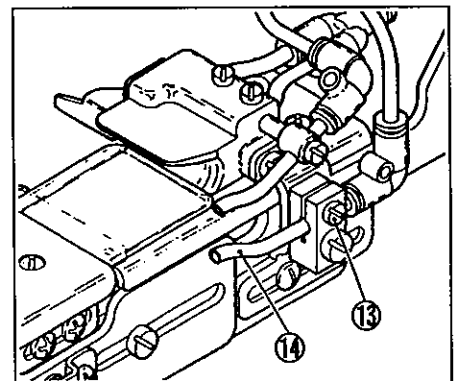


6-7 Adjusting air flow

Air flow is adjusted with Speed Controller⑮.


To decrease, loosen Nut and turn Adjusting Screw clockwise.

To increase, loosen Nut and turn Adjusting Screw counterclockwise.

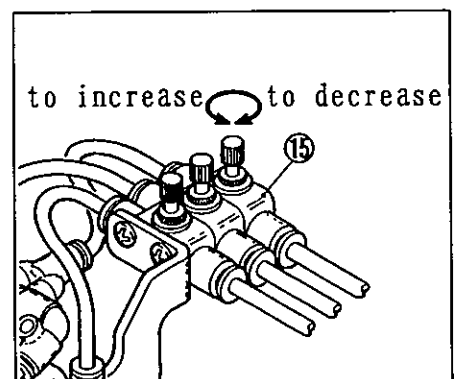

1 "BF4" DEVICE (1)

1

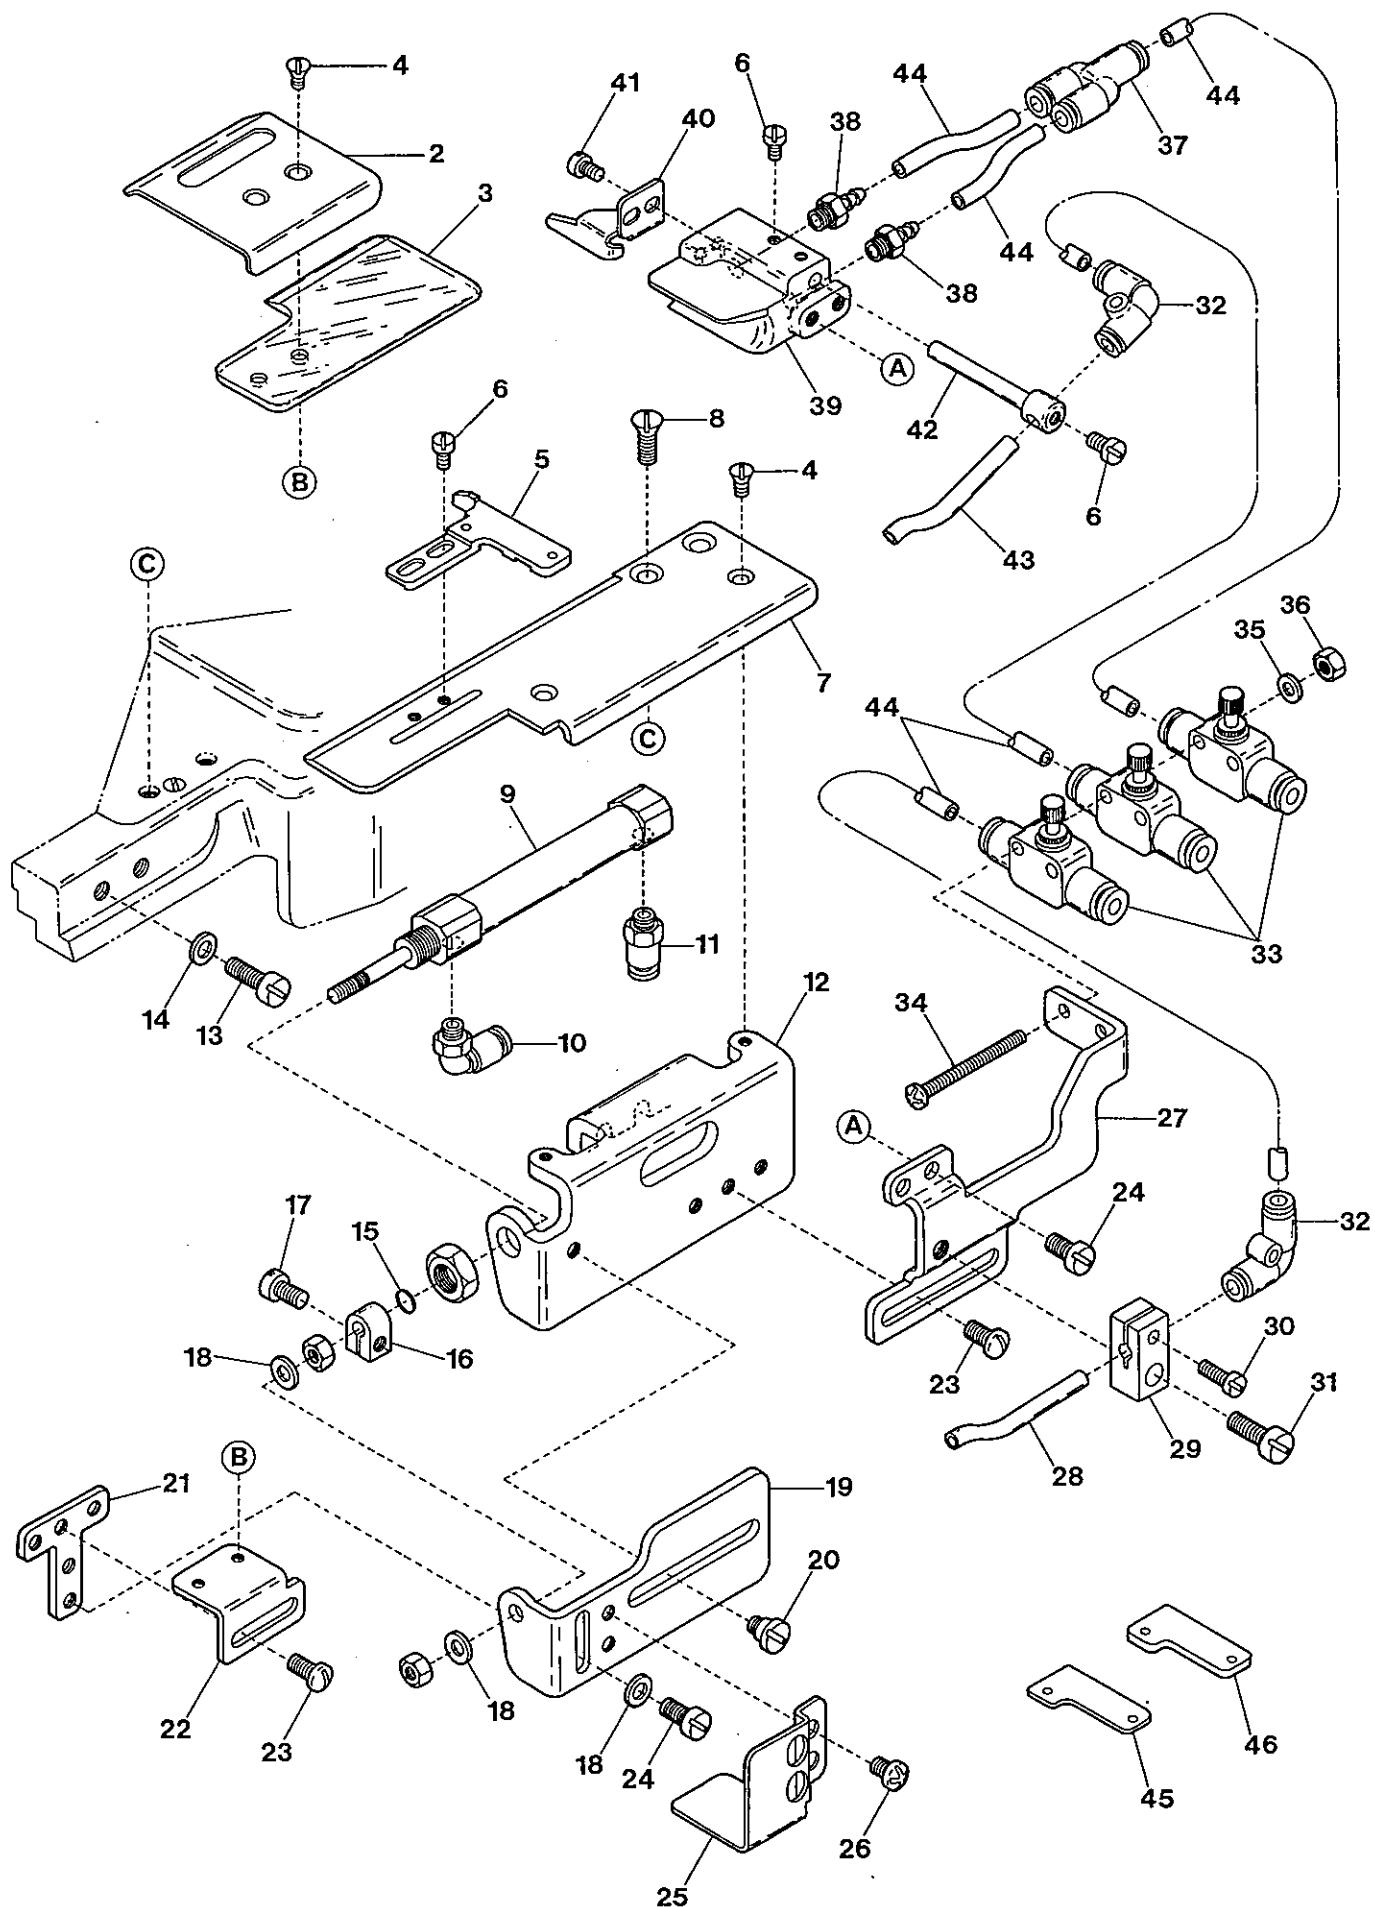

"BF4" DEVICE(1) for VCU2700, VC2611

"BF4"装置(1)

Ref.	Parts			1
No	No	Description	品 名	Amt. Req.
1	3101826	Hemming Folder, C. Set	ヘムフォルダ(組)	1
2	3101816	Upper Cover	上カバー	1
3	3101817	Folder	定規	1
4	130023	Screw(M3-0.5×5)	止ネジ	4
5	3101820	Edge Guide(Left)	定規(左)	1
6	110030	Screw(M3-0.5×2.6)	止ネジ	5
7	3101824	Cloth Plate(Front)	クロスプレート(前)	1
8	130007*	Screw(M4-0.7×10)	止ネジ	2
9	1091144	Air Cylinder(CJ2B10-40)	エアシリンダ	1
10	1094059	Elbow Connector(KJL04-M5)	エルボコネクタ	1
11	1094060	Connector(KJH04-M5)	コネクタ	1
12	3101823	Bracket(Left)	ブラケット(左)	1
13	110043*	Screw(M4-0.7×14)	止ネジ	2
14	001123*	Washer	ワッシャ	2
15	0068206	O-ring(P4)	Oリング	1
16	3101825	Collar	カラー	1
17	110041	Screw(M4-0.7×8)	止ネジ	1
18	001123	Washer	ワッシャ	4
19	3101819	Folder Support	定規支エ	1
20	170036	Screw(M4-0.7×2.9)	止ネジ	1
21	3151025	Folder Plate	定規板	1
22	3101818	Folder Adjusting Plate(Left)	定規調節板(左)	1
23	110104	Screw(M4-0.7×8)	止ネジ	4
24	007627	Screw(M4-0.7×6)	止ネジ	4
25	3151036	Lower Cover	下カバー	1
26	110012	Screw(M4-0.7×5)	止ネジ	2
27	3101821	Edge Guide Adjusting Plate(Riget)	定規調節板(右)	1
28	3101827	Uncurler Air Nozzle	カール防止エアノズル	1
29	1250362	Air Nozzle Holder	ノズル取付台	1
30	110022	Screw(M3-0.5×10)	止ネジ	1
31	110078	Screw(M5-0.8×15)	止ネジ	1
32	1094058	Union Elbow Connector(KJL04-00)	ユニオンエルボ	2
33	1095009	Speed Controller(AS1000F-04)	スピードコントローラ	3
34	006214	Screw(M3-0.5×40)	止ネジ	2
35	000014	Washer	ワッシャ	2
36	000012	Nut	ナット	2
37	1094057	Union Y-Connector(KJU04-00)	ユニオンY	1
38	0010018	Bamboo Joint(I-2.5L)	バンブ継手	2
39	3151041	Edge Guide(Right)	定規(右)	1
40	3101822	Edge Guide(Rear)	定規(後)	1

Note: Ref. No. 41 to 46 See the following page.

(注) *印の部品はビニール袋に入れて、装置の箱に同梱されています。


Note: The parts marked "*" have been included in a vinyl bag, which has been packed in a box of the device.

(注) "BF4"装置(組)の品番は3109976です。

Note: The part number of "BF4" Device, Complete Set is 3109976.

1 "BF4" DEVICE (1)

1

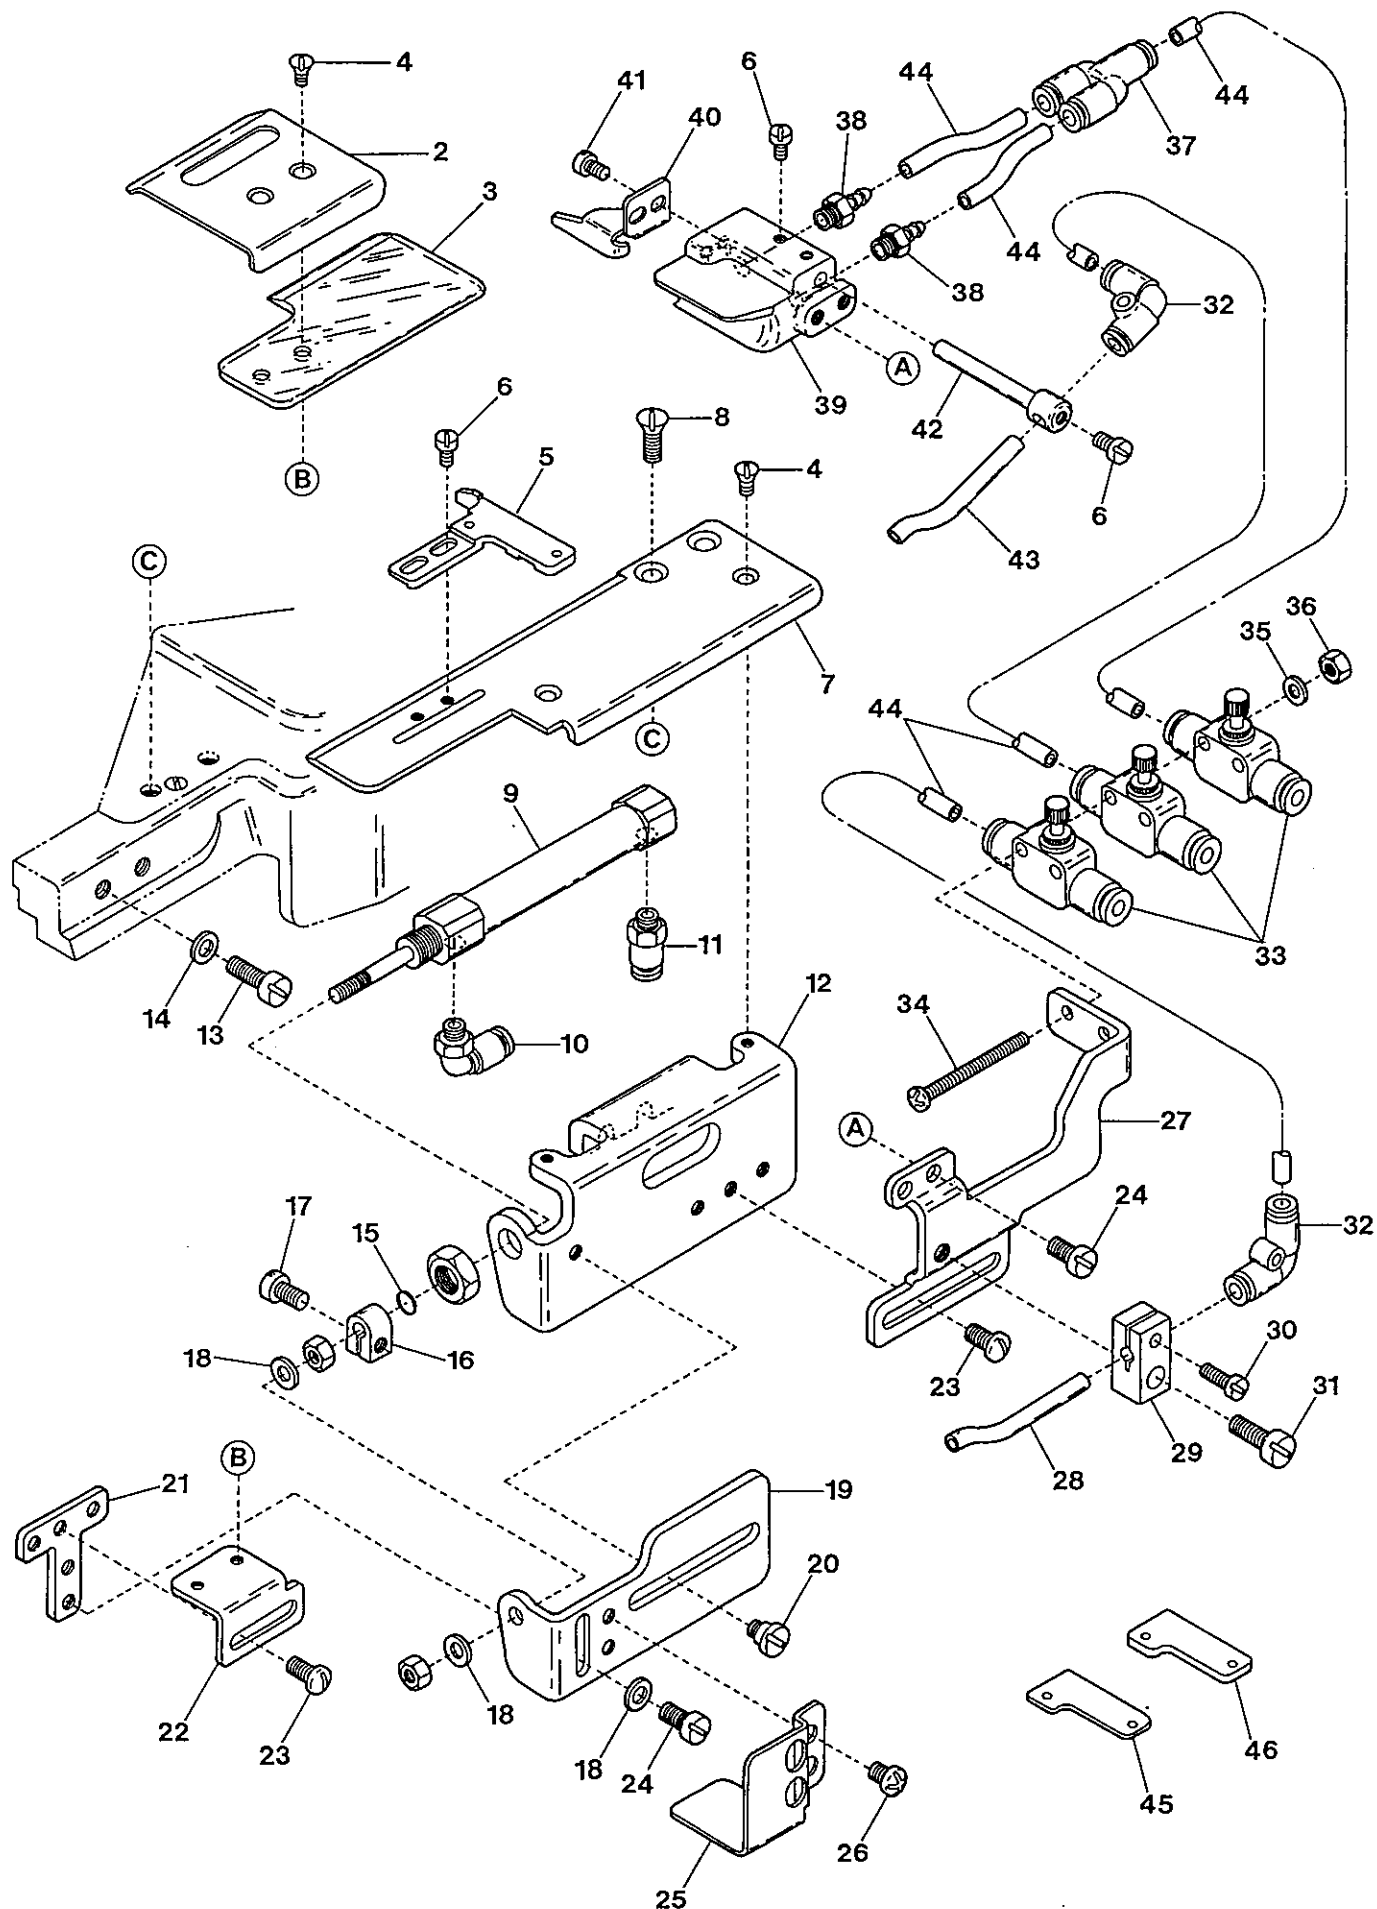

"BF4" DEVICE (1) for VCU2700, VC2611

"BF4"装置(1)

Ref.	Parts			1
No.	No.	Description	品 名	Amt. Req.
41	110054	Screw(M3-0.5×3.5)	止ネジ	2
42	3151042	Air Nozzle Holder	ノズル台	1
43	3151043	Air Nozzle	ノズル	1
44	1096024	Vinyl Tube(4×2.5mm)(White)	ビニールパイプ(白)	-
45	3151038*	Spacer(1)(1.0mm)	スペーサ(1)	1
46	3151039*	Spacer(2)(2.0mm)	スペーサ(2)	1

Note: Ref. No. 1 to 40 See the preceding page.

(注) *印の部品はビニール袋に入れて、装置の箱に同梱されています。

Note: The parts marked "*" have been included in a vinyl bag, which has been packed in a box of the device.


(注) ビニールパイプ御注文の際は品番と長さをお知らせ下さい。

Note: As for Vinyl Tube, your order must be accompanied with No. and length.

(注) "BF4"装置(組)の品番は3109976です。

Note: The part number of "BF4" Device, Complete Set is 3109976.

"BF4" DEVICE (2)

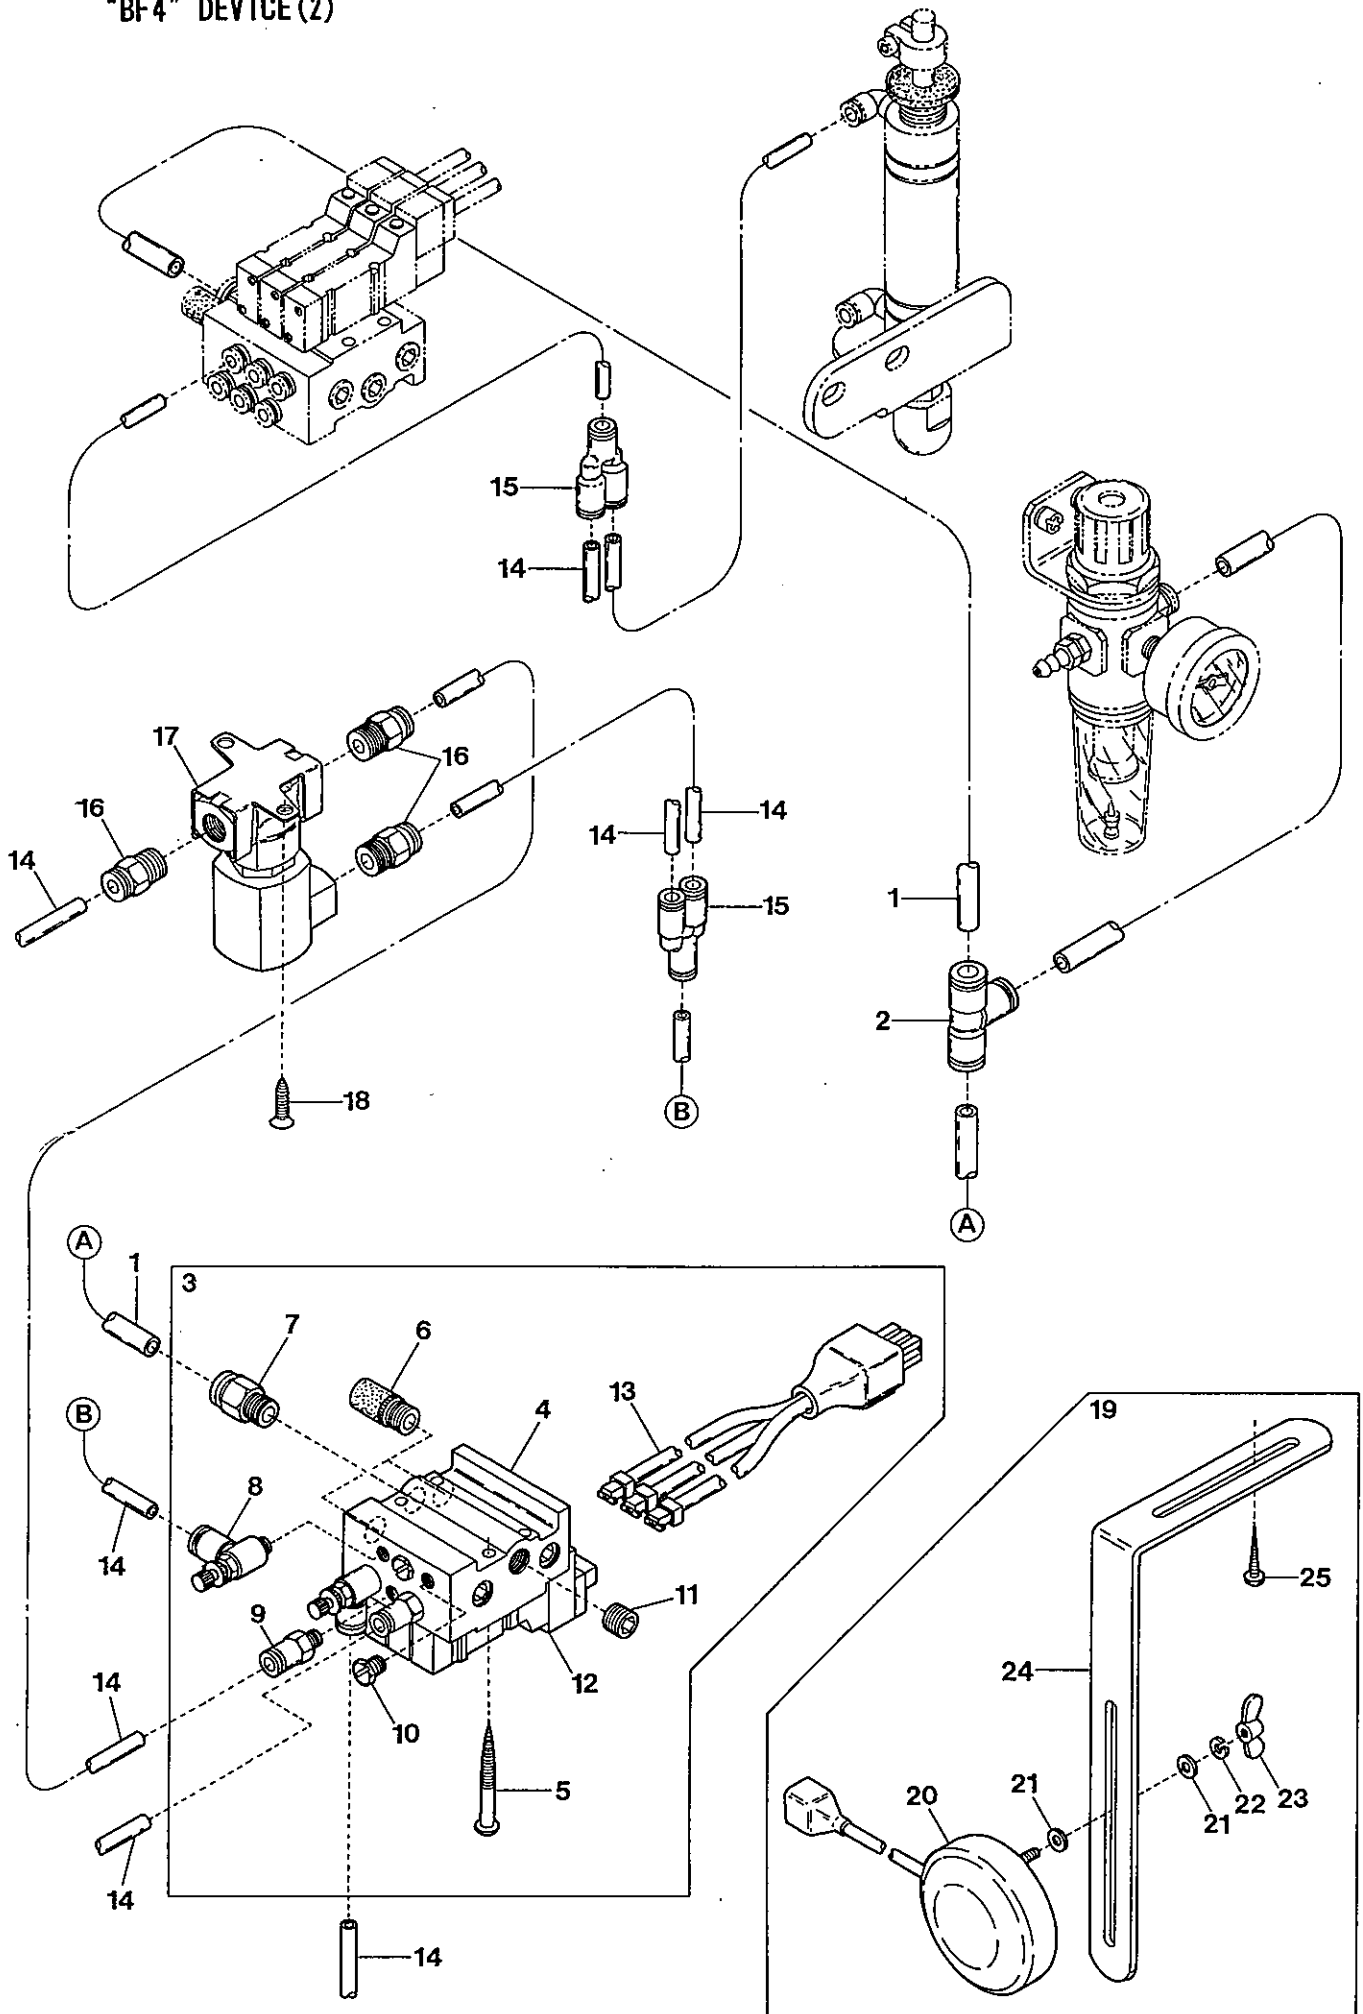

"BF4" DEVICE(2) for VCU2700, VC2611

"BF4"装置(2)

2

Ref. No.	Parts No.	Description	品 名	Amt. Req.
1	1096025	Vinyl Tube(6×4mm)(White)	ビニールパイプ(白)	—
2	1094008	Union T-Connector(EUT6)	ユニオンTコネクタ	1
3	1090193	Solenoid Valve, C. Set	電磁弁(組)	1
4	1090195	Manifold	マニフォールド	1
5	350010	Wood Screw(φ3.5×40)	木ネジ	2
6	1097007	Silencer(AN103-01)	サイレンサ	2
7	1094056	Connector(KJH06-01S-PT1/8)	コネクタ	1
8	1095008	Speed Controller(AS1201F-M5-04)	スピードコントローラ	2
9	1094060	Connector(KJH04-M5)	コネクタ	2
10	1094009	Plug(M5)	プラグ	2
11	0010119	Blank Plug	メクラプラグ	3
12	1090194	Solenoid Valve	電磁弁	3
13	1200262	Cord	コード	1
14	1096024	Vinyl Tube(4×2.5mm)(White)	ビニールパイプ(白)	—
15	1094057	Union Y-Connector(KJU04-00)	ユニオンYコネクタ	2
16	0010055	Connector(EC4-PT1/8)	コネクタ	3
17	1090188	Air Operate Valve	エアオペレートバルブ	1
18	350007	Wood Screw(φ3.5×16)	木ネジ	2
19	1066099	Knee Switch, C. Set	膝スイッチ(組)	1
20	1066100	Knee Switch	膝スイッチ	1
21	300031	Washer	ワッシャ	4
22	300033	Spring Washer	スプリングワッシャ	2
23	100038	Wing Nut(M4-0.7)	チョウナット	2
24	0092232	Knee Switch Holder	膝スイッチ取付板	1
25	006910	Wood Screw(φ6.8×26)	木ネジ	2

(注) ビニールパイプ御注文の際は品番と長さをお知らせ下さい。

Note: As for Vinyl Tube, your order must be accompanied with No. and length.

(注) "BF4"装置(組)の品番は3109976です。

Note: The part number of "BF4" Device, Complete Set is 3109976.

Yamato

ヤマトミシン製造株式会社

YAMATO SEWING MACHINE MFG. CO., LTD.

4-4-12, NISHITENMA, KITA-KU, OSAKA, JAPAN
TEL: 81-6-6364-1321 FAX: 81-6-6364-1307

〒530-0047 大阪市北区西天満4丁目4番12号
TEL (06) 6364-1321 (代)
FAX (06) 6365-5176