Osmo-GSM-Tester Manual

sysmocom

sysmocom - s.f.m.c. GmbH



Osmo-GSM-Tester Manual

by Neels Hofmeyr and Pau Espin Pedrol

Copyright © 2017-2020 sysmocom - s.f.m.c. GmbH

Permission is granted to copy, distribute and/or modify this document under the terms of the GNU Free Documentation License, Version 1.3 or any later version published by the Free Software Foundation; with the Invariant Sections being just 'Foreword', 'Acknowledgements' and 'Preface', with no Front-Cover Texts, and no Back-Cover Texts. A copy of the license is included in the section entitled "GNU Free Documentation License".

The Asciidoc source code of this manual can be found at http://git.osmocom.org/osmo-gsm-manuals/

Osmo-GSM-Tester Manual

|--|

NUMBER	DATE	DESCRIPTION	NAME
1	April 13, 2017	Initial version.	NH

Osmo-GSM-Tester Manual iii

Contents

1 WARNING: Work in Progress								
2	Intr	1	1					
3	Tria	al: Binaries to be Tested						
4	Con	Configuration						
	4.1	Schemas						
		4.1.1	Schema resources	3				
		4.1.2	Schema want	5				
		4.1.3	Schema conf	5				
	4.2	Config	Paths	5				
		4.2.1	paths.conf	6				
			4.2.1.1 <i>state_dir</i>	6				
			4.2.1.2 <i>suites_dir</i>	6				
			4.2.1.3 <i>suite.conf</i>	7				
			4.2.1.4 scenarios_dir	7				
			4.2.1.5 scenario conf file	8				
		4.2.2	resources.conf	9				
		4.2.3	default-suites.conf (optional)	9				
		4.2.4	defaults.conf (optional)	9				
	4.3	Examp	le Setup	10				
		4.3.1	Typical Invocations	11				
5	Resc	ource Re	ce Resolution					
	5.1	Resour	ce Reservation for Concurrent Trials	12				
6	Test	API	PI 12					
7	Osm	no-GSM	-Tester Installation	12				
	7.1	Trial B	uilder	12				
		7.1.1	Osmocom Build Dependencies	12				
		7.1.2	Add Build Jobs	12				
7.2 Main Unit		Main U	Jnit	14				
		7.2.1	Create jenkins User	14				
		7.2.2	Install Java on Main Unit	14				
		7.2.3	Allow SSH Access from Jenkins Master	14				
		7.2.4	Add Jenkins Slave	15				
		7.2.5	Add Run Job					

Osmo-GSM-Tester Manual iv

		7.2.6	Install osmo-gsm-tester	17	
		7.2.7	User Permissions	18	
			7.2.7.1 Paths	18	
			7.2.7.2 Allow DBus Access to ofono	18	
	7.3	Slave U	Jnit(s)	19	
		7.3.1	Capture Packets	19	
		7.3.2	Allow Core Files	20	
		7.3.3	Allow Realtime Priority	20	
			7.3.3.1 Allow capabilities: <i>CAP_NET_RAW</i> , <i>CAP_NET_ADMIN</i> , <i>CAP_SYS_ADMIN</i>	20	
		7.3.4	UHD	21	
		7.3.5	Log Rotation	21	
		7.3.6	Install Scripts	21	
8	Har	dware (Phoice and Configuration	22	
8 Hardware Choice and Configuration 8.1 SysmoBTS					
	6.1	•		22	
		8.1.1			
		8.1.2	Allow Core Files		
		8.1.3	Reboot	23	
		8.1.4	SSH Access	23	
	8.2	Moden	18	23	
	8.3	osmo-l	ots-trx	23	
9 Ansible Setup					
10	Docl	ker Setu	p	24	
11	Debi	ugging		24	
				_	
12	Trou	ıbleshoo	oting The Control of	25	
	12.1	Format	· YAML, and its Drawbacks	25	

Osmo-GSM-Tester Manual 1 / 25

1 WARNING: Work in Progress

NOTE: Osmo-GSM-Tester is still under heavy development stage: some parts are still incomplete, and details can still change and move around as new features are added and improvements made.

2 Introduction

Osmo-GSM-Tester is a software to run automated tests on real GSM hardware, foremost to verify that ongoing Osmocom software development continues to work with various BTS models, while being flexibly configurable and extendable to work for other technologies, setups and projects. It can be used for instance to test a 3G or 4G network.

Osmo-GSM-Tester (python3 process) runs on a host (general purpose computer) named the *main unit*. It may optionally be connected to any number of *slave units*, which Osmo-GSM-Tester may use to orchestrate processes remotely, usually through SSH.

Hardware devices such as BTS, SDRs, modems, smart plugs, etc. are then connected to either the main unit or slaves units via IP, raw ethernet, USB or any other means.

The modems and BTS instances' RF transceivers are typically wired directly to each other via RF distribution chambers to bypass the air medium and avoid disturbing real production cellular networks. Furthermore, the setup may include adjustable RF attenuators to model various distances between modems and base stations.

Each of these devices, having each a different physical setup and configuration, supported features, attributes, etc., is referred in Osmo-GSM-Tester terminology as a *resource*. Each *resource* is an instance of *resource class*. A *resource_class* may be for instance a *modem* or a *bts*. For instance, an Osmo-GSM-Tester setup may have 2 *modem* instances and 1 *bts* instances. Each of these *resources* are listed and described in configuration files passed to Osmo-GSM-Tester, which maintains a pool of *resources* (available, in use, etc.).

Osmo-GSM-Tester typically receives from a jenkins build service the software or firmware binary packages to be used and tested. Osmo-GSM-Tester then launches a specific set of testsuites which, in turn, contain each a set of python test scripts. Each test uses the *testenv* API provided by Osmo-GSM-Tester to configure, launch and manage the different nodes and processes from the provided binary packages to form a complete ad-hoc GSM network.

Testsuites themselves contain configuration files to list how many resources it requires to run its tests. It also provides means to *filter* which kind of *resources* will be needed based on their attributes. This allows, for instance, asking Osmo-GSM-Tester to provide a *modem* supporting GPRS, or to provide a specific model of *bts* such as a nanoBTS. Testsuites also allow receiving *modifiers*, which overwrite some of the default values that Osmo-GSM-Tester itself or different *resources* use.

Moreover, one may want to run the same testsuite several tiems, each with different set of *resources*. For instance, one may want to run a testsuite with a sysmoBTS and later with a nanoBTS. This is supported by leaving the testsuite configuration generic enough and then passing *scenarios* to it, which allow applying extra *filters* or *modifiers*. Scenarios can also be combined to filter further or to apply further modifications.

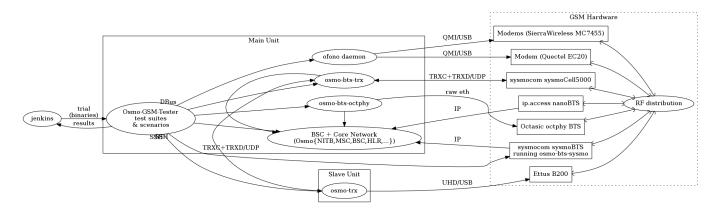


Figure 1: Sample osmo-gsm-tester node 2G setup

Osmo-GSM-Tester Manual 2 / 25

3 Trial: Binaries to be Tested

A trial is a set of pre-built sysroot archives to be tested. They are typically built by jenkins using the build scripts found in osmo-gsm-tester's source in the *contrib/* dir, see Section 7.2.4.

A trial comes in the form of a directory containing a number of *<inst-name>*.**tgz* tar archives (containing different sysroots) as well as a *checksums.md5* file to verify the tar archives' integrity.

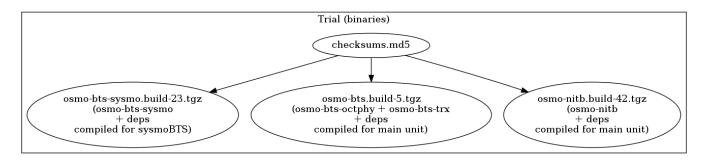


Figure 2: Example of a "trial" containing binaries built by a jenkins job

When the osmo-gsm-tester is invoked to run on such a trial directory, it will create a sub directory named *inst* and unpack the tar archives into it.

For each test run on this trial, a new subdirectory in the trial dir is created, named in the form of *run.*<*timestamp>*. A symbolic link *last-run* will point at the most recently created run dir. This run dir will accumulate:

- the rendered configuration files used to run the binaries
- stdout and stderr outputs of the binaries
- pcap files for processes doing relevant network communication
- · a test log
- jenkins parsable XML (Junit) reports

The script in contrib/jenkins-run.sh takes care of related tasks such as

- creating the dir structure,
- generating md5 sums for the various tar.gz containing software builds to be tested,
- · cleaning up after the build,
- saving extra logs such as journalctl output from ofonod,
- generating a final .tar.gz file with all the logs and reports to store as jenkins archives.

Osmo-GSM-Tester tests create objects to manage the allocated resources during test lifetime. These objects, in turn, usually run and manage processes started from the trail's sysroot binaries. Osmo-GSM-Tester provide APIs for those object classes to discover, unpack and run those binaries. An object class simply needs to request the name of the sysroot it wants to use (for instance *osmo-bsc*), and Osmo-GSM-Tester will take care of preparing everything and providing the sysroot path to it. It's a duty of the resource class to copy over the sysroot to the destination if the intention is to run the binary remotely on another host.

When seeking a sysroot of a given name <inst-name> in the inst/ directory, Osmo-GSM-Tester will look for tgz files starting with the pattern <inst-name>. (up to the first dot). That means, suffixes are available for Osmo-GSM-Tester user to identify the content, for instance having an incrementing version counter or a commit hash. Hence, these example files are considered valid and will be selected by Osmo-GSM-Tester for osmo-bsc: osmo-bsc.tgz, osmo-bsc.build-23.tgz, osmo-bsc.5f3e0dd2.tgz, osmo-bsc.armv7.build-2.tgz. If either none or more than one valid file is found matching the pattern, an exception will be thrown.

Osmo-GSM-Tester Manual 3 / 25

4 Configuration

4.1 Schemas

All configuration attributes in Osmo-GSM-Tester are stored and provided as YAML files, which are handled internally mostly as sets of dictionaries, lists and scalars. Each of these configurations have a known format, which is called *schema*. Each provided configuration is validated against its *schema* at parse time. Hence, *schemas* can be seen as a namespace containing a structured tree of configuration attributes. Each attribute has a schema type assigned which constrains the type of value it can hold.

There are several well-known schemas used across Osmo-GSM-Tester, and they are described in following sub-sections.

4.1.1 Schema resources

This schema defines all the attributes which can be assigned to a *resource*, and it is used to validate the <u>resources.conf</u> file. Hence, the <u>resources.conf</u> contains a list of elements for each resource type.

It is important to understand that the content in this schema refers to a list of resources for each resource class. Since a list is ordered by definition, it clearly identifies specific resources by order. This is important when applying filters or modifiers, since they are applied per-resource in the list. One can for instance apply attribute A to first resource of class C, while not applying it or applying another attribute B to second resources of the same class. As a result, complex forms can be used to filter and modify a list of resources required by a testsuite.

On the other hand, it's also important to note that lists for simple or scalar types are currently being treated as unordered sets, which mean combination of filters or modifiers apply differently. In the future, it may be possible to have both behaviors for scalar/simple types by using also the YAML set type in

These kinds of resources and their attributes are known:

ip_address

List of IP addresses to run osmo-nitb instances on. The main unit typically has a limited number of such IP addresses configured, which the connected BTS models can see on their network.

addr

IPv4 address of the local interface.

bts

List of available BTS hardware.

label

human readable label for your own reference

type

which way to launch this BTS, one of

- osmo-bts-sysmo
- osmo-bts-trx
- osmo-bts-octphy
- ipa-nanobts

ipa unit id

ip.access unit id to be used by the BTS, written into BTS and BSC config.

addr

Remote IP address of the BTS for BTS like sysmoBTS, and local IP address to bind to for locally run BTS such as osmo-bts-trx.

band

GSM band that this BTS shoul use (**TODO**: allow multiple bands). One of:

- GSM-1800
- GSM-1900

Osmo-GSM-Tester Manual 4 / 25

• (**TODO**: more bands)

trx list

Specific TRX configurations for this BTS. There should be as many of these as the BTS has TRXes. (**TODO**: a way to define >1 TRX without special configuration for them.)

hw addr

Hardware (MAC) address of the TRX in the form of 11:22:33:44:55:66, only used for osmo-bts-octphy. (**TODO**: and nanobts??)

net device

Local network device to reach the TRX's hw_addr at, only used for osmo-bts-octphy. Example: eth0.

nominal_power

Nominal power to be used by the TRX.

max_power_red

Max power reduction to apply to the nominal power of the TRX.

arfcn

List of ARFCNs to use for running BTSes, which defines the actual RF frequency bands used.

arfcn

ARFCN number, see e.g. https://en.wikipedia.org/wiki/Absolute_radio-frequency_channel_number (note that the resource type *arfcn* contains an item trait also named *arfcn*).

hand

GSM band name to use this ARFCN for, same as for bts:band above.

modem

List of modems reachable via ofono and information on the inserted SIM card. (Note: the MSISDN is allocated dynamically in test scripts).

label

Human readable label for your own reference, which also appears in logs.

path

Ofono's path for this modem, like /modemkind 99.

imsi

IMSI of the inserted SIM card, like "123456789012345".

ki

16 byte authentication/encryption KI of the inserted SIM card, in hexadecimal notation (32 characters) like "00112233445566778899aabbccddeeff".

auth_algo

Authentication algorithm to be used with the SIM card. One of:

- none
- xor
- comp128v1

ciphers

List of ciphers that this modem supports, used to match requirements in suites or scenarios. Any combination of:

- a5 0
- a5 1
- a5_2
- a5_3
- a5_4
- a5_5
- a5 6
- a5_7

features

List of features that this modem supports, used to match requirements in suites or scenarios. Any combination of:

Osmo-GSM-Tester Manual 5 / 25

- sms
- gprs
- voice
- ussd

4.1.2 Schema want

This schema is basically the same as the resources one, but with an extra *times* attribute for each resource item. All *times* attributes are expanded before matching. For example, if a *suite.conf* requests two BTS, one may enforce that both BTS should be of type *osmo-bts-sysmo* in these ways:

```
resources:
bts:
- type: osmo-bts-sysmo
- type: osmo-bts-sysmo
```

or alternatively,

```
resources:
  bts:
  - times: 2
   type: osmo-bts-sysmo
```

4.1.3 Schema conf

This schema is used by suite.conf and scenario.conf files. It contains 3 main element sections

- Section *resources*: Contains a set of elements validated with <u>resources</u> schema. In <u>suite.conf</u> it is used to construct the list of requested resources. In <u>scenario.conf</u>, it is used to inject attributes to the initial <u>suites.conf</u> resources section and hence further restrain it.
- Section *modifiers*: Both in suite.conf and scenario.conf, values presented in here are injected into the content of the resources section after *resource* allocation, hereby overwriting attributes passed to the object class instance managing the specific *resource* (matches by resource type and list position). Since it is combined with the content of resources section, it is clear that the resources schema is used to validate this content.
- Section *config*: Contains configuration attributes for Osmo-GSM-Tester classes which are not *resources*, and hence cannot be configured with modifiers. They can overwrite values provided in the defaults.conf file.

4.2 Config Paths

The osmo-gsm-tester looks for configuration files in various standard directories in this order:

- \$HOME/.config/osmo-gsm-tester/
- /usr/local/etc/osmo-gsm-tester/
- /etc/osmo-gsm-tester/

The config location can also be set by an environment variable \$OSMO_GSM_TESTER_CONF, which then overrides the above locations.

The osmo-gsm-tester expects to find the following configuration files in a configuration directory:

- paths.conf
- resources.conf
- default-suites.conf (optional)
- defaults.conf (optional)

These are described in detail in the following sections.

Osmo-GSM-Tester Manual 6 / 25

4.2.1 paths.conf

The paths.conf file defines where to store the global state (of reserved resources) and where to find suite and scenario definitions.

Any relative paths found in a paths.conf file are interpreted as relative to the directory of that paths.conf file.

There's not yet any well-known schema to validate this file contents since it has only 3 attributes.

Sample paths.conf file:

```
state_dir: '/var/tmp/osmo-gsm-tester/state'
suites_dir: '/usr/local/src/osmo-gsm-tester/suites'
scenarios_dir: './scenarios'
```

4.2.1.1 state_dir

It contains global or system-wide state for osmo-gsm-tester. In a typical state dir you can find the following files:

last_used_*.state

Contains stateful content spanning accross Osmo-GSM-Tester instances and runs. For instance, *last used msisdn num-ber.state* is automatically (and atomically) increased every time osmo-gsm-tester needs to assign a new subscriber in a test, ensuring tests get unique msisdn numbers.

reserved_resources.state

File containing a set of reserved resources by any number of osmo-gsm-tester instances (aka pool of allocated resources). Each osmo-gsm-tester instance is responsible to clear its resources from the list once it is done using them and are no longer reserved.

lock

Lock file used to implement a mutual exclusion zone around any state files in the *state_dir*, to prevent race conditions between different Osmo-GSM-Tester instances running in parallel.

This way, several concurrent users of osmo-gsm-tester (ie. several osmo-gsm-tester processes running in parallel) can run without interfering with each other (e.g. using same ARFCN, same IP or same of ono modem path).

If you would like to set up several separate configurations (not typical), note that the *state_dir* is used to reserve resources, which only works when all configurations that share resources also use the same *state_dir*. It's also important to notice that since resources are stored in YAML dictionary form, if same physical device is described differently in several resources.conf files (used by different Osmo-GSM-Tester instances), resource allocation may not work as expected.

4.2.1.2 suites_dir

Suites contain a set of tests which are designed to be run together to test a set of features given a specific set of resources. As a result, resources are allocated per suite and not per test.

Tests for a given suite are located in the form of .py python scripts in the same directory where the suite.conf lays.

Tests in the same testsuite willing to use some shared code can do so by putting it eg. in \$suites_dir/\$suitename/lib/testlib.py:

```
#!/usr/bin/env python3
from osmo_gsm_tester.testenv import *

def my_shared_code(foo):
    return foo.bar()
```

and then in the test itself use it this way:

Osmo-GSM-Tester Manual 7 / 25

```
#!/usr/bin/env python3
from osmo_gsm_tester.testenv import *

import testlib
suite.test_import_modules_register_for_cleanup(testlib)
from testlib import my_shared_code

bar = my_shared_code(foo)
```

Sample suites_dir directory tree:

4.2.1.3 suite.conf

This file content is parsed using the Want schema.

It provides Osmo-GSM-Tester with the base restrictions (later to be further filtered by scenario files) to apply when allocating resources.

It can also override attributes for the allocated resources through the modifiers section (to be further modified by scenario files later on). Similarly it can do the same for general configuration options (no per-resource) through the config section.

Sample suite.conf file:

```
resources:
  ip_address:
  - times: 9 # msc, bsc, hlr, stp, mgw*2, sgsn, ggsn, iperf3srv
  - times: 1
  modem:
  - times: 2
   features:
   - gprs
    - voice
  - times: 2
   features:
    - gprs
config:
 bsc:
     codec_list:
      - fr1
defaults:
 timeout: 50s
```

4.2.1.4 scenarios_dir

This dir contains scenario configuration files.

Osmo-GSM-Tester Manual 8 / 25

Sample scenarios_dir directory tree:

```
scenarios_dir/
|-- scenarioA.conf
'-- scenarioB.conf
```

4.2.1.5 scenario conf file

Scenarios define further constraints to serve the resource requests of a suite.conf, ie. to select specific resources from the general resource pool specified in resources.conf.

If only one resource is specified in the scenario, then the resource allocator assumes the restriction is to be applied to the first resource and that remaining resources have no restrictions to be taken into consideration.

To apply restrictions only on the second resource, the first element can be left emtpy, like:

```
resources:
bts:
- {}
- type: osmo-bts-sysmo
```

On the *osmo_gsm_tester.py* command line and the default_suites.conf, any number of such scenario configurations can be combined in the form:

```
<suite_name>:<scenario>[+<scenario>[+...]]
```

e.g.

```
my_suite:sysmo+tch_f+amr
```

Parametrized scenario conf files:

Furthermore, scenario .conf files can be parametrized. The concept is similar to that of systemd's Template Unit Files. That is, an scenario file can be written so that some values inside it can be passed at the time of referencing the scenario name. The idea behind its existence is to re-use the same scenario file for a set of attributes which are changed and that can have a lot of different values. For instance, if a scenario is aimed at setting or filtering some specific attribute holding an integer value, without parametrized scenarios then a separate file would be needed for each value the user wanted to use.

A parametrized scenario file, similar to systemd Template Unit Files, contain the character @ in their file name, ie follow the syntax below:

```
scenario-name@param1,param2,param3,[...],paramN.conf
```

Then, its content can be written this way:

```
$ cat $scenario_dir/my-parametrized-scenario@.conf
resources:
    enb:
    - type: srsenb
    rf_dev_type: ${param1}
modifiers:
    enb:
        - num_prb: ${param2}
```

Finally, it can be referenced during Osmo-GSM-Tester execution this wya, for instance when running a suite named 4g:

```
- 4g:my-parametrized-scenario@UHD,6
```

This way Osmo-GSM-Tester when parsing the scenarios and combining them with the suite will

1. Find out it is parametrized (name contains @).

Osmo-GSM-Tester Manual 9 / 25

- 2. Split the name (*my-parametrized-scenario*) from the parameter list (param1=UHD, param2=6)
- 3. Attempt to match a .conf file fully matching name and parameters (hence specific content can be set for specific values while still using parameters for general values), and otherwise match only by name.
- 4. Generate the final scenario content from the template available in the matched .conf file.

4.2.2 resources.conf

The *resources.conf* file defines which hardware is connected to the main unit, as well as which limited configuration items (like IP addresses or ARFCNs) should be used.

A *resources.conf* is validated by the <u>resources schema</u>. That means it is structured as a list of items for each resource type, where each item has one or more attributes — for an example, see [?].

Side note: at first sight it might make sense to the reader to rather structure e.g. the *ip_address* or *arfcn* configuration as "arfcn: GSM-1800: [512, 514, ...]",

but the more verbose format is chosen to stay consistent with the general structure of resource configurations, which the resource allocation algorithm uses to resolve required resources according to their traits. These configurations look cumbersome because they exhibit only one trait / a trait that is repeated numerous times. No special notation for these cases is available (yet).

4.2.3 default-suites.conf (optional)

The *default-suites.conf* file contains a YAML list of *suite:scenario+scenario+...* combination strings as defined by the *osmo-gsm-tester.py* -s commandline option. If invoking the *osmo-gsm-tester.py* without any suite definitions, the -s arguments are taken from this file instead. Each of these suite + scenario combinations is run in sequence.

A suite name must match the name of a directory in the suites_dir/ as defined by paths.conf.

A scenario name must match the name of a configuration file in the scnearios_dir/ as defined by paths.conf (optionally without the .conf suffix).

Sample default-suites.conf file:

```
- sms:sysmo
- voice:sysmo+tch_f
- voice:sysmo+tch_h
- voice:sysmo+dyn_ts
- sms:trx
- voice:trx+tch_f
- voice:trx+tch_h
- voice:trx+dyn_ts
```

4.2.4 defaults.conf (optional)

In Osmo-GSM-Tester object instances requested by the test and created by the suite relate to a specific allocated resource. That's not always the case, and even if it the case the information stored in resources.conf for that resource may not contain tons of attributes which the object class needs to manage the resource.

For this exact reason, the *defaults.conf* file exist. It contains a set of default attributes and values (in YAML format) that object classes can use to fill in the missing gaps, or to provide values which can easily be changed or overwritten by suite.conf or scenario.conf files through modifiers.

Each binary run by osmo-gsm-tester, e.g. *osmo-nitb* or *osmo-bts-sysmo*, typically has a configuration file template that is populated with values for a trial run. Hence, a suite.conf, scenario.conf or a resources.conf providing a similar setting always has precedence over the values given in a *defaults.conf*

Sample defaults.conf file:

Osmo-GSM-Tester Manual 10 / 25

```
nitb:
 net:
   mcc: 901
   mnc: 70
   short_name: osmo-gsm-tester-nitb
   long_name: osmo-gsm-tester-nitb
   auth_policy: closed
   encryption: a5_0
bsc:
 net:
   mcc: 901
   mnc: 70
   short_name: osmo-gsm-tester-msc
   long_name: osmo-gsm-tester-msc
   auth_policy: closed
    encryption: a5_0
    authentication: optional
msc:
 net:
   mcc: 901
   mnc: 70
    short_name: osmo-gsm-tester-msc
   long_name: osmo-gsm-tester-msc
   auth_policy: closed
    encryption: a5_0
    authentication: optional
bsc_bts:
 location_area_code: 23
 base_station_id_code: 63
  stream_id: 255
 osmobsc_bts_type: sysmobts
  trx_list:
  - nominal_power: 23
   max_power_red: 0
   arfcn: 868
   timeslot list:
    - phys_chan_config: CCCH+SDCCH4
    - phys_chan_config: SDCCH8
    - phys_chan_config: TCH/F_TCH/H_PDCH
     phys_chan_config: TCH/F_TCH/H_PDCH
     phys_chan_config: TCH/F_TCH/H_PDCH
     phys_chan_config: TCH/F_TCH/H_PDCH
    - phys_chan_config: TCH/F_TCH/H_PDCH
     phys_chan_config: TCH/F_TCH/H_PDCH
```

4.3 Example Setup

Osmo-GSM-Tester comes with an example official setup which is the one used to run Osmocom's setup. There are actually two different available setups: a production one and an RnD one, used to develop Osmo-GSM-Tester itself. These two set ups share mostly all configuration, main difference being the resources.conf file being used.

All Osmo-GSM-Tester related configuration for that environment is publicly available in osmo-gsm-tester.git itself

- paths.conf: Available Available under *example*/, with its paths already configured to take required bits from inside the git repository.
- suites_dir: Available under suites/

Osmo-GSM-Tester Manual 11 / 25

- scenarios dir: Available under example/scenarios/
- resources.conf: Available under *example*/ as *resources.conf.prod* for Production setup and as *resources.conf.rnd* for the RnD setup. One must use a symbolic link to have it available as *resources.conf*.

4.3.1 Typical Invocations

Each invocation of osmo-gsm-tester deploys a set of pre-compiled binaries for the Osmocom core network as well as for the Osmocom based BTS models. To create such a set of binaries, see Section 3.

Examples for launching test trials:

• Run the default suites (see Section 4.2.3) on a given set of binaries:

```
osmo-gsm-tester.py path/to/my-trial
```

• Run an explicit choice of suite:scenario combinations:

```
osmo-gsm-tester.py path/to/my-trial -s sms:sysmo -s sms:trx -s sms:nanobts
```

• Run one *suite:scenario1+scenario2* combination, setting log level to *debug* and enabling logging of full python tracebacks, and also only run just the *mo_mt_sms.py* test from the suite, e.g. to investigate a test failure:

```
\verb|osmo-gsm-tester.py| path/to/my-trial -s | sms:sysmo+foobar -l | dbg -T -t | mo\_mt| \\
```

A test script may also be run step-by-step in a python debugger, see Section 11.

5 Resource Resolution

- A global configuration resources.conf defines which hardware is plugged to the Osmo-GSM-Tester setup, be it the main unit or any slave unit. This list becomes the *resource pool*.
- Each suite contains a number of test scripts. The amount of resources a test may use is defined by the test suite's suite.conf.
- Which specific modems, BTS models, NITB IP addresses etc. are made available to a test run is typically determined by suite.conf and a combination of scenario configurations or picked automatically if not.

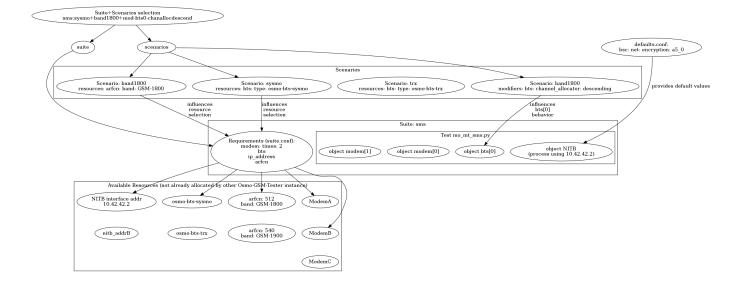


Figure 3: Example of how to select resources and configurations: scenarios may pick specific resources (here BTS and ARFCN), remaining requirements are picked as available (here two modems and a NITB interface)

Osmo-GSM-Tester Manual 12 / 25

5.1 Resource Reservation for Concurrent Trials

While a test suite runs, the used resources are noted in a global state directory in a reserved-resources file. This way, any number of trials may be run consecutively without resource conflicts. Any test trial will only use resources that are currently not reserved by any other test suite. The reservation state is human readable.

The global state directory is protected by a file lock to allow access by separate processes.

Also, the binaries from a trial are never installed system-wide, but are run with a specific *LD_LIBRARY_PATH* pointing at the trial's inst, so that several trials can run consecutively without conflicting binary versions. For some specific binaries which require extra permissions (such as osmo-bts-octphy requiring *CAP_NET_RAW*), *patchelf* program is used to modify the binary *RPATH* field instead because the OS dynamic linker skips *LD_LIBRARY_PATH* for binaries with special permissions.

Once a test suite run is complete, all its reserved resources are torn down (if the test scripts have not done so already), and the reservations are released automatically.

If required resources are unavailable, the test trial fails. For consecutive test trials, a test run needs to either wait for resources to become available, or test suites need to be scheduled to make sense. (\leftarrow **TODO**)

6 Test API

TODO (in the meantime, look at src/osmo_gsm_tester/test.py, as well as suite.py, which calls the test's setup() function to get an idea)

7 Osmo-GSM-Tester Installation

7.1 Trial Builder

The Trial Builder is the jenkins build slave (host) building all sysroot binary packages used later by Osmo-GSM-Tester to run the tests. It's purpose is to build the which the Osmo-GSM-Tester runner job can fetch.

7.1.1 Osmocom Build Dependencies

Each of the jenkins builds requires individual dependencies. This is generally the same as for building the software outside of osmo-gsm-tester and will not be detailed here. For the Osmocom projects, refer to http://osmocom.org/projects/cellular-infrastructure/wiki/Build_from_Source. Be aware of specific requirements for BTS hardware: for example, the osmo-bts-sysmo build needs the sysmoBTS SDK installed on the build slave, which should match the installed sysmoBTS firmware.

7.1.2 Add Build Jobs

There are various jenkins-build-* scripts in osmo-gsm-tester/contrib/, which can be called as jenkins build jobs to build and bundle binaries as artifacts, to be run on the osmo-gsm-tester main unit and/or BTS hardware.

Be aware of the dependencies, as hinted at in Section 7.1.1.

While the various binaries could technically be built on the osmo-gsm-tester main unit, it is recommended to use a separate build slave, to take load off of the main unit.

Please note nowadays we set up all the osmocom jenkins jobs (including Osmo-GSM-Tester ones) using *jenkins-job-builder*. You can find all the configuration's in Osmocom's *osmo-ci.git* files 'jobs/osmo-gsm-tester-*.yml. Explanation below on how to set up jobs manually is left as a reference for other projects.

On your jenkins master, set up build jobs to call these scripts—typically one build job per script. Look in contrib/ and create one build job for each of the BTS types you would like to test, as well as one for the *build-osmo-nitb*.

These are generic steps to configure a jenkins build job for each of these build scripts, by example of the jenkins-build-osmonitb.sh script; all that differs to the other scripts is the "osmo-nitb" part:

Osmo-GSM-Tester Manual 13 / 25

- Project name: "osmo-gsm-tester_build-osmo-nitb" (Replace osmo-nitb according to which build script this is for)
- Discard old builds

Configure this to taste, for example:

- Max # of build to keep: "20"
- Restrict where this project can be run: Choose a build slave label that matches the main unit's architecture and distribution, typically a Debian system, e.g.: "linux_amd64_debian8"
- Source Code Management:
 - Git
 - * Repository URL: "git://git.osmocom.org/osmo-gsm-tester"
 - * Branch Specifier: "*/master"
 - * Additional Behaviors
 - · Check out to a sub-directory: "osmo-gsm-tester"
- · Build Triggers

The decision on when to build is complex. Here are some examples:

- Once per day:

Build periodically: "H H * * *"

- For the Osmocom project, the purpose is to verify our software changes. Hence we would like to test every time our code has changed:
 - * We could add various git repositories to watch, and enable Poll SCM.
 - * On jenkins.osmocom.org, we have various jobs that build the master branches of their respective git repositories when a new change was merged. Here, we can thus trigger e.g. an osmo-nitb build for osmo-gsm-tester everytime the master build has run:
 - Build after other projects are built: "OpenBSC"
 - * Note that most of the Osmocom projects also need to be re-tested when their dependencies like libosmo* have changed. Triggering on all those changes typically causes more jenkins runs than necessary: for example, it rebuilds once per each dependency that has rebuilt due to one libosmocore change. There is so far no trivial way known to avoid this. It is indeed safest to rebuild more often.
- Build
 - Execute Shell

```
#!/bin/sh
set -e -x
./osmo-gsm-tester/contrib/jenkins-build-osmo-nitb.sh
```

(Replace osmo-nitb according to which build script this is for)

- · Post-build Actions
 - Archive the artifacts: "*.tgz, *.md5"
 (This step is important to be able to use the built binaries in the run job below.)

Tip

When you've created one build job, it is convenient to create further build jobs by copying the first one and, e.g., simply replacing all "osmo-nitb" with "osmo-bts-trx".

Osmo-GSM-Tester Manual 14 / 25

7.2 Main Unit

The main unit is a general purpose computer that orchestrates the tests. It runs the core network components, controls the modems and so on. This can be anything from a dedicated production rack unit to your laptop at home.

This manual will assume that tests are run from a jenkins build slave, by a user named *jenkins* that belongs to group *osmo-gsm-tester*. The user configuration for manual test runs and/or a different user name is identical, simply replace the user name or group.

Please, note installation steps and dependencies needed will depend on lots of factors, like your distribution, your specific setup, which hardware you plan to support, etc.

This section aims at being one place to document the rationale behind certain configurations being done in one way or another. For an up to date step by step detailed way to install and maintain the Osmocom Osmo-GSM-Tester setup, one will want to look at the ansible scripts section.

7.2.1 Create jenkins User

On the main unit, create a jenkins user:

```
useradd -m jenkins
```

7.2.2 Install Java on Main Unit

To be able to launch the Jenkins build slave, a Java RE must be available on the main unit. For example:

```
apt-get install default-jdk
```

7.2.3 Allow SSH Access from Jenkins Master

Create an SSH keypair to be used for login on the osmo-gsm-tester. This may be entered on the jenkins web UI; alternatively, use the jenkins server's shell:

Login on the main jenkins server shell and create an SSH keypair, for example:

Copy the public key to the main unit, e.g. copy-paste:

```
cat /usr/local/jenkins/keys/osmo-gsm-tester-rnd.pub
# copy this public key
```

On the main unit:

```
mkdir ~jenkins/.ssh
cat > ~jenkins/.ssh/authorized_keys
# paste above public key and hit Ctrl-D
chown -R jenkins: ~jenkins/.ssh
```

Osmo-GSM-Tester Manual 15 / 25

Make sure that the user running the jenkins master accepts the main unit's host identification. There must be an actual RSA host key available in the known_hosts file for the jenkins master to be able to log in. Simply calling ssh and accepting the host key as usual is not enough. Jenkins may continue to say "Host key verification failed".

To place an RSA host key in the jenkins' known_hosts file, you may do:

On the Jenkins master:

```
main_unit_ip=10.9.8.7
ssh-keyscan -H $main_unit_ip >> ~jenkins/.ssh/known_hosts
chown jenkins: ~jenkins/.ssh/known_hosts
```

Verify that the jenkins user on the Jenkins master has SSH access to the main unit:

```
su jenkins
main_unit_ip=10.9.8.7
ssh -i /usr/local/jenkins/keys/osmo-gsm-tester-rnd jenkins@$main_unit_ip
exit
```

7.2.4 Add Jenkins Slave

In the jenkins web UI, add a new build slave for the osmo-gsm-tester:

- · Manage Jenkins
 - Manage Nodes
 - * New Node
 - Enter a node name, e.g. "osmo-gsm-tester-1" (the "-1" is just some identification in case you'd like to add another setup later).
 - · Permanent Agent

Configure the node as:

- # of executors: 1
- Remote root directory: "/home/jenkins"
- Labels: "osmo-gsm-tester"

 (This is a general label common to all osmo-gsm-tester build slaves you may set up in the future.)
- Usage: Only build jobs with label expressions matching this node
- · Launch method: Launch slave agents via SSH
 - Host: your main unit's IP address
 - Credentials: choose Add / Jenkins
 - * Domain: Global credentials (unrestricted)
 - * Kind: SSH Username with private key
 - * Scope: Global
 - * Username: "jenkins"

(as created on the main unit above)

- * Private Key: From a file on Jenkins master
 - · File: "/usr/local/jenkins/keys/osmo-gsm-tester-rnd"
- * Passphrase: enter same passphrase as above
- * ID: "osmo-gsm-tester-1"
- * Name: "jenkins for SSH to osmo-gsm-tester-1"

The build slave should be able to start now.

Osmo-GSM-Tester Manual 16 / 25

7.2.5 Add Run Job

This is the jenkins job that runs the tests on the GSM hardware:

- It sources the artifacts from jenkins' build jobs.
- It runs on the osmo-gsm-tester main unit.

Sample script to run Osmo-GSM-Tester as a jenkins job can be found in osmo-gsm-tester.git file contrib/jenkins-run.sh.

Please note nowadays we set up all the osmocom jenkins jobs (including Osmo-GSM-Tester ones) using *jenkins-job-builder*. You can find all the configuration's in Osmocom's *osmo-ci.git* files 'jobs/osmo-gsm-tester-*.yml. Explanation below on how to set up jobs manually is left as a reference for other projects.

Here is the configuration for the run job:

- Project name: "osmo-gsm-tester_run"
- Discard old builds
 Configure this to taste, for example:
 - Max # of build to keep: "20"
- Restrict where this project can be run: "osmo-gsm-tester" (to match the Label configured in Section 7.2.4).
- Source Code Management:
 - Git
 - * Repository URL: "git://git.osmocom.org/osmo-gsm-tester"
 - * Branch Specifier: "*/master"
 - * Additional Behaviors
 - · Check out to a sub-directory: "osmo-gsm-tester"
 - · Clean before checkout
- Build Triggers

The decision on when to build is complex. For this run job, it is suggested to rebuild:

- after each of above build jobs that produced new artifacts:

Build after other projects are built: "osmo-gsm-tester_build-osmo-nitb, osmo-gsm-tester_build-osmo-bts-sysmo, osmo-gsm-tester_build-osmo-bts-trx"

(Add each build job name you configured above)

as well as once per day:Build periodically: "H H * * *"

and, in addition, whenever the osmo-gsm-tester scripts have been modified:

Poll SCM: "H/5 * * * *"

(i.e. look every five minutes whether the upstream git has changed)

- Build
 - Copy artifacts from each build job you have set up:
 - * Copy artifacts from another project
 - · Project name: "osmo-gsm-tester build-osmo-nitb"
 - · Which build: Latest successful build
 - · enable Stable build only
 - · Artifacts to copy: "*.tgz, *.md5"
 - * Add a separate similar Copy artifacts... section for each build job you have set up.

Osmo-GSM-Tester Manual 17 / 25

- Execute Shell

```
#!/bin/sh
set -e -x

# debug: provoke a failure
#export OSMO_GSM_TESTER_OPTS="-s debug -t fail"

PATH="$PWD/osmo-gsm-tester/src:$PATH" \
    ./osmo-gsm-tester/contrib/jenkins-run.sh
```

Details:

- * The *jenkins-run.sh* script assumes to find the *osmo-gsm-tester.py* in the *\$PATH*. To use the most recent osmo-gsm-tester code here, we direct *\$PATH* to the actual workspace checkout. This could also run from a sytem wide install, in which case you could omit the explicit PATH to "\$PWD/osmo-gsm-tester/src".
- * This assumes that there are configuration files for osmo-gsm-tester placed on the system (see Section 4.2).
- * If you'd like to check the behavior of test failures, you can uncomment the line below "# debug" to produce a build failure on every run. Note that this test typically produces a quite empty run result, since it launches no NITB nor BTS.
- Post-build Actions
 - Archive the artifacts
 - * Files to archive: "*-run.tgz, *-bin.tgz"

 This stores the complete test report with config files, logs, stdout/stderr output, pcaps as well as the binaries used for the test run in artifacts. This allows analysis of older builds, instead of only the most recent build (which cleans up the jenkins workspace every time). The trial-N-run.tgz and trial-N-bin.tgz archives are produced by the jenkins-run.sh script, both for successful and failing runs.

7.2.6 Install osmo-gsm-tester

This assumes you have already created the jenkins user (see Section 7.2.1).

Dependencies needed will depend on lots of factors, like your distribution, your specific setup, which hardware you plan to support, etc.

On a Debian/Ubuntu based system, these commands install the packages needed to run the osmo-gsm-tester.py code, i.e. install these on your main unit:

```
apt-get install \
        dbus \
        tcpdump \
        sqlite3 \
        python3 \
        python3-setuptools \
        python3-yam1 \
        python3-mako \
        python3-gi \
        python3-numpy \
        python3-wheel \
        ofono \
        patchelf \
        sudo \
        libcap2-bin \
        python3-pip \
        udhcpc \
        iperf3 \
        locales
pip3 install \
        "git+https://github.com/podshumok/python-smpplib.git@master#egg=smpplib" \
        pydbus \
        pyusb \
        pysispm
```

Osmo-GSM-Tester Manual 18 / 25



Important

ofono may need to be installed from source to contain the most recent fixes needed to operate your modems. This depends on the modem hardware used and the tests run. Please see Section 8.2.

7.2.7 User Permissions

On the main unit, create a group for all users that should be allowed to use the osmo-gsm-tester, and add users (here *jenkins*) to this group.

```
groupadd osmo-gsm-tester
gpasswd -a jenkins osmo-gsm-tester
```

Note

you may also need to add users to the *usrp* group, see Section 7.3.4.

A user added to a group needs to re-login for the group permissions to take effect.

7.2.7.1 Paths

Assuming that you are using the example config, prepare a system wide state location in /var/tmp:

```
mkdir -p /var/tmp/osmo-gsm-tester/state
chown -R :osmo-gsm-tester /var/tmp/osmo-gsm-tester
chmod -R g+rwxs /var/tmp/osmo-gsm-tester
setfacl -d -m group:osmo-gsm-tester:rwx /var/tmp/osmo-gsm-tester/state
```



Important

the state directory needs to be shared between all users potentially running the osmo-gsm-tester to resolve resource allocations. Above *setfacl* command sets the access control to keep all created files group writable.

With the jenkins build as described here, the trials will live in the build slave's workspace. Other modes of operation (a daemon scheduling concurrent runs, **TODO**) may use a system wide directory to manage trials to run:

```
mkdir -p /var/tmp/osmo-gsm-tester/trials
chown -R :osmo-gsm-tester /var/tmp/osmo-gsm-tester
chmod -R g+rwxs /var/tmp/osmo-gsm-tester
```

7.2.7.2 Allow DBus Access to ofono

Put a DBus configuration file in place that allows the osmo-gsm-tester group to access the org.ofono DBus path:

Osmo-GSM-Tester Manual 19 / 25

```
<allow send_destination="org.ofono"/>
</policy>
</busconfig>
END
```

(No restart of dbus nor ofono necessary.)

7.3 Slave Unit(s)

The slave units are the hosts used by Osmo-GSM-Tester to run processes on. It may be the Main Unit itself and processes will be run locally, or it may be a remote host were processes are run usually through SSH.

This guide assumes slaves unit(s) use same configuration as the Main Unit, that is, it runs under *jenkins* user which is a member of the *osmo-gsm-tester* user group. In order to do so, follow the instruction under the Main Unit section above. Keep in mind the *jenkins* user on the Main Unit will need to be able to log in through SSH as the slave unit *jenkins* user to run the processes. No direct access from Jenkins Master node is required here.

7.3.1 Capture Packets

In order to allow collecting pcap traces of the network communication for later reference, allow the osmo-gsm-tester group to capture packets using the *tcpdump* program:

```
chgrp osmo-gsm-tester /usr/sbin/tcpdump
chmod 750 /usr/sbin/tcpdump
setcap cap_net_raw,cap_net_admin=eip /usr/sbin/tcpdump
```

Put tcpdump in the \$PATH — assuming that tcpdump is available for root:

```
ln -s `which tcpdump` /usr/local/bin/tcpdump
```

Tip

Why a symlink in /usr/local/bin? On Debian, tcpdump lives in /usr/sbin, which is not part of the \$PATH for non-root users. To avoid hardcoding non-portable paths in the osmo-gsm-tester source, tcpdump must be available in the \$PATH. There are various trivial ways to modify \$PATH for login shells, but the jenkins build slave typically runs in a non-login shell; modifying non-login shell environments is not trivially possible without also interfering with files installed from debian packages. Probably the easiest way to allow all users and all shells to find the tcpdump binary is to actually place a symbolic link in a directory that is already part of the non-login shell's \$PATH. Above example places such in /usr/local/bin.

Verify that a non-login shell can find *tcpdump*:

```
su jenkins -c 'which tcpdump'
# should print: "/usr/local/bin/tcpdump"
```



Warning

When logged in via SSH on your main unit, running *tcpdump* to capture packets may result in a feedback loop: SSH activity to send tcpdump's output to your terminal is in turn is picked up in the tcpdump trace, and so forth. When testing *tcpdump* access, make sure to have proper filter expressions in place.

Osmo-GSM-Tester Manual 20 / 25

7.3.2 Allow Core Files

In case a binary run for the test crashes, a core file of the crash should be written. This requires a limit rule. Create a file with the required rule:

```
sudo -s echo "@osmo-gsm-tester - core unlimited" > /etc/security/limits.d/osmo-gsm-tester_allow- \leftrightarrow core.conf
```

Re-login the user to make these changes take effect.

Set the **kernel.core_pattern** sysctl to **core** (usually the default). For each binary run by osmo-gsm-tester, a core file will then appear in the same dir that contains stdout and stderr for that process (because this dir is set as CWD).

```
sysctl -w kernel.core_pattern=core
```

Tip

Files required to be installed under /etc/security/limits.d/ can be found under osmo-gsm-tester.git/utils/limits.d/, so one can simply cp them from there.

7.3.3 Allow Realtime Priority

Certain binaries should be run with real-time priority, like osmo-bts-trx. Add this permission on the main unit:

```
sudo -s echo "@osmo-gsm-tester - rtprio 99" > /etc/security/limits.d/osmo-gsm-tester_allow-rtprio. \hookleftarrow conf
```

Re-login the user to make these changes take effect.

Tip

Files required to be installed under /etc/security/limits.d/ can be found under osmo-gsm-tester.git/utils/limits.d/, so one can simply cp them from there.

7.3.3.1 Allow capabilities: CAP_NET_RAW, CAP_NET_ADMIN, CAP_SYS_ADMIN

Certain binaries require *CAP_NET_RAW* to be set, like *osmo-bts-octphy* as it uses a *AF_PACKET* socket. Similarly, others (like osmo-ggsn) require *CAP_NET_ADMIN* to be able to create tun devices, and so on.

To be able to set the following capability without being root, osmo-gsm-tester uses sudo to gain permissions to set the capability.

This is the script that osmo-gsm-tester expects on the host running the process:

```
echo /usr/local/bin/osmo-gsm-tester_setcap_net_raw.sh <<EOF
#!/bin/bash
/sbin/setcap cap_net_raw+ep $1
EOF
chmod +x /usr/local/bin/osmo-gsm-tester_setcap_net_raw.sh</pre>
```

Now, again on the same host, we need to provide sudo access to this script for osmo-gsm-tester:

The script file name *osmo-gsm-tester_setcap_net_raw.sh* is important, as osmo-gsm-tester expects to find a script with this name in *\$PATH* at run time.

Osmo-GSM-Tester Manual 21 / 25

Tip

Files required to be installed under /etc/sudoers.d/ can be found under osmo-gsm-tester.git/utils/sudoers.d/, so one can simply cp them from there.

Tip

Files required to be installed under /usr/local/bin/ can be found under osmo-gsm-tester.git/utils/bin/, so one can simply cp them from there.

7.3.4 UHD

Grant permission to use the UHD driver to run USRP devices for osmo-bts-trx, by adding the jenkins user to the usrp group:

```
gpasswd -a jenkins usrp
```

To run osmo-bts-trx with a USRP attached, you may need to install a UHD driver. Please refer to http://osmocom.org/projects/osmotrx/wiki/OsmoTRX#UHD for details; the following is an example for the B200 family USRP devices:

```
apt-get install libuhd-dev uhd-host
/usr/lib/uhd/utils/uhd_images_downloader.py
```

7.3.5 Log Rotation

To avoid clogging up /var/log, it makes sense to choose a sane maximum log size:

```
echo maxsize 10M > /etc/logrotate.d/maxsize
```

7.3.6 Install Scripts



Important

When using the jenkins build slave as configured above, there is no need to install the osmo-gsm-tester sources on the main unit. The jenkins job will do so implicitly by checking out the latest osmo-gsm-tester sources in the workspace for every run. If you're using only the jenkins build slave, you may skip this section.

If you prefer to use a fixed installation of the osmo-gsm-tester sources instead of the jenkins workspace, you can:

1. From the run job configured above, remove the line that says

```
PATH="$PWD/osmo-gsm-tester/src:$PATH" \
```

so that this uses a system wide installation instead.

2. Install the sources e.g. in /usr/local/src as indicated below.

On the main unit, to install the latest in /usr/local/src:

```
apt-get install git
mkdir -p /usr/local/src
cd /usr/local/src
git clone git://git.osmocom.org/osmo-gsm-tester
```

To allow all users to run *osmo-gsm-tester.py*, from login as well as non-login shells, the easiest solution is to place a symlink in */usr/local/bin*:

Osmo-GSM-Tester Manual 22 / 25

```
ln -s /usr/local/src/osmo-gsm-tester/src/osmo-gsm-tester.py /usr/local/bin/
```

(See also the tip in Section 7.3.1 for a more detailed explanation.)

The example configuration provided in the source is suitable for running as-is, **if** your hardware setup matches (you could technically use that directly by a symlink e.g. from /usr/local/etc/osmo-gsm-tester to the example dir). If in doubt, rather copy the example, point paths.conf at the suites dir, and adjust your own configuration as needed. For example:

```
cd /etc
cp -R /usr/local/src/osmo-gsm-tester/example osmo-gsm-tester
sed -i 's#\.\./suites#/usr/local/src/osmo-gsm-tester/suites#' osmo-gsm-tester/paths.conf
```

Note

The configuration will be looked up in various places, see Section 4.2.

8 Hardware Choice and Configuration

8.1 SysmoBTS

To use the SysmoBTS in the osmo-gsm-tester, the following systemd services must be disabled:

```
systemctl mask osmo-nitb osmo-bts-sysmo osmo-pcu sysmobts-mgr
```

This stops the stock setup keeping the BTS in operation and hence allows the osmo-gsm-tester to install and launch its own versions of the SysmoBTS software.

8.1.1 IP Address

To ensure that the SysmoBTS is always reachable at a fixed known IP address, configure the eth0 to use a static IP address:

Adjust /etc/network/interfaces and replace the line

```
iface eth0 inet dhcp
```

with

```
iface eth0 inet static address 10.42.42.114 netmask 255.255.255.0 gateway 10.42.42.1
```

You may set the name server in /etc/resolve.conf (most likely to the IP of the gateway), but this is not really needed by the osmo-gsm-tester.

8.1.2 Allow Core Files

In case a binary run for the test crashes, a core file of the crash should be written. This requires a limits rule. Append a line to /etc/limits like:

```
ssh root@10.42.42.114
echo "* C16384" >> /etc/limits
```

Osmo-GSM-Tester Manual 23 / 25

8.1.3 Reboot

Reboot the BTS and make sure that the IP address for eth0 is now indeed 10.42.42.114, and that no osmo* programs are running.

```
ip a
ps w | grep osmo
```

8.1.4 SSH Access

Make sure that the jenkins user on the main unit is able to login on the sysmoBTS, possibly erasing outdated host keys after a new rootfs was loaded:

On the main unit, for example do:

```
su - jenkins
ssh root@10.42.42.114
```

Fix any problems until you get a login on the sysmoBTS.

8.2 Modems

TODO: describe modem choices and how to run ofono

8.3 osmo-bts-trx

TODO: describe B200 family

9 Ansible Setup

Since the set of steps to set up a full Osmo-GSM-Tester environment can be quite long and tedious, nowadays the Osmocom RnD and Production Osmo-GSM-Tester setups are installed and maintained using Ansible scripts. The set of ansible scripts is available in Osmocom's git repository osmo-ci.git under *ansible* subdirectory, with the rest of ansible scripts to set jenkins slaves, etc.

Since these set of scripts is mainly aimed at Osmocom's own setup, and debian is used there, so far only debian hosts are supported officially, though patches to support other distributions are welcome.

In there, the *setup-gsm-tester.yml* file is responsible of doing all required steps to set up a host to become either a Main Unit or a a Slave Unit. The ansible file can be run as follows:

```
$ ansible-playbook -i hosts setup-gsm-tester.yml
```

You will need root-alike access in the remote host in order to let ansible install everything Osmo-GSM-Tester, however, no root-specific user is required as long as your remote user has sudo access on that host. If that's your case, add the following parameters to *ansible-playbook*:

```
$ ansible-playbook -i hosts -b -K -u your_remote_user setup-gsm-tester.yml
```

The *setup-gsm-tester.yml* file is mostly an aggregator of tasks. Most Osmo-GSM-Tester related tasks can be found under subdirectory *roles/gsm-tester-**.

Since different (for instance Production vs RnD) can have different characteristics, some per-host variables can be found under directory host_vars/, specifying for instance the number of expected modems attached to the Main Unit, the DHCP server static leasing for devices, etc.

The different tasks usually have tags to differentiate which kind of Osmo-GSM-Tester host they are required by. They are also set to differentiate sets of tasks required if a specific feature is being used in the host (for instance, willing to manage modems

Osmo-GSM-Tester Manual 24 / 25

with ofono). This allows playing with the -t and --skip-tags when running ansible-playbooks in order to run specific set of tasks on each host.

For instance, to run tasks required to set up a Slave Unit, one can run:

```
$ ansible-playbook -i hosts setup-gsm-tester.yml -t osmo-gsm-tester-proc
```

To run all modem-related tasks:

```
$ ansible-playbook -i hosts setup-gsm-tester.yml -t modem
```

Don't forget to read all README.md files available in different subdirectories to find out more detailed information on how to run the scripts.

10 Docker Setup

A sample Osmo-GSM-Tester setup based on docker containers and maintained by the Osmocom community is available in Osmocom's git repository docker-playground.git, under *osmo-gsm-tester* subdirectory. In there, one can find:

- A *Dockerfile* file can be found which builds a docker image which can be used both to run as an osmo-gsm-tester Main Unit or as a Slave Unit. The main difference to use it as one or the other is whether osmo-gsm-tester.py is run on it (Main Unit) or otherwise sshd (Slave Unit). A convenience script is provided in the same directory to start the processes just explained (osmo-gsm-tester-{master,slave}.sh).
- A *jenkins.sh* file is provided which handles all the magic to start a Main Unit and a Slave Unit on the same docker private network so they can interact. It also takes care on running the docker containers with all the required permissions, mount all virtual filesystem bindings, etc.
- A sample resources.conf file is provided which provides some virtual resources configured to be run on the Slave Unit.

The *jenkins.sh* script expects the trial directory to be in */tmp/trial*, and will bind that directory to the docker Main Unit instance so osmo-gsm-tester uses it. Hence, one must place a the trial to be run in there before running the setup. There is yet no specific docker container available to build trials, but one can re-use an Osmocom jenkins slave container available to in *docker-playground.git* in order to build them using the scripts in *osmo-gsm-tester.git/contrib/jenkins-build-*.sh*. Alternatively, the quick way is to get them from any of the Osmocom's Osmo-GSM-Tester jenkins jobs, which store them as artifacts.

When running the whole setup through the *jenkins.sh* script, standard out (*stdout*) and standard error (*stderr*) outputs for each docker container are made available to the host running the script, under /tmp/logs directory. Results generated by Osmo-GSM-Tester's last run can be found as usual under the trial directory (/tmp/trial/last_run).

The Osmo-GSM-Tester git revision being checked out to build and run inside the docker containers can be selected by setting the OSMO_GSM_TESTER_BRANCH environment variable. For instance, to install and run branch mybranch in osmo-gsm-tester.git, one can use:

```
export OSMO_GSM_TESTER_BRANCH=mybranch
./jenkins.sh
```

Specific command line parameters to be passed to Osmo-GSM-Tester process inside the Main Unit docker container instance can be set with the *OSMO_GSM_TESTER_OPTS* environment variable. For instance, to run suite 4g with debug logging level:

```
export OSMO_GSM_TESTER_OPTS="-s 4g -1 dbg"
./jenkins.sh
```

11 Debugging

TODO: describe how to invoke *ipdb3* and step into a suite's test script

Osmo-GSM-Tester Manual 25 / 25

12 Troubleshooting

12.1 Format: YAML, and its Drawbacks

The general configuration format used is YAML. The stock python YAML parser does have several drawbacks: too many complex possibilities and alternative ways of formatting a configuration, but at the time of writing seems to be the only widely used configuration format that offers a simple and human readable formatting as well as nested structuring. It is recommended to use only the exact YAML subset seen in this manual in case the osmo-gsm-tester should move to a less bloated parser in the future.

Careful: if a configuration item consists of digits and starts with a zero, you need to quote it, or it may be interpreted as an octal notation integer! Please avoid using the octal notation on purpose, it is not provided intentionally.