Installation Guide

Lanyard Roll Print for Windows 10 / 11 · about 10 minutes · by Digital Arts

Install the Epson printer driver first, then download the setup and open it. If Windows shows a blue **“Windows protected your PC”** screen, click **More info → Run anyway**. This screen is normal for new software, and installing this way does not harm your computer.

What you need

Item	Requirement
Computer	Windows 10 or Windows 11 (64-bit)
Printer	Epson ink-tank printer (for example L130) connected by USB, with the **Epson driver installed** and a test page printed once
Free space	About 150 MB (the download is about 30 MB)
Internet	To activate the licence; after that the app checks the licence at least once every 7 days
Licence key	Given by Digital Arts, in the form `LRP-XXXX-XXXX-XXXX-XXXX`
Download	**apps.datpl.com/lanyard-roll-print** → Download for Windows

Install in 6 steps


1. **Download.** Open **apps.datpl.com/lanyard-roll-print** and click Download for Windows. The file **LanyardRollPrint-Setup-1.1.2.exe** goes to your **Downloads** folder.
   If Chrome or Edge says the file “isn't commonly downloaded”, click Keep (in Edge: ... → Keep → Keep anyway).
2. **Open the setup.** Double-click **LanyardRollPrint-Setup-1.1.2.exe**.
3. **Blue screen? Click “More info”, then “Run anyway”.** See the pictures on the next page.
4. **Welcome.** Close Lanyard Roll Print if it is already open, then click Next. No administrator password is needed.
5. **Choose shortcuts.** Keep **Desktop shortcut** and **Start Menu shortcut** ticked, click Next, keep the folder as it is and click Install. It takes about a minute.
6. **Finish.** Keep **Start Lanyard Roll Print now** ticked and click Finish. The Lanyard Roll Print icon is now on your desktop.

> **Updating to a new version?** Run the new setup the same way. Your licence, printer settings and print history are kept.


The blue screen: “Windows protected your PC”

Windows (Microsoft Defender SmartScreen) shows this for any new program that only a few people have downloaded so far. It is a general caution, not a virus warning. Do this:

1 · Click “More info”

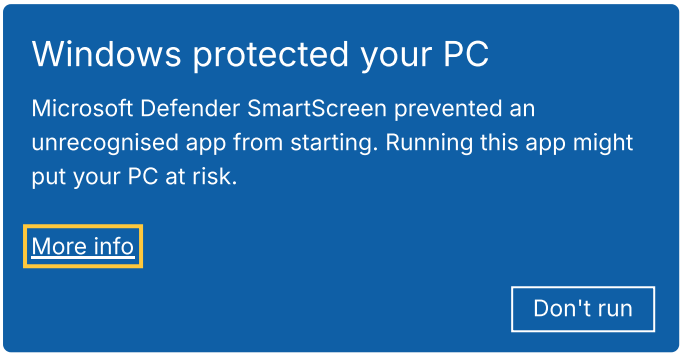

2 · Click “Run anyway”

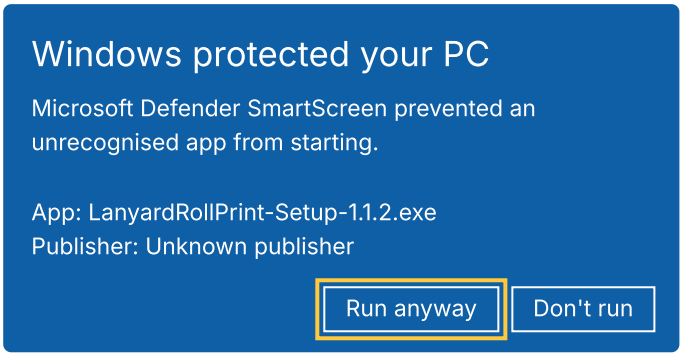

Simplified drawing of the Windows screen. The **Run anyway** button appears only after you click **More info**.

Is it safe? Yes. Installing with Run anyway does not harm your computer.

- The warning appears because the software is new, not because something was found in it.
- Lanyard Roll Print is made by **Digital Arts** (Andaman & Nicobar Islands). It has no virus, no ads and no spyware.
- It installs only its own files for your Windows user and does not change Windows settings or other programs. Remove it any time from **Settings → Apps**.
- “Unknown publisher” only means the file is not yet signed with a paid certificate.

Only for the real file. Use Run anyway only for the setup downloaded from **apps.datpl.com/lanyard-roll-print** or sent to you directly by Digital Arts, never for a copy from an unknown website or forwarded by someone else.

If Windows Security (antivirus) blocks or deletes the setup

Sometimes Microsoft Defender removes a new setup file by mistake (a “false positive”). Get it back and allow it like this:

1. Open **Start** → type **Windows Security** → open it → **Virus & threat protection**.
2. Click **Protection history**. Open the newest item that names **LanyardRollPrint-Setup-1.1.2.exe** (or **Lanyard Roll Print**).
3. Click `Actions` → `Allow on device` (or `Restore`). Then open the setup again.

Stop it happening again: add an exclusion (optional)


1. In **Windows Security → Virus & threat protection**, under *Virus & threat protection settings* click **Manage settings**.
2. Scroll to **Exclusions** → **Add or remove exclusions** → `Yes`.
3. Click `+ Add an exclusion` → **Folder**, and choose `C:\Users\<your name>\AppData\Local\Programs\Lanyard Roll Print`.


Exclude only the Lanyard Roll Print folder, never your whole C: drive or Downloads folder.

> **Other antivirus** (Quick Heal, K7, Avast, Norton ...): open the antivirus → **Quarantine / Virus vault** → select **LanyardRollPrint-Setup-1.1.2.exe** → **Restore** and **Add to exclusions / Trust**.

First start: activate your licence

1. Open **Lanyard Roll Print** from the desktop. The licence window opens.
2. Type or paste your licence key (`LRP-XXXX-XXXX-XXXX-XXXX`) and click `Activate`. The internet must be on.
3. You see **Valid till ...** with the days left. Click `Continue`.

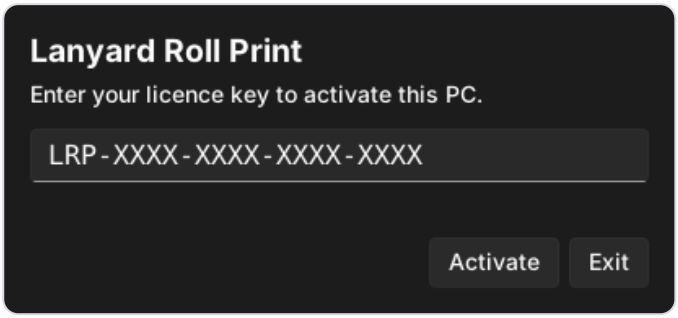


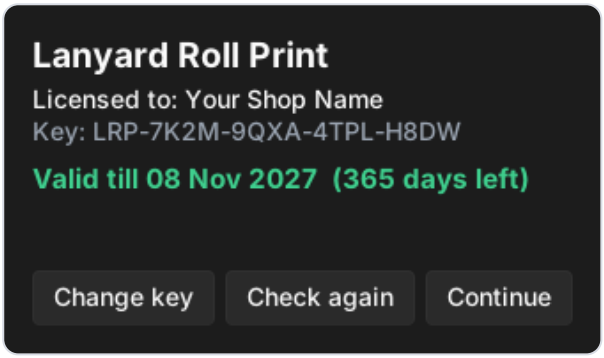

One licence works on one computer. Changing your computer? Send your key on WhatsApp and we will move it. To renew, click `Licence...` at the bottom right → `Pay & Renew`.

Set up your printer (one time)

1. In the **PRINTER** section on the left, click `+ Add`.
2. Give it a name (for example **Epson L130**), choose your printer in **Windows printer** and choose the mode **Epson Driver + Hold (recommended)**. Leave the other settings as they are and click `Save`.

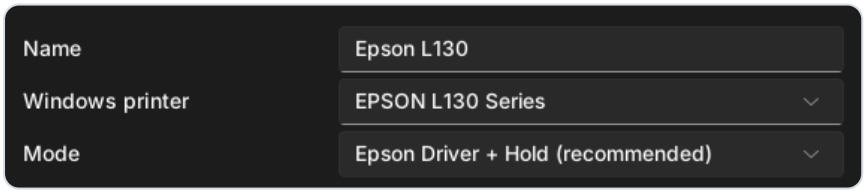

Printer profile: name, Windows printer and mode.

3. Click `Printer Properties...`. In the Epson window choose Quality **High**, the paper type you use, and **untick High Speed** (this removes lines in the print). Click `OK`. These settings are saved for this printer.
4. Load plain paper and click `Ruler test print (100 × 200 mm)` in the **TEST** section. The ruler prints and the paper stays in the printer. Click `⏏ Eject`.

Your first lanyard print

1. Click `Open` and choose your design (JPG, PNG, BMP, PDF or TIFF).
2. Enter **Width** and **Length** of one design. Tick **Mirror** for sublimation paper.
3. Set **Columns** (or click `Fit across paper`) and the gaps. Check the preview on the right.

4. Set **Copies** and click PRINT. After printing, the paper stays in: click ▼ Feed for a gap, print the next design, and ⏏ Eject at the end.

Problems and fixes

Problem	What to do
No “Run anyway” button on the blue screen	Click **More info** first; the button appears after that.
Setup disappeared after download	Your antivirus removed it. See “If Windows Security blocks or deletes the setup”.
Browser blocked the download	In the browser’s Downloads list click **Keep** / **Keep anyway**.
“This app can’t run on your PC”	The computer is 32-bit or older than Windows 10. Lanyard Roll Print needs 64-bit Windows 10 / 11.
“Licence is already used on another PC”	Send the key on WhatsApp; we reset it for this computer.
“Connect to the internet to verify your licence”	The computer was offline for more than 7 days. Turn on the internet and click Check again.
My printer is not in the list	Install the Epson driver from Epson’s website, print a Windows test page, then restart Lanyard Roll Print.
A “Save As” window opens instead of printing	The printer profile has no printer selected. Click Edit and choose your printer in **Windows printer**.
Lines across the print	Printer Properties... → untick **High Speed**, Quality **High**. Run a nozzle check and head cleaning from the Epson Maintenance tab.
Printer light blinks after Stop	Press the printer’s paper button, or switch the printer off and on, then click ⏏ Eject.
Remove the software	**Settings → Apps → Installed apps → Lanyard Roll Print → Uninstall**.

> **Need help?** WhatsApp **99332 11177** (Digital Arts): send a screenshot of the screen and we will help right away.