


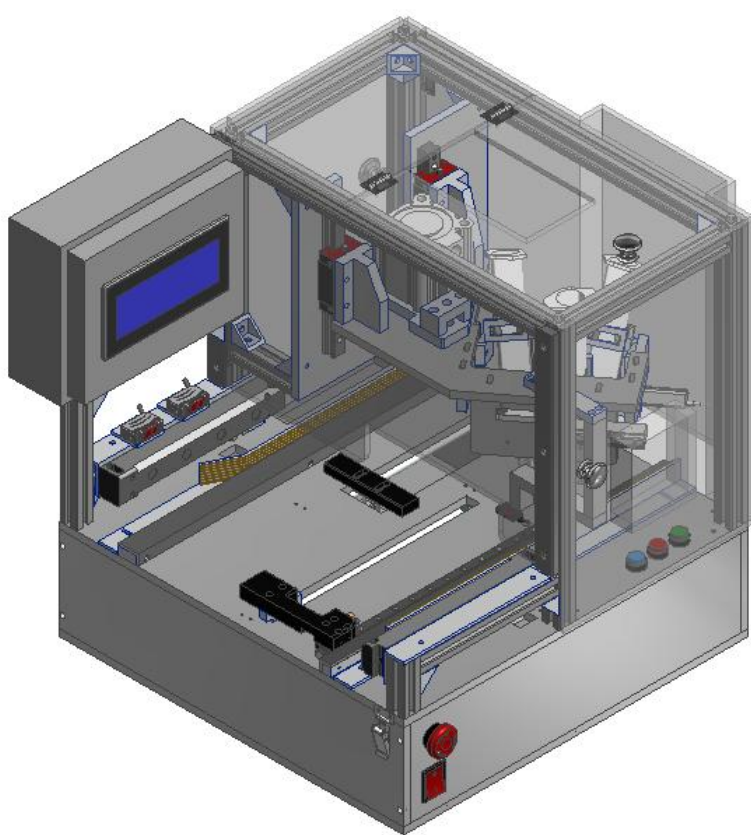

HITACHI AUTO GREASING MACHINE



OPERATION MANUAL

MACHINE FRONT PANEL

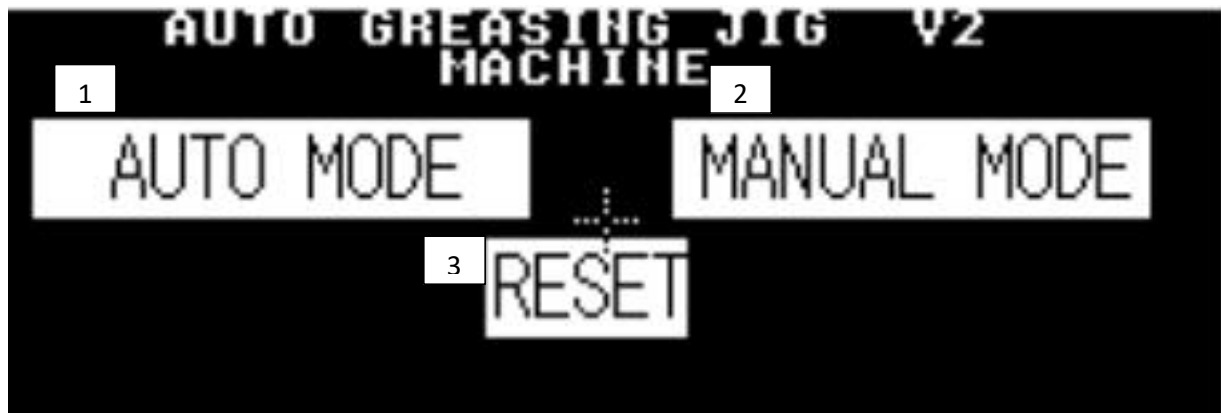


Figure 1 : Main panel

MAIN PANEL

No	Function	Description
1	AUTO MODE	WHEN TURNED ON, THE MACHINE IS IN AUTO MODE AND READY FOR PRODUCTION. WHEN TURNED OFF, THE MACHINE IS IN DEBUGGING OR REPAIRING MODE.
2	MANUAL	TO ENTER IO & SERVO SETTING MODE
3	RESET	Reset all I/O and address value on the PLC and reset the to initial position

OPERATION PANEL

No	Function	Description
1	START BUTTON	PRESS TO START THE MACHINE
2	EMERGENCY BUTTON	PRESS TO EMERGENCY STOP
3	RESET BUTTON	PRESS TO RESET THE MACHINE AND BUZZER

MACHINE OPERATION PROCEDURE

1. POWER ON THE MACHINE BY SWITCH ON POWER BUTTON.
2. TURN ON AIR SUPPLY TO THE MACHINE AND MAKE SURE EMERGENCY BUTTON IS IN OFF POSITION.
3. PRESS RESET BUTTON AND MACHINE WILL PERFORM HOMING ROUTINE.
4. SET MACHINE TO AUTO MODE.
5. LOAD PRODUCT IN MACHINE AND PRESS THE START BUTTON.
6. WHEN PROCESS IS COMPLETED, THE BUZZER WILL SOUND 3 TIMES AND OPERATOR CAN UNLOAD THE PRODUCT FROM THE MACHINE.

AUTO PAGE FUNCTION



Figure 2 : Auto Screen

AUTO PAGE SCREEN

No	Buttons	Description
1	MESSAGE COMMAND	Display machine status
2	COUNTER	Count finishing good.
3	ALARM	Display alarm status.
4	TIMER	Stopwatch for cycle speed.
5	RESET COUNTER	Reset counter

MANUAL FUNCTION



Figure 3 : Input Screen

INPUT SCREEN

No	Function	Description
1	INPUT	Show status of the input signals
2	NEXT	Goto next page
	BACK	Back to Manu page



Figure 4 : Output Screen



Figure 5 : Output Screen

OUTPUT SCREEN

No	Function	Description
1	OUTPUT	Menu to trigger all output signals