




PANASONIC

LED PCB ASSEMBLY & PRESS MACHINE

MODEL TH-50MR770

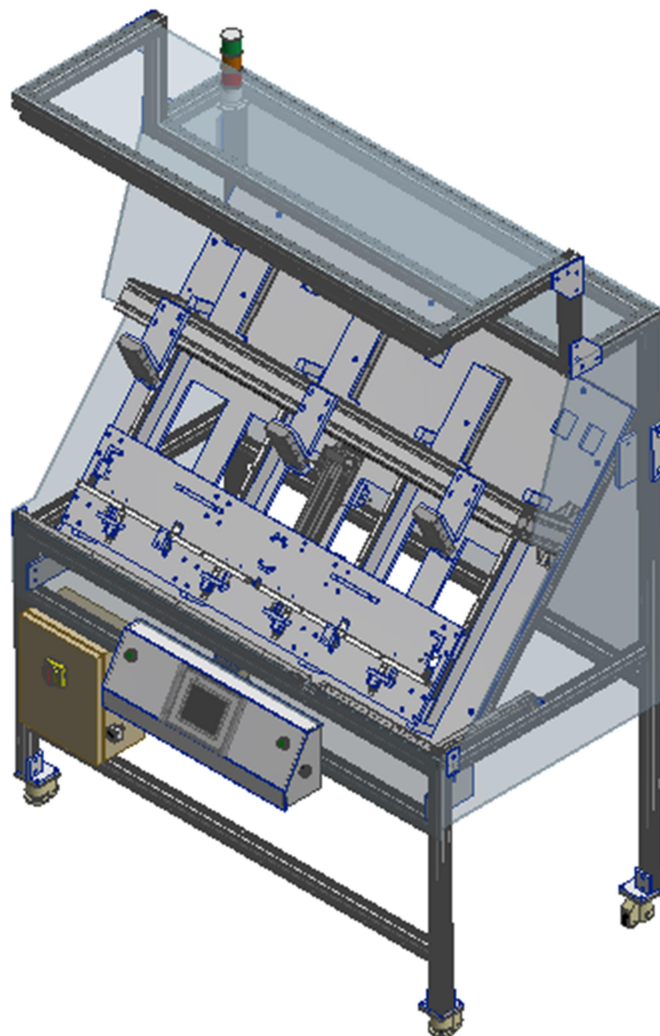

OPERATION MANUAL

MACHINE FRONT PANEL

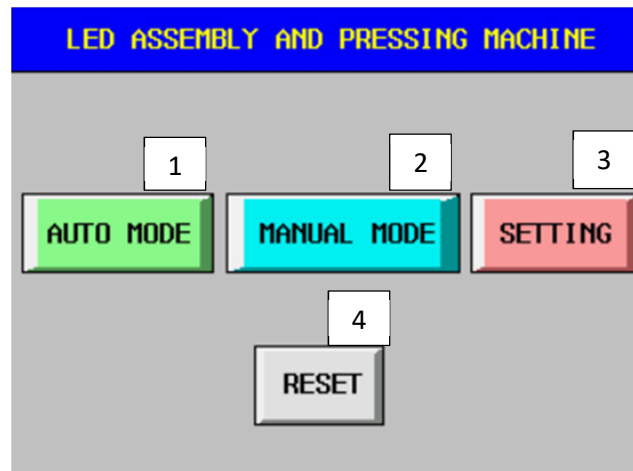


Figure 1 : Main panel


MAIN PANEL

No	Function	Description
1	AUTO MODE	WHEN TURNED ON, THE MACHINE IS IN AUTO MODE AND READY FOR PRODUCTION. WHEN TURNED OFF, THE MACHINE IS IN DEBUGGING OR REPAIRING MODE.
2	MANUAL	TO ENTER IO & SERVO SETTING MODE
3	SETTING	TO ENTER SETTING MODE
4	RESET	Reset all I/O and address value on the PLC and reset the to initial position

MACHINE OPERATION PROCEDURE

1. TURN ON THE KEY SWITCH AT SIDE OF THE CONTROL BOX .
2. TURN ON AIR SUPPLY TO THE MACHINE .
3. ROTATE POWER ON SWITCH AT CONTROL BOX AND MAKE SURE EMERGENCY BUTTON IS IN OFF POSITION.
4. PRESS RESET BUTTON AT TOUCH PANEL DISPLAY AND MACHINE WILL PERFORM HOMING ROUTINE.
5. SET MACHINE TO AUTO MODE.
6. PUT HEATSINK TO MACHINE FOLLOWING GUIDES POSITION AND PRESS BOTH THE START BUTTON.
7. WHEN MAIN SLIDE BASE AT TOP POSITION, ASSEMBLY THE LED PCB TO THE HEATSINK.
8. AFTER COMPLETED THE PROCESS, PRESS START BUTTON TO PRESS THE LED PCB.
9. WHEN PROCESS IS COMPLETED OPERATOR CAN UNLOAD THE PRODUCT FROM THE MACHINE.

AUTO FUNCTION

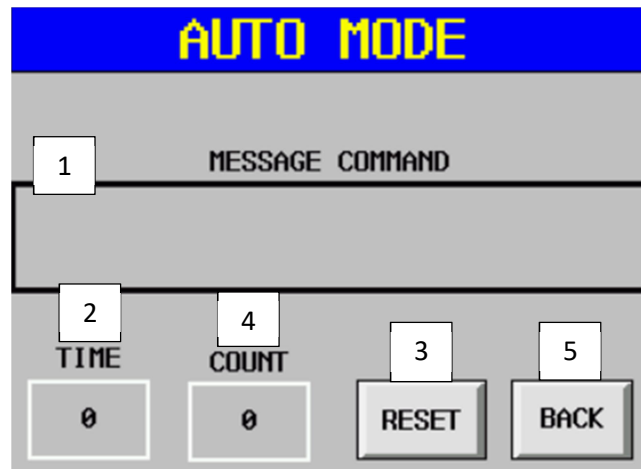

AUTO SCREEN

No	Buttons	Description
1	MESSAGE COMMAND	Machine status.
2	TIMER	Cycle time Stopwatch
3	RESET	Reset machine to initial position.
4	COUNT	Count Product.
5	BACK	Go to previous page

SETTING FUNCTION

SETTING 1		SETTING 2	
TIMER	0	PIN SETTING ENABLE/DISABLE	
PRESS TIMER	0	PIN 1	OFF
INS TIME	0	PIN 2	OFF
RESET COUNTER	RESET	PIN 3	OFF
BUZZER	DISABLE	PIN 4	OFF
NEXT BACK		BOTTOM CLAMP SETTING ENABLE/DISABLE	
		BTM CLAMP	DISABLE
		BACK	

Figure 2 : Setting Screen

SETTING SCREEN

No	Buttons	Description
1	TIMER	Delay while push lock wait x10ms/ second selected
2	PRESS TIMER	Delay while press wait x10ms/ second selected
3	INS TIME	Delay while ins wait x10ms/ second selected
4	RESET COUNTER	Reset the product count.
5	BUZZER	Enable or disable buzzer in auto.
6	PIN	Enable or disable pin check in auto.
7	BTM CLAMP	Enable or disable bottom clamp in auto.

MANUAL FUNCTION

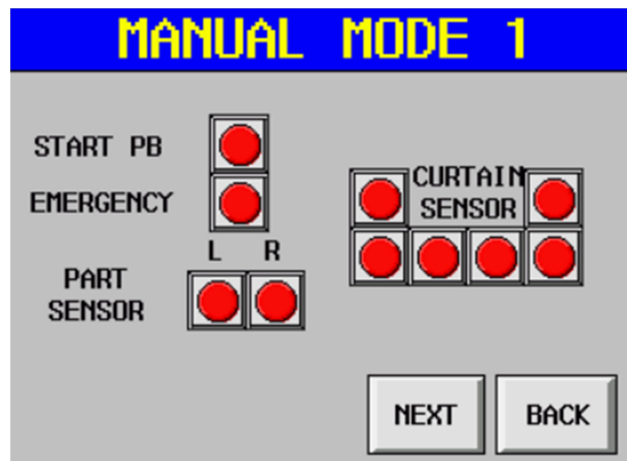


Figure 3 : Input Screen

INPUT SCREEN

No	Function	Description
1	INPUT	To check the sensor/input signal.

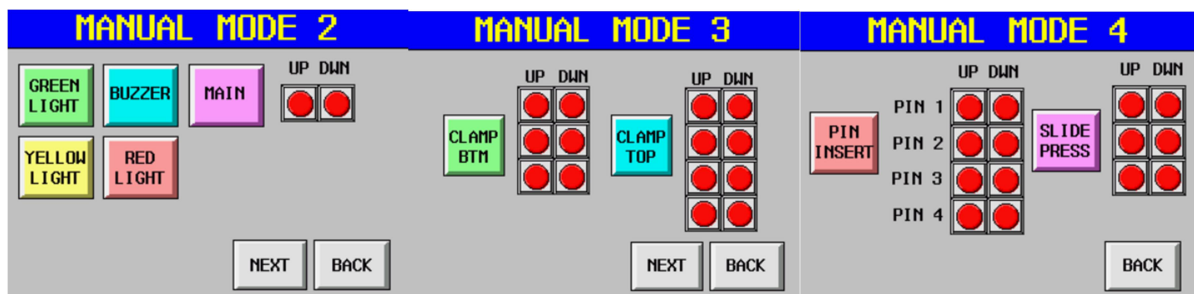


Figure 4 : Output Screen

OUTPUT SCREEN

No	Function	Description
1	OUTPUT	Manual trigger output.

MACHINE OPERATION PANEL

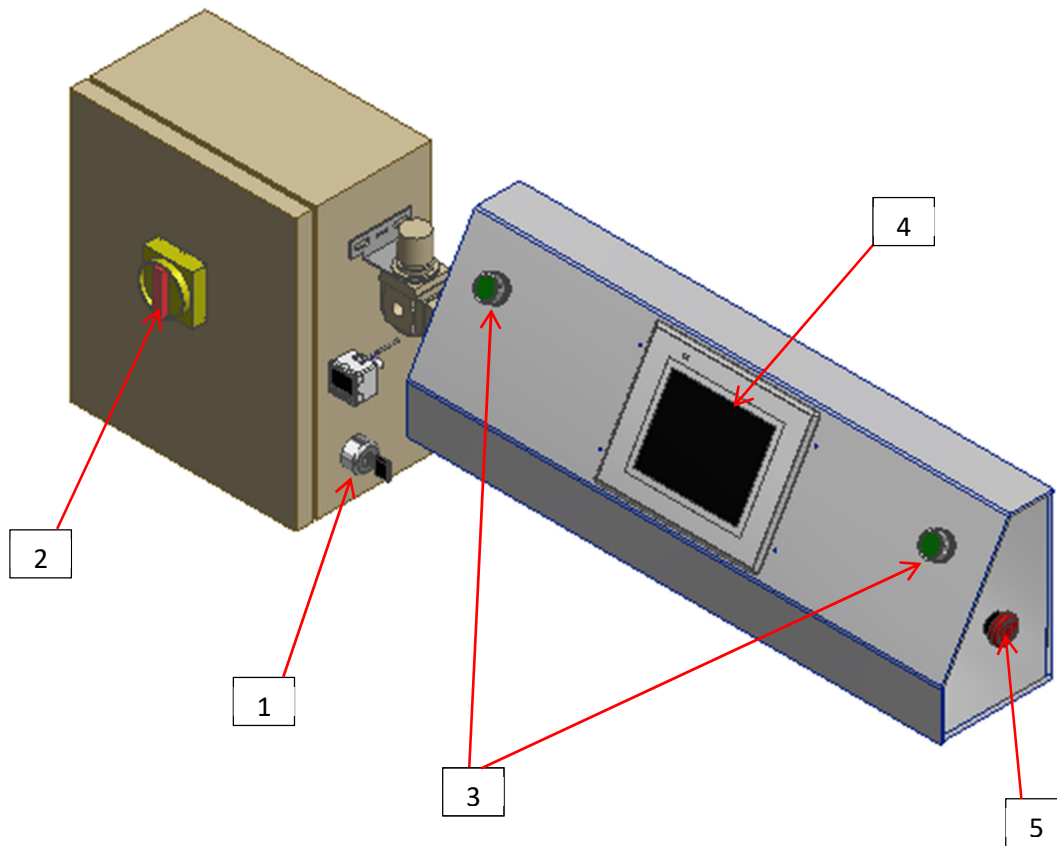


Figure 2 : Operation panel

OPERATION PANEL

No	Function	Description
1	MAINTENANCE KEY SWITCH	TURN TO ENABLE OPERATION OF MACHINE
2	MAIN POWER BUTTON	ROTATE TO POWER ON THE MACHINE
3	START SWITCH	PRESS TO START OPERATION
4	TOUCH PANEL DISPLAY	PRESS TO SELECT MODE
5	EMERGENCY BUTTON	PRESS TO EMERGENCY STOP

