

## LCD MAIN PANEL



Figure 1: Main panel

### MAIN PANEL

| No | Function  | Description                                                                                                                                  |
|----|-----------|----------------------------------------------------------------------------------------------------------------------------------------------|
| 1  | AUTO MODE | When turned on, the machine is in auto mode and ready for production.<br><br>When turned off, the machine is in debugging or repairing mode. |
| 2  | MANUAL    | To enter input or output setting mode.                                                                                                       |
| 3  | SETTING   | To enter setting mode.                                                                                                                       |

## AUTO FUNCTION



Figure 2: Auto Screen

### AUTO SCREEN

| No | Function           | Description                 |
|----|--------------------|-----------------------------|
| 1  | MESSAGE<br>COMMAND | Machine status.             |
| 2  | COUNT              | Counter for cycle complete. |

**SETTING FUNCTION**



Figure 3: Setting Screen

**SETTING SCREEN**

| No | Buttons          | Description                   |
|----|------------------|-------------------------------|
| 1  | RESET<br>COUNTER | Reset counter on auto screen. |
| 2  | TIMEOUT          | Auto mode timeout setting.    |

## MANUAL FUNCTION

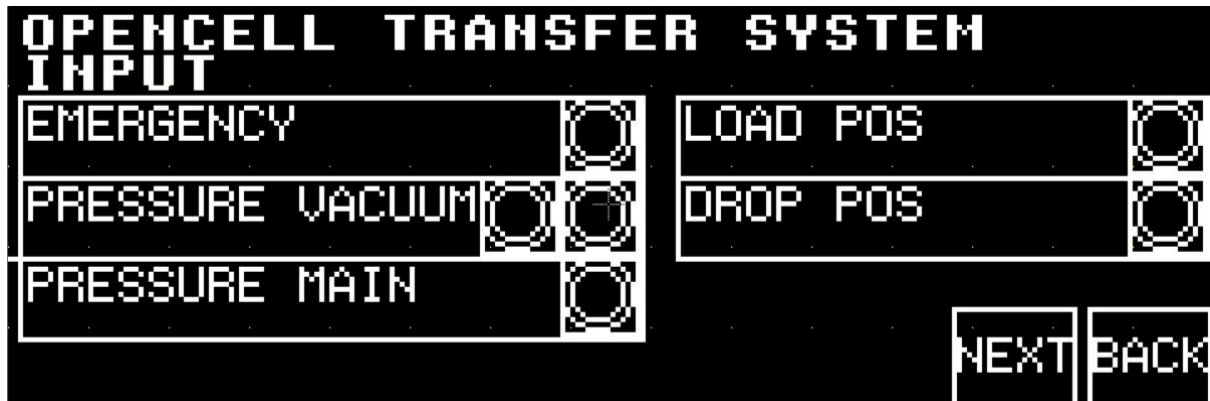


Figure 4: Input Screen

### INPUT SCREEN

| No | Function | Description                       |
|----|----------|-----------------------------------|
| 1  | INPUT    | To check the sensor/input signal. |

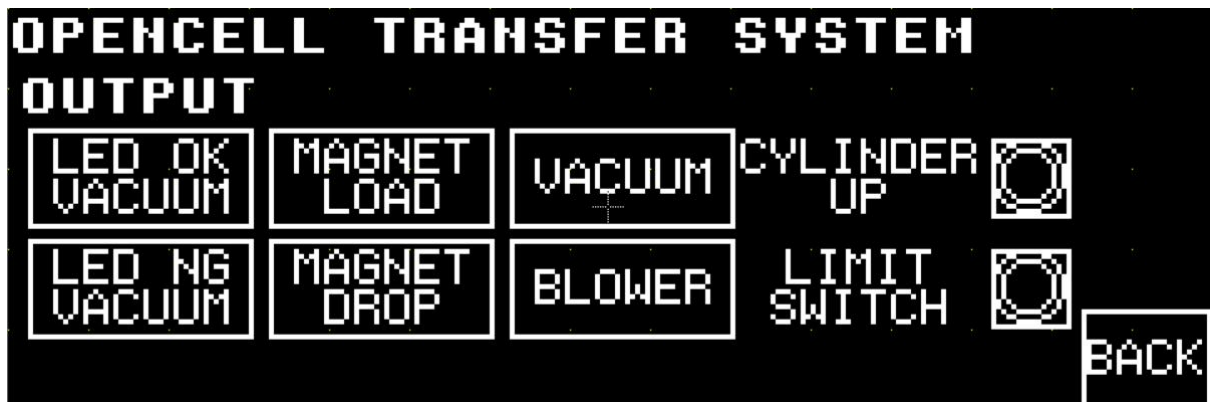


Figure 5: Output Screen

### OUTPUT SCREEN

| No | Function | Description            |
|----|----------|------------------------|
| 1  | OUTPUT   | Manual trigger output. |

# ALARM AND EMERGENCY

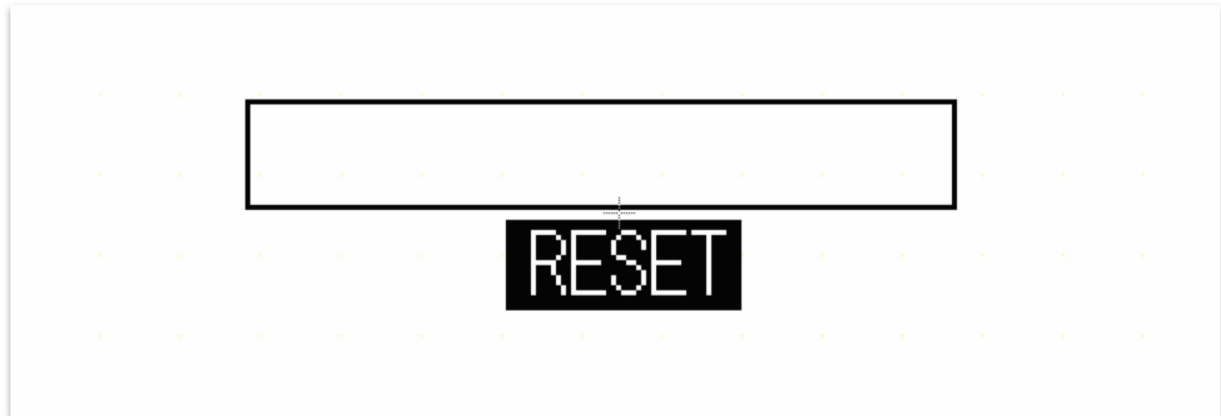



Figure 5: Alarm Screen

## TYPE OF ALARM


| No | Alarm             | Description                                              |
|----|-------------------|----------------------------------------------------------|
| 1  | EMERGENCY TRIG    | Emergency button is pressed.                             |
| 2  | VACUUM NG         | Vacuum pressure low while carrying part.                 |
| 3  | MAIN PRESSURE LOW | Main pressure low while machine is in on condition.      |
| 4  | ORIGIN ALARM      | Machine not in origin condition when entering auto mode. |
| 5  | AUTO TIMEOUT      | Auto mode timeout reached.                               |
| 6  | NO TROLLEY        | Trolley out of position in auto mode.                    |





**PANASONIC OPEN CELL**  
**TRANSFER SYSTEM TYPE 1**

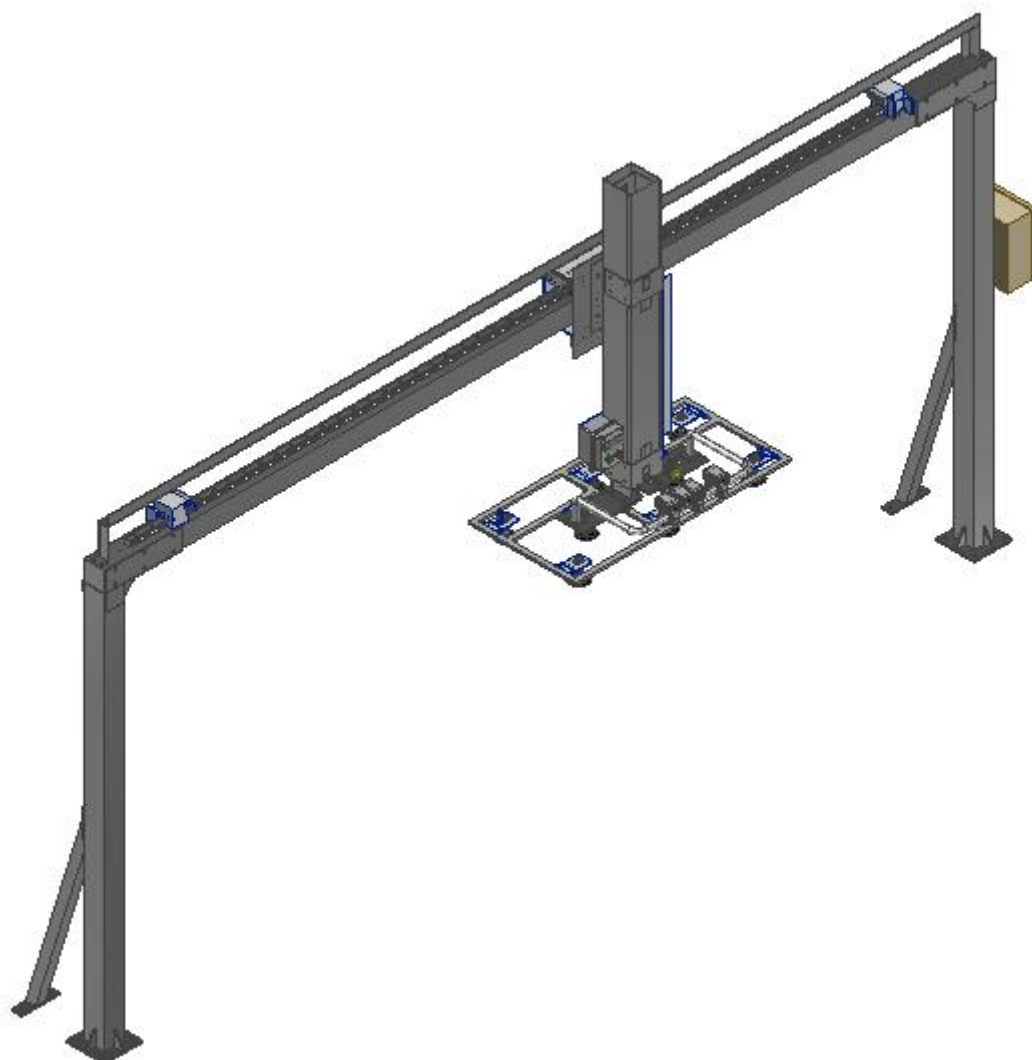

**OPERATION MANUAL**

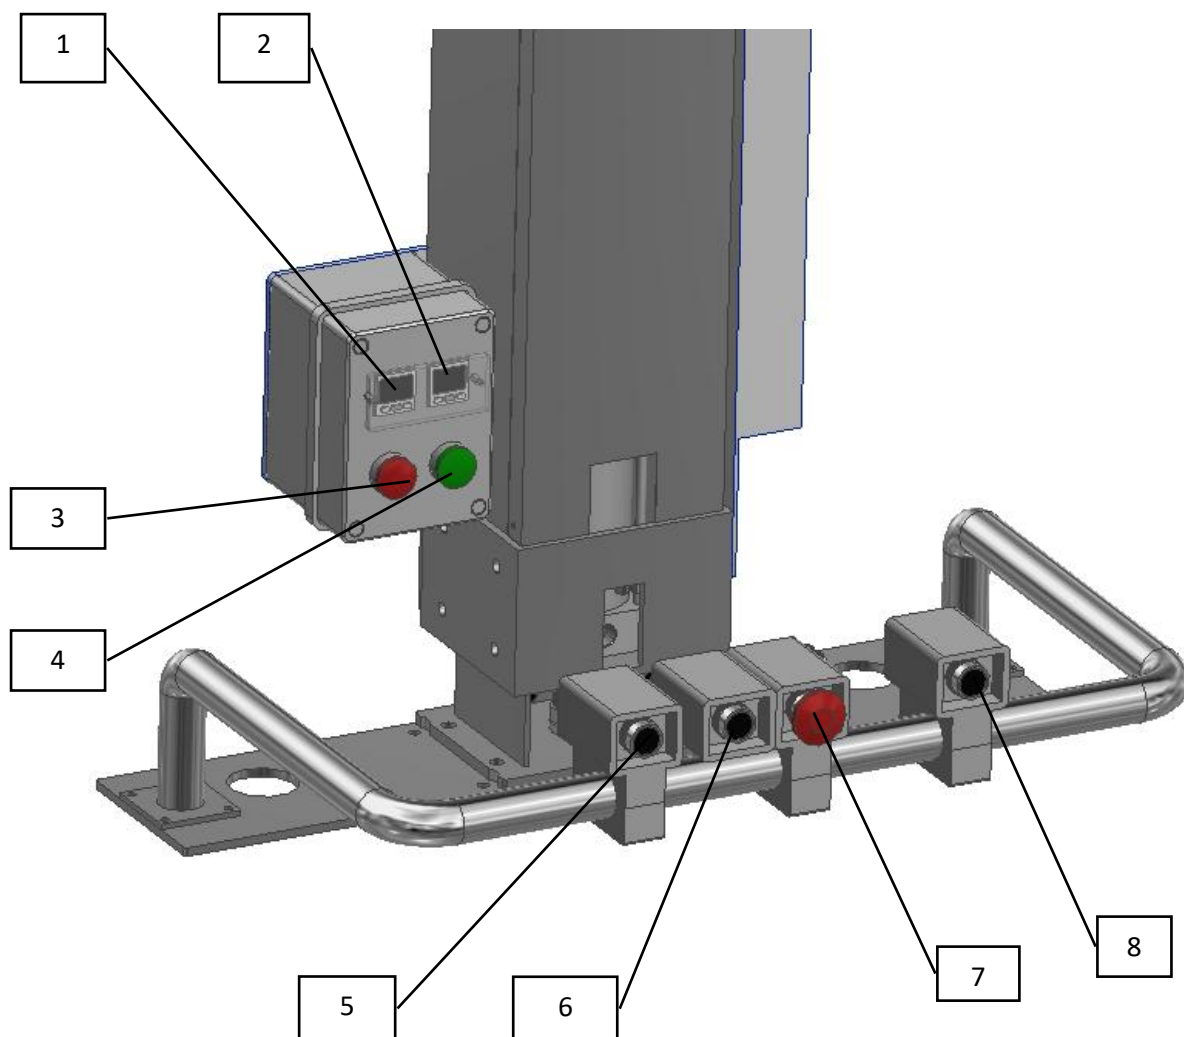

| ITEM No. | DESCRIPTION      |
|----------|------------------|
| 1        | VACCUM SENSOR 1  |
| 2        | VACCUM SENSOR 2  |
| 3        | VACCUM PICKUP NG |
| 4        | VACCUM PICKUP OK |
| 5        | DOWN CYLINDER    |
| 6        | RESET            |
| 7        | EMERGENCY STOP   |
| 8        | UP CYLINDER      |

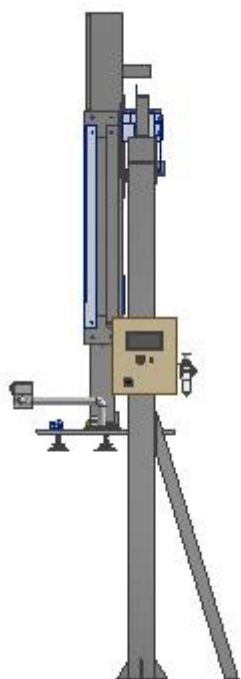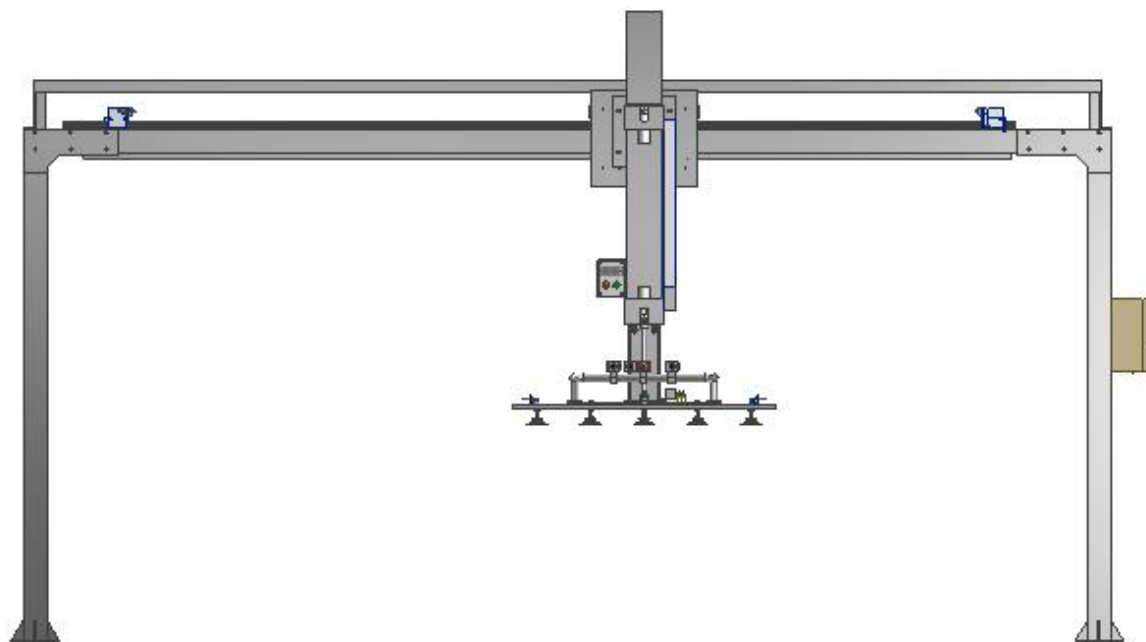

# **OPERATION PROCEDURE**

1. POWER ON THE SYSTEM BY TURNING ON POWER SWITCH AT THE CONTROL BOX .
2. TURN ON AIR SUPPLY TO THE SYSTEM .
3. PRESS RESET BUTTON AT TOUCH PANEL DISPLAY AND THE SYSTEM WILL SHOW MAIN PANEL SCREEN.
4. SET MACHINE TO AUTO MODE.
5. PRESS DOWN SWITCH TO PICKUP LCD. VACCUM ON IS IN AUTO MODE FOR PICKUP. GREEN LIGHT WILL ON IF VACCUM IS GOOD.PRESS UP SWITCH FOR LIFTING.
6. MOVE THE ARM TO TROLLEY POSITION.
7. PRESS DOWN SWITCH TO PLACE LCD. VACCUM OFF IS IN AUTO MODE. RED LIGHT WILL ON IS VACCUM IS OFF. WHEN PROCESS IS COMPLETED OPERATOR CAN RETURN THE ARM TO PICKUP POSITION.