




PANASONIC PEDESTAL AUTOMATIC

PRESS MACHINE

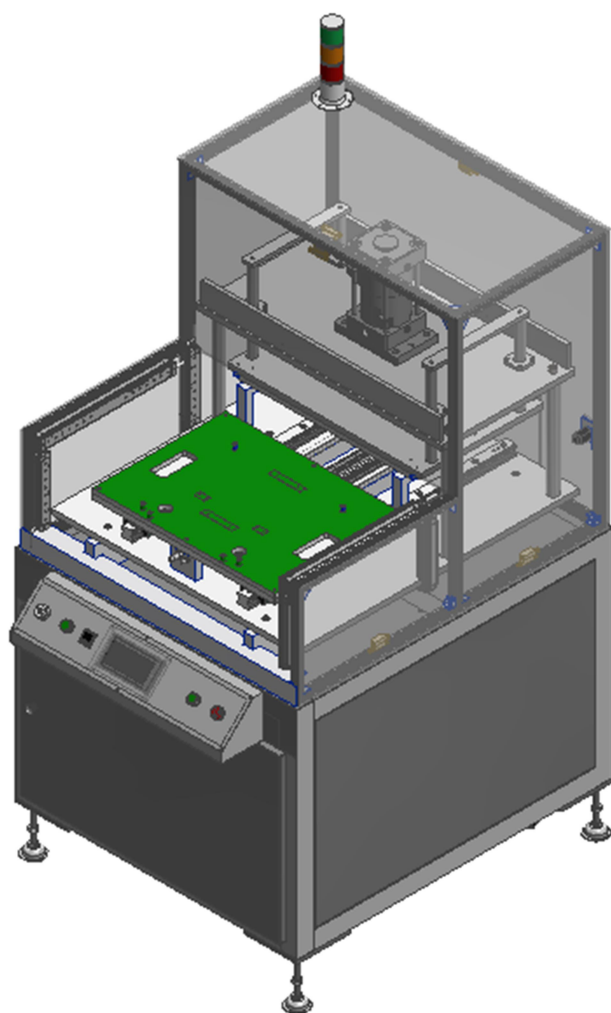

OPERATION MANUAL

MACHINE FRONT PANEL

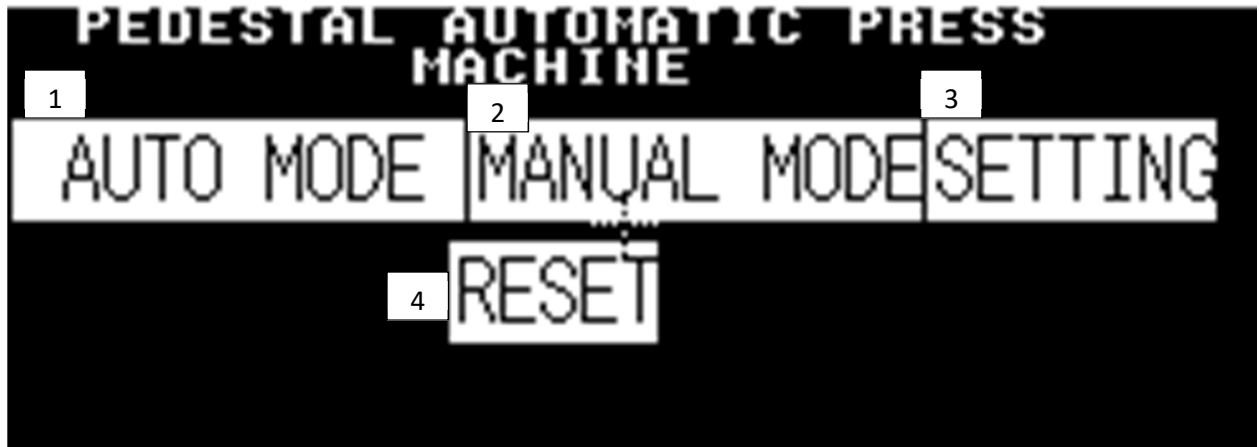


Figure 1: Main panel

MAIN PANEL

No	Function	Description
1	AUTO MODE	WHEN TURNED ON, THE MACHINE IS IN AUTO MODE AND READY FOR PRODUCTION. WHEN TURNED OFF, THE MACHINE IS IN DEBUGGING OR REPAIRING MODE.
2	MANUAL	TO ENTER IO & SERVO SETTING MODE
3	SETTING	TO ENTER SETTING MODE
4	RESET	Reset all I/O and address value on the PLC and reset the to initial position

MACHINE OPERATION PROCEDURE

1. POWER ON THE MACHINE BY TURNING ON POWER SWITCH AT THE CONTROL BOX .
2. TURN ON AIR SUPPLY TO THE MACHINE.
3. TURN ON KEY SWITCH AT OPERATION PANEL AND MAKE SURE EMERGENCY BUTTON IS IN OFF POSITION.
4. PRESS RESET BUTTON AT TOUCH PANEL DISPLAY AND MACHINE WILL PERFORM HOMING ROUTINE.
5. SET MACHINE TO AUTO MODE.
6. PUT COF TO DEDICATED MOLD INSTALLED AT MACHINE AND PRESS BOTH THE START BUTTON.
7. WHEN PROCESS IS COMPLETED, OPERATOR CAN UNLOAD THE PRODUCT FROM THE MACHINE.

MACHINE OPERATION PANEL

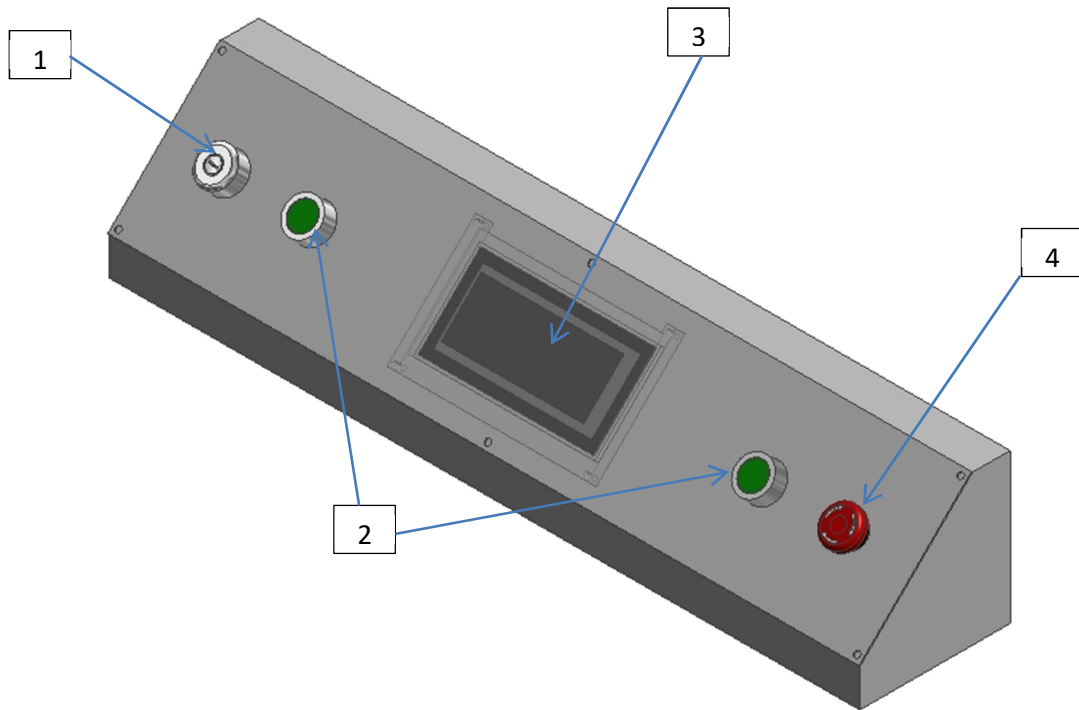


Figure 2: Operation panel

OPERATION PANEL

No	Function	Description
1	MAINTENANCE KEY SWITCH	TURN TO ENABLE OPERATION OF MACHINE
2	START BUTTON	PRESS TO START THE MACHINE
3	TOUCH PANEL DISPLAY	PRESS TO SELECT MODE
4	EMERGENCY BUTTON	PRESS TO EMERGENCY STOP

AUTO PAGE FUNCTION



Figure 2: Auto Screen

AUTO PAGE SCREEN

No	Buttons	Description
1	MESSAGE COMMAND	Display machine status
2	COUNTER	Count finishing good.
3	ALARM	Display alarm status.
4	TIMER	Stopwatch for cycle speed.
5	PART SENSOR	Indicator for part sensor.

SETTING FUNCTION

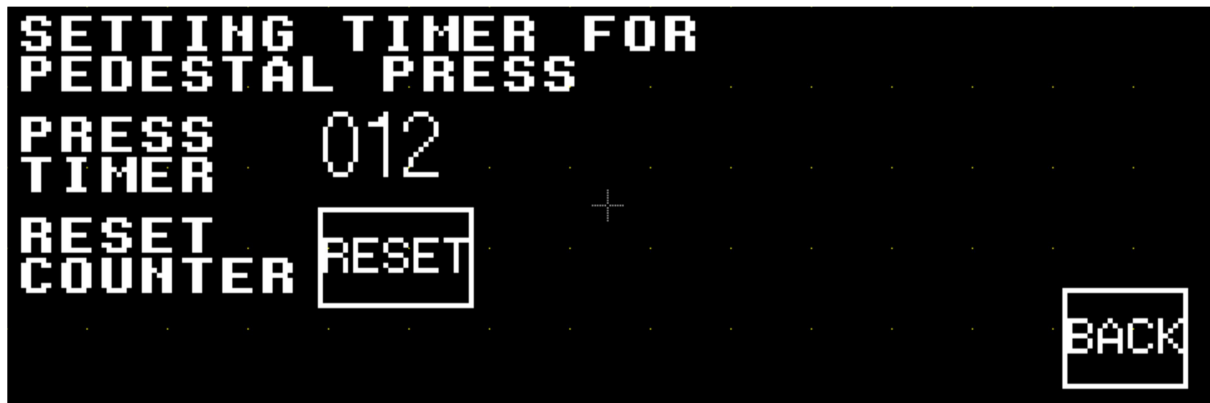


Figure 3: Setting Screen

SPEED SETTING SCREEN

No	Buttons	Description
1	PRESS TIMER	Delay while hydraulic is press x10ms/ second selected
2	RESET COUNTER	Reset the counter value for finishing good.

MANUAL FUNCTION



Figure 4: Input Screen

INPUT SCREEN

No	Function	Description
1	INPUT	Show status of the input signals
2	NEXT	Go to next page
	BACK	Back to Manu page



Figure 5: Output Screen

OUTPUT SCREEN

No	Function	Description
1	OUTPUT	Menu to trigger all output signals

