

MACHINE OPERATION

AUTO MODE

- 1) Turn on the main power switch on the control box.
- 2) Touch panel will display MAIN MENU screen as shown in Figure 1.



FIGURE 1: MAIN MENU SCREEN

- 3) Press **MODEL SELECT** button on the touch panel.
- 4) Touch panel will display **MODEL SELECTION** screen as shown in Figure 2.

MODEL SELECTION					
1	500x333	PVC	5	500x500	PVC
2	500x333	PALLET	6	500x500	PALLET
3	500x410	PVC	7	510x510	PVC
4	500x410	PALLET	8	510x510	PALLET
PLATE QUANTITY:			123		
ALERT BACK ADJUST CYLINDER A TO 500 ADJUST CYLINDER B TO 500 SAVE					

FIGURE 2: MODEL SELECTION SCREEN

- 5) The SAVE button will appear after selecting the model and entering the quantity of plates.
Then, press the SAVE button and touch panel will back to **MAIN MENU** screen.
- 6) Press **AUTO** button on the touch panel.
- 7) Touch panel will display **AUTO MODE** screen as shown in Figure 3.

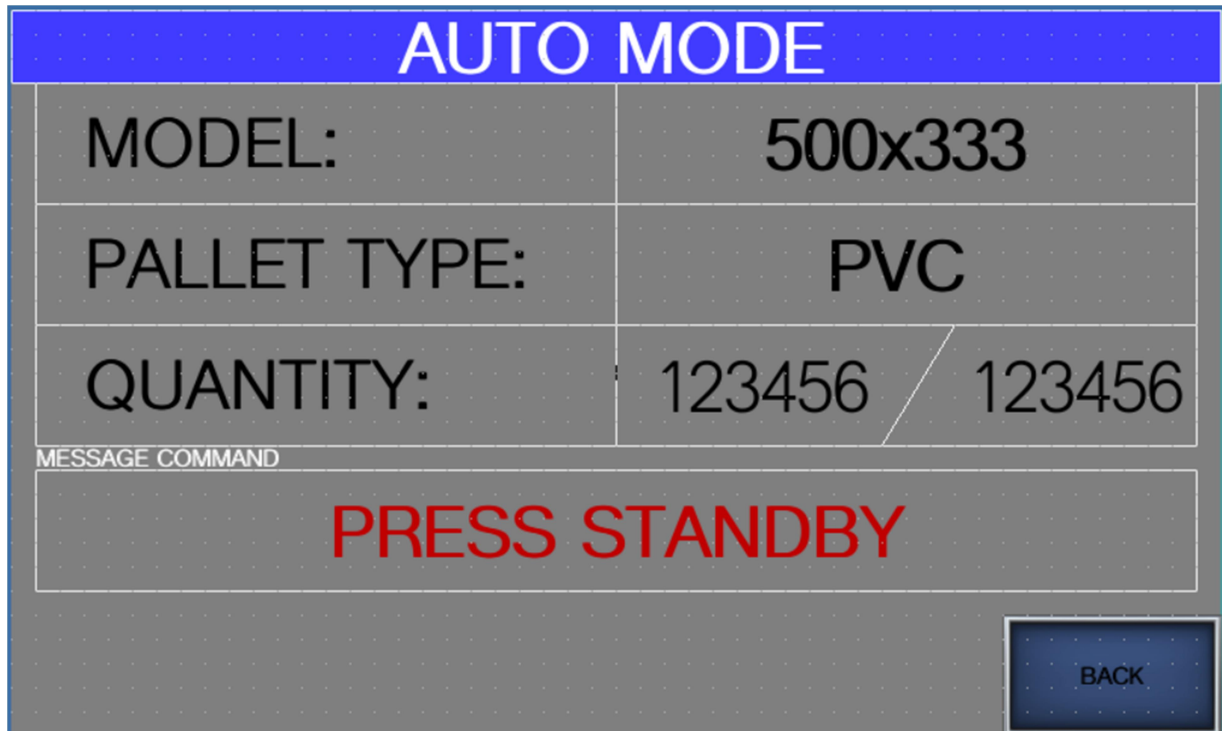


FIGURE 3: AUTO MODE SCREEN

- 8) Press **HOME SWITCH** below touch panel to start homing process. When complete, **HOME SWITCH** lamp will turn on.
- 9) Press **STANDBY SWITCH** below touch panel to start standby process. When complete, **STANDBY SWITCH** lamp will turn on.
- 10) Press **START SWITCH** below touch panel to start auto process. Place the plate on the **RAYON** conveyor. Do not place the plate on the conveyor while it is running.
- 11) When the quantity is reached, the motor will move to the unload position.
- 12) The curtain sensor will enter bypass mode to enable the unload process.
- 13) Insert the trolley and press the **LOCK TROLLEY** button on the touch panel.
- 14) Press **LOADER DOWN** button to move the **PVC** or **PALLET** to roller level.
- 15) Unload by pulling **PVC** or **PALLET** to trolley place the stopper.
- 16) Press **UNLOCK TROLLEY** on touch panel to unlock trolley and pull the trolley.
- 17) Press **LOADER UP** button for one second to move motor to standby position.

Note:

The message box is clearly stated the machine condition and guidance for operation step.

FORCE UNLOAD (RESET QUANTITY)

AUTO MODE		
MODEL:	500x333	
PALLET TYPE:	PVC	
QUANTITY:	123456 / 123456	
MESSAGE COMMAND		
WAITING PLATE IN		
FINISH UNLOAD	UNLOCK TROLLEY	BACK

FIGURE 4: AUTO MODE SCREEN WITH FINISH UNLOAD

- 1) FINISH UNLOAD BUTTON will appear when both machine on standby.
- 2) Press FINISH UNLOAD BUTTON for five second and machine will go to unload process.
- 3) After unload process finish, quantity will reset to zero.

ALARM

During ALARM,

- a) Buzzer will sound.
- b) Check the machine problem that occurs properly as stated on the touch panel message box or in the alarm history list.
- c) Press **RESET** switch on touch panel to reset the alarm.

The machine alarms will turn ON during the occurrence of conditions stated below:

No	Error contents	Cause	Countermeasure
1	Vacuum Error	The plate vacuum pressure low	1) Check vacuum cup leaking. 2) Check vacuum cup angle.
2	Low Air Pressure Error	Low air pressure in system.	1) Check the air regulator. 2) Check the air supply.
3	Emergency Error	Emergency button pressed.	Check emergency button.
4	Door Center Error	The center door is open when auto mode.	Check center door.
5	Door Up Error	The up door is open in auto mode.	Check up door.
6	Door Down Error	The door down is open in auto mode.	Check down door.
7	Curtain Sensor Error	The curtain sensor is trigger in auto mode	Check if something is triggering curtain sensor.
8	X-Axis Error	The X-axis motor alarm trigger	Check if something blocking motor path.
9	Y-Axis Error	The Y-axis motor alarm trigger	Check if something blocking motor path.
10	Plate In Error	Plate already in pickup area.	Remove the plate and restart process.

TABLE 1: ALARM LIST

INDICATION OF SWITCH AND TOWER LIGHT

Colours	Details
RED(SWITCH)	1) Normal – Machine Stop. 2) Blinking – Motor goes to pick up position before stopping.
RED(TOWER)	1) Buzzer on – Alarm triggered 2) Buzzer off – Rayon standby mode
GREEN(SWITCH)	1) Home – Machine origin 2) Standby – Machine in standby position 3) Start – Machine in auto mode

TABLE 2: TOWER AND SWITCH LIGHT

MACHINE OPERATION

AUTO MODE

- 1) Turn on the main power switch on the control box.
- 2) Touch panel will display MAIN MENU screen as shown in Figure 1.



FIGURE 1: MAIN MENU SCREEN

- 3) Press **MODEL SELECT** button on the touch panel.
- 4) Touch panel will display **MODEL SELECTION** screen as shown in Figure 2.

MODEL SELECTION					
1	500x333	PVC	5	500x500	PVC
2	500x333	PALLET	6	500x500	PALLET
3	500x410	PVC	7	510x510	PVC
4	500x410	PALLET	8	510x510	PALLET
PLATE QUANTITY:			123		
ALERT BACK ADJUST CYLINDER A TO 500 ADJUST CYLINDER B TO 500 SAVE					

FIGURE 2: MODEL SELECTION SCREEN

- 5) The SAVE button will appear after selecting the model and entering the quantity of plates.
Then, press the SAVE button and touch panel will back to **MAIN MENU** screen.
- 6) Press **AUTO** button on the touch panel.
- 7) Touch panel will display **AUTO MODE** screen as shown in Figure 3.

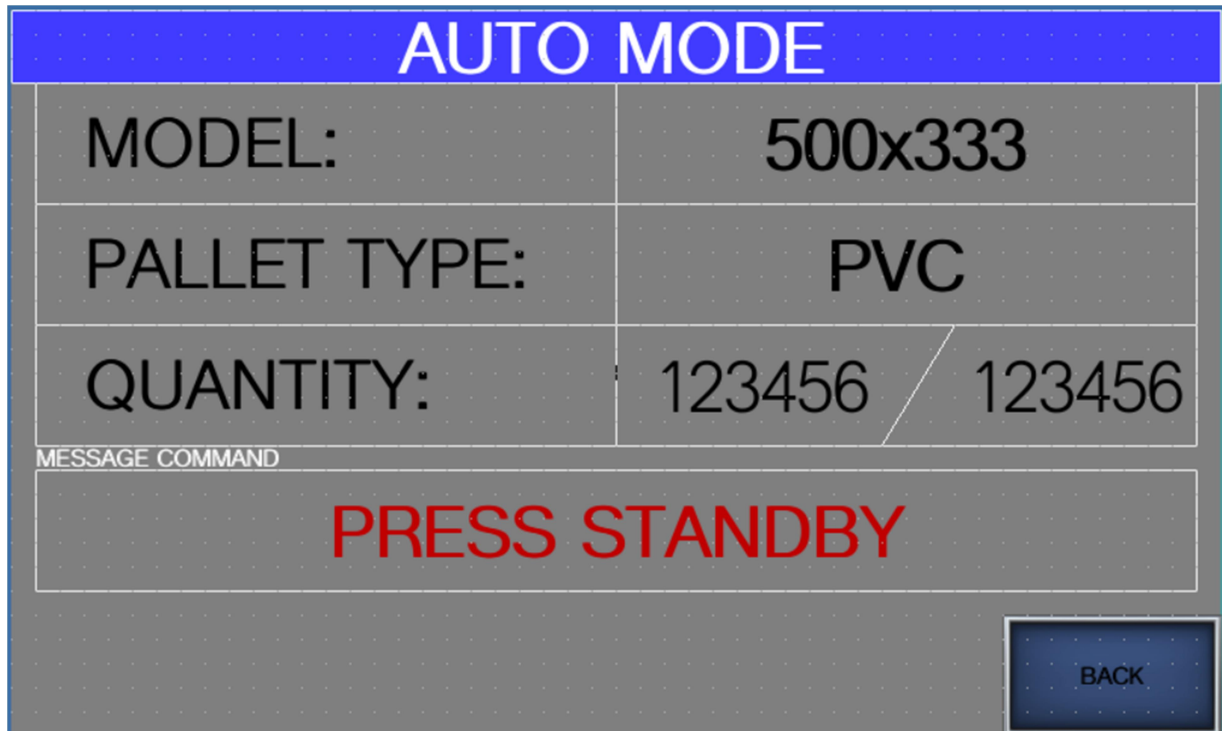


FIGURE 3: AUTO MODE SCREEN

- 8) Press **HOME SWITCH** below touch panel to start homing process. When complete, **HOME SWITCH** lamp will turn on.
- 9) Press **STANDBY SWITCH** below touch panel to start standby process. When complete, **STANDBY SWITCH** lamp will turn on.
- 10) Press **START SWITCH** below touch panel to start auto process. Place the plate on the **RAYON** conveyor. Do not place the plate on the conveyor while it is running.
- 11) When the quantity is reached, the motor will move to the unload position.
- 12) The curtain sensor will enter bypass mode to enable the unload process.
- 13) Insert the trolley and press the **LOCK TROLLEY** button on the touch panel.
- 14) Press **LOADER DOWN** button to move the **PVC** or **PALLET** to roller level.
- 15) Unload by pulling **PVC** or **PALLET** to trolley place the stopper.
- 16) Press **UNLOCK TROLLEY** on touch panel to unlock trolley and pull the trolley.
- 17) Press **LOADER UP** button for one second to move motor to standby position.

Note:

The message box is clearly stated the machine condition and guidance for operation step.

FORCE UNLOAD (RESET QUANTITY)

AUTO MODE		
MODEL:	500x333	
PALLET TYPE:	PVC	
QUANTITY:	123456 / 123456	
MESSAGE COMMAND		
WAITING PLATE IN		
FINISH UNLOAD	UNLOCK TROLLEY	BACK

FIGURE 4: AUTO MODE SCREEN WITH FINISH UNLOAD

- 1) FINISH UNLOAD BUTTON will appear when both machine on standby.
- 2) Press FINISH UNLOAD BUTTON for five second and machine will go to unload process.
- 3) After unload process finish, quantity will reset to zero.

ALARM

During ALARM,

- a) Buzzer will sound.
- b) Check the machine problem that occurs properly as stated on the touch panel message box or in the alarm history list.
- c) Press **RESET** switch on touch panel to reset the alarm.

The machine alarms will turn ON during the occurrence of conditions stated below:

No	Error contents	Cause	Countermeasure
1	Vacuum Error	The plate vacuum pressure low	1) Check vacuum cup leaking. 2) Check vacuum cup angle.
2	Low Air Pressure Error	Low air pressure in system.	1) Check the air regulator. 2) Check the air supply.
3	Emergency Error	Emergency button pressed.	Check emergency button.
4	Door Center Error	The center door is open when auto mode.	Check center door.
5	Door Up Error	The up door is open in auto mode.	Check up door.
6	Door Down Error	The door down is open in auto mode.	Check down door.
7	Curtain Sensor Error	The curtain sensor is trigger in auto mode	Check if something is triggering curtain sensor.
8	X-Axis Error	The X-axis motor alarm trigger	Check if something blocking motor path.
9	Y-Axis Error	The Y-axis motor alarm trigger	Check if something blocking motor path.
10	Plate In Error	Plate already in pickup area.	Remove the plate and restart process.

TABLE 1: ALARM LIST

INDICATION OF SWITCH AND TOWER LIGHT

Colours	Details
RED(SWITCH)	1) Normal – Machine Stop. 2) Blinking – Motor goes to pick up position before stopping.
RED(TOWER)	1) Buzzer on – Alarm triggered 2) Buzzer off – Rayon standby mode
GREEN(SWITCH)	1) Home – Machine origin 2) Standby – Machine in standby position 3) Start – Machine in auto mode

TABLE 2: TOWER AND SWITCH LIGHT

MACHINE OPERATION

AUTO MODE

- 1) Turn on the main power switch on the control box.
- 2) Touch panel will display MAIN MENU screen as shown in Figure 1.



FIGURE 1: MAIN MENU SCREEN

- 3) Press **MODEL SELECT** button on the touch panel.
- 4) Touch panel will display **MODEL SELECTION** screen as shown in Figure 2.

MODEL SELECTION					
1	500x333	PVC	5	500x500	PVC
2	500x333	PALLET	6	500x500	PALLET
3	500x410	PVC	7	510x510	PVC
4	500x410	PALLET	8	510x510	PALLET
PLATE QUANTITY:			123		
ALERT					
BACK		ADJUST CYLINDER A TO 500 ADJUST CYLINDER B TO 500		SAVE	

FIGURE 2: MODEL SELECTION SCREEN

- 5) The SAVE button will appear after selecting the model and entering the quantity of plates.
Then, press the SAVE button and touch panel will back to **MAIN MENU** screen.
- 6) Press **AUTO** button on the touch panel.
- 7) Touch panel will display **AUTO MODE** screen as shown in Figure 3.

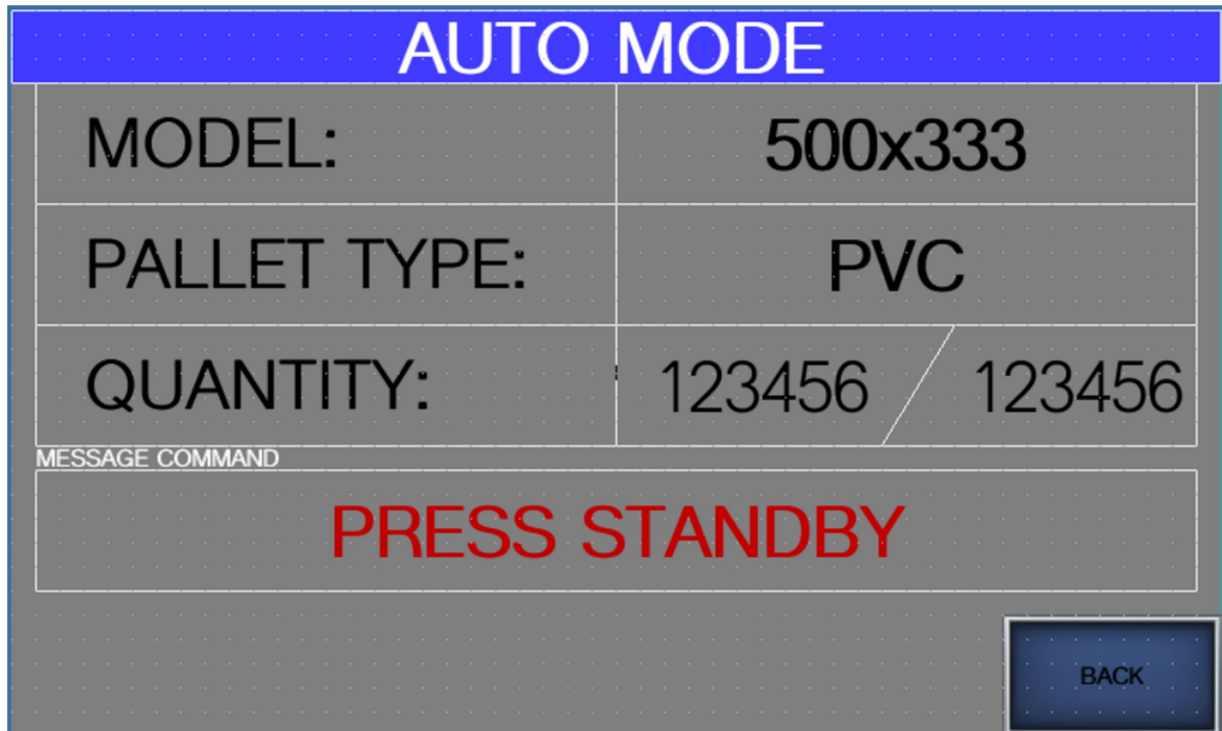


FIGURE 3: AUTO MODE SCREEN

- 8) Press **HOME SWITCH** below touch panel to start homing process. When complete, **HOME SWITCH** lamp will turn on.
- 9) Press **STANDBY SWITCH** below touch panel to start standby process. When complete, **STANDBY SWITCH** lamp will turn on.
- 10) Press **START SWITCH** below touch panel to start auto process. Place the plate on the **RAYON** conveyor. Do not place the plate on the conveyor while it is running.
- 11) When the quantity is reached, the motor will move to the unload position.
- 12) The curtain sensor will enter bypass mode to enable the unload process.
- 13) Insert the trolley and press the **LOCK TROLLEY** button on the touch panel.
- 14) Press **LOADER DOWN** button to move the **PVC** or **PALLET** to roller level.
- 15) Unload by pulling **PVC** or **PALLET** to trolley place the stopper.
- 16) Press **UNLOCK TROLLEY** on touch panel to unlock trolley and pull the trolley.
- 17) Press **LOADER UP** button for one second to move motor to standby position.

Note:

The message box is clearly stated the machine condition and guidance for operation step.

FORCE UNLOAD (RESET QUANTITY)

AUTO MODE		
MODEL:	500x333	
PALLET TYPE:	PVC	
QUANTITY:	123456 / 123456	
MESSAGE COMMAND		
WAITING PLATE IN		
FINISH UNLOAD	UNLOCK TROLLEY	BACK

FIGURE 4: AUTO MODE SCREEN WITH FINISH UNLOAD

- 1) FINISH UNLOAD BUTTON will appear when both machine on standby.
- 2) Press FINISH UNLOAD BUTTON for five second and machine will go to unload process.
- 3) After unload process finish, quantity will reset to zero.

ALARM

During ALARM,

- a) Buzzer will sound.
- b) Check the machine problem that occurs properly as stated on the touch panel message box or in the alarm history list.
- c) Press **RESET** switch on touch panel to reset the alarm.

The machine alarms will turn ON during the occurrence of conditions stated below:

No	Error contents	Cause	Countermeasure
1	Vacuum Error	The plate vacuum pressure low	1) Check vacuum cup leaking. 2) Check vacuum cup angle.
2	Low Air Pressure Error	Low air pressure in system.	1) Check the air regulator. 2) Check the air supply.
3	Emergency Error	Emergency button pressed.	Check emergency button.
4	Door Center Error	The center door is open when auto mode.	Check center door.
5	Door Up Error	The up door is open in auto mode.	Check up door.
6	Door Down Error	The door down is open in auto mode.	Check down door.
7	Curtain Sensor Error	The curtain sensor is trigger in auto mode	Check if something is triggering curtain sensor.
8	X-Axis Error	The X-axis motor alarm trigger	Check if something blocking motor path.
9	Y-Axis Error	The Y-axis motor alarm trigger	Check if something blocking motor path.
10	Plate In Error	Plate already in pickup area.	Remove the plate and restart process.

TABLE 1: ALARM LIST

INDICATION OF SWITCH AND TOWER LIGHT

Colours	Details
RED(SWITCH)	1) Normal – Machine Stop. 2) Blinking – Motor goes to pick up position before stopping.
RED(TOWER)	1) Buzzer on – Alarm triggered 2) Buzzer off – Rayon standby mode
GREEN(SWITCH)	1) Home – Machine origin 2) Standby – Machine in standby position 3) Start – Machine in auto mode

TABLE 2: TOWER AND SWITCH LIGHT