

MACHINE FRONT PANEL

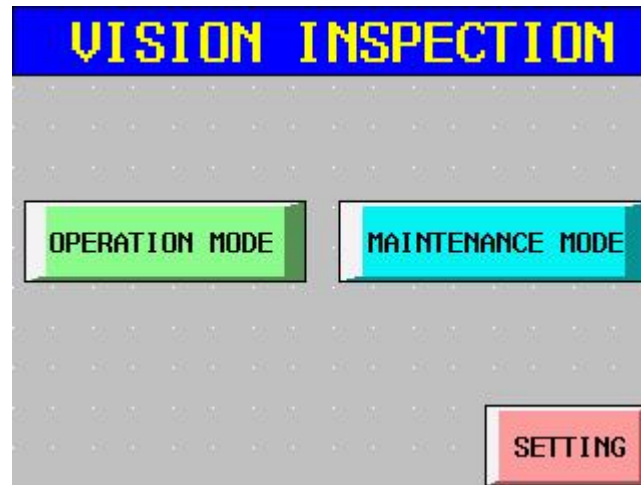


Figure 1: Main panel

MAIN PANEL

No	Function	Description
1	AUTO MODE	WHEN TURNED ON, THE MACHINE IS IN AUTO MODE AND READY FOR PRODUCTION. WHEN TURNED OFF, THE MACHINE IS IN DEBUGGING OR REPAIRING MODE.
2	MANUAL	TO ENTER IO & SERVO SETTING MODE
3	SETTING	TO ENTER SETTING MODE

MACHINE OPERATION PROCEDURE

1. POWER ON THE MACHINE BY TURNING ON POWER SWITCH AT THE CONTROL BOX.
2. TURN ON AIR SUPPLY TO THE MACHINE.
3. MAKE SURE EMERGENCY BUTTON IS IN OFF POSITION.
4. PRESS RESET BUTTON AT TOUCH PANEL DISPLAY AND MACHINE WILL PERFORM HOMING ROUTINE.
5. SET MACHINE TO OPERATION MODE.
6. SELECT MODE(PRODUCTION/BYPASS).
7. PRESS THE START BUTTON.

AUTO PAGE FUNCTION



Figure 2: Auto Screen

AUTO PAGE SCREEN

No	Buttons	Description
1	STATUS	Display machine status
2	START	Start auto process
3	PROD/BYPASS	Mode selection before start auto process
4	RESET(WHITE)	Reset NG alarm after remove part
5	STOP	Stop auto process
6	RESET(RED)	Machine go to origin position when machine stopping
7	TIME	Cycle time for part output
8	COUNT	Count part output
9	RESET COUNTER	Reset the counter value for part output (press 5 second)

SETTING FUNCTION

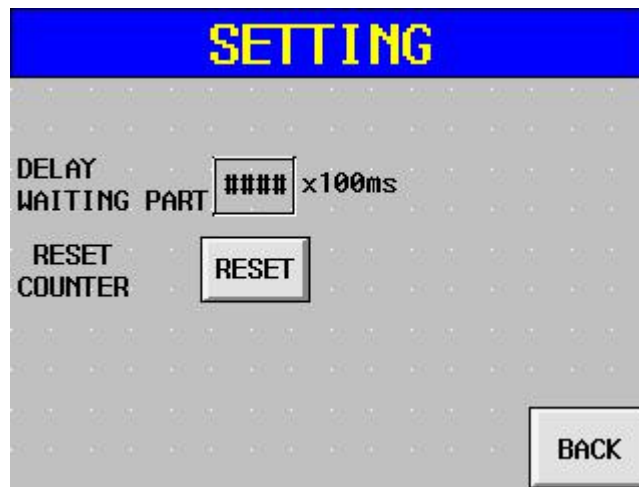


Figure 3: Setting Screen

SPEED SETTING SCREEN

No	Buttons	Description
1	DELAY WAITING PART	Delay while waiting for next part.
2	RESET COUNTER	Reset the counter value for part output.

MANUAL FUNCTION

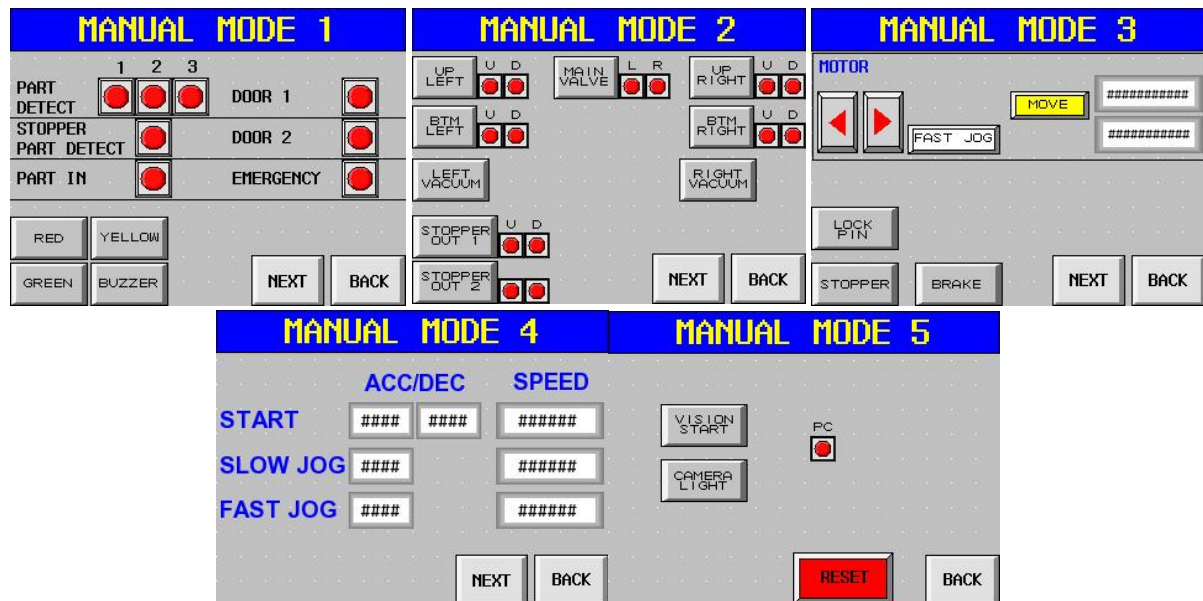


Figure 4: Manual Mode

MANUAL MODE


No	Function	Description
1	INPUT	Show status of the input signals
2	OUTPUT	Trigger output signals
3	ARROW RIGHT	Jog Motor CW
4	ARROW LEFT	Jog Motor CCW
5	MOVE	Move Motor 180°
6	FAST JOG (3)	Enable fast speed jog
7	START	Speed setting for auto process
8	SLOW JOG	Speed setting for slow jog
9	FAST JOG (4)	Speed setting for fast jog
10	VISION START	Trigger vision start output
11	CAMERA LIGHT	On/Off camera light




YOSHIDEN


VISUAL INSPECTION

PICK AND PLACE

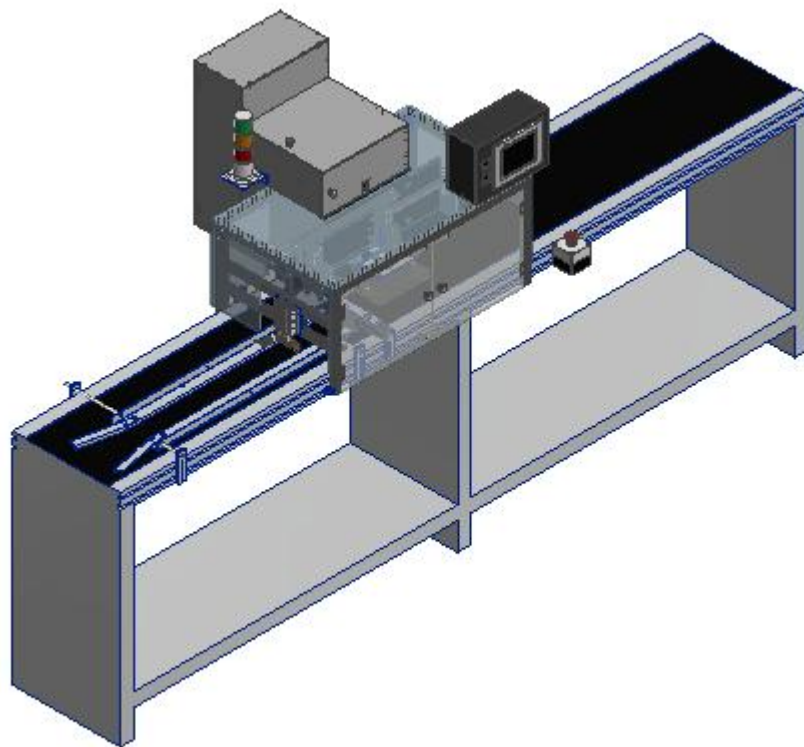


INSTRUCTION MANUAL

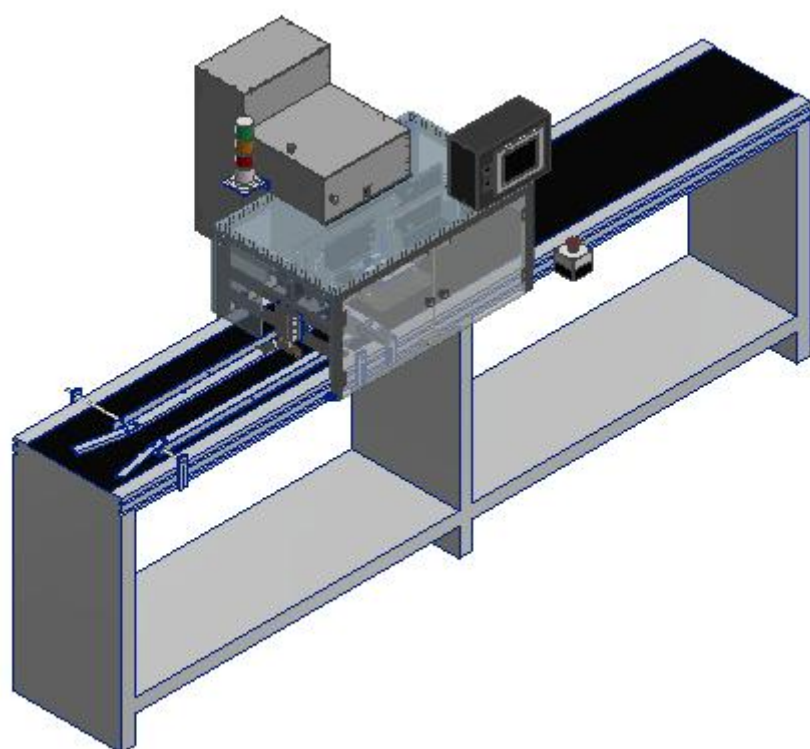

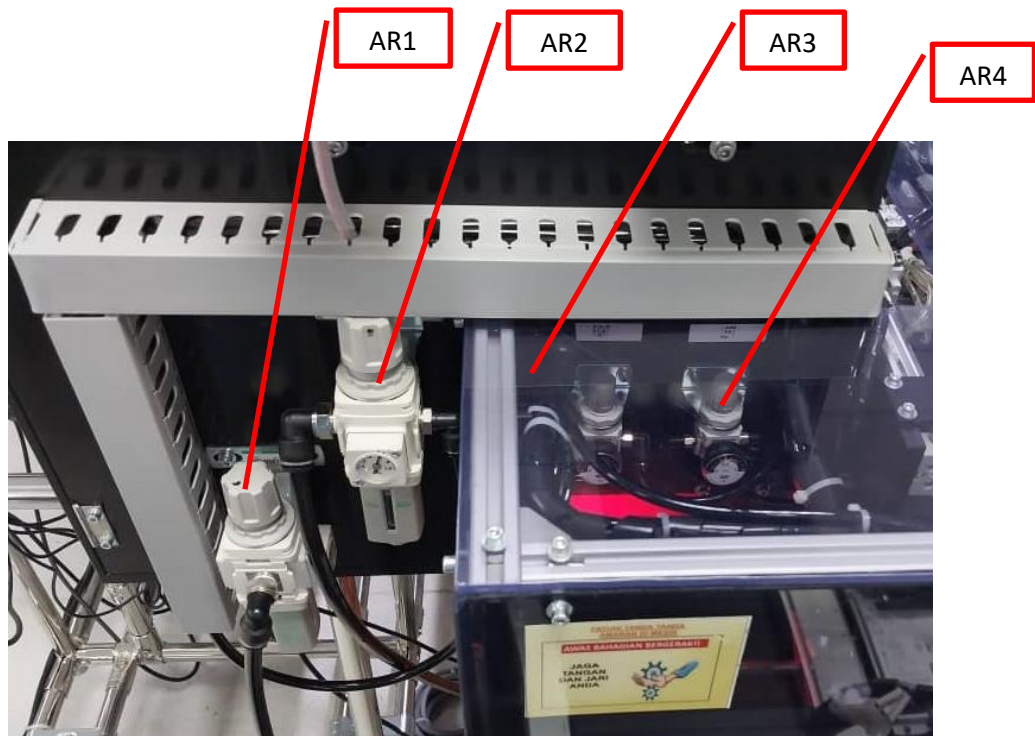

ITEM No	PART No.	DESCRIPTION	VENDOR
AR1	W1000-8-W-B3W	AIR REGULATOR	CKD
AR2	W1000-8-W-B3W	AIR REGULATOR	CKD
AR3	AR10-M5-A	AIR REGULATOR	SMC
AR4	AR10-M5-A	AIR REGULATOR	SMC

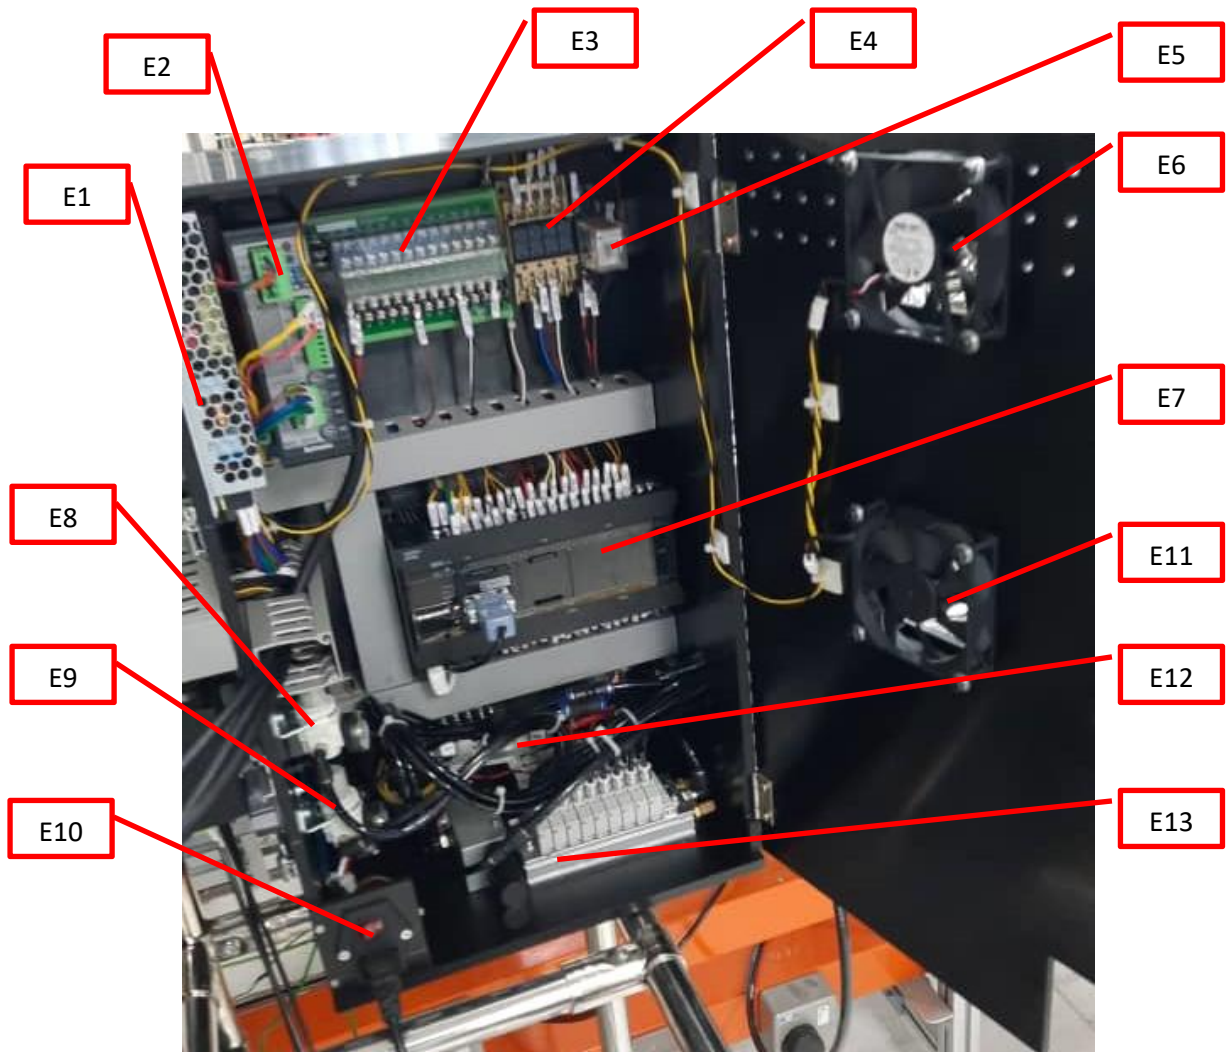

ITEM No.	PART No.	DESCRIPTION	VENDOR
E1	LR5-150-24	DC POWER SUPPLY	MEANWELL
E2	MD5-HF14	MOTOR DRIVER	AUTONICS
E3	CONNECTOR BLOCK		
E4	G6B-4BND	RELAY	OMRON
E5	MY2-24V	RELAY	OMRON
E6	3108NL-05W-B59	FAN MOTOR	NMB-MAT
E7	CP2E-N60DT-D	PLC	OMRON
E8	AR10-M5-A	AIR REGULATOR	SMC
E9	AR10-M5-A	AIR REGULATOR	SMC
E10	LZ-14-F6	AC SOCKET & FUSE	LANZ
E11	3108NL-05W-B59	FAN MOTOR	NMB-MAT
E12	4GA130R-C4	SOLENOID VALVE	CKD
E13	4GA119R-C4	SOLENOID VALVE	CKD

