

	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP Board Stop (OLD PIP Type) Replacement Procedure	Effective Date	30-May 2016

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	30 May 2016	First Release	Tan Liang Kai

	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP Board Stop (OLD PIP Type) Replacement Procedure	Effective Date	30-May 2016

Content

PC, Board Stop Removal.....	3
PC, Board Stop Replacement.....	5

	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP Board Stop (OLD PIP Type) Replacement Procedure	Effective Date	30-May 2016

** This procedure is applicable for left & right PC, Board Stop.

PC, Board Stop Removal

1. Verify that there is no panel in the system.
2. Extend PIP Board Stop at Digital IO tab.
3. Turn off X-ray Source. Open Front Access Doors.
4. Use 2.5mm Hex Wrench to remove PIP Flag screw & PIP Flag as shown in Figure 1.

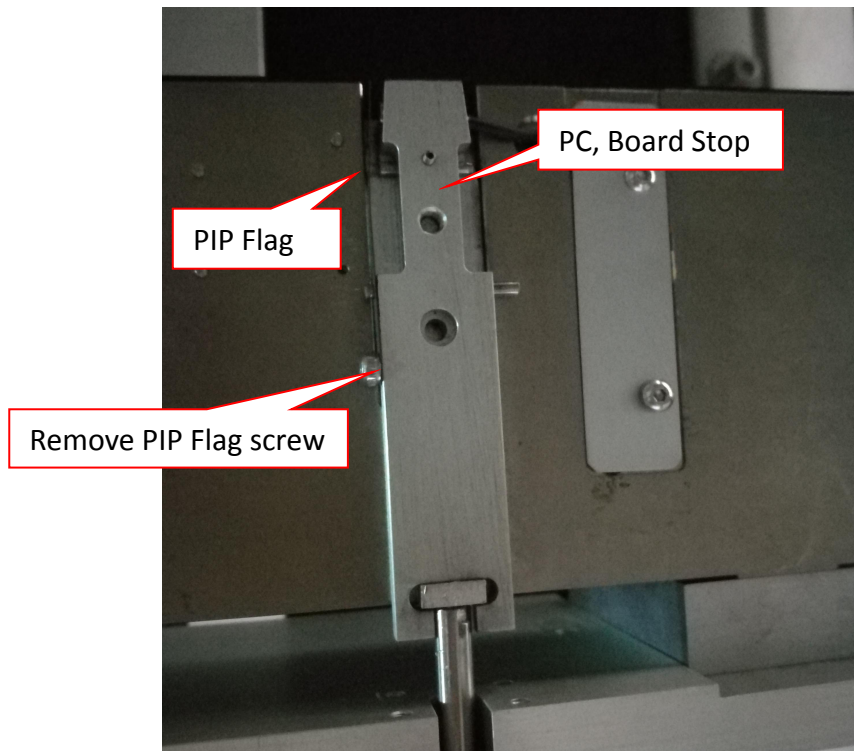


Figure 1 PIP Flag removal

5. Remove 2 x Set Screws as shown in Figure 2.

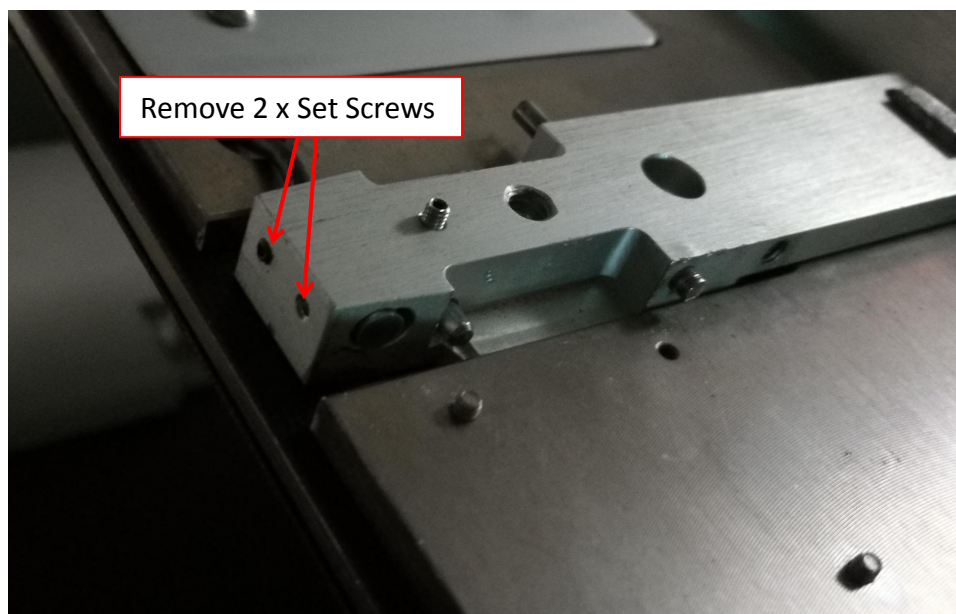


Figure 2 Set Screws removal

	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP Board Stop (OLD PIP Type) Replacement Procedure	Effective Date	30-May 2016

6. Remove 1x 8-32 thread (Inch Type) PIP Shoulder Screw from PC, Board Stop as shown in Figure 3.

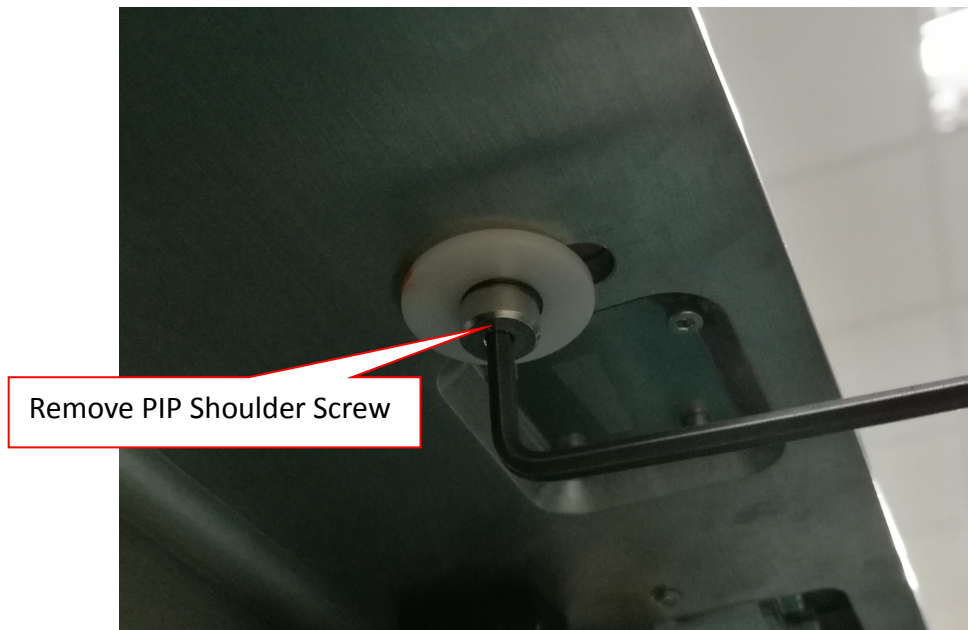


Figure 3 PIP Shoulder Screw Removal

7. Gently position PIP Flag, PIP Flag Screw, Set Screws, Spacer, Curved Washer & PIP Shoulder Screw at visible area.

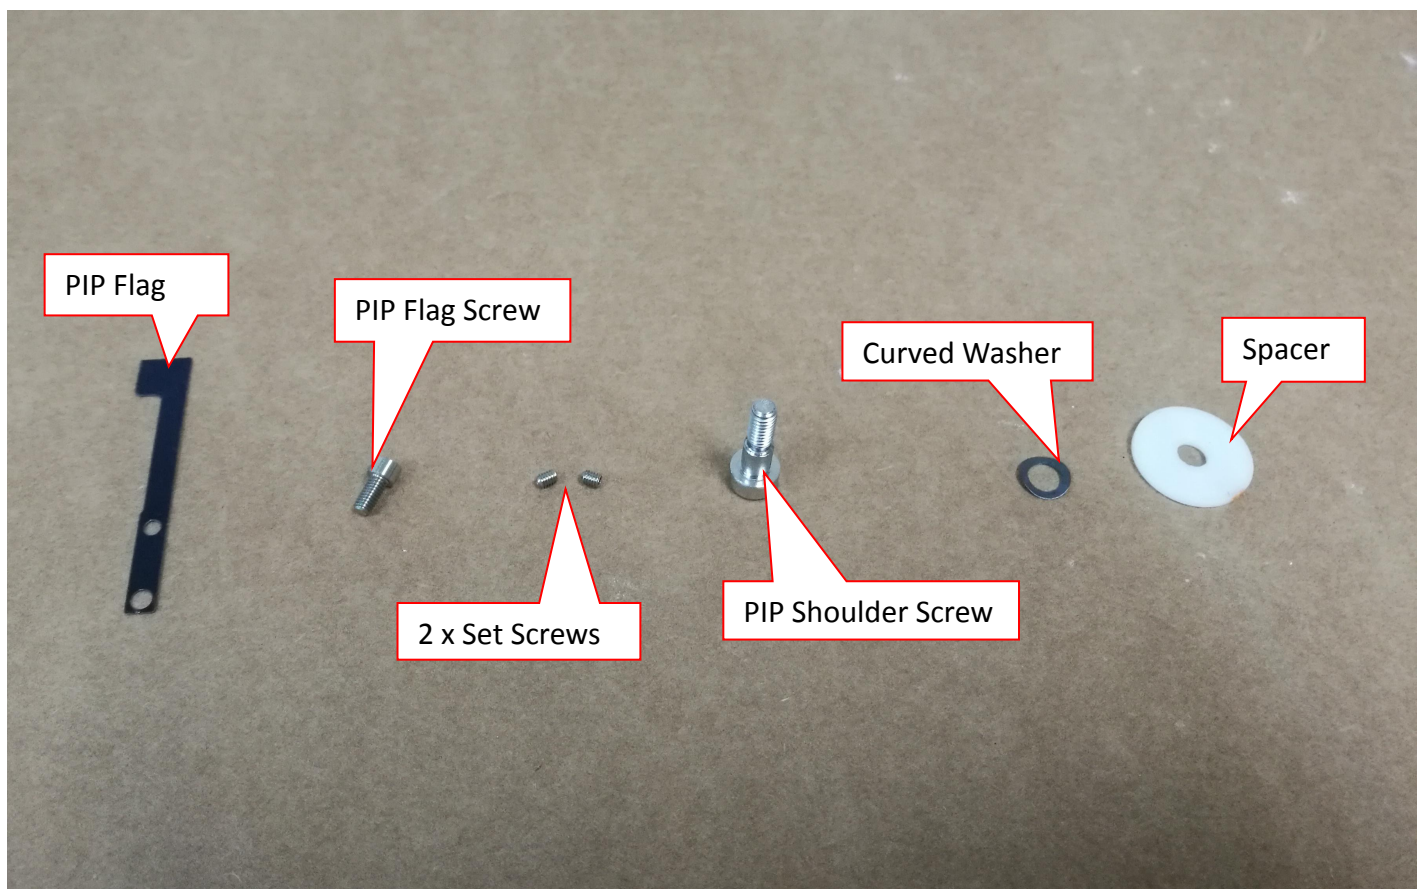


Figure 4

	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP Board Stop (OLD PIP Type) Replacement Procedure	Effective Date	30-May 2016

8. Gently remove PC, Board Stop as shown in Figure 5.

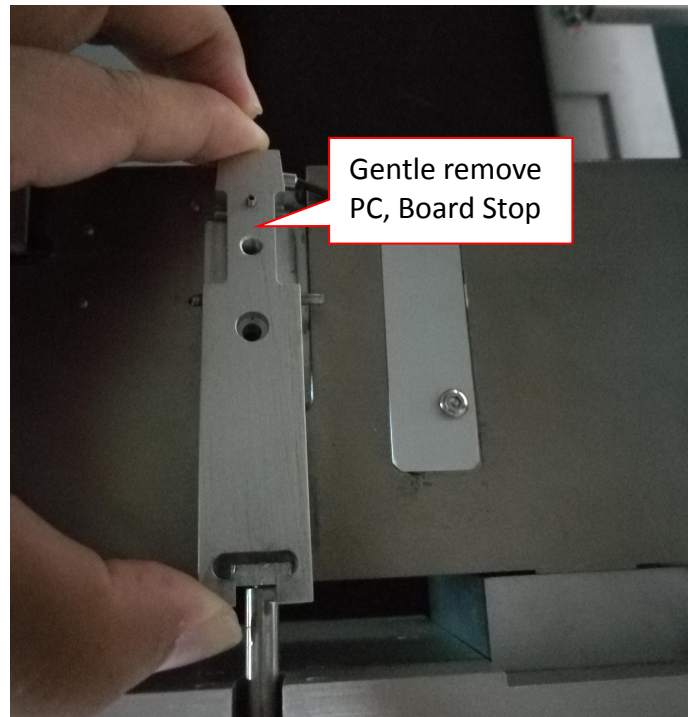


Figure 5 PC, Board Stop Removal

PC, Board Stop Replacement

1. Prepare PIP Block, Curved Washer, Spacer by refer below Part ID.
 - a) PIP Block (P/N: 4XAXY-064)
 - b) Curved Washer (P/N: 2720-0021)
 - c) Spacer (P/N: 4XAXY-003)
2. Gently slot new PIP Block as shown in Figure 6.

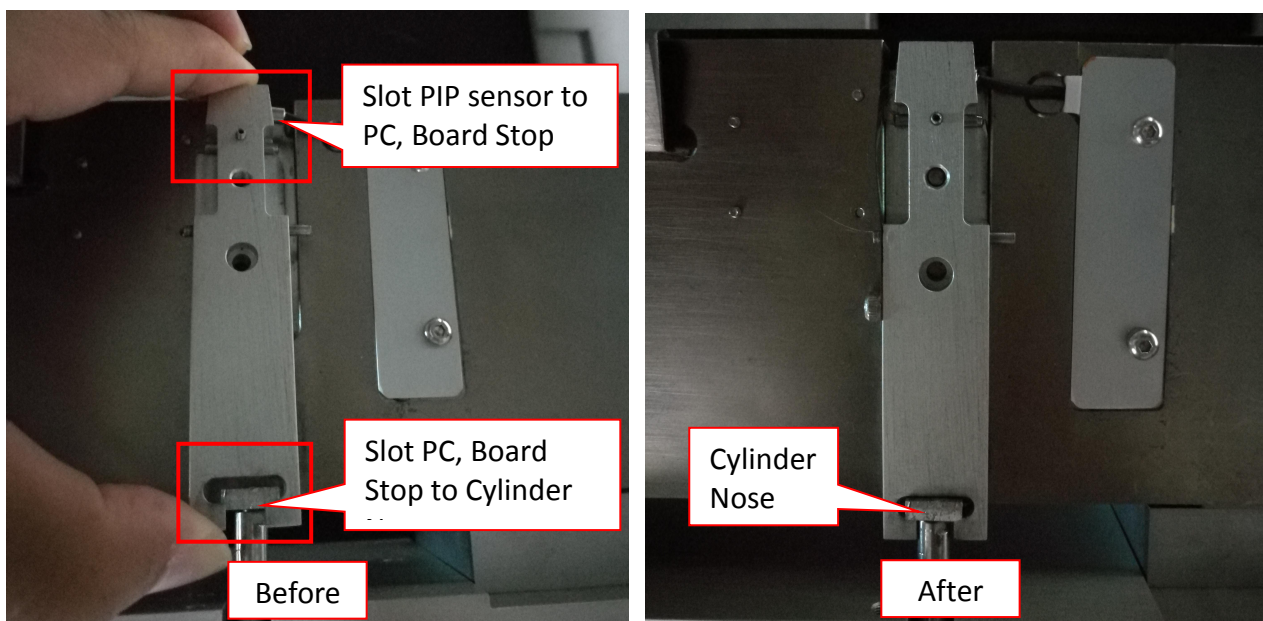


Figure 6 PIP Board Stop Assembly

	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP Board Stop (OLD PIP Type) Replacement Procedure	Effective Date	30-May 2016

3. Arrange below fastening by refer below sequence. May refer to Figure 7.

a) PIP Shoulder Screw > Curved Washer > Spacer

Remark: Replace necessary Curved Washer & Spacer if worn out upon part replacement

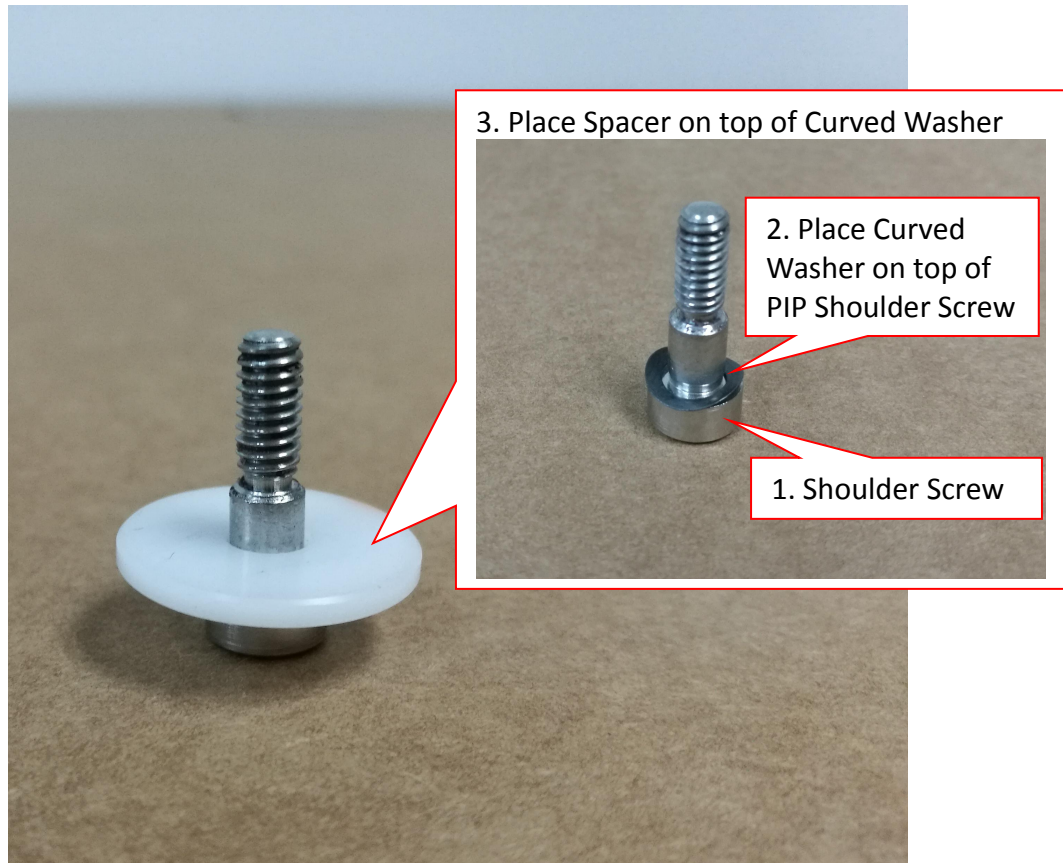


Figure 7 PIP Shoulder Screw Assembly

4. Assemble all fastening (PIP Shoulder Screw, Curved Washer & Spacer) into PC, Board Stop. May refer to Figure 8. Tighten Shoulder Screws

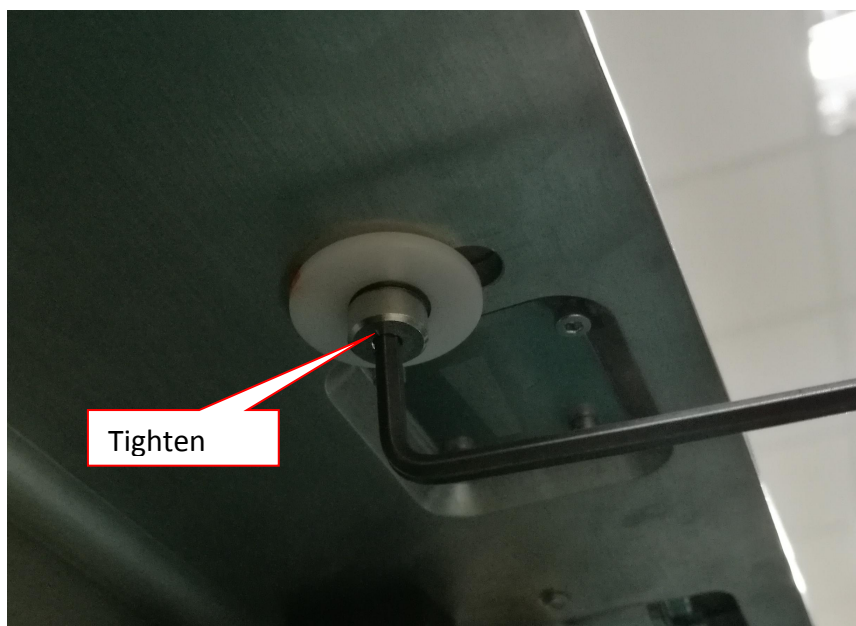


Figure 8 PC, Board Stop Assembly

	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP Board Stop (OLD PIP Type) Replacement Procedure	Effective Date	30-May 2016

5. Align Sensor Head evenly with PIP Board Stop flat surface. Tighten 2 x Set Screws as shown in Figure 9.
- Remark: Caution on Sensor Head protrusion upon routing

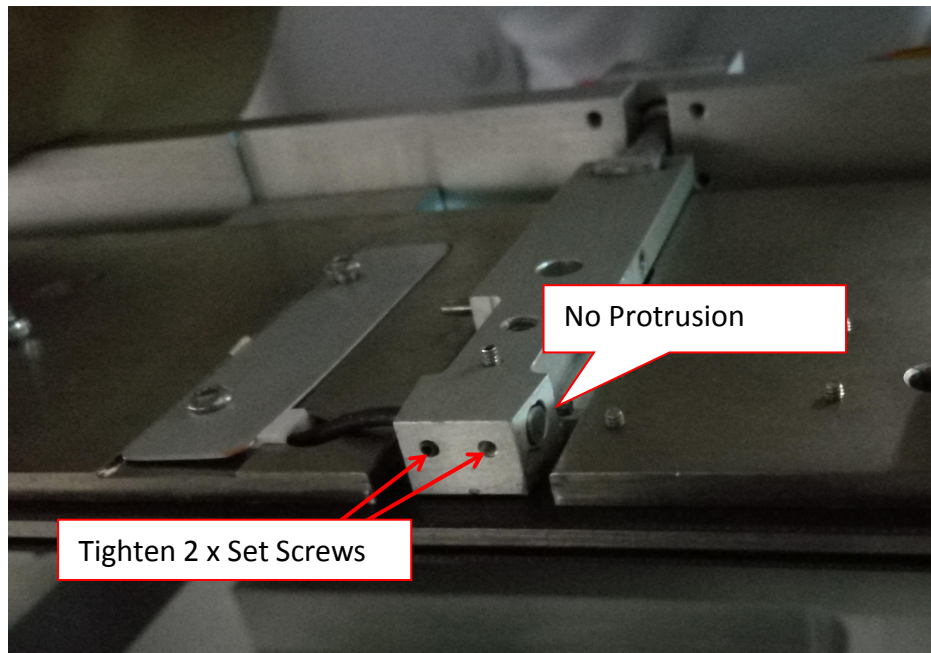


Figure 9 Set Screws Fastening

6. Assemble PIP Flag to Flag Locating Pin as shown in Figure 10.

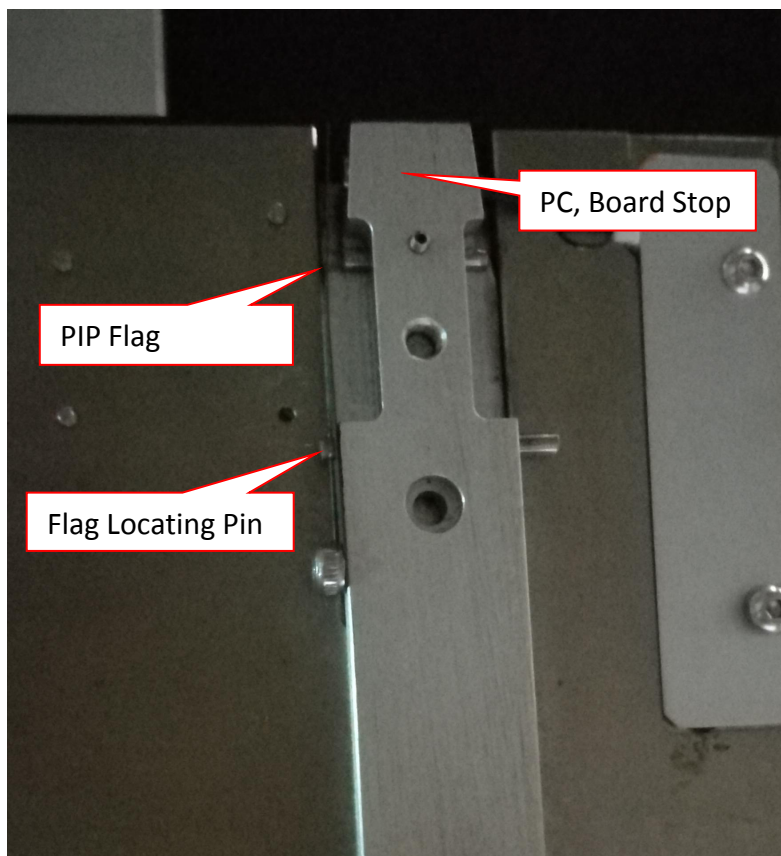


Figure 10 PIP Flag Assembly

	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP Board Stop (OLD PIP Type) Replacement Procedure	Effective Date	30-May 2016

7. Loosen Set Screw as shown in Figure 11

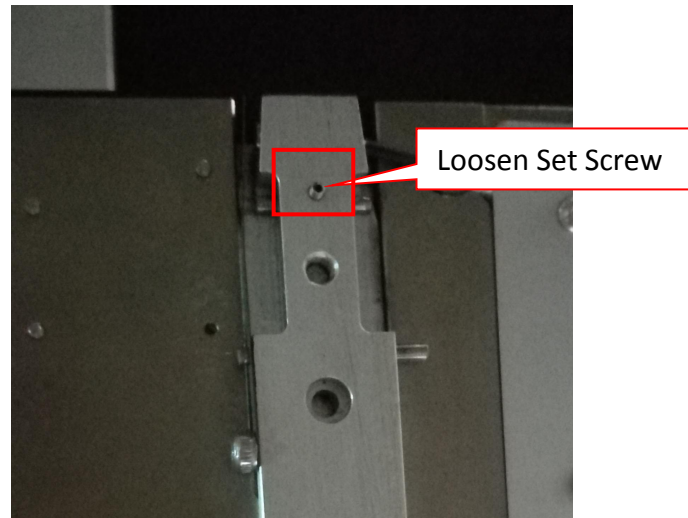


Figure 11 Set Screw Location

8. Gently slide PIP Flag Height Adjustment Pin & position PIP Flag on top of the dowel pin. Hold the PIP Flag firmly & tighten PIP Flag Screw. May refer to Figure 12.

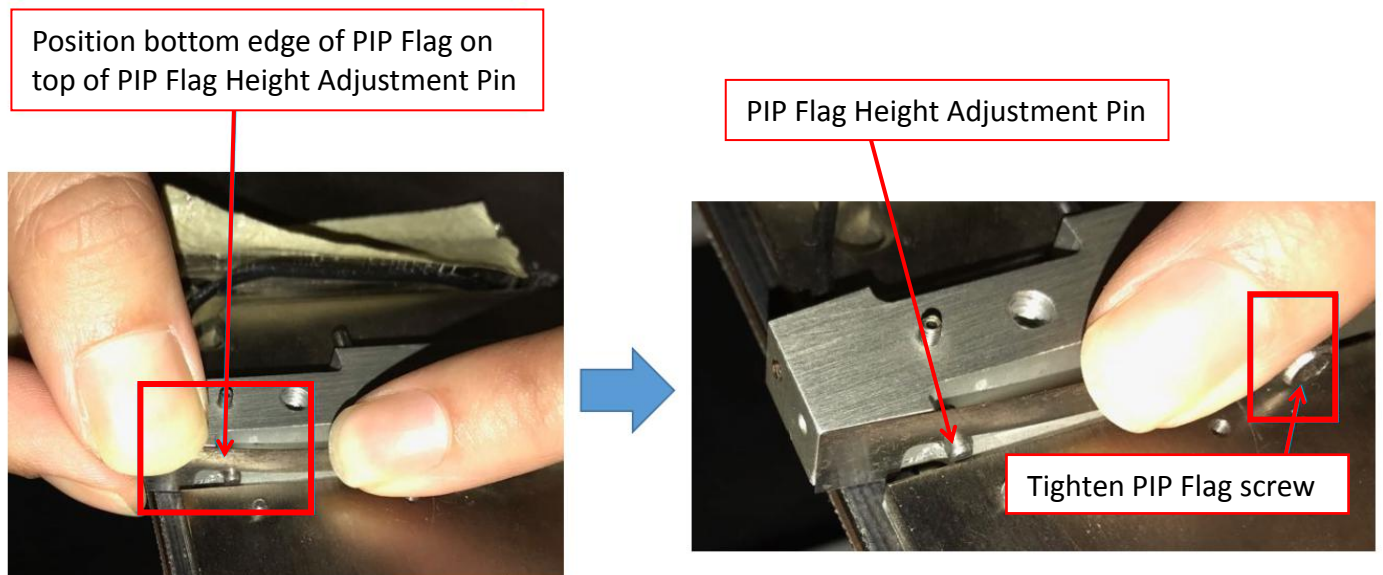


Figure 12 PIP Flag Height Adjustment Pin

9. Gently slide dowel pin away from PIP flag & tighten Set Screw as shown in Figure 13.

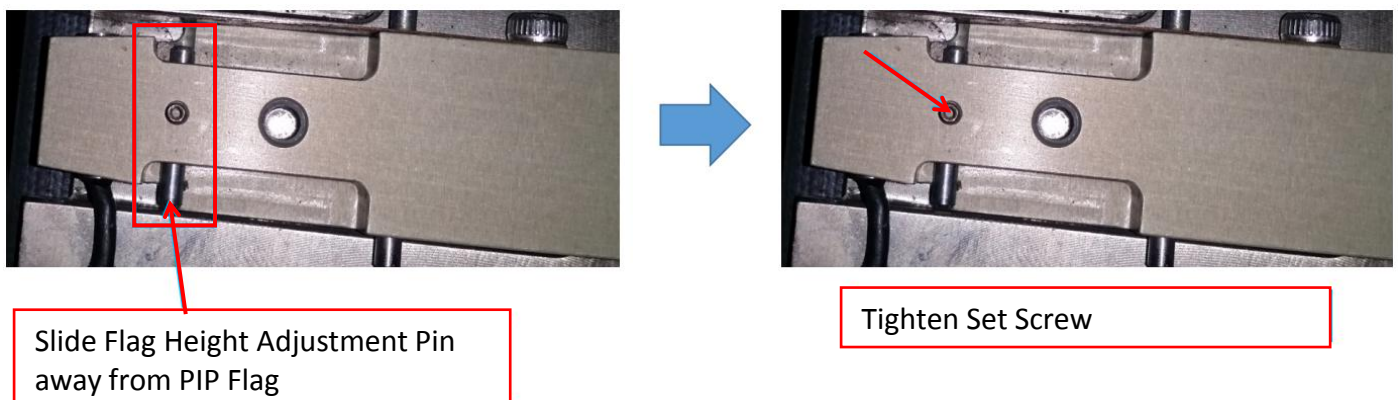


Figure 13 Flag Height Adjustment Pin

	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP Board Stop (OLD PIP Type) Replacement Procedure	Effective Date	30-May 2016

10. Close Front Access Doors.
11. Obtain 1 x Dummy Board or Empty Carrier for Panel Handling test.
12. Go to Services > Subsystem Status & Control > Panel Handling > Click “Initialize” as shown in Figure 14

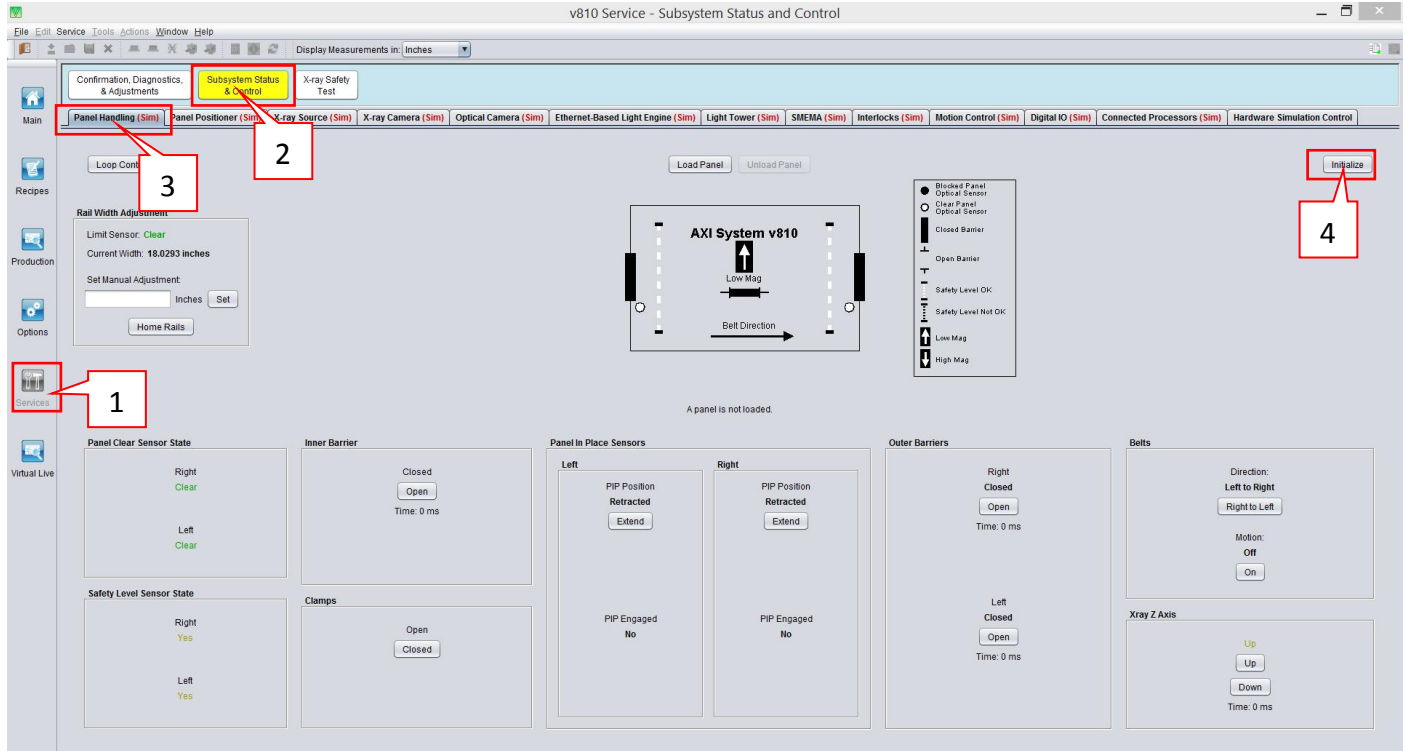


Figure 14 Panel Handling

13. Enter board parameter & click “Load” as shown in Figure 15
- Remark: Do not load any board & click “Cancel” when outer barrier open.

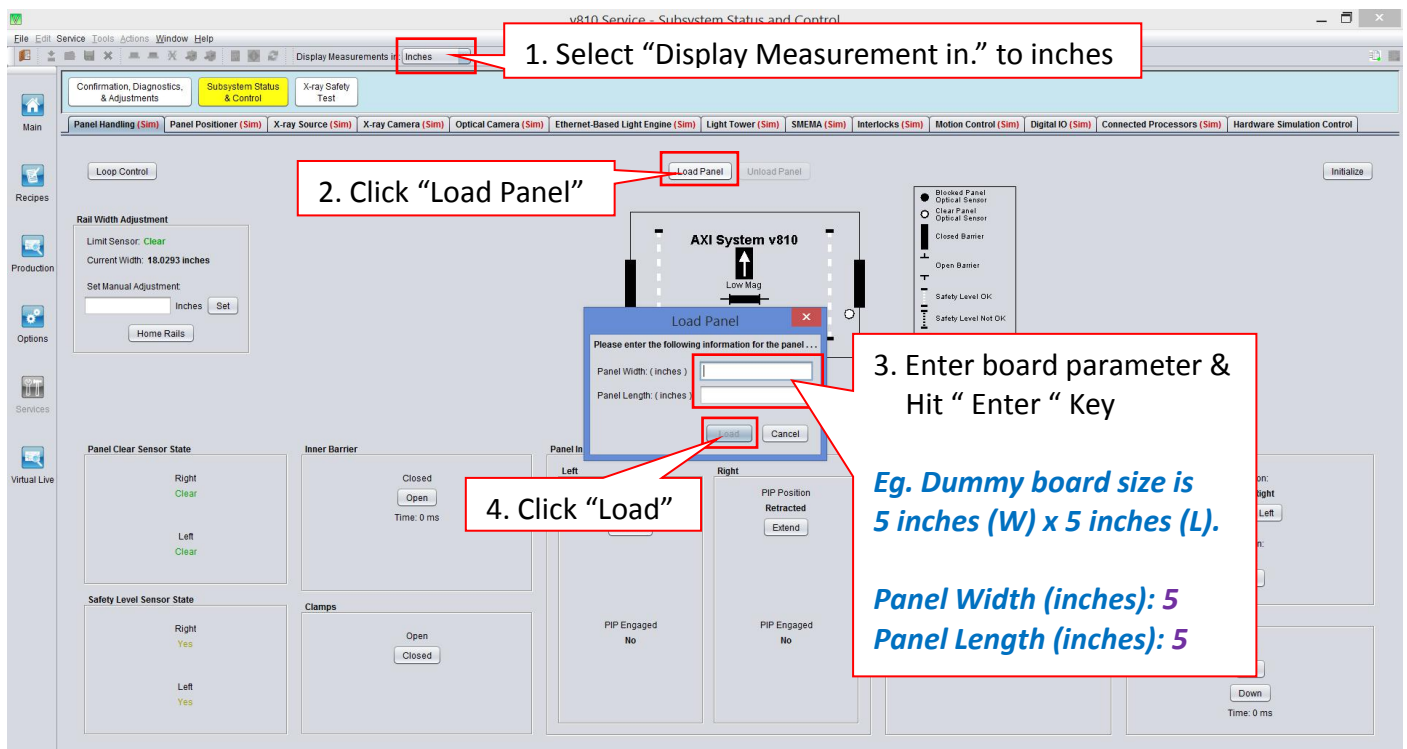


Figure 15 Panel Handling

	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP Board Stop (OLD PIP Type) Replacement Procedure	Effective Date	30-May 2016

14. Go to services > Confirmation, Diagnostics & Adjustment > Run “Panel Handling Confirmation” for 5 loops as shown in Figure 16

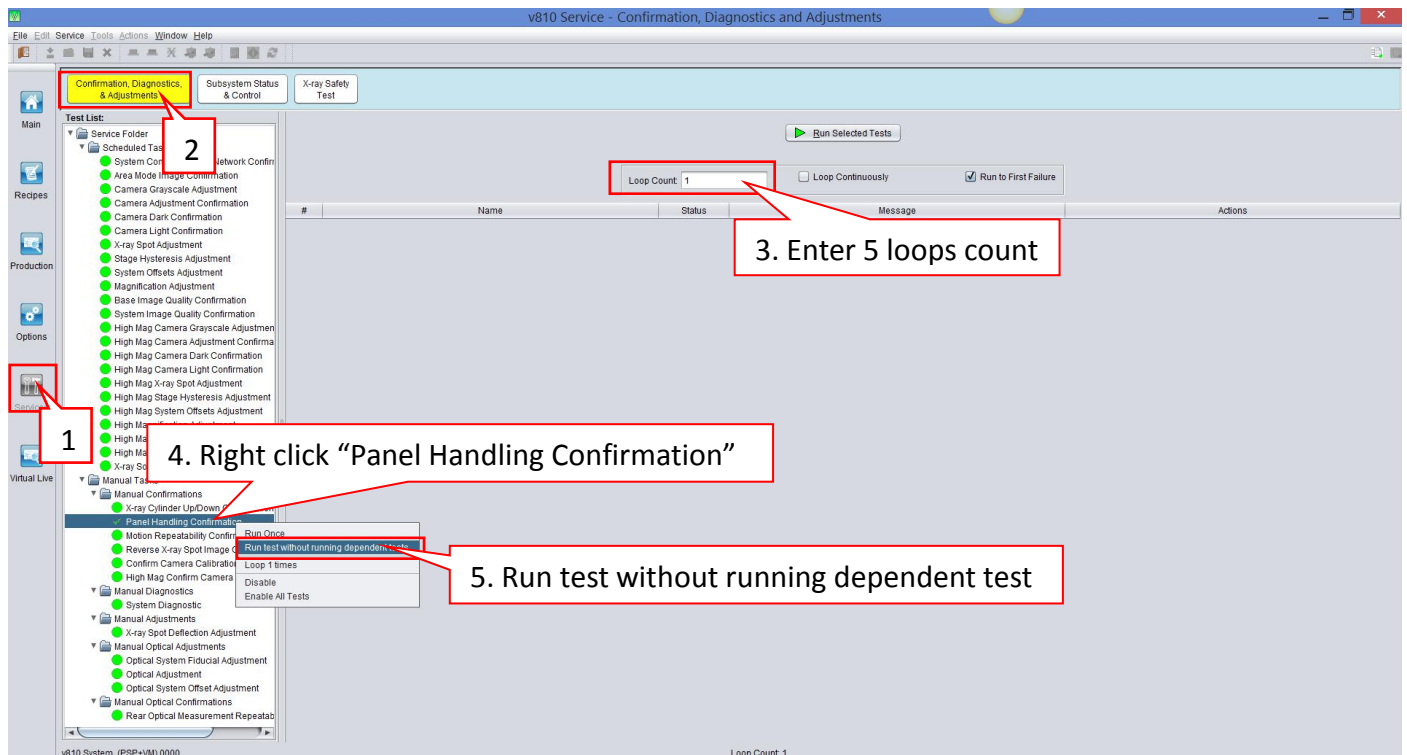


Figure 16 Panel Handling Confirmation

15. Load dummy board or carrier accordingly. Panel Handling confirmation task will prompt as “Passed”.
16. Unload board or carrier accordingly.