

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Filter Sensor Head Removal & Replacement Procedure	Effective Date	2 Oct 2016

This procedure is applicable to below models:

V810 STD	☐	S1	☐	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	2 Oct 2016	First Release	ONG KEAN SHENG

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Filter Sensor Head Removal & Replacement Procedure	Effective Date	2 Oct 2016

Content

S2EX Filter Sensor Head Removal.....	3
S2EX Filter Sensor Head Replacement.....	7

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Filter Sensor Head Removal & Replacement Procedure	Effective Date	2 Oct 2016

S2EX Filter Sensor Head Removal

1. Unload board if any
2. Close SSCA
3. Loosen 2 x Screws & dismantle particular Filter Height Sensor Module Metal Cover as below Figure 1

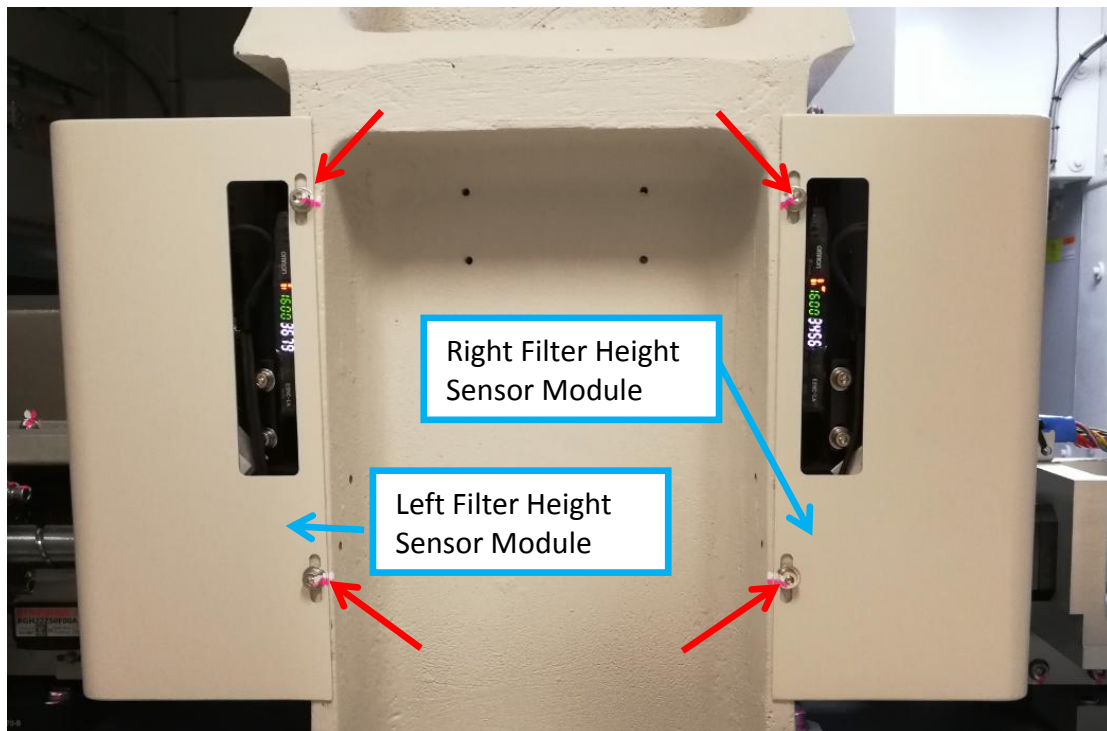


Figure 1

4. Loosen 2 x Screws and remove particular filter height sensor head as Figure 2.

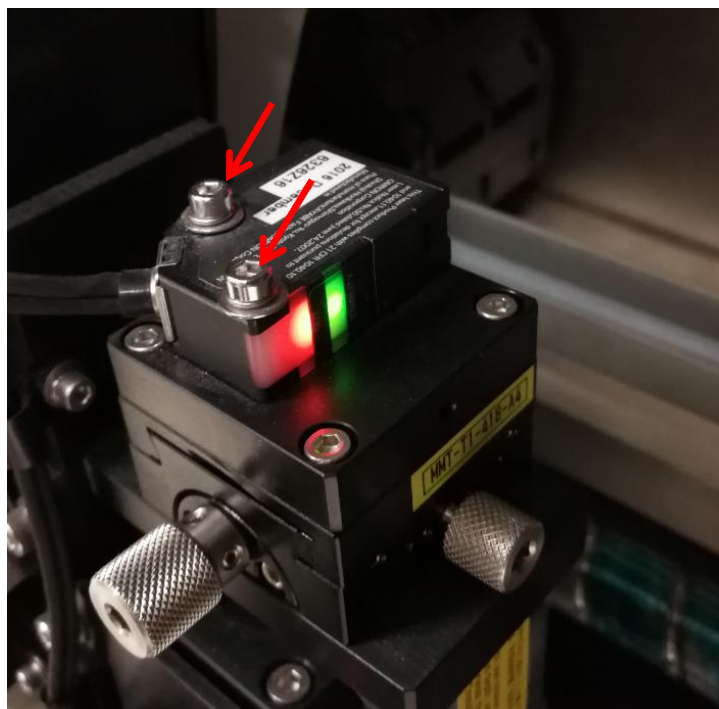


Figure 2

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Filter Sensor Head Removal & Replacement Procedure	Effective Date	2 Oct 2016

5. Remove 2 x Cable Clamp as below Figure 3

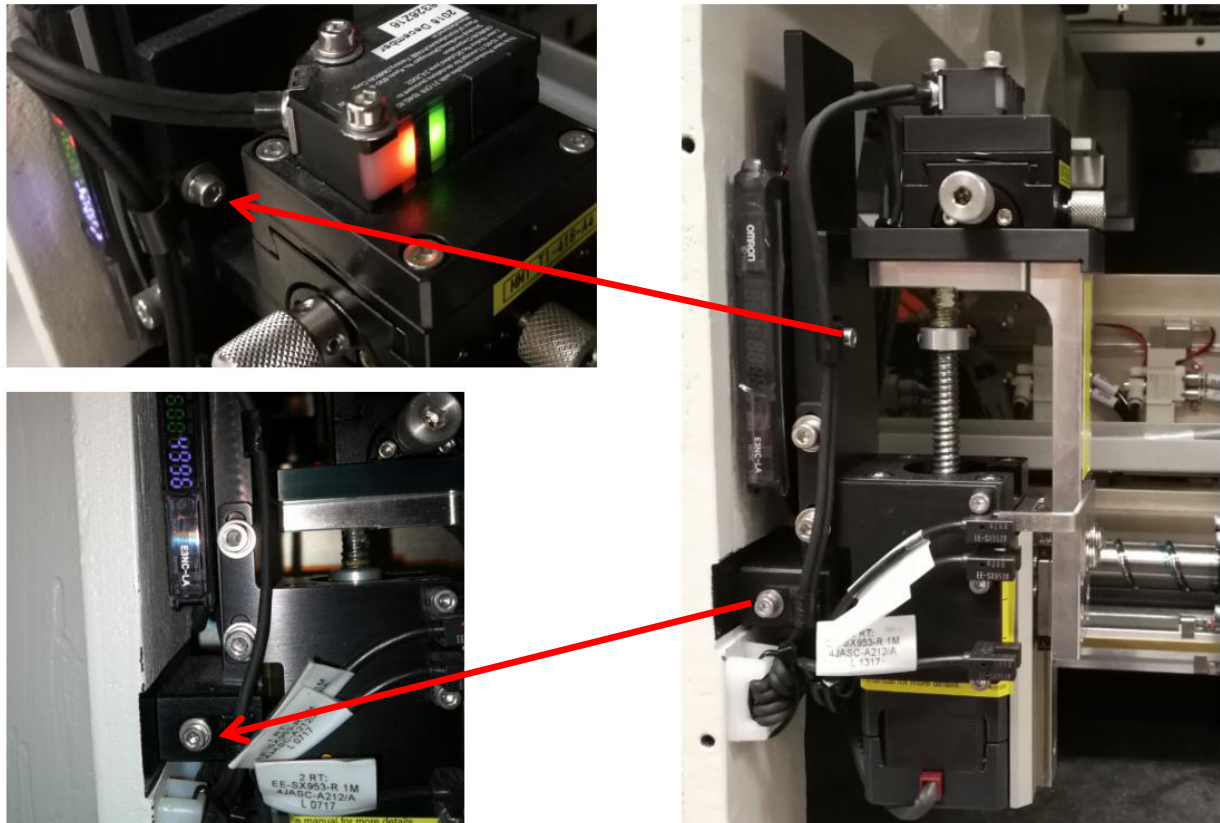


Figure 3

6. Remove 2 x Cable Tie at Cable Holder (White Colour) to release excessive cable as Figure 4

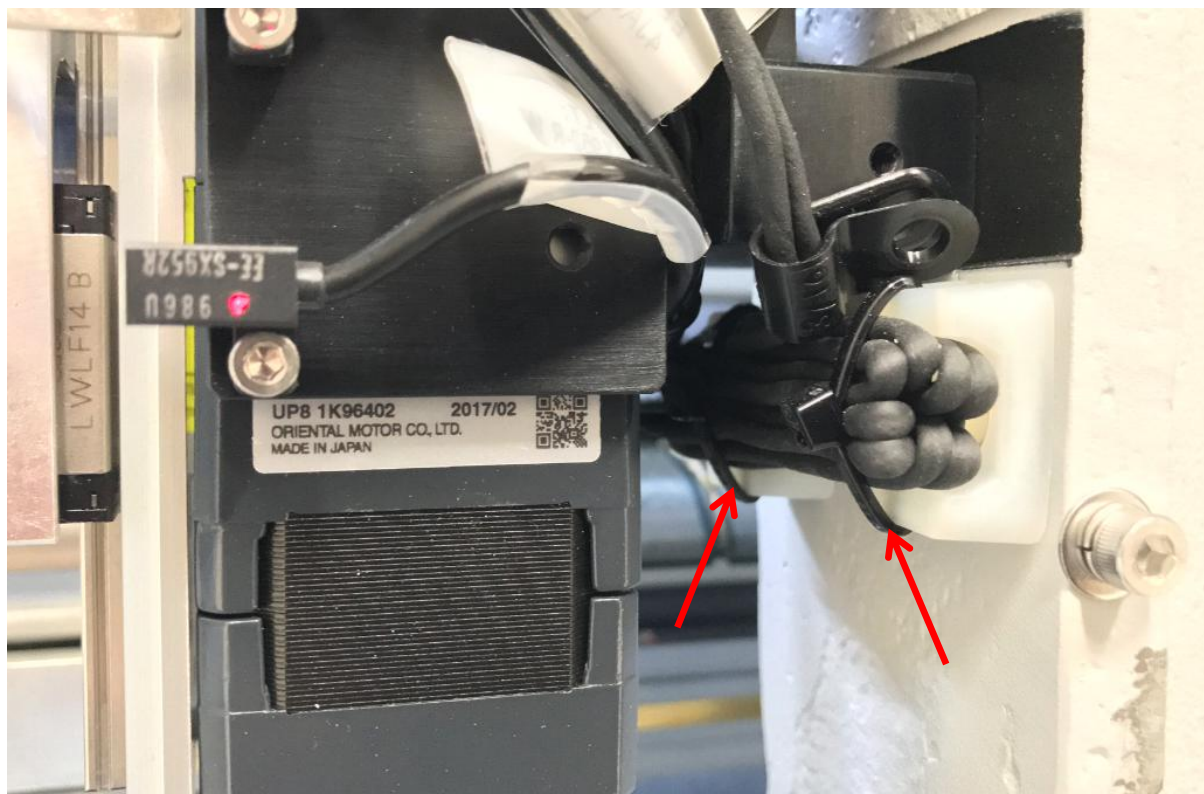


Figure 4

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Filter Sensor Head Removal & Replacement Procedure	Effective Date	2 Oct 2016

7. Access from rear side & gently use Allen Key to press on Filter Height Sensor Amplifier holder as Figure 5.



Figure 5

8. Gently remove Filter Height Sensor Amplifier as Figure 6.



Figure 6

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Filter Sensor Head Removal & Replacement Procedure	Effective Date	2 Oct 2016

9. Open up Filter Height Sensor Cover as below Figure 7.

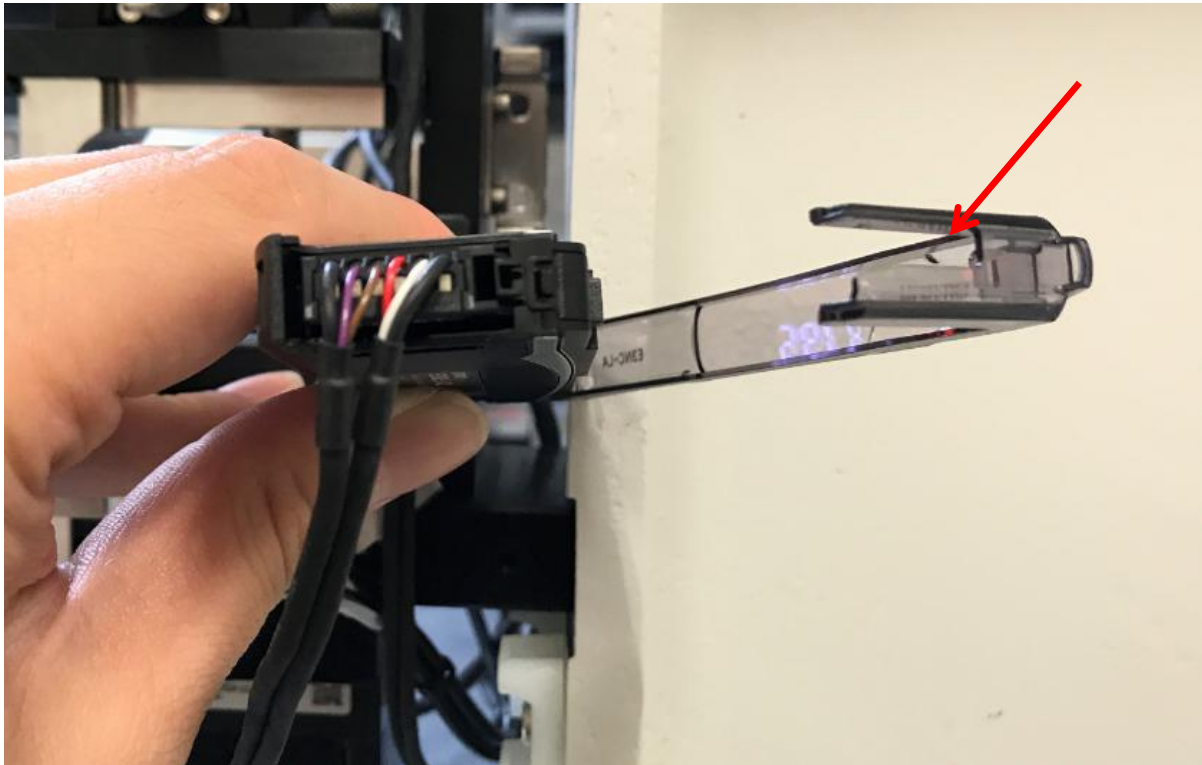


Figure 7

10. Gently press the knob and remove Filter Height Sensor End Connector from Filter Height Sensor Amplifier as Figure 8.

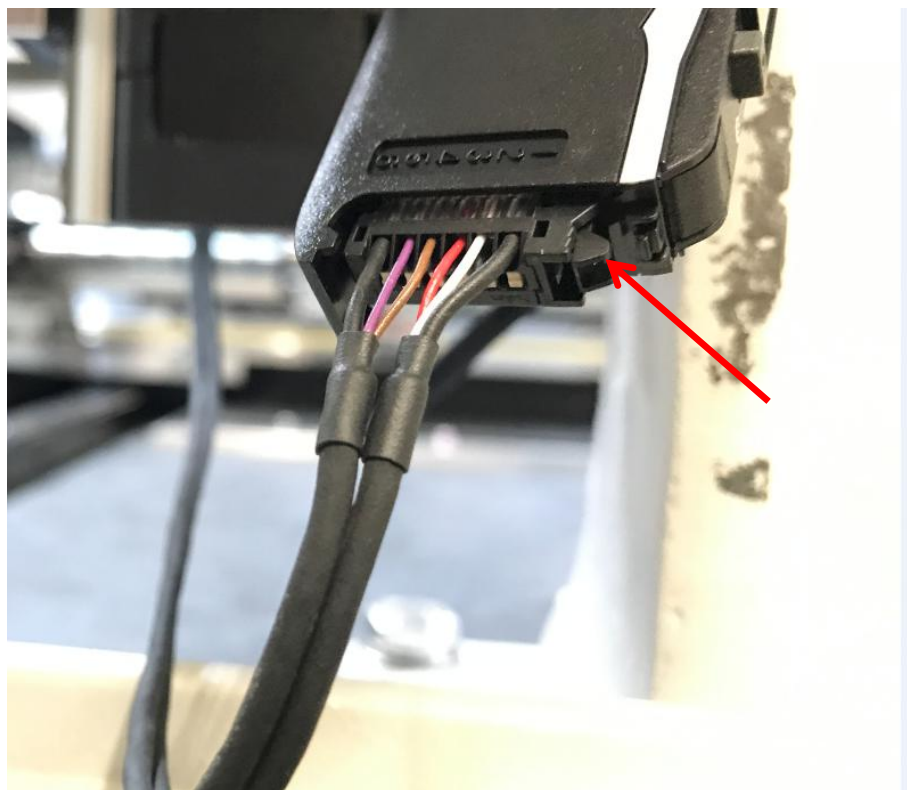


Figure 8

11. Remove entire defective Filter Head Sensor Cable.

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Filter Sensor Head Removal & Replacement Procedure	Effective Date	2 Oct 2016

S2EX Filter Sensor Head Replacement

12. Prepare 1 x 2284-0011 (Sensor, Laser, 2M) as below Figure 9

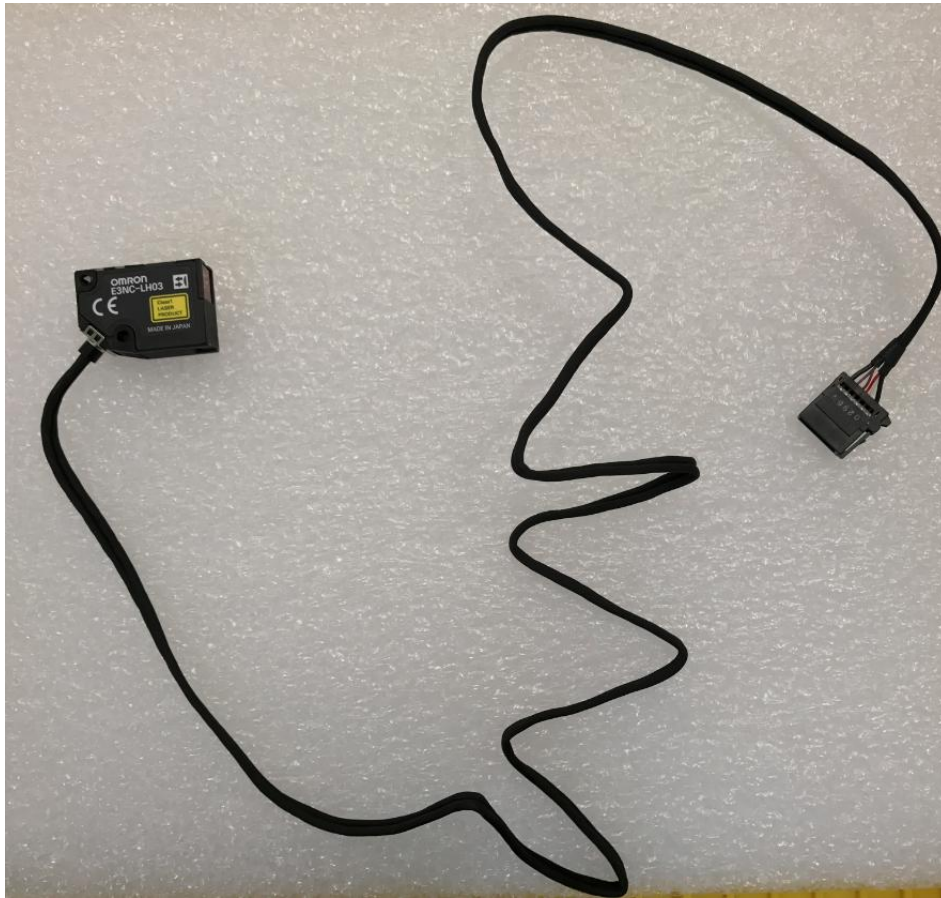


Figure 9

13. Assemble Filter Head Sensor Head & tighten 2 x Screws as Figure 10.

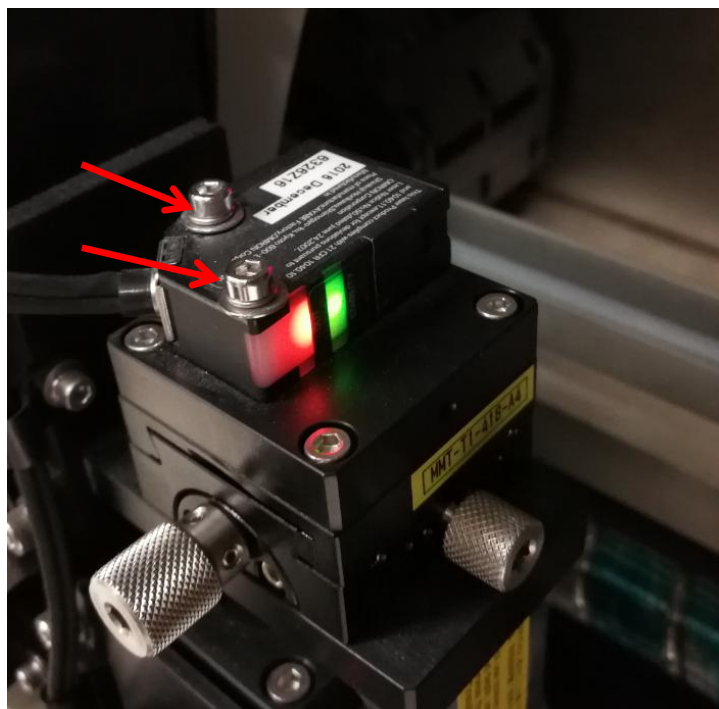


Figure 10

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Filter Sensor Head Removal & Replacement Procedure	Effective Date	2 Oct 2016

Remarks : Filter Height Sensor Head Cable must face towards cast iron beam area direction.

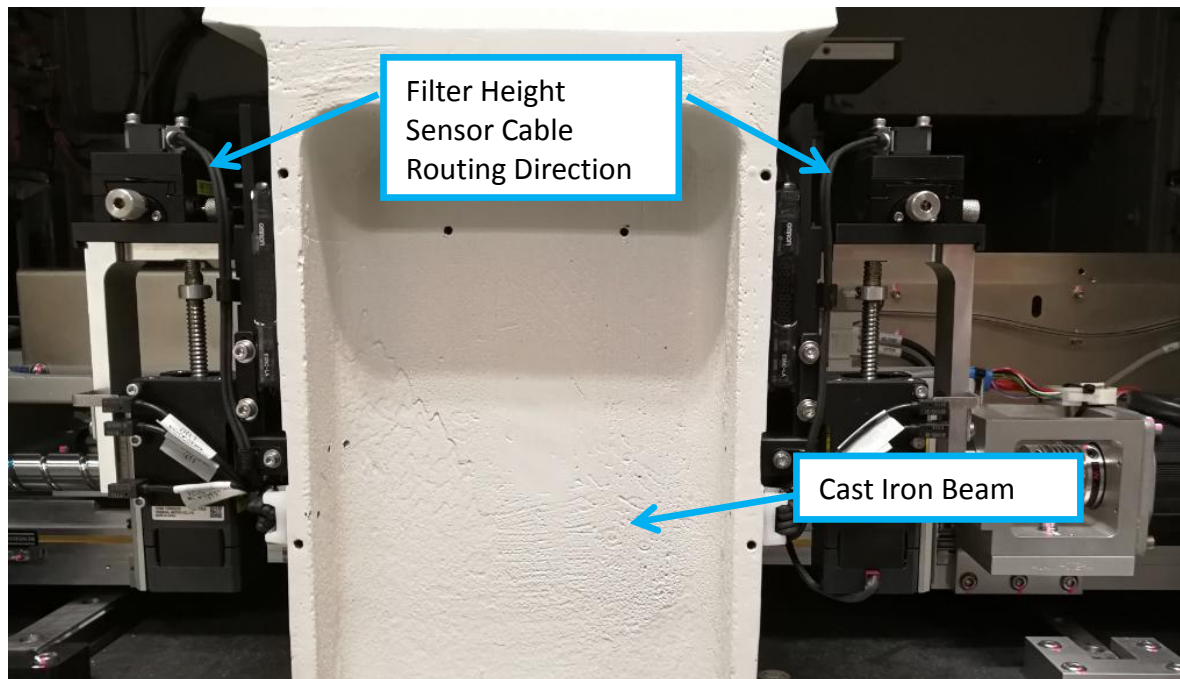


Figure 11

14. Route Filter Height Sensor Head Cable while cable buffering length will require within 148mm . May refer to below Figure 12

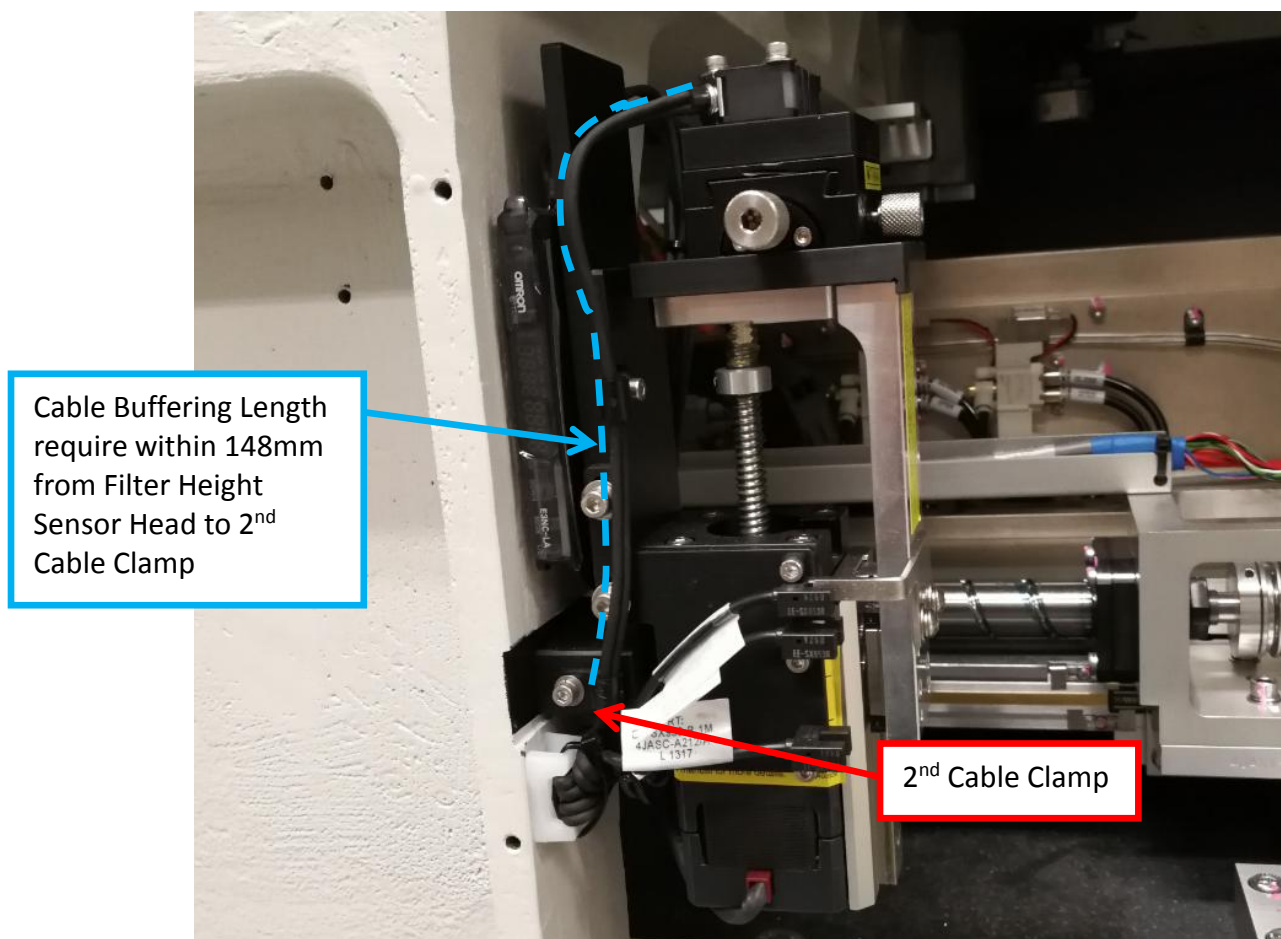


Figure 12

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Filter Sensor Head Removal & Replacement Procedure	Effective Date	2 Oct 2016

15. Slot Filter Height Sensor Cable into 2 x Cable Clamp. Tighten 2 x Screws as below Figure 13.

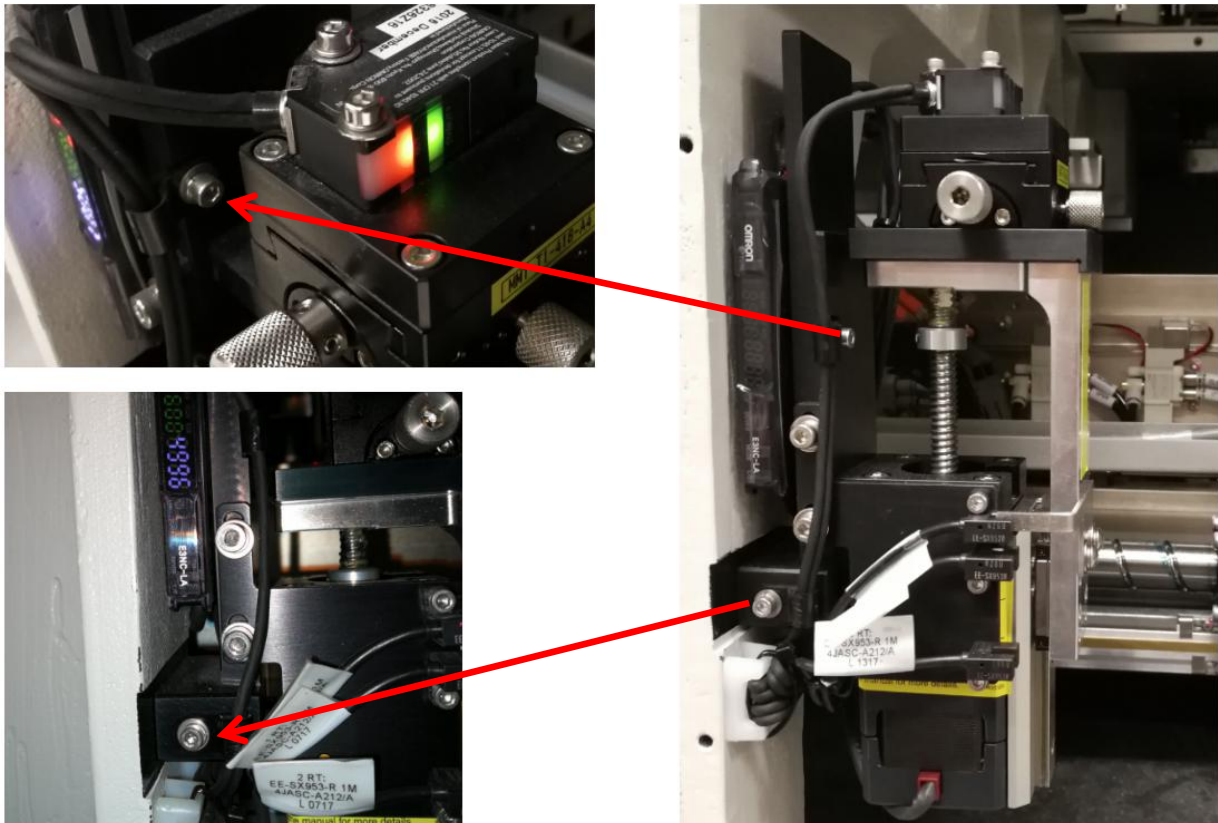


Figure 13

16. Route the Filter Height Sensor Cable to rear side of Filter Height Sensor Module. Gently press the knob and plug the Filter Sensor Head End Connector to Filter Height Sensor Amplifier as below Figure 14. Close Filter Height Sensor Amplifier cover.

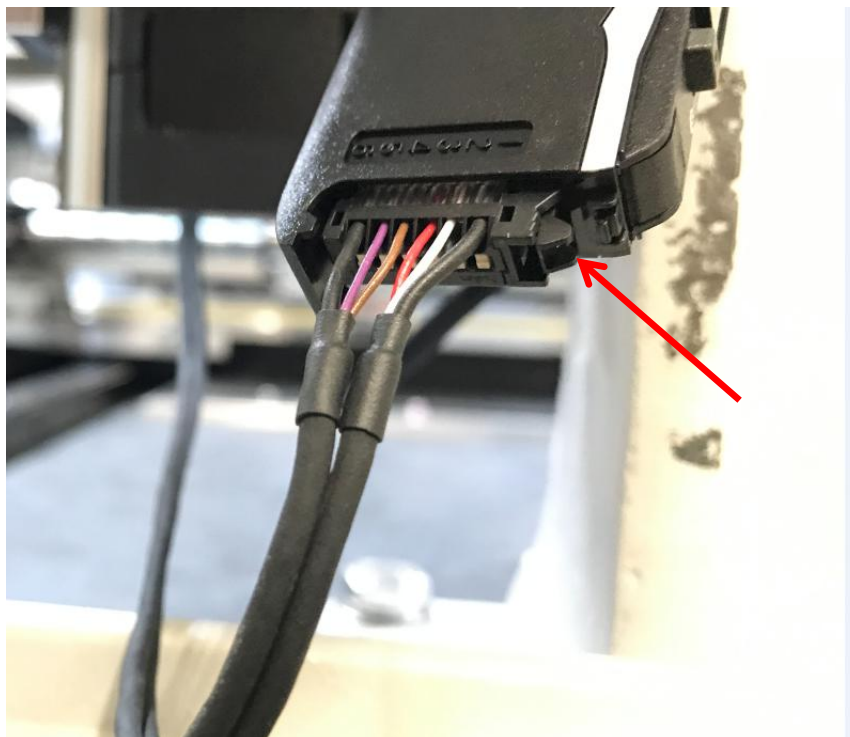


Figure 14

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Filter Sensor Head Removal & Replacement Procedure	Effective Date	2 Oct 2016

17. Gently slot Filter Height Sensor Amplifier into Holder as below Figure 15.

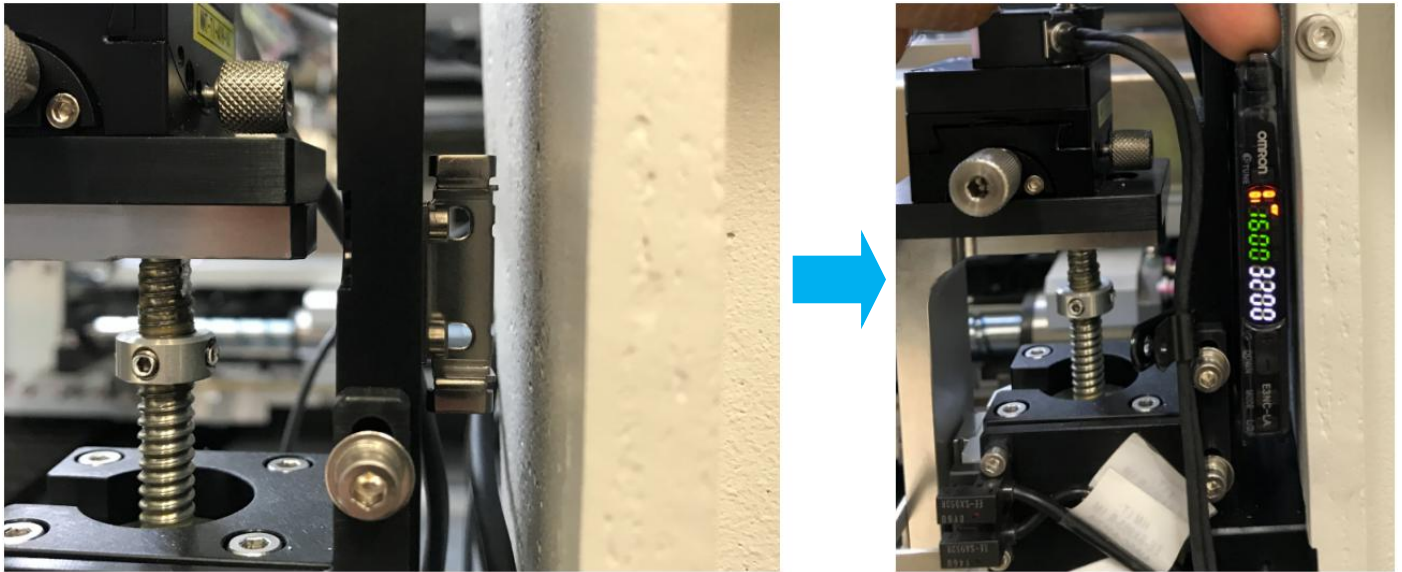


Figure 15

18. Perform cable dressing on excessive cable. Use 2 x Cable Tie to tie up excessive cable at Cable Holder (White Colour). May refer to below Figure 16.

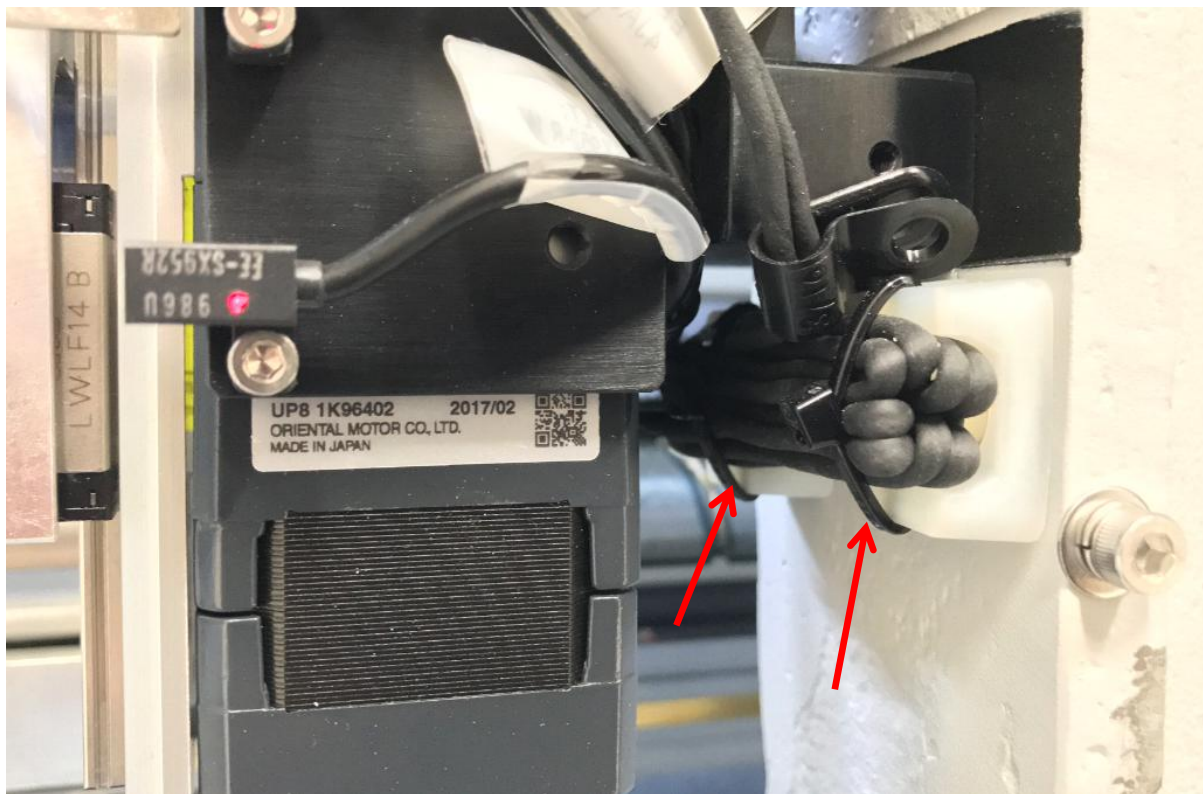


Figure 16

19. Open SSCA & perform Filter Height Sensor Adjustment by refer to “ AXI V810 S2EX Filter Height Adjustment Procedure ”