

	Work Instruction	Doc. Revision	00
	AXI V810 Series 2 Master Controller (2160-0058) Upgrade Procedure	Effective Date	14 Aug 2018

This procedure is applicable to below models:

Machine Model	Server Option		
	S1	S2	S3
V810 / V810i STD		√	
V810 / V810i XXL		√	
V810 / V810i S2EX		√	
V810 / V810i Mini			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	14 Aug 2018	First Release	Ong Kean Sheng

	Work Instruction	Doc. Revision	00
	AXI V810 Series 2 Master Controller (2160-0058) Upgrade Procedure	Effective Date	14 Aug 2018

Content

Special Remarks..... 3

Series 2 Master Controller (2000-0006 & 2000-0160) Removal..... 3

Series 2 Master Controller Installation..... 5

 Slider Assembly Kit Installation..... 8

 Slider Assembly Rail Kit Alignment..... 13

Series 2 Server Installation..... 15

	Work Instruction AXI V810 Series 2 Master Controller (2160-0058) Upgrade Procedure	Doc. Revision	00
		Effective Date	14 Aug 2018

Special Remarks

Not applicable for On Field Upgrade Series 2 V810 Std Equipment

Applicable for All Model that integrated with Factory Default Series 2 Server (2160-0058)

Series 2 Master Controller (2000-0006 & 2000-0160) Removal

2000-0006 - Server Integrate with Toshiba HDD

2000-0160 - Server Integrate with WD HDD

1. Remote & shut down Atom PC.
2. Shut Down S2 Master Controller.
3. Turn off SSCA power > Turn off Trigger Board switch power > Turn off PDU power.
4. Slowly pull out S2 Master Controller.
5. Remove all cables behind S2 Master Controller.

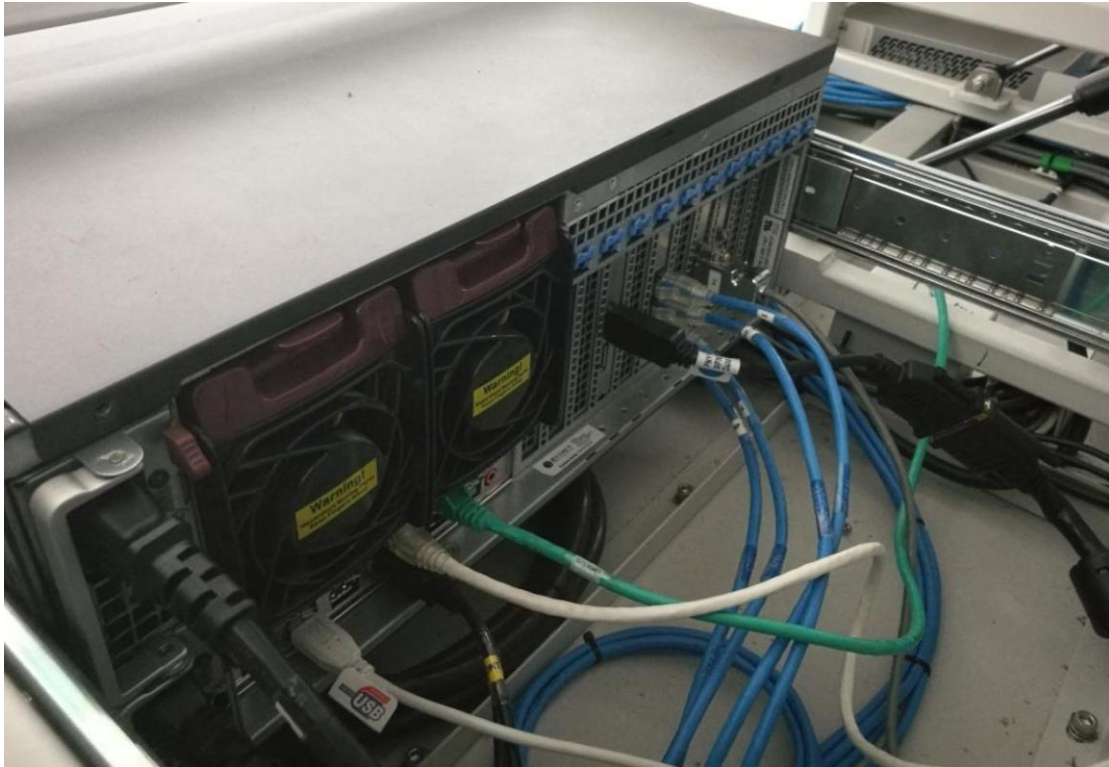


Figure 1 S2 Master Controller Cables Removal

	Work Instruction AXI V810 Series 2 Master Controller (2160-0058) Upgrade Procedure	Doc. Revision Effective Date	00 14 Aug 2018
--	---	---	---------------------------------


6. Unlock both side Slider Rail lock & gently remove S2 Master Controller from Server Rack.

Remark: At least 2x Man Powers are required upon Master Controller removal.



Figure 2 S2 Master Controller Removal

7. Press Supporting Nuts (Black) > Lift up Left Slider Assembly Rail Kit > Remove Slider Assembly Rail Kit.

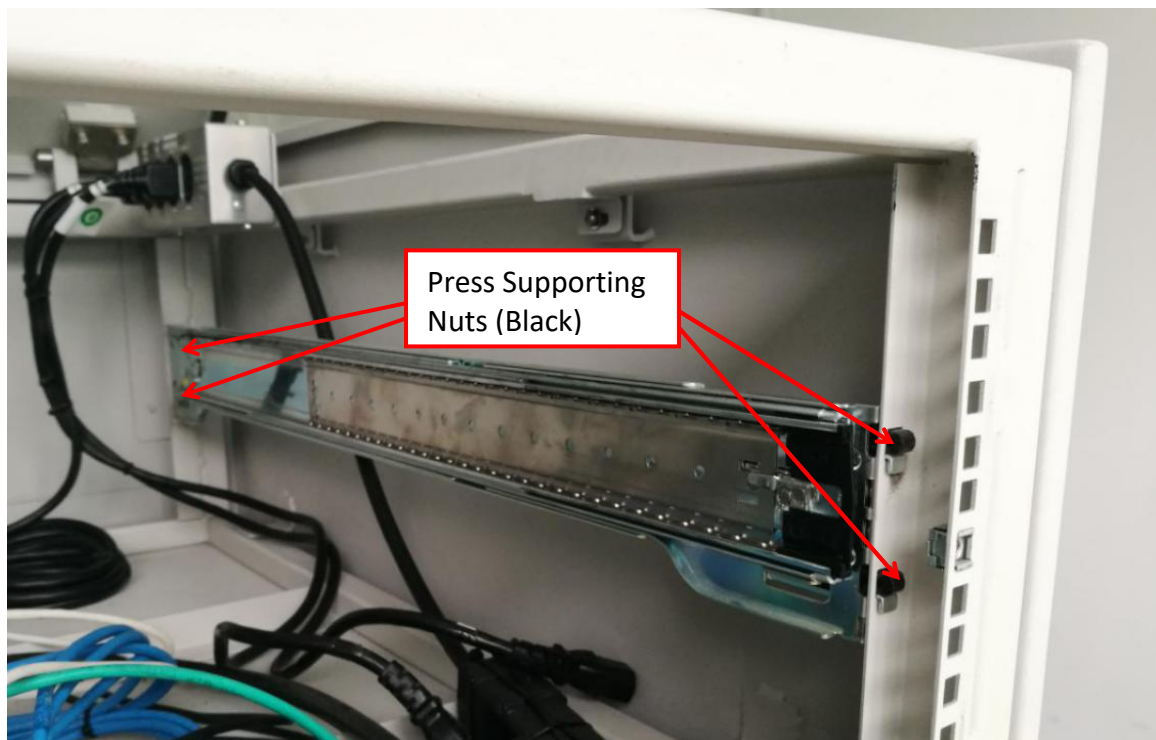

	Work Instruction	Doc. Revision	00
	AXI V810 Series 2 Master Controller (2160-0058) Upgrade Procedure	Effective Date	14 Aug 2018

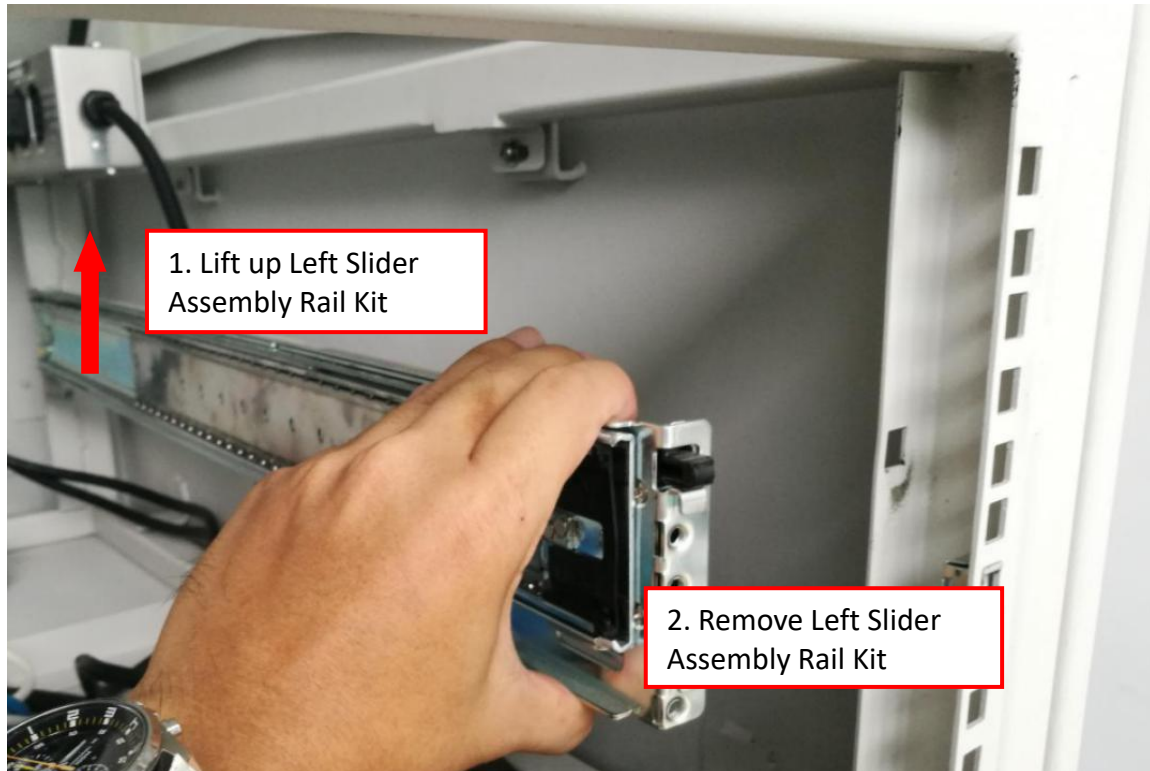


Figure 3 Left Slider Assembly Rail Kit Removal

8. Repeat Step 7 to remove Right Slider Assembly Rail Kit.

Series 2 Master Controller Installation

Prepare all the parts in Table 1.

No.	Part Number	Part Description	Picture	Qty	Remarks
1	4XARCK-N148-03	Right Side (Front) Adapter		1	Under Kit "4XASPP-A101"
2	4XARCK-N149-02	Right Side (Rear) Adapter		1	Under Kit "4XASPP-A101"

	Work Instruction		Doc. Revision	00
	AXI V810 Series 2 Master Controller (2160-0058) Upgrade Procedure		Effective Date	14 Aug 2018

3	4XARCK-N150-03	Left Side (Front) Adapter		1	Under Kit "4XASPP-A101"
4	4XARCK-N151-02	Left Side (Rear) Adapter		1	Under Kit "4XASPP-A101"
5	2750-0014	Cage Nut		8	Under Kit "4XASPP-A101"
6	2160-0058	V810 SERIES II SERVER, REV 3		1	
8	2720-0014	SCREW, CAP, SOCKET, S/S, M5X25		8	Under Kit "4XASPP-A101"
9	2720-0012	SCREW, CAP, SOCKET, S/S, M5X12		4	Under Kit "4XASPP-A101"

	Work Instruction		Doc. Revision	00
	AXI V810 Series 2 Master Controller (2160-0058) Upgrade Procedure		Effective Date	14 Aug 2018

10	2760-0005	WASHER, FLAT, S/S, M5		10	Under Kit "4XASPP-A101"
11	2760-0009	WASHER, SPRING, S/S, M5		12	Under Kit "4XASPP-A101"
12	2130-0026	Slider Bracket (long) - keep inside Slider Assembly Rail Kit Box		2	Packed with Series 2 Server (2160-0058)
13		Slider Bracket (short) - keep inside Slider Assembly Rail Kit Box		2	
14		Slider Assembly Rail Kit - keep inside Slider Assembly Rail Kit Box		2	

Table 1 Series 2 Master Controller Upgrade Parts

	Work Instruction AXI V810 Series 2 Master Controller (2160-0058) Upgrade Procedure	Doc. Revision Effective Date	00 14 Aug 2018
--	---	---	---------------------------------

Slider Assembly Kit Installation

1. Assemble Cage Nuts on Master Controller Server Bracket on Left and Right side respectively.
 - a) 2x unit Cage Nut to 2nd slot of Front side Server Bracket
 - b) 4x units Cage Nut to both slots of Rear side Server Bracket

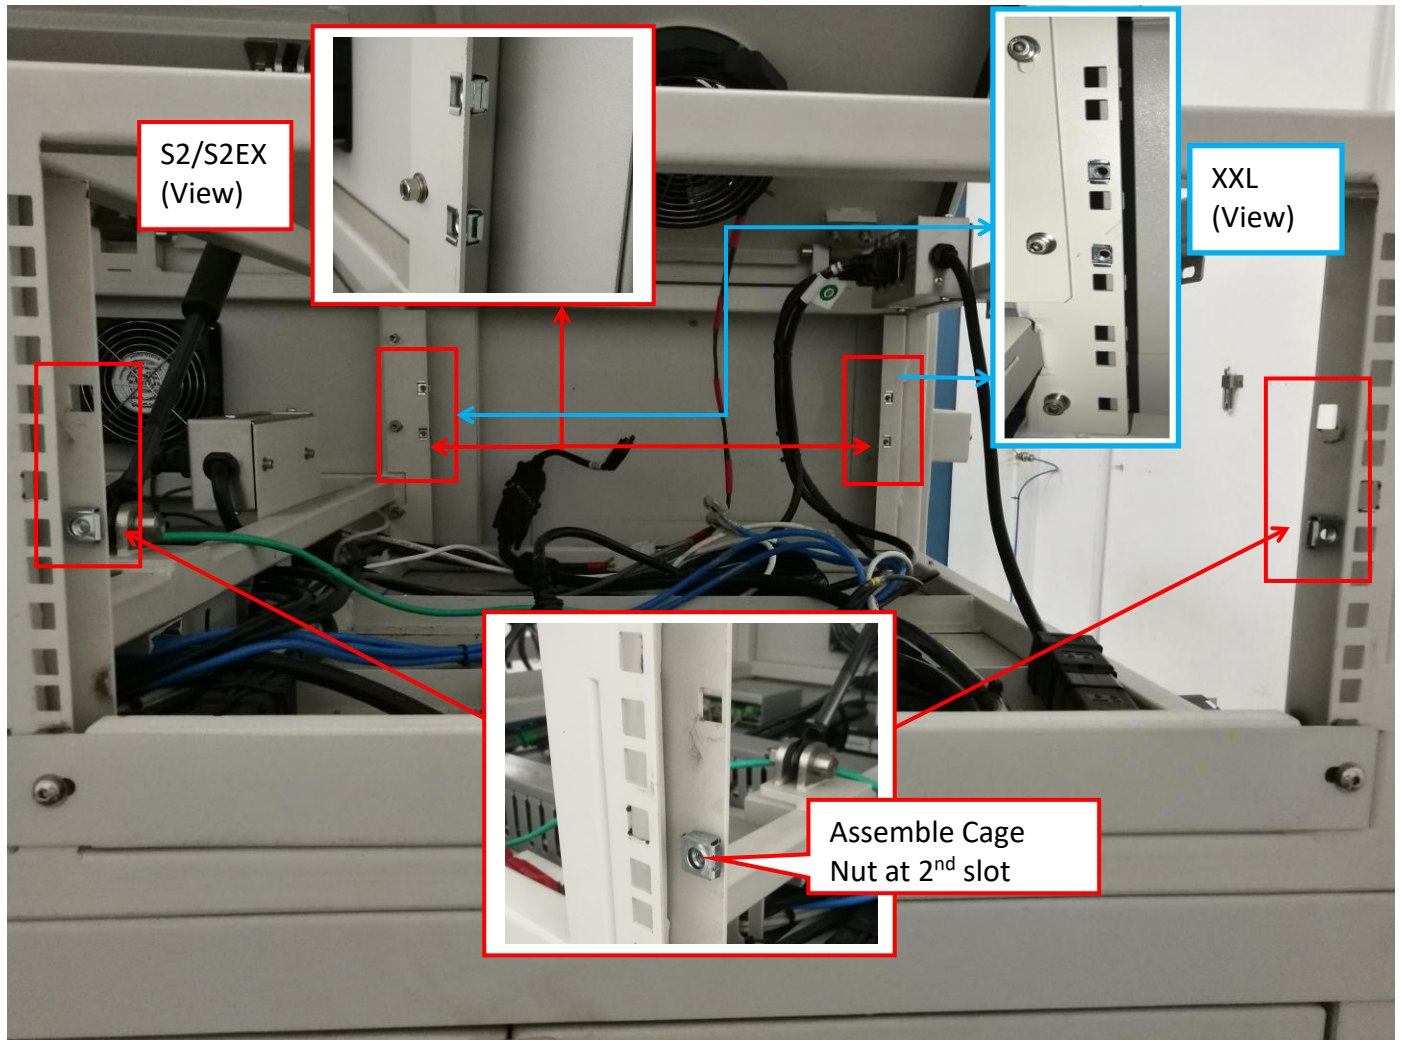


Figure 4 Cage Nuts Assembly

	Work Instruction AXI V810 Series 2 Master Controller (2160-0058) Upgrade Procedure	Doc. Revision	00
		Effective Date	14 Aug 2018

2. Assemble Right side (Rear) Adapter (P/N: 4XARCK-N149-02) to Right Slider Bracket (long).

Remark:

- i. Insert & tighten screw (M5 x 12) together with flat & spring washer to 1st slot of Adapter.
- ii. Engraving Orientation must identical (Blue Colour highlight).

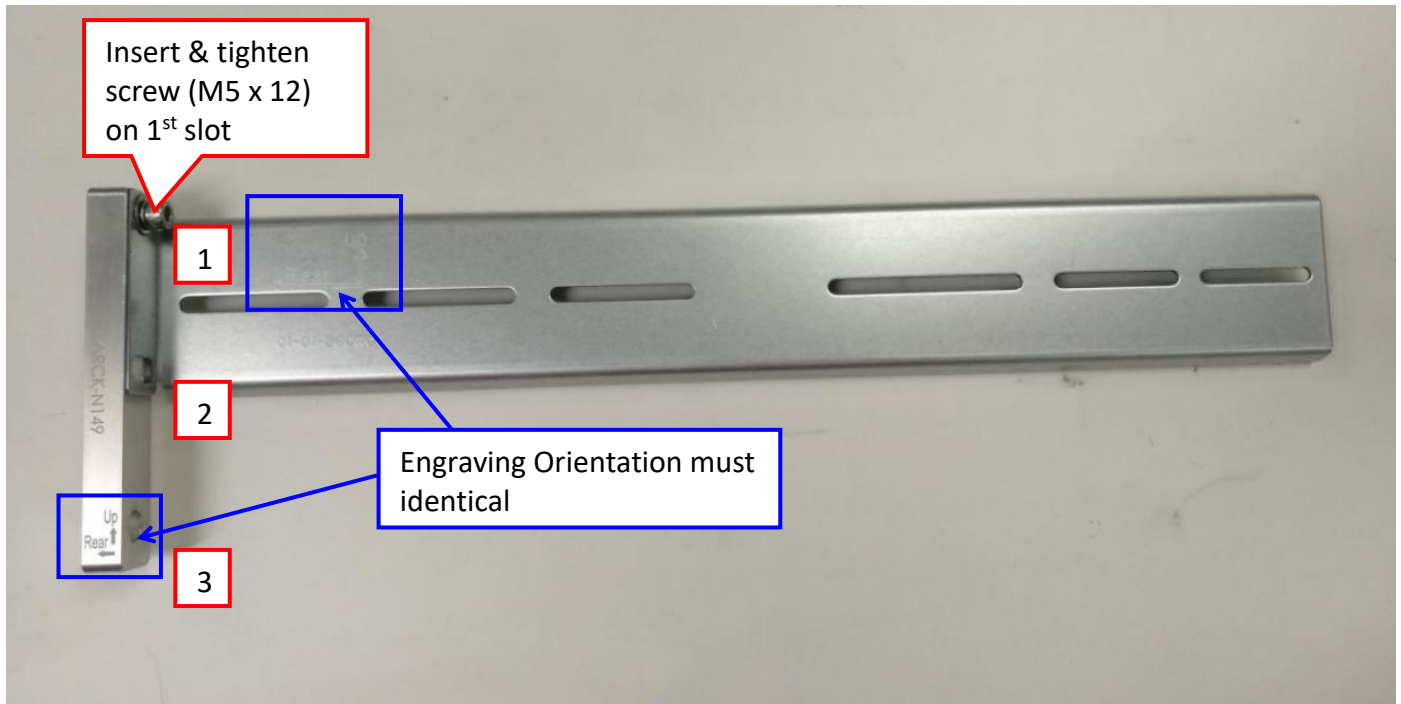


Figure 5 Right Slider Bracket Assembly

3. Assemble Right side (Rear) Adapter (P/N: 4XARCK-N149-02) to Right side (Rear) Server Bracket.

Remark: Insert & tighten screw (M5 x 25) together with flat & spring washer to 2nd and 3rd slot of Adapter (screw into both cage nuts respectively).

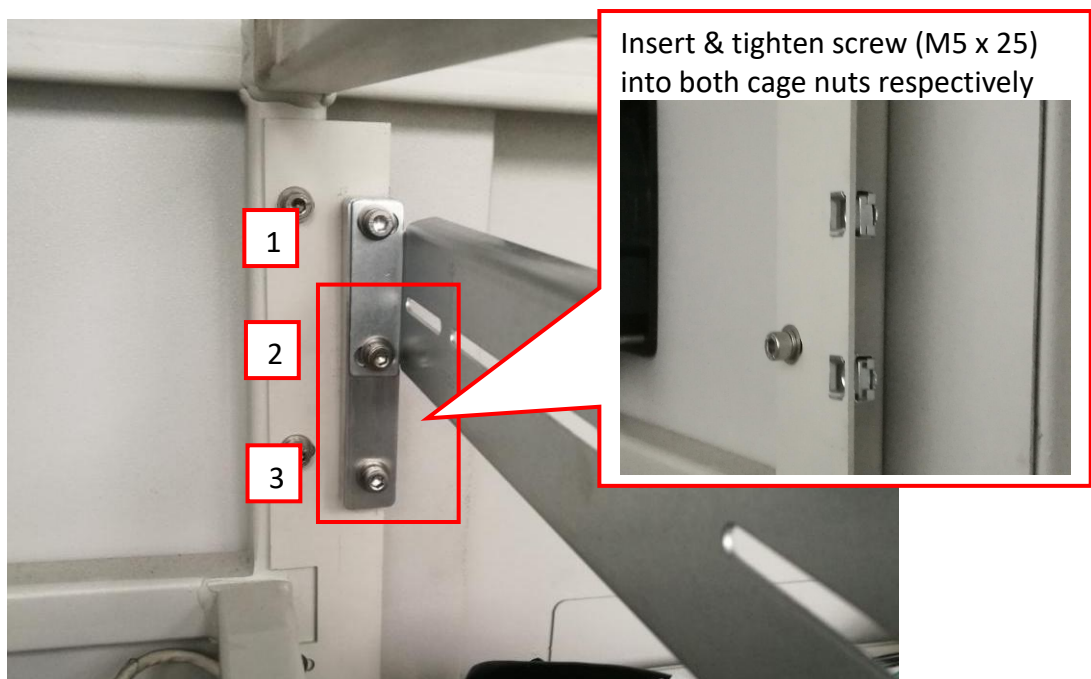


Figure 6 Right side (Rear) Adapter Assembly

	Work Instruction AXI V810 Series 2 Master Controller (2160-0058) Upgrade Procedure	Doc. Revision	00
		Effective Date	14 Aug 2018

4. Assemble Right Slider Bracket (short) to Right side (Front) Adapter (P/N: 4XARCK-N148-03).

Remark:

- i. Insert & tighten screw (M5 x 12) together with spring washer to 1st slot of Adapter.
- ii. Engraving Orientation must identical (Blue Colour highlight).

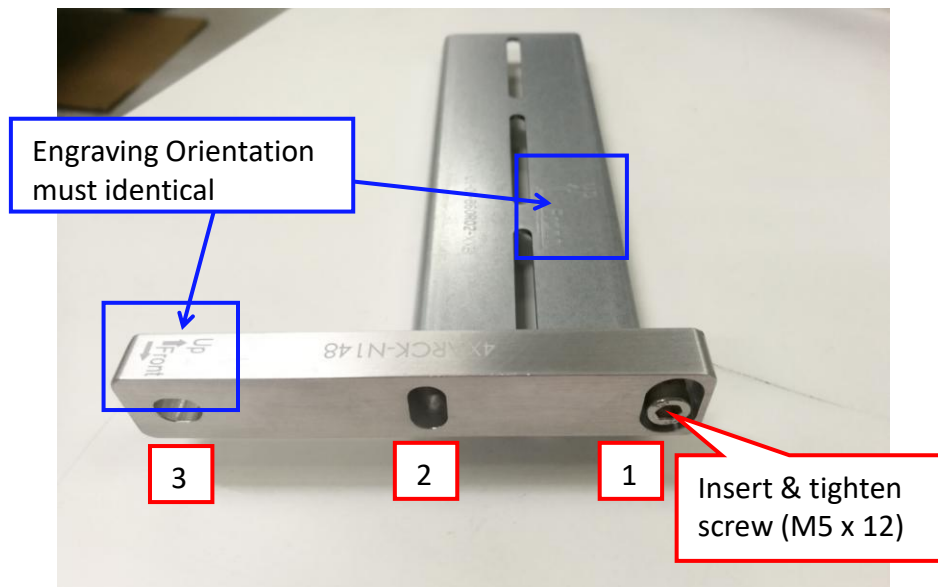


Figure 7 Right Slider Bracket Assembly

5. Assemble Right side (Front) Adapter (P/N: 4XARCK-N148-03) to Right side (Front) Server Bracket.

Remark:

- i. Insert & tighten screw (M5 x 25) together with flat & spring washer to 1st slot Front side Server Bracket.
- ii. Insert & tighten screw (M5 x 25) together with flat & spring washer to 2nd slot Front side Server Bracket (screw into Cage Nut).

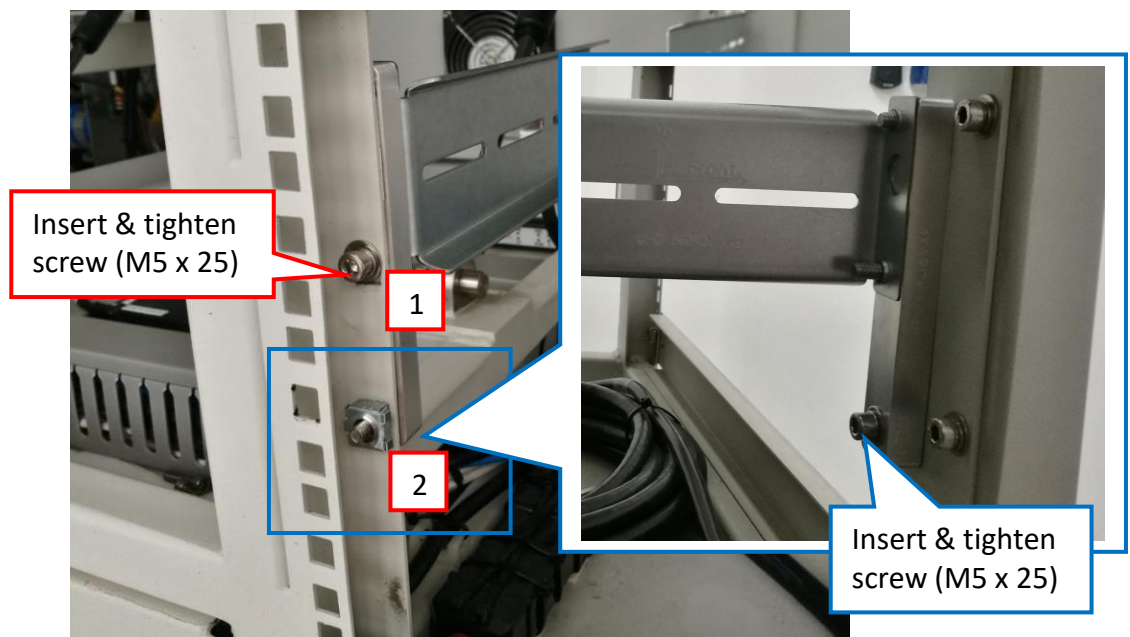


Figure 8 Right Slider Bracket Assembly

	Work Instruction AXI V810 Series 2 Master Controller (2160-0058) Upgrade Procedure	Doc. Revision Effective Date	00 14 Aug 2018
--	---	---	---------------------------------

6. Prepare & separate Right Slider Assembly Rail Kit into two portion as shown in Figure 9.
 - i. Inner Slider Rail (thin) will assemble on Series 2 Master Controller.
 - ii. Outer Slider Rail (wide) will assemble on Slider Bracket.

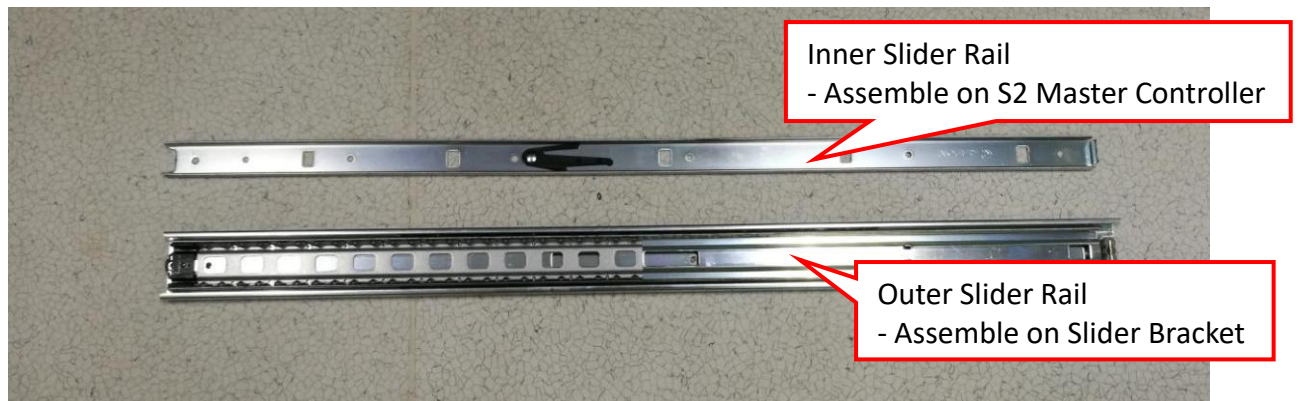


Figure 9 Slider Rail

7. Assemble Right Outer Slider Rail to Right Slider Bracket. Tighten all Philip head screws.



Figure 10 Right Outer Slider Rail Assembly

	Work Instruction AXI V810 Series 2 Master Controller (2160-0058) Upgrade Procedure	Doc. Revision	00
		Effective Date	14 Aug 2018

8. Repeat Step 2 until Step 7 to assemble Left Outer Slider Rail.

Remark:

- i. Use Left side (Rear) Adapter (P/N: 4XARCK-N151-02) on Left side (Rear) Slider Kit.
- ii. Use Left side (Front) Adapter (P/N: 4XARCK-N150-03) on Left side (Front) Slider Kit.

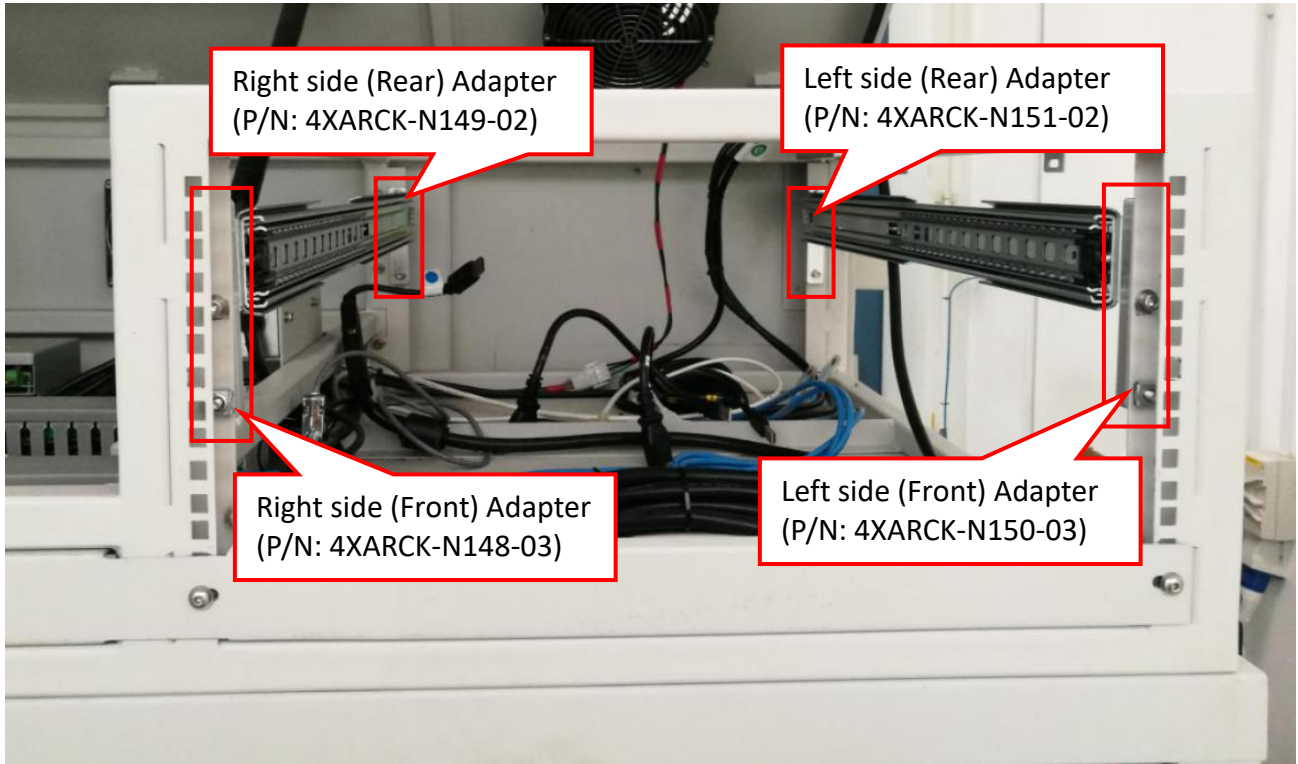


Figure 11 Left & Right Outer Slider Rail

	Work Instruction AXI V810 Series 2 Master Controller (2160-0058) Upgrade Procedure	Doc. Revision Effective Date	00 14 Aug 2018
--	---	---	---------------------------------

Slider Assembly Rail Kit Alignment

1. Loosen all Philip head screws on Left Outer Slider Rail.

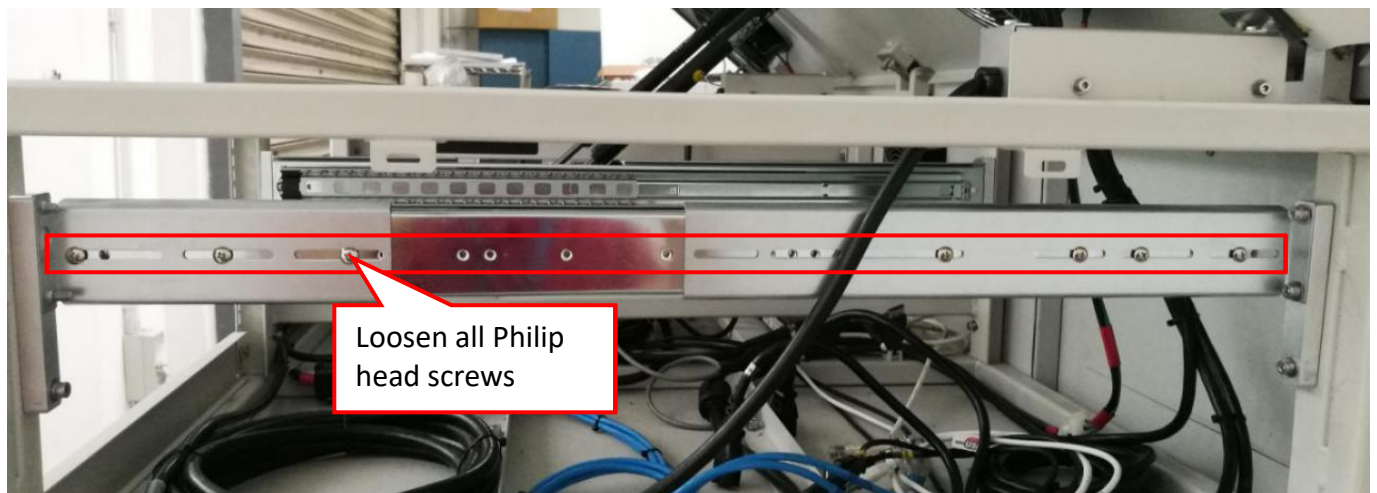


Figure 12 Left Outer Slider Rail

2. Gently lift Left Outer Slider Rail upwards. Tighten all Philip head screws.

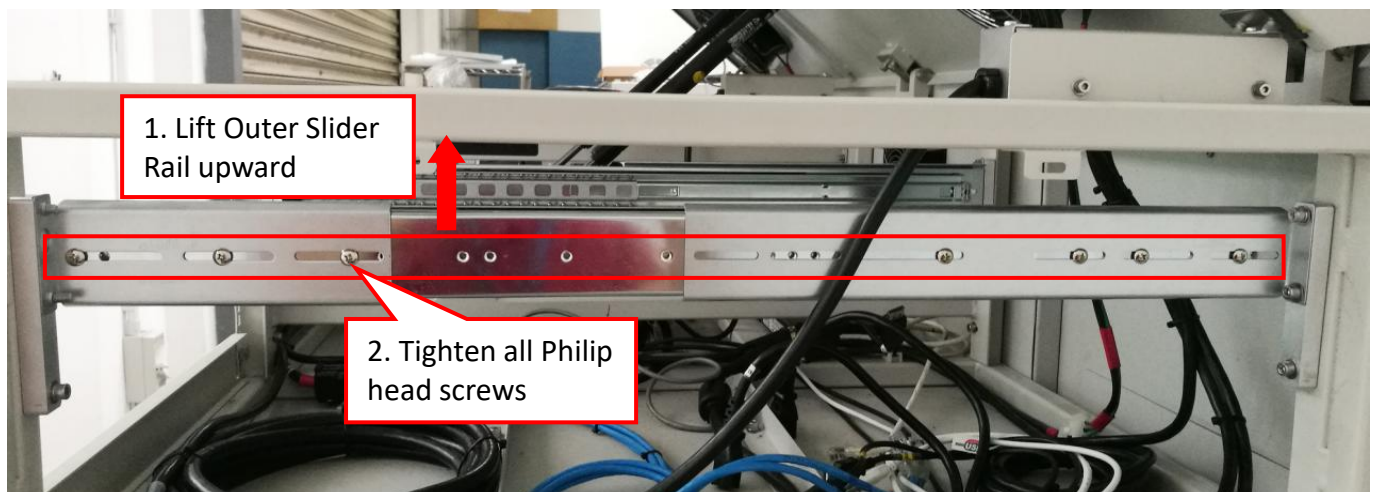


Figure 13 Left Outer Slider Rail Adjustment

3. Loosen 2x screws on Rear & Front Slider Bracket respectively.

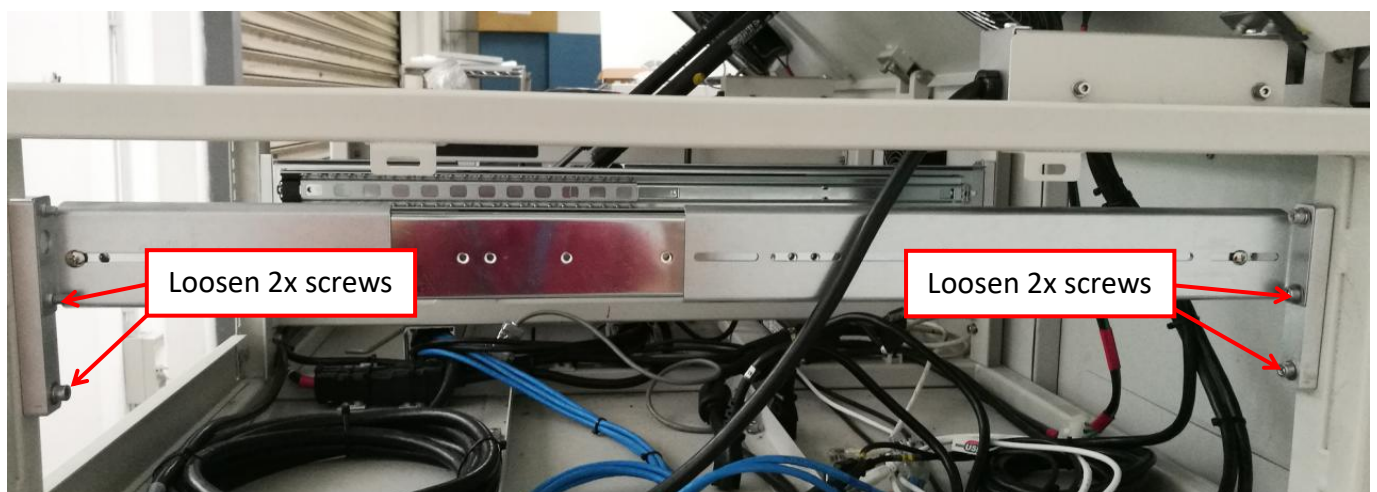


Figure 14 Slider Bracket Screw Removal

	Work Instruction AXI V810 Series 2 Master Controller (2160-0058) Upgrade Procedure	Doc. Revision Effective Date	00 14 Aug 2018
--	---	---	---------------------------------

4. Push Rear & Front Adapter outwards respectively.

Remark: The Adapter must parallel to Server Bracket.

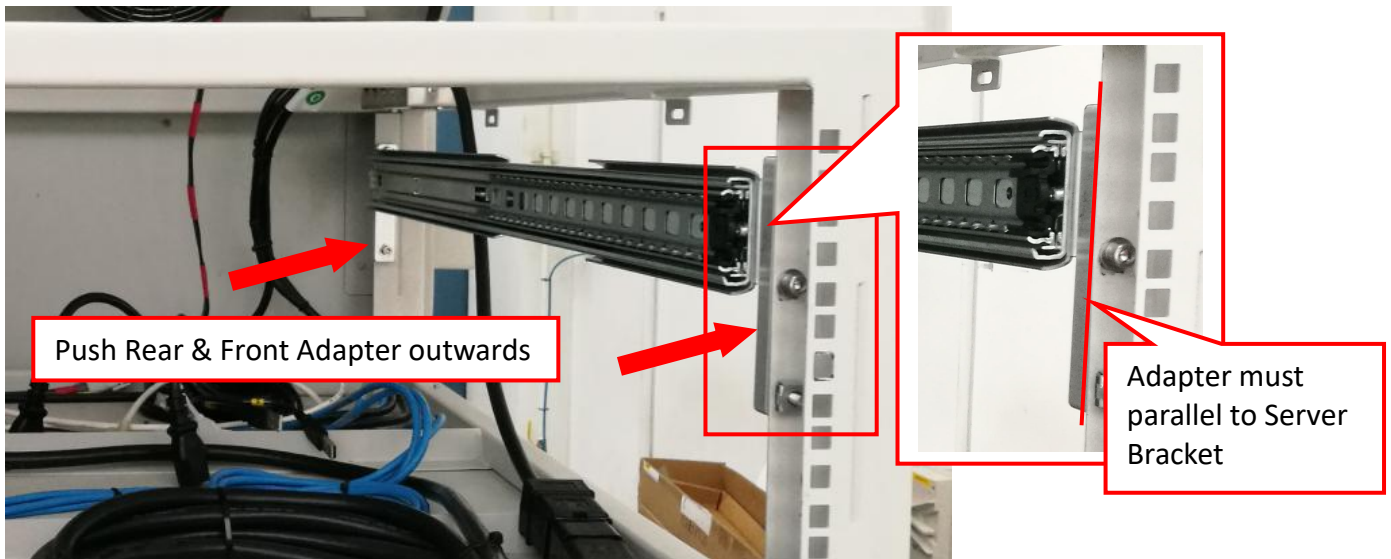


Figure 15 Slider Bracket Adjustment

5. Gently lift Slider Bracket upwards. Tighten 2x screws on Rear & Front Slider Bracket respectively.

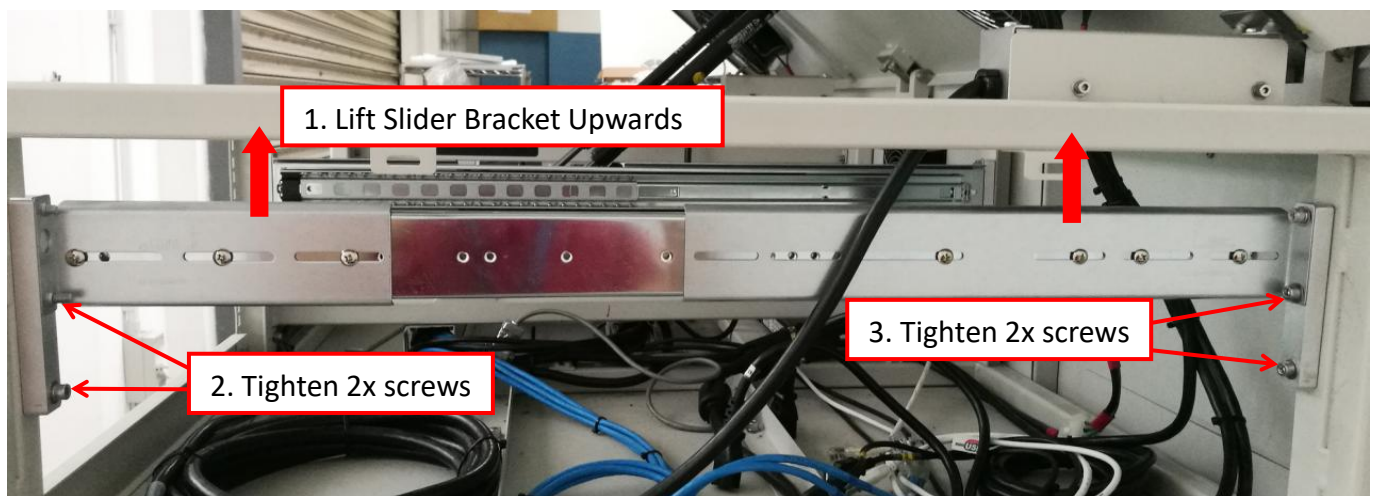


Figure 16 Slider Bracket Adjustment

6. Repeat Step 1 until Step 5 for Right Outer Slider Rail & Right Slider Bracket adjustment.
7. Loosen 2x screws on server rack.



Figure 17 Server Rack Cover

	Work Instruction AXI V810 Series 2 Master Controller (2160-0058) Upgrade Procedure	Doc. Revision 00	Effective Date 14 Aug 2018

8. Gently press server rack cover downwards & tighten 2x screws.

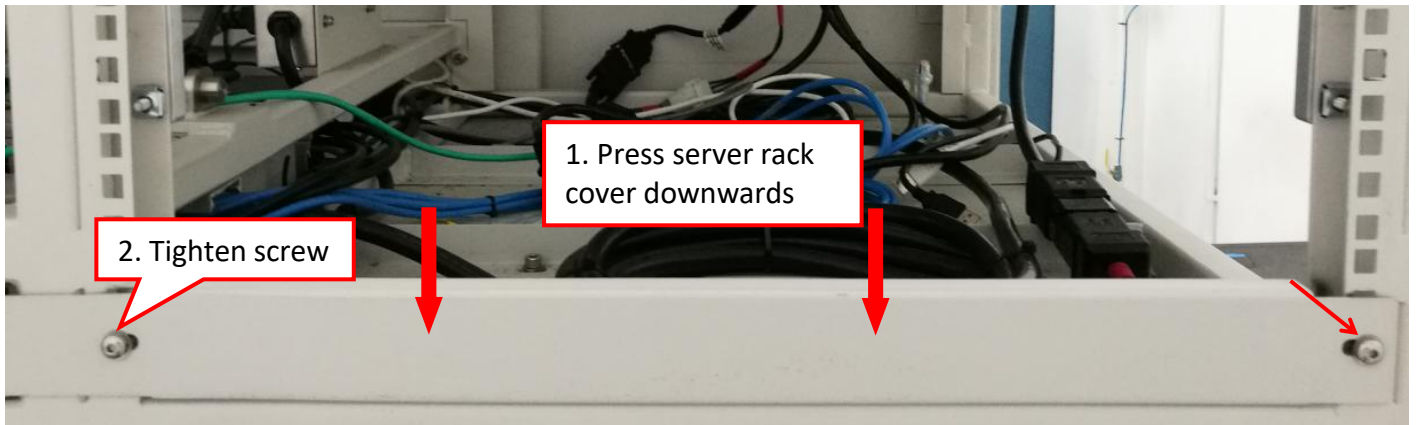


Figure 18 Server Rack Cover Adjustment

Series 2 Server Installation

1. Assemble Inner Slider Rail on Left & Right side Series 2 Server (P/N: 2160-0058) respectively.

Remark: Ensure extruded slot is mount at Front side.



Figure 19 Inner Slider Rail Assembly

	Work Instruction AXI V810 Series 2 Master Controller (2160-0058) Upgrade Procedure	Doc. Revision Effective Date	00 14 Aug 2018
--	---	---	---------------------------------

2. Tighten all Philips head screws on Inner Slider Rail.



Figure 20 Inner Slider Rail Assembly

3. Assemble Series 2 Server holder on Left & Right side Series 2 Master Controller respectively. Tighten 2x Philip head screw.

Remarks : May retrieve 2 x Server Holder from Slide Assembly

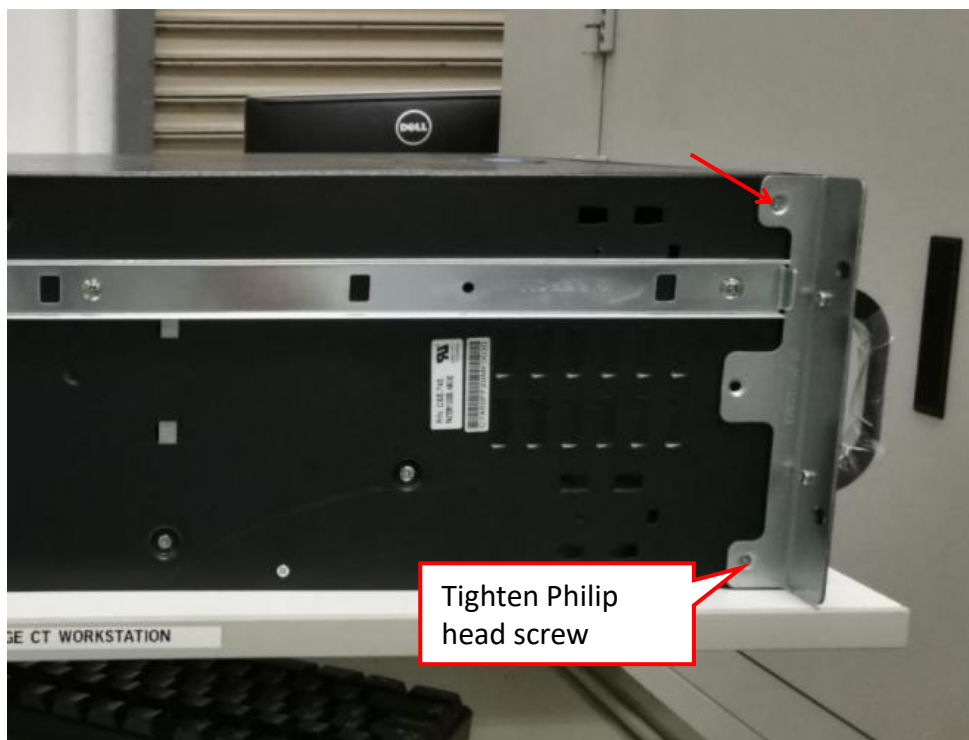


Figure 21 S2 Master Controller Holder Assembly

	Work Instruction AXI V810 Series 2 Master Controller (2160-0058) Upgrade Procedure	Doc. Revision	00
		Effective Date	14 Aug 2018

4. Gently slide Series 2 Master Controller into server rack.

Remark:

- i. Minor gap between bottom server chassis & server rack cover is required. Perform “Slider Assembly Rail Kit Alignment” if friction persist.
- ii. At least 2 x Man Powers are required upon Master Controller removal.



Figure 22 Series 2 Server

5. Plug back all cables to Series 2 Master Controller by refer below figure.

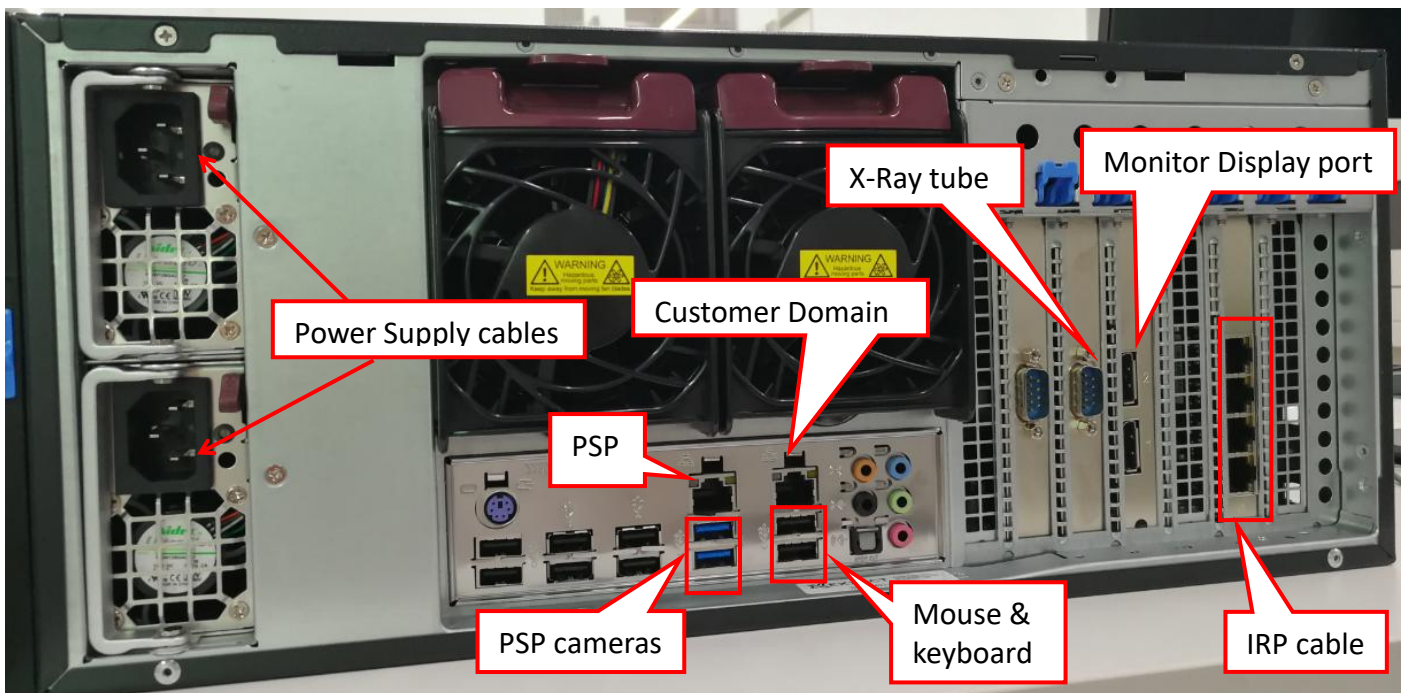


Figure 23 Series 2 Master Controller

	Work Instruction		Doc. Revision	00
	AXI V810 Series 2 Master Controller (2160-0058) Upgrade Procedure		Effective Date	14 Aug 2018

6. Gently slide Series 2 Master Controller into server rack.
7. Power on PDU > Switch on Trigger Board > Turn on SSCA power.
8. Power on Atom PC & Series 2 Master Controller.
9. Open V810 > Run CD&A.