

	Guideline	Page No.	1 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

1.0 PURPOSE

- 1.1 This document describes the general definitions, requirements and procedure to configure and setup Keyence SR-710 at V810 AXI system.

2.0 SCOPE

- 2.1 This document covers the setup steps of Keyence SR-710 Setup guide for two communication types Serial Port and Ethernet Communication type at V810 AXI machine.

3.0 ROLES & RESPONSIBILITIES

ID	Roles	Responsibilities
3.1	Document Originator	Responsible to review and update this guideline from time to time.
		All the changes on this guideline must be reviewed and approved as per the procedure stated in Document Control Procedure.
		Responsible to review and acknowledge the changes to this guideline from time to time.
3.2	Production Engineer	Ensure the WI is up-to-date and follow the instruction accordingly.

	Guideline	Page No.	2 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

4.0 **TABLE OF CONTENT**

ID	Title	Page
5.1	Prerequisites	3
5.2	Communication Type	5
5.2.1	Serial Port Communication	5
5.2.2	Ethernet Communication	6
5.3	Serial Port Communication Setup	7
5.3.1	Install Setup Tool – AutoID Network Navigator	7
5.3.2	Install Virtual COM Driver	10
5.3.3	Verify Port Settings	14
5.3.4	Configuring SR-710 with AutoID Network Navigator	16
5.3.5	Verify Communication	25
5.3.6	V810 Barcode Reader Setup	28
5.4	Ethernet Communication Setup	33
5.4.1	Install Setup Tool – AutoID Network Navigator	33
5.4.2	Configuring SR-710 with AutoID Network Navigator	36
5.4.3	Configuring N-L20 with AutoID Network Navigator	45
5.4.4	Verify Communication	52
5.4.5	V810 Barcode Reader Setup	55

	Guideline	Page No.	3 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

5.0 **PROCESS STEPS**

5.1 **Prerequisites**

Before setting up Keyence SR710, you will need the following items:

For Serial Port Communication type,

i. Virtual COM (USB)

- AutoID Network Navigator (Setup Tool)
- OP-84114 driver
- OP-80616 (Conversion cable)



- OP-84114 (USB-Serial cable)



ii. RS-232 (Direct COM)

- AutoID Network Navigator (Setup Tool)
- N-R2 (Network Controller)



For Ethernet Communication type,

	Guideline	Page No.	4 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

- AutoID Network Navigator (Setup Tool)
- N-L20 (Network Controller)



- OP51580 (Configuration USB for N-L20)



	Guideline	Page No.	5 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

5.2 Communication Type


There are two types of communication for Keyence SR710.




5.2.1 Serial Port Communication

There are two types of Serial Port Communication for Keyence SR710.

i. Virtual COM (USB)

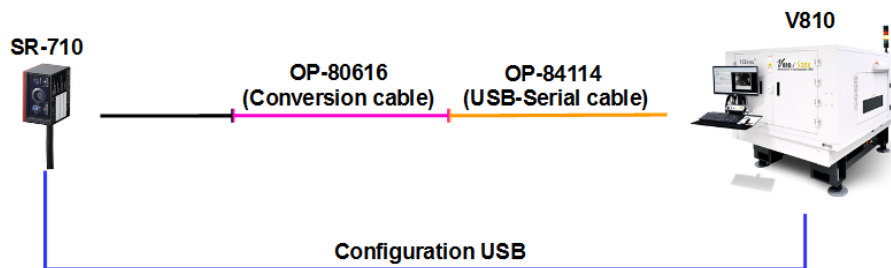

ii. RS-232 (Direct COM)

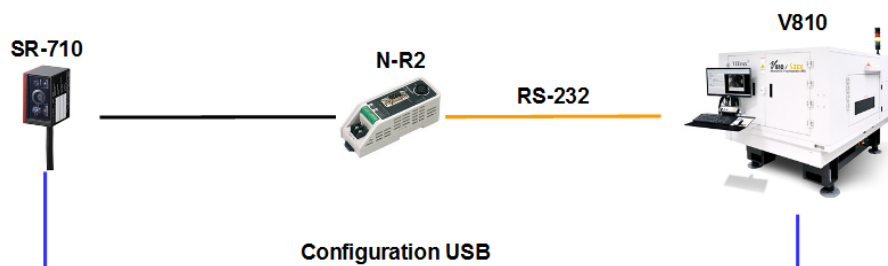


5.2.2 Ethernet Communication


	Guideline	Page No.	6 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

Ethernet communication able to support multiple barcode readers. (Configuration USB should be removed after configuration completed).

i. Single barcode reader

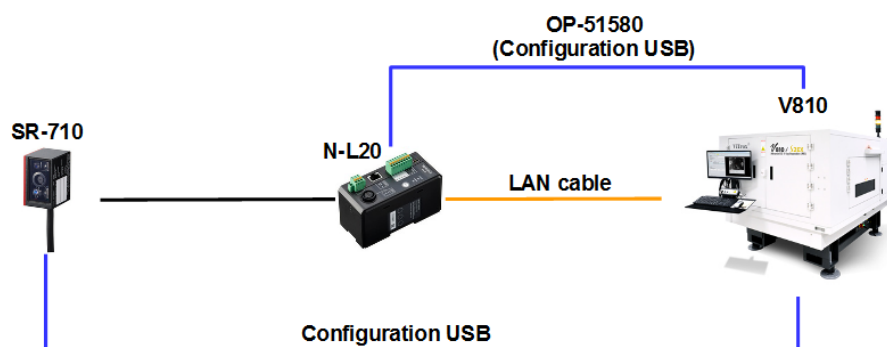

ii. Multiple barcode readers

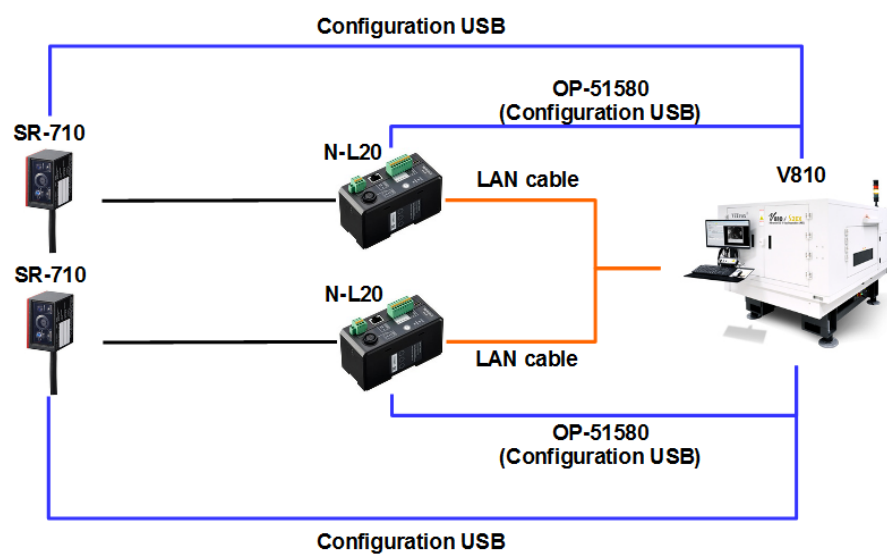


	Guideline	Page No.	7 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	


5.3 Serial Port Communication Setup

5.3.1 Install Setup Tool – AutoID Network Navigator

1. Open folder **AutoID Network Navigator**, then execute **setupAI.exe**.

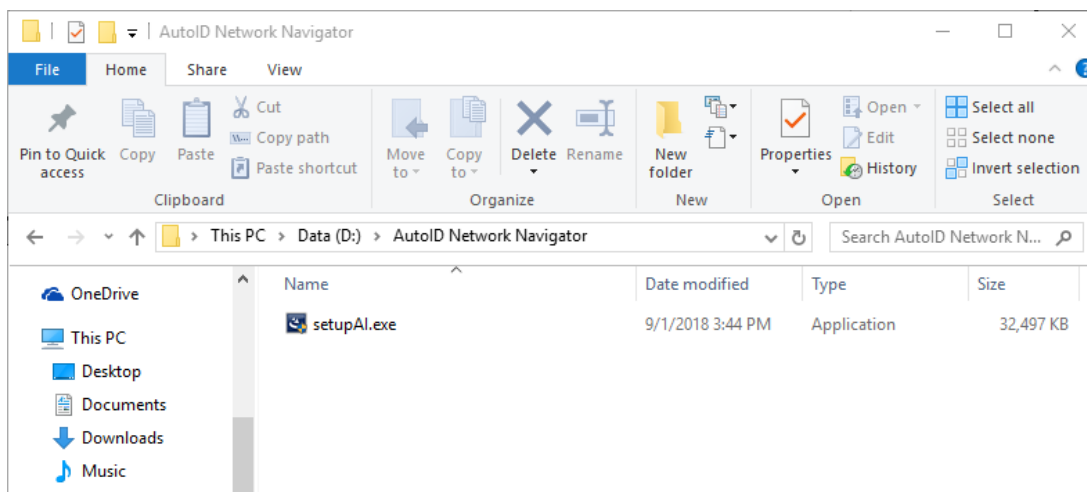


2. Click **Next**.




	Guideline	Page No.	8 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

3. Remain **Destination Folder** as default. Click **Next**.




4. Click **Install**.



	Guideline	Page No.	9 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	


5. Click **Finish** after installation completed.




	Guideline	Page No.	10 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

5.3.2 Install Virtual COM Driver

1. Open **OP-84114** folder, then open **Win7** folder.

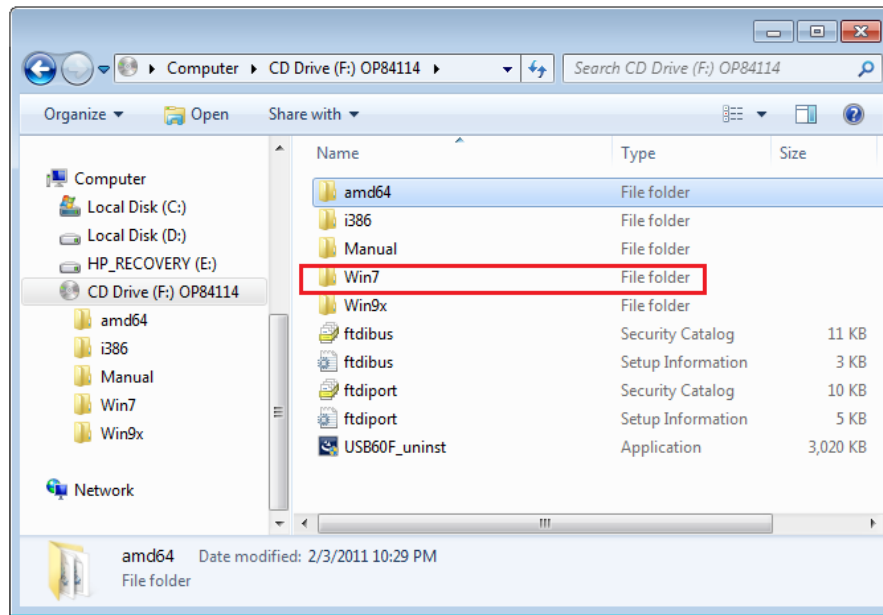


2. Execute **USBFPW_Setup**.

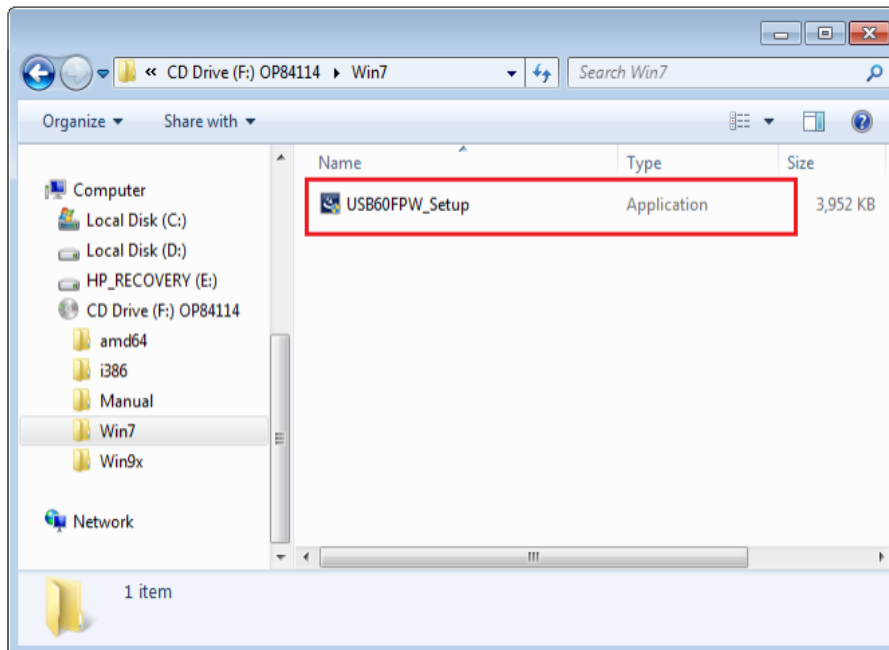


	Guideline	Page No.	11 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

3. Click **Next**.

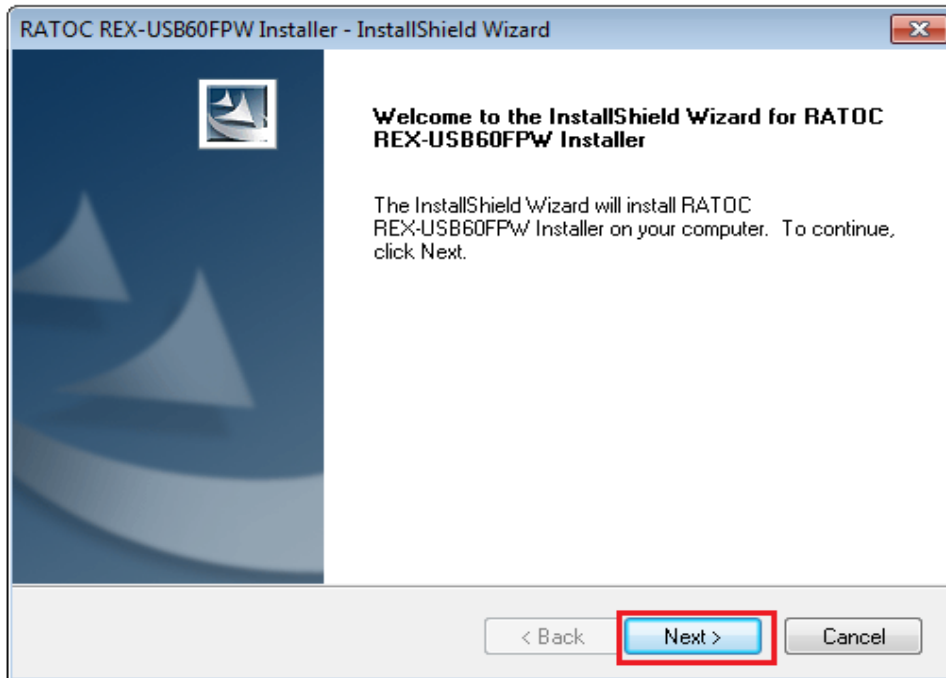


4. Click **Install**.

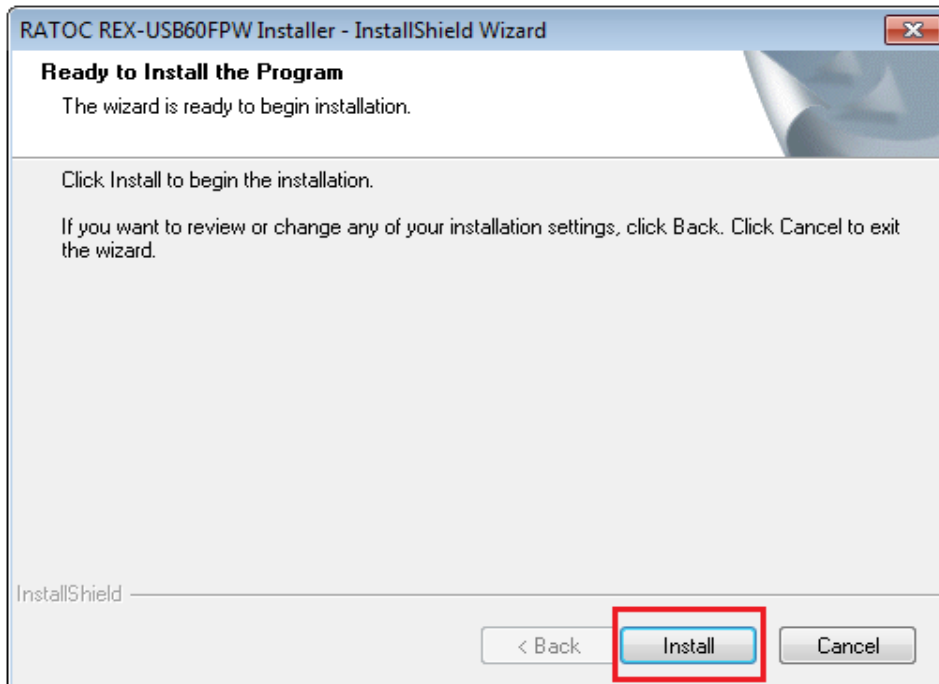


	Guideline	Page No.	12 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

5. Tick **"Always trust software from "RATOC Systems, Inc."**, then click **Install**.

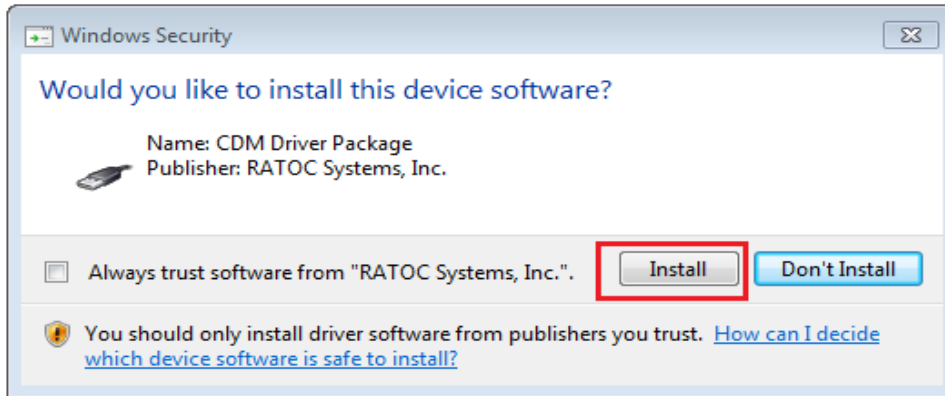


6. Click **Finish**.

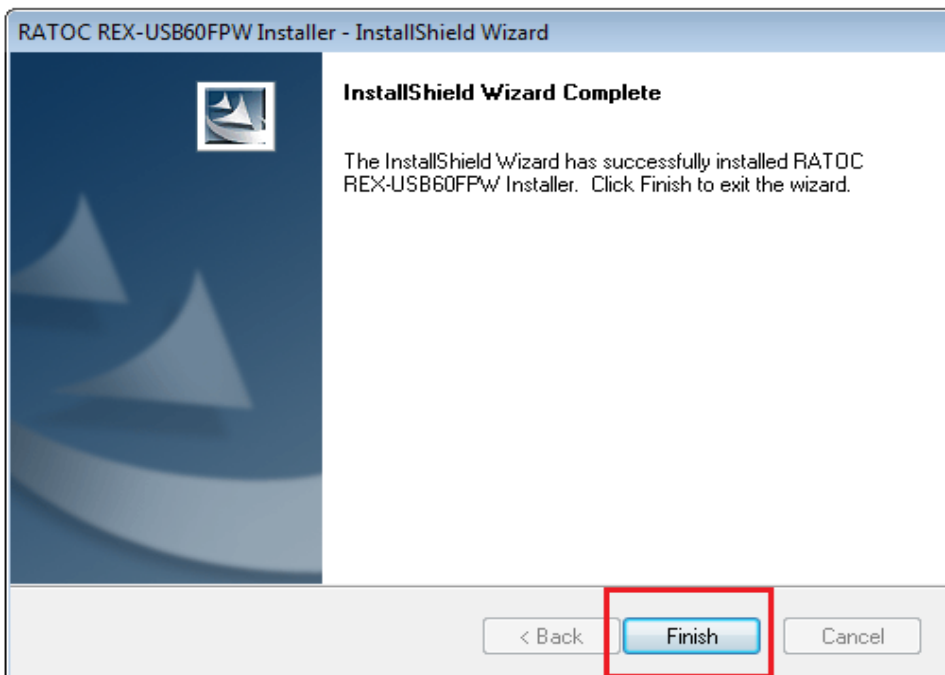


	Guideline	Page No.	13 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

7. Connect Keyence SR-710 to V810 machine.
8. Go to **Control Panel** → **Devices and Printers** → **Device Manager** to check the Port number.

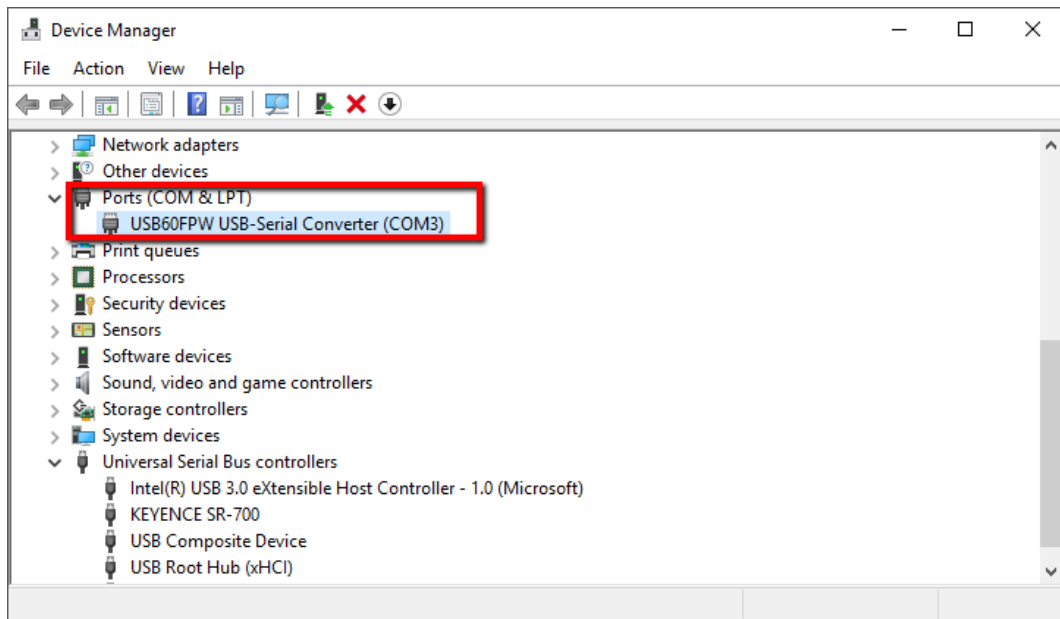

9. If COM Port still appear as "?", right-click at the "?". Manually browse to "**C:\Program Files(86)\RATOC**" for driver software. Select **Include subfolders** then click **Next** to continue.

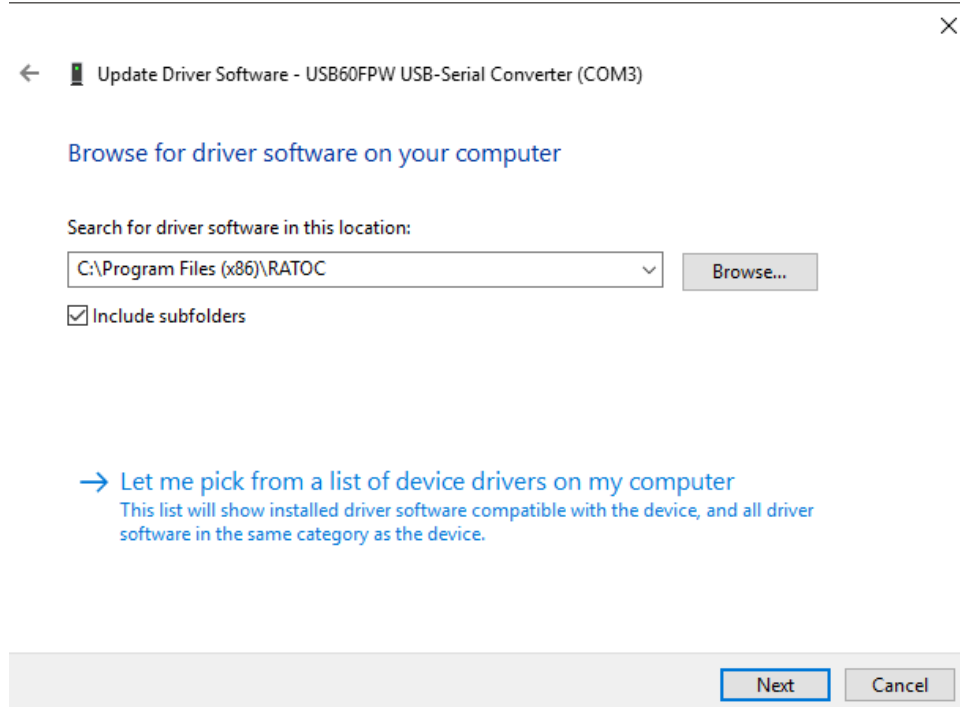


	Guideline	Page No.	14 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

5.3.3 Verify Port Settings

Go to **Control Panel** → **Devices and Printers** → **Device Manager** → **Ports (COM & LPT)**.

For **Virtual COM**, look for **USB-Serial Converter** for Port Settings.


Recommended settings are Baud Rate **9600bps**, Data Bits **8bit**, Parity **None**, Stop Bit **1bit** and Flow control **None**.

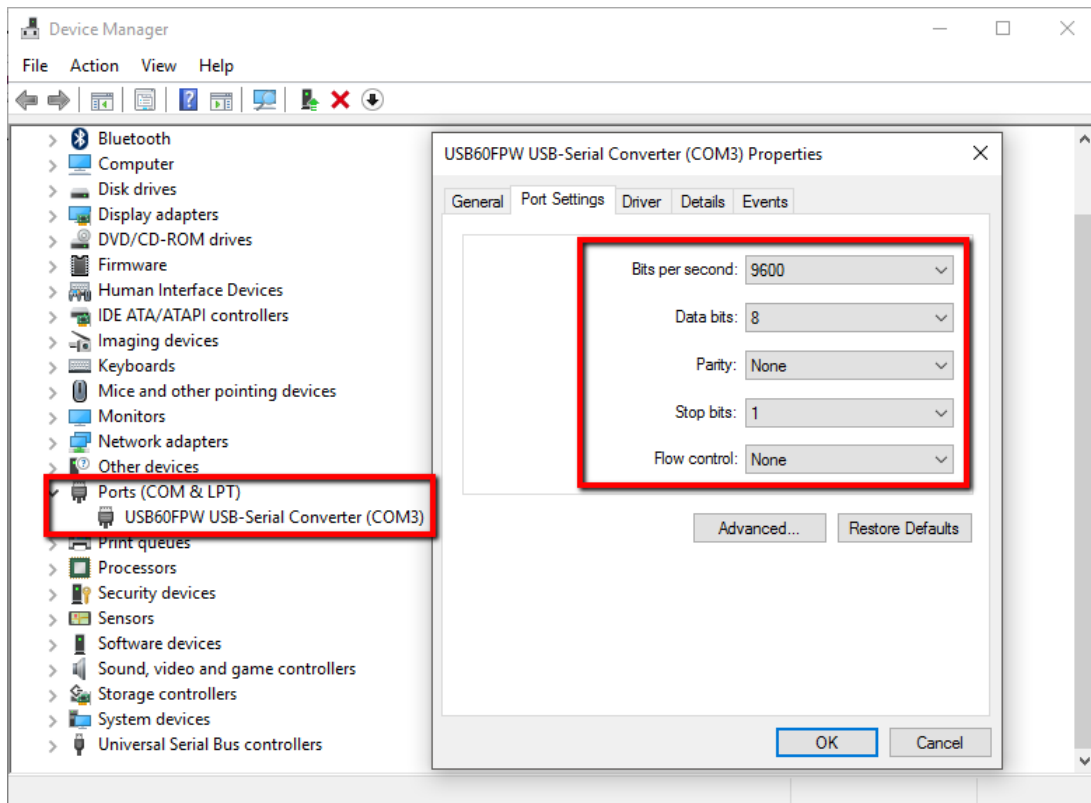

	Guideline	Page No.	15 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

For **RS-232**, look for **Communication Port COM 1**(Default COM for barcode reader at V810) for Port Settings.

Recommended settings are Baud Rate **9600bps**, Data Bits **8bit**, Parity **None**, Stop Bit **1bit** and Flow control **None**.

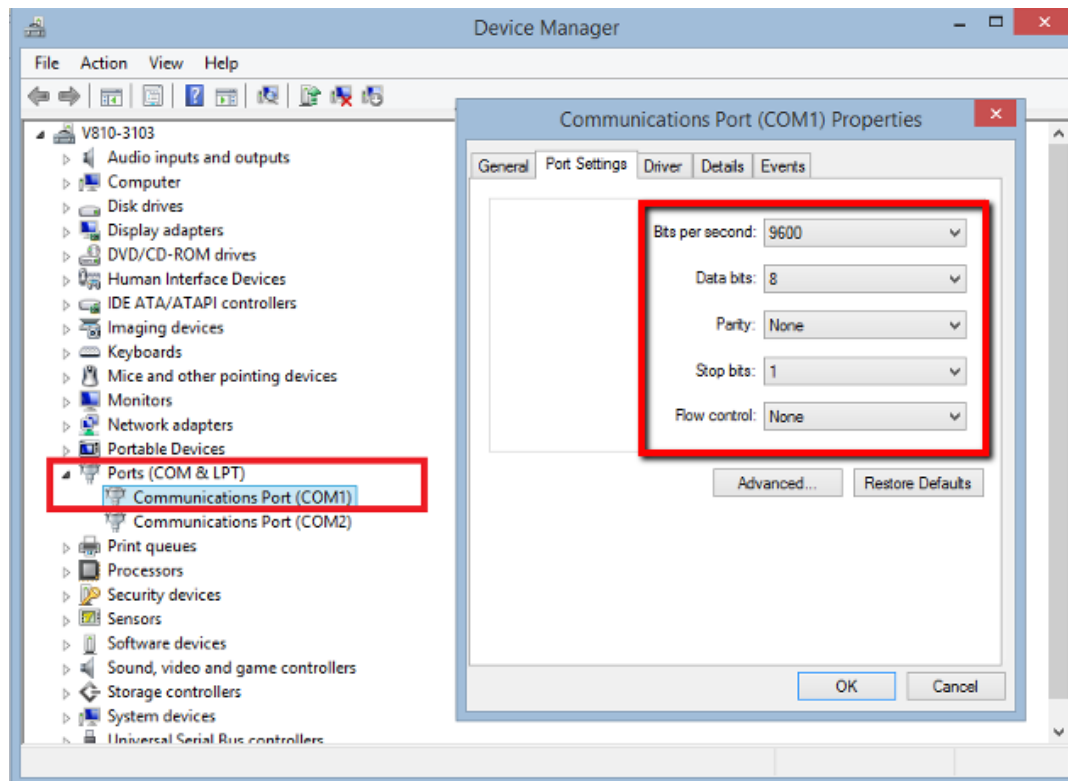


	Guideline	Page No.	16 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

5.3.4 Configuring SR-710 with AutoID Network Navigator


1. Connect configuration USB from SR-710 to V810.
2. Double click shortcut at Desktop to launch **AutoID Network Navigator**.



3. Go to **File** then click **Open**.

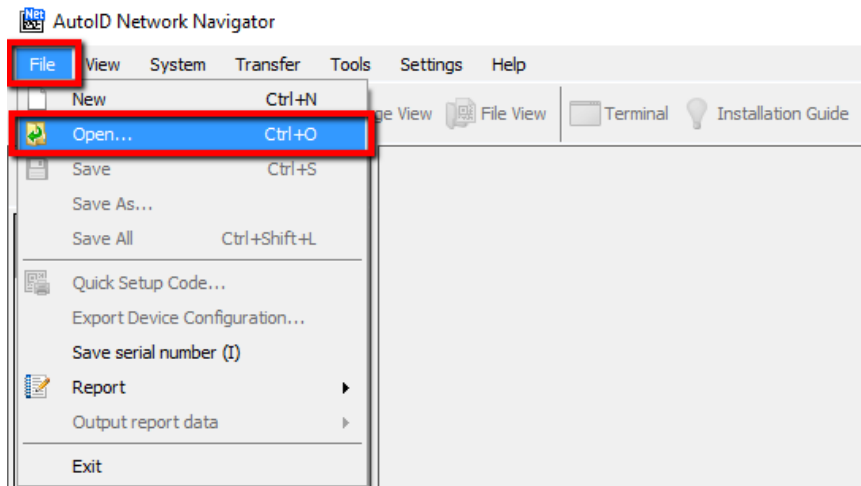

4. Look for **Keyence-SR710.ptc** file and click Open.

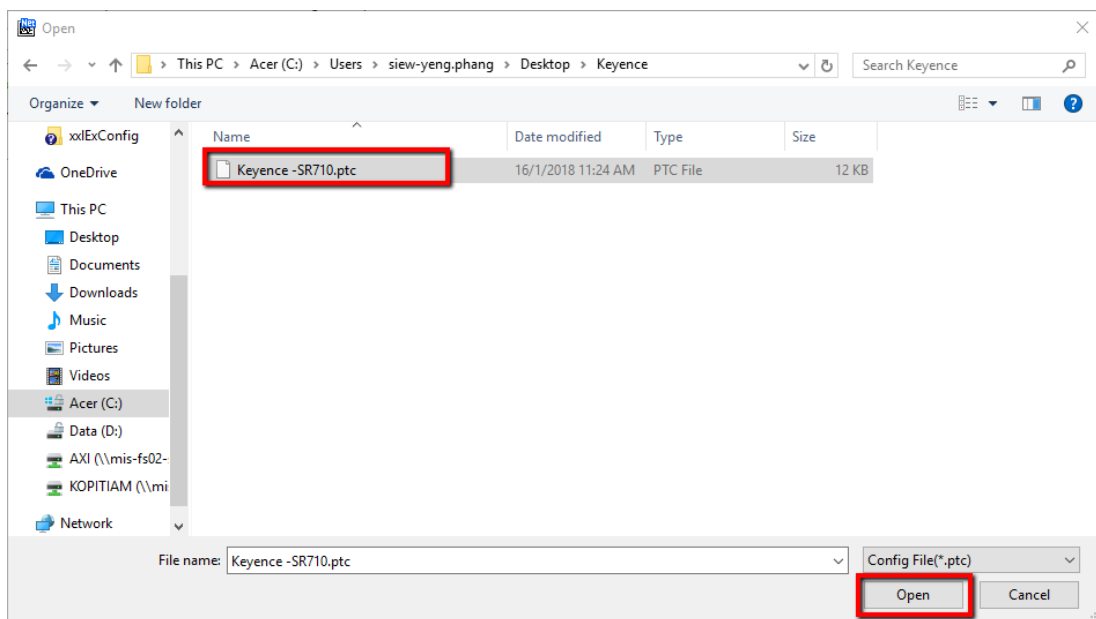


	Guideline	Page No.	17 of 60
		Doc. No.	
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. Revision	
		Effective Date	

5. Click to connect to reader SR-710 if it is not connected.

(If **Keyence-SR710.ptc** is loaded at **Step 4**, you may skip **Steps 6-9** and continue with **Step 10** to tune SR710).




6. Click **Retrieve configuration** to get current settings from reader.

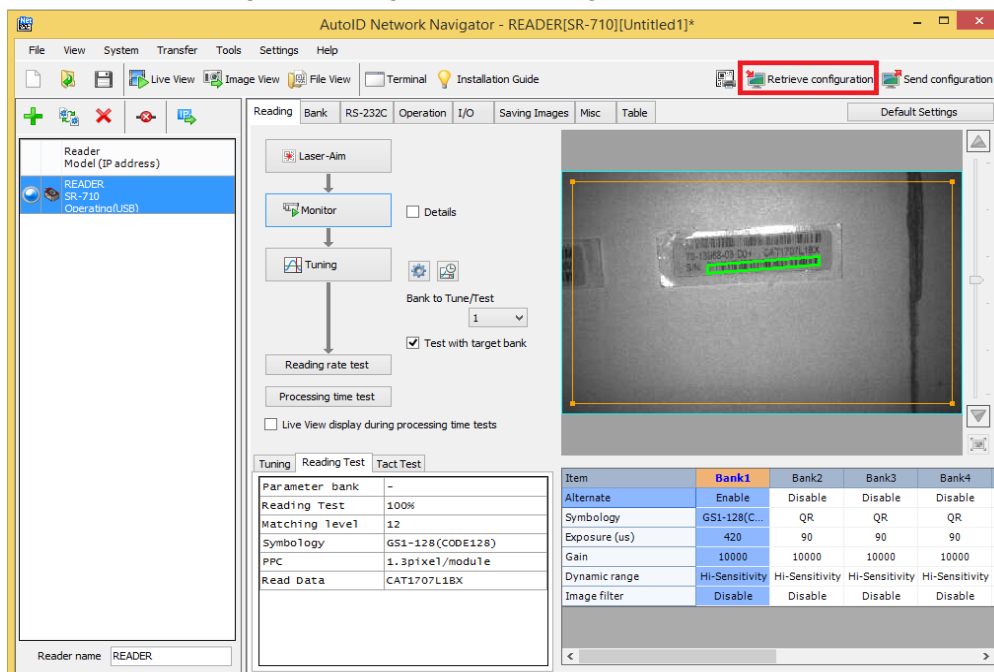


7. Switch to **RS-232C** tab. Make sure communication settings are tally with **Device Manager Port** settings. (Recommended Settings: Baud Rate **9600bps**, Data Bits **8bit**, Parity **None** and Stop Bit **1bit**).

	Guideline	Page No.	18 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

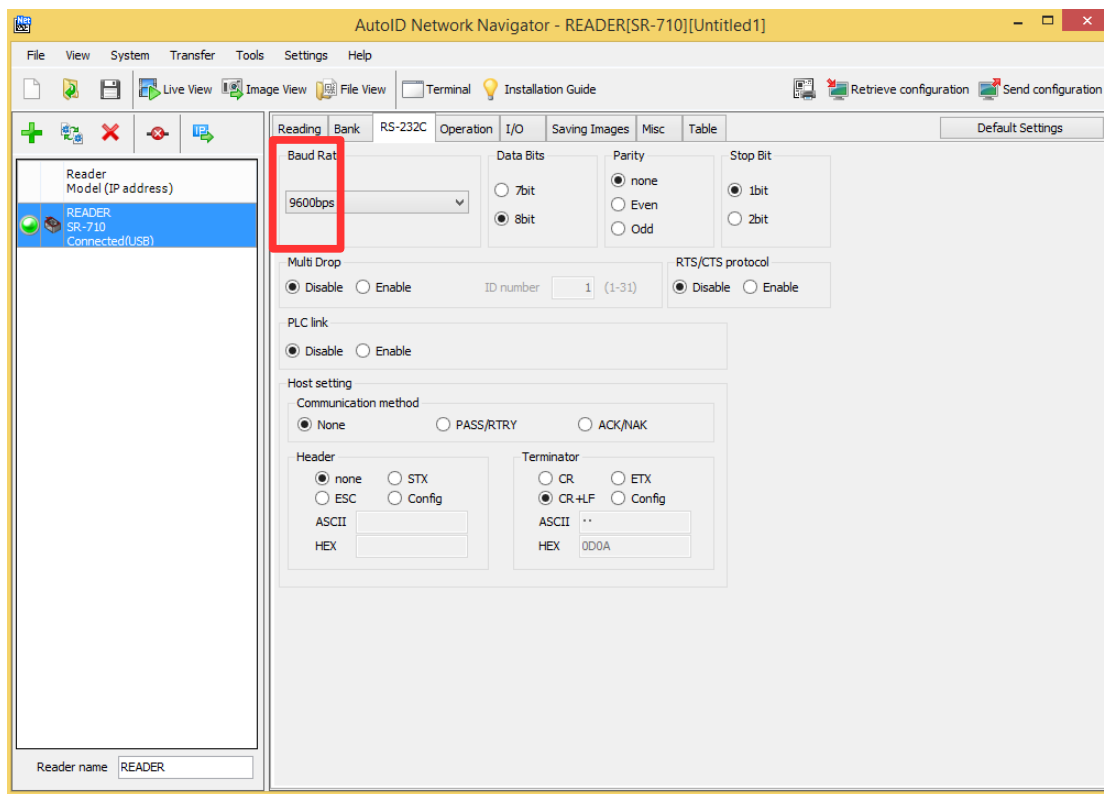

	Guideline	Page No.	19 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

8. Set Header to “none” and Terminator to “CR+LF”.

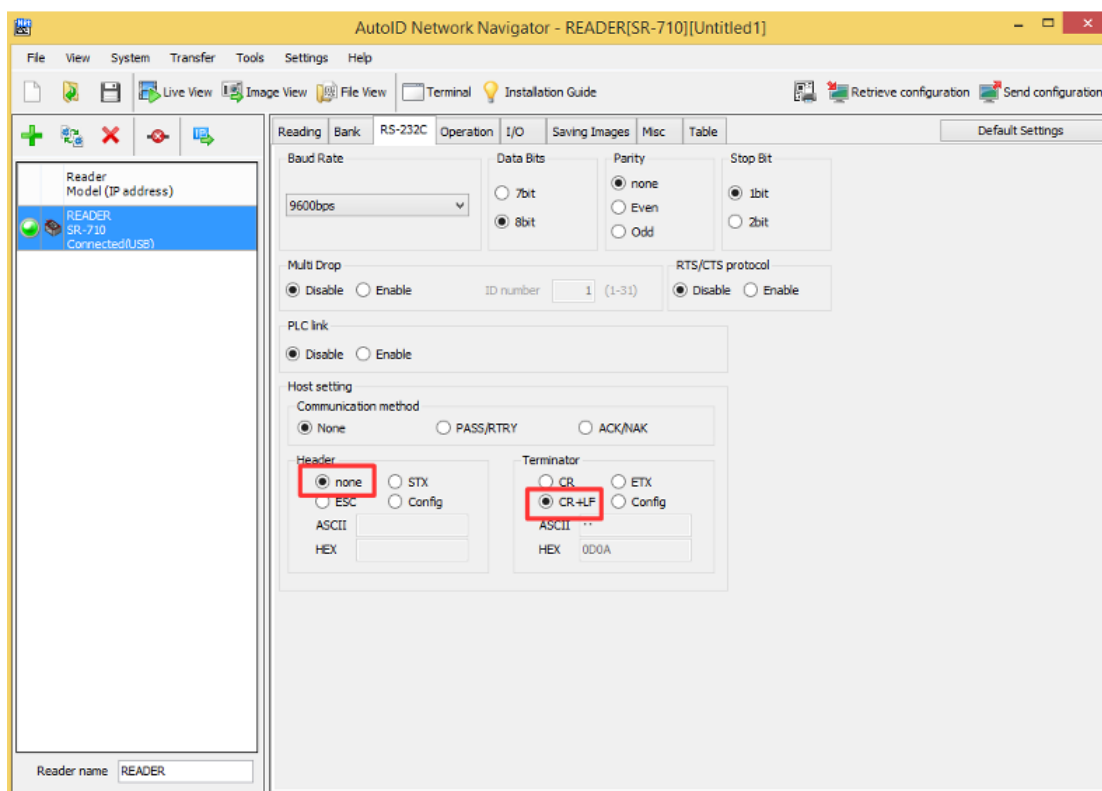


NOTE:

AutoID Network Navigator	V810
Header	Preamble
Terminator	Postamble

	Guideline	Page No.	20 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

9. Switch to Operation tab. Configure the settings accordingly.

Reading Mode: **Single**
Data Transmission: **Send after read**
Timing Mode: **One-shot trigger**
Duration: **200 (x10ms)**
Timing on Command ASCII: **LON (default)**
Read Error String ASCII: **NOREAD**

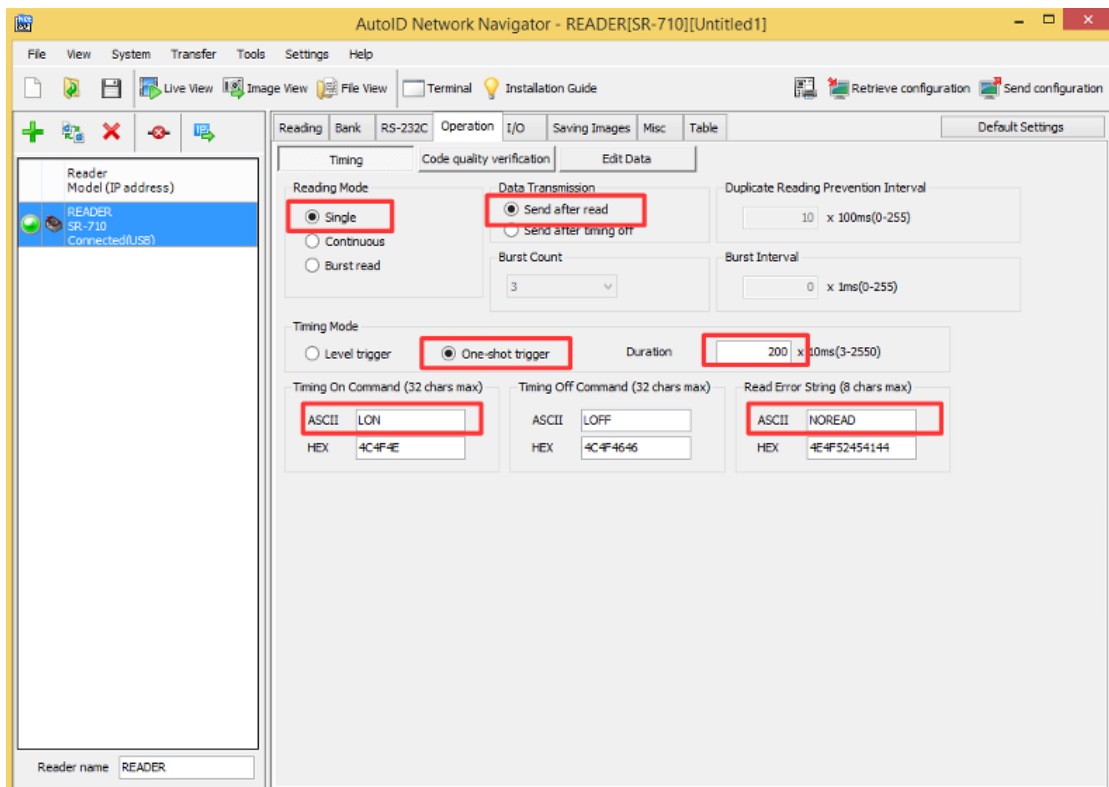

NOTE:

AutoID Network Navigator	V810
Timing on Command	Trigger Code
Timing off Command	Stop Code

	Guideline	Page No.	21 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

10. Switch to Reading tab and follow the 3 simple steps for SR-710 tuning to read barcode.

Step 1 – Laser-Aim


Align to the center of the code with the red laser pointer from reader.

Step 2 – Monitor(Live View)

Adjust the code position and tilt reader at a suitable angle. Once barcode read successfully, click Monitor button again to end.

Step 3 - Tuning


Auto Tune the most appropriate scan condition. Settings will set into targeted bank.

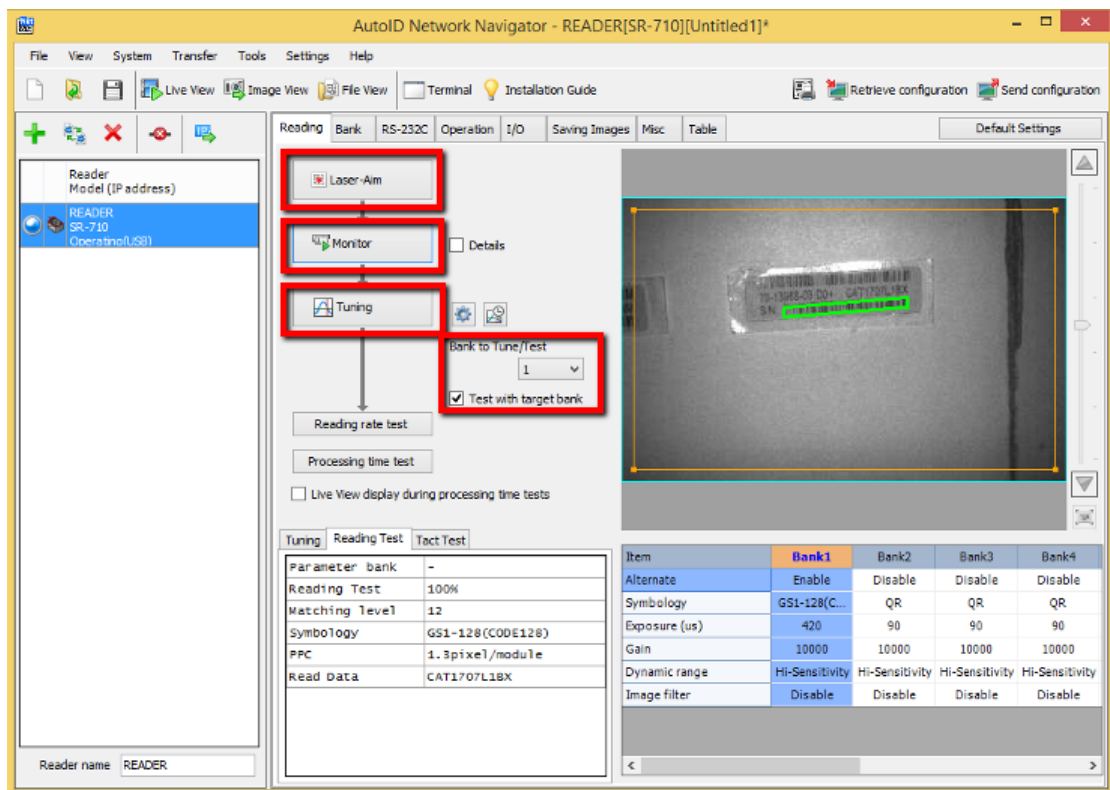

	Guideline	Page No.	22 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	


11. Click **Reading rate test** to perform reading test to confirm reading stability.

NOTE Reading Test Result – Reading Percentage higher, reading more stable.

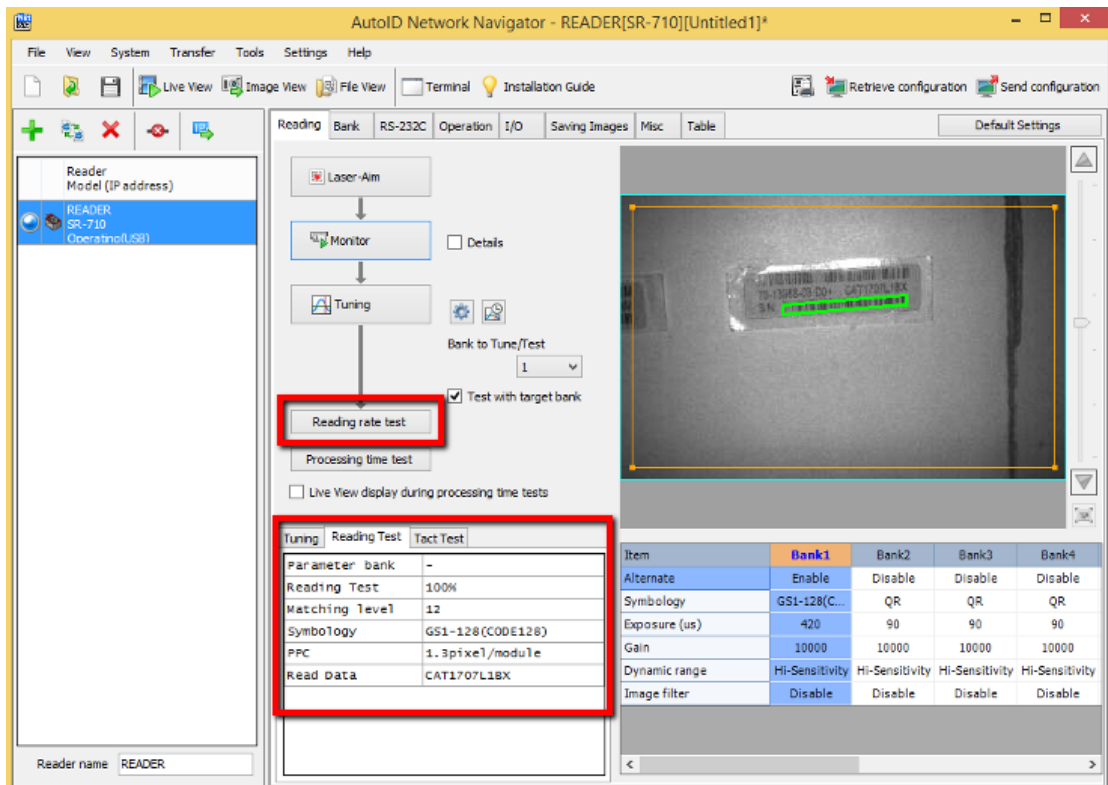

	Guideline	Page No.	23 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	


12. Click **Send Configuration** to save settings into reader.

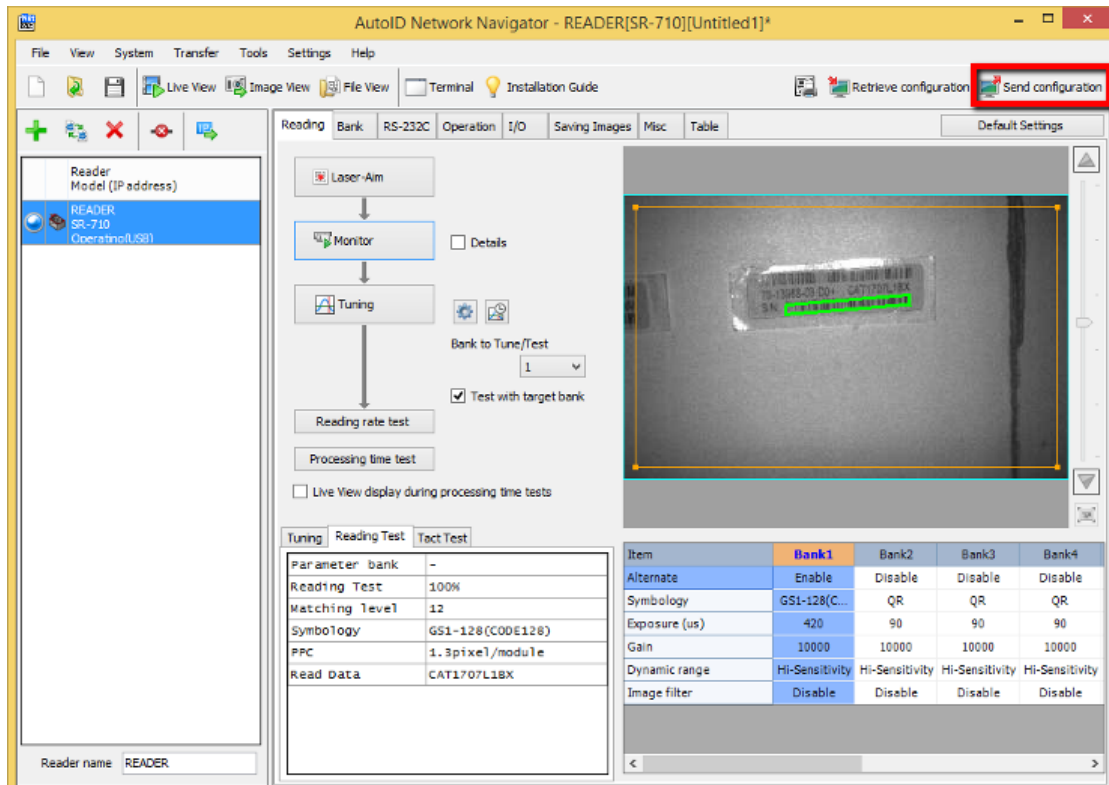

	Guideline	Page No.	24 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

13. Click button to disconnect the reader from **AutoID Network Navigator**.


NOTE Reader **MUST** disconnect before connecting at V810

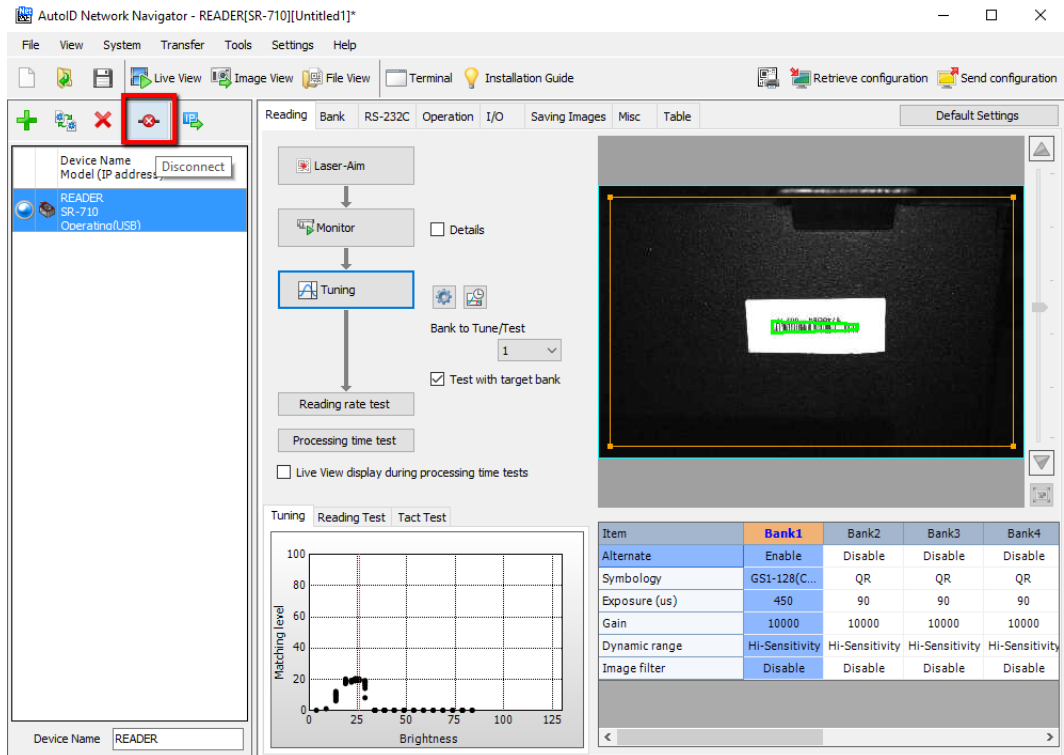

	Guideline	Page No.	25 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

5.3.5 Verify Communication

1. Double click at **Autoid Terminal** shortcut to verify communication with reader.

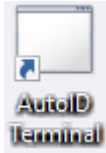

2. Select the communication interface based on communication type.


Choose RS-232C and set COM Port to the correct port number.

For Virtual COM(USB), check from Device Manager for the Port number.

For RS-232 (Direct COM), default port number will be COM 1.


Set **Baud Rate, Data Bits, Parity and Stop Bit** based on settings that configured to SR-710 at **Autoid Network Navigator**.

Then, click **Connect**.

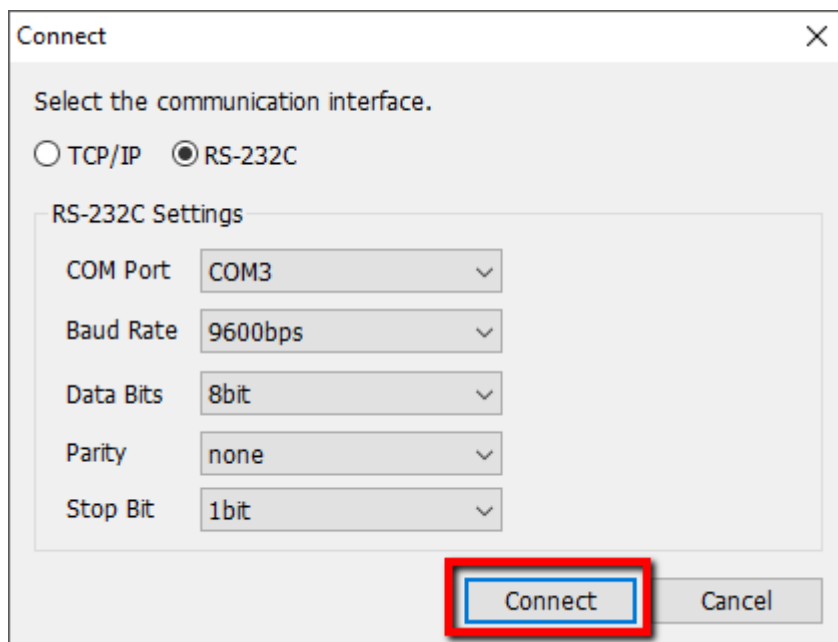


	Guideline	Page No.	26 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

3. Key in **Command “LON”** and click **Send** to trigger reader to scan barcode.

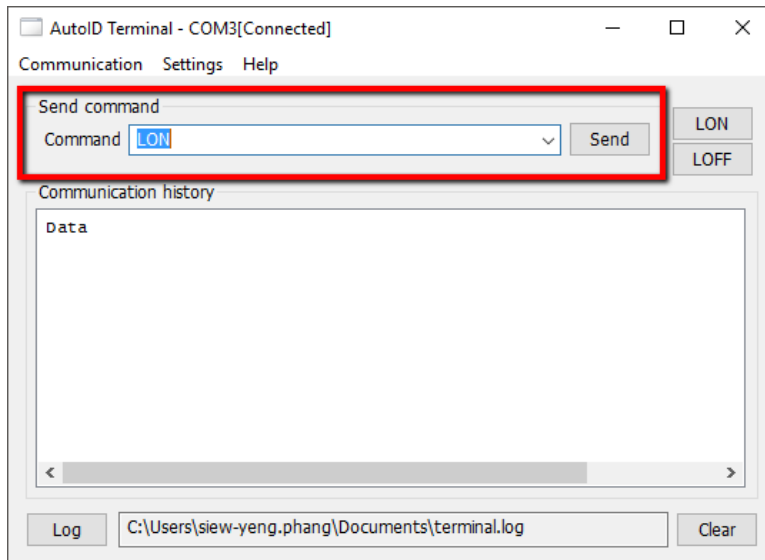


4. A success read barcode will be displayed if reader is triggered.

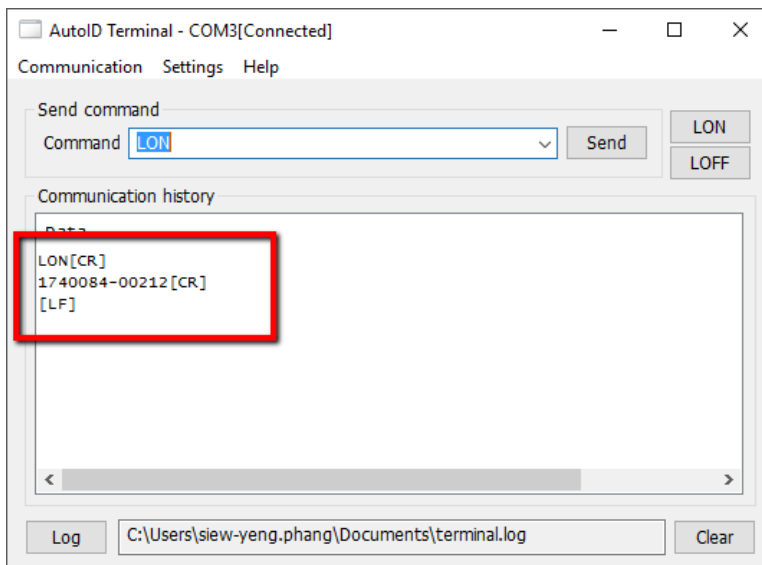

	Guideline	Page No.	27 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	


5. Click **Communication** then click **Disconnect** to disconnect reader from AutoID Terminal.

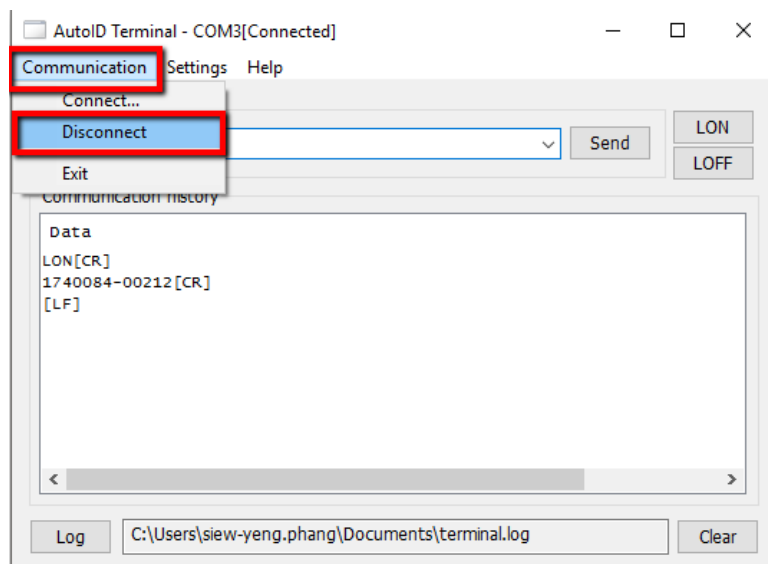

	Guideline	Page No.	28 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

5.3.6 V810 Barcode Reader Setup

1. Go to **Options** → **Production Options** → **Barcode Reader** tab. **Enable automatic barcode reader.**

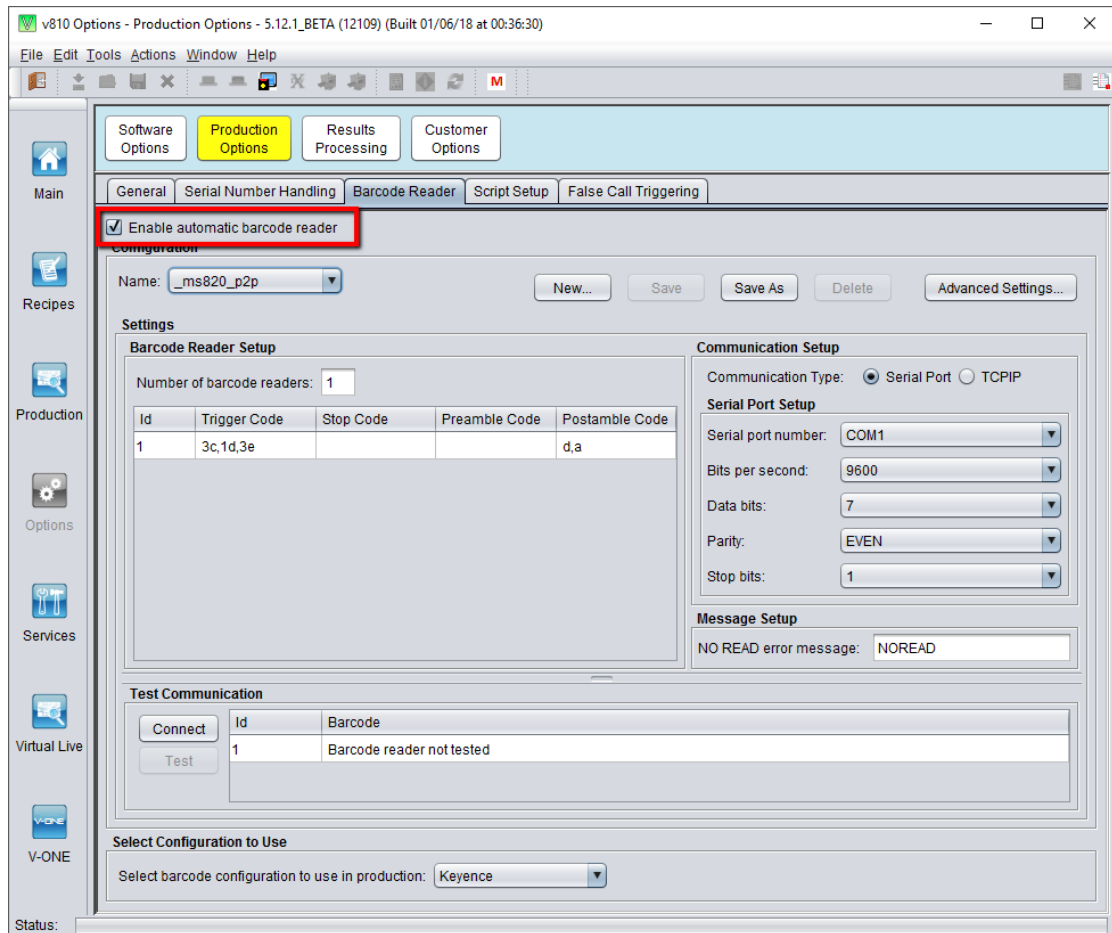

v810 Options - Production Options - 5.12.1_BETA (12109) (Built 01/06/18 at 00:36:30)

File Edit Tools Actions Window Help

Software Options **Production Options** Results Processing Customer Options

Main General Serial Number Handling **Barcode Reader** Script Setup False Call Triggering

☒ Enable automatic barcode reader

Name: _ms820_p2p New... Save Save As Delete Advanced Settings...

Settings

Barcode Reader Setup

Number of barcode readers: 1

Id	Trigger Code	Stop Code	Preamble Code	Postamble Code
1	3c,1d,3e			d,a

Communication Setup

Communication Type: ☒ Serial Port ☐ TCP/IP

Serial Port Setup

Serial port number: COM1

Bits per second: 9600

Data bits: 7

Parity: EVEN

Stop bits: 1

Message Setup

NO READ error message: NOREAD

Test Communication

Connect Test

Id	Barcode
1	Barcode reader not tested


Select Configuration to Use

Select barcode configuration to use in production: Keyence

Status:


	Guideline	Page No.	29 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

- Click **"New..."** to create a new barcode configuration and named it as **Keyence**.

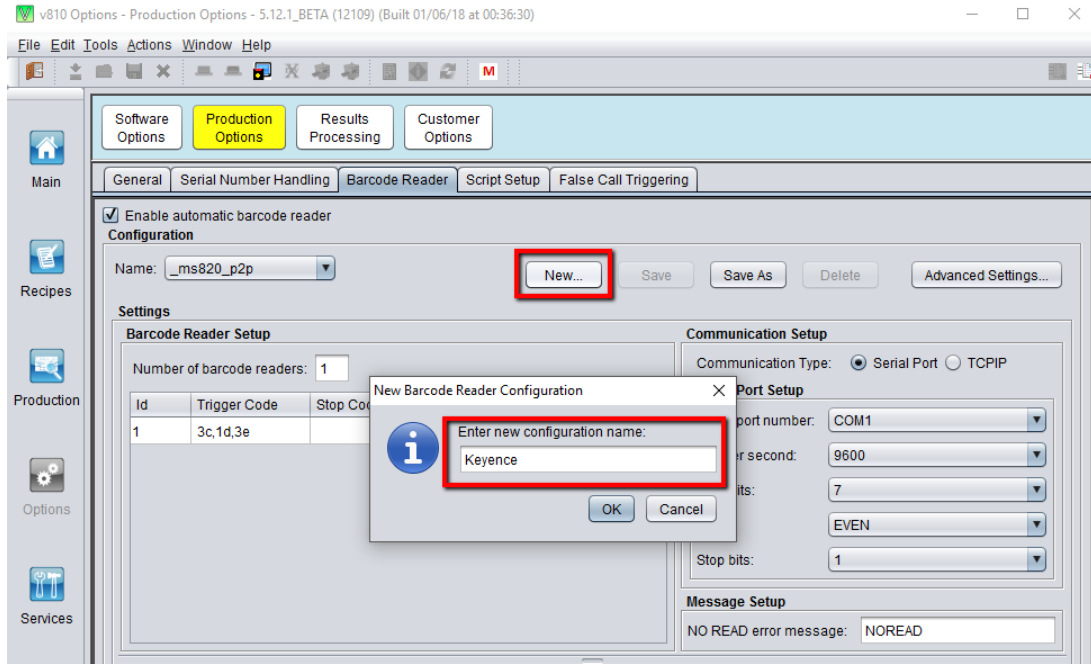

- Set Serial Port settings at **Communication Setup**. This settings must be the same with the settings at **Autold Network Navigator**.


For Virtual COM, set **Serial Port Number** based on the Port number from Device Manager, while for RS-232 (Direct COM), set **Serial Port Number** to COM1(default port number).

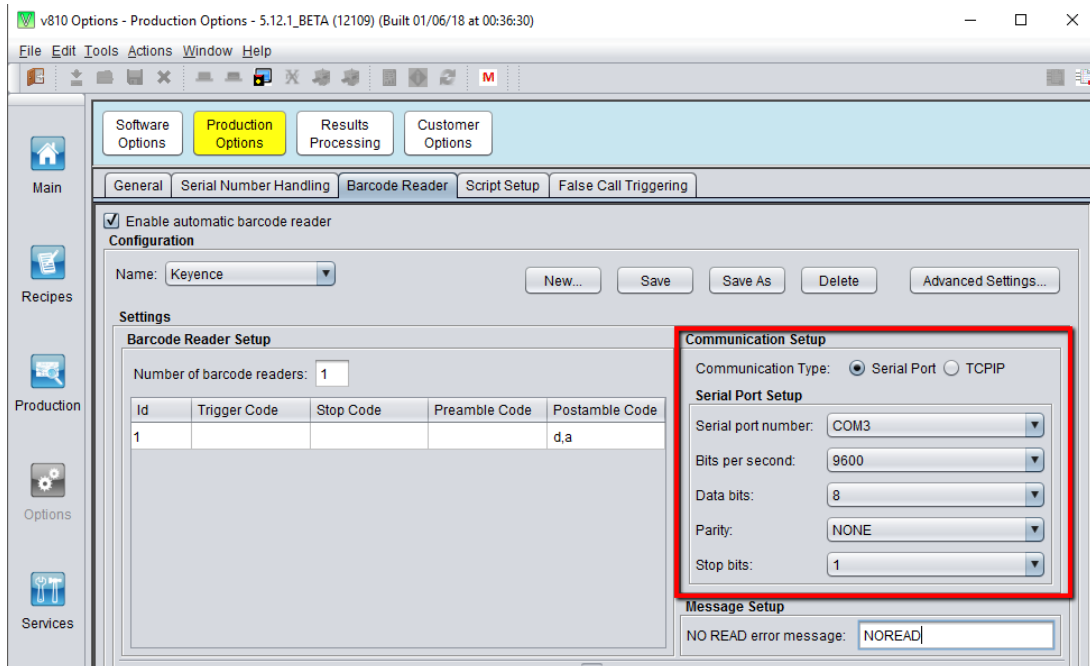


	Guideline	Page No.	30 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

4. Set Barcode Reader Setup as below:

Number of barcode readers: **1**
 Trigger code: **4c,4f,4e,d**
 Stop Code: **4c,4f,46,46,d (Optional for V810)**
 Postamble: **d,a**
 NO READ error message: **NOREAD**

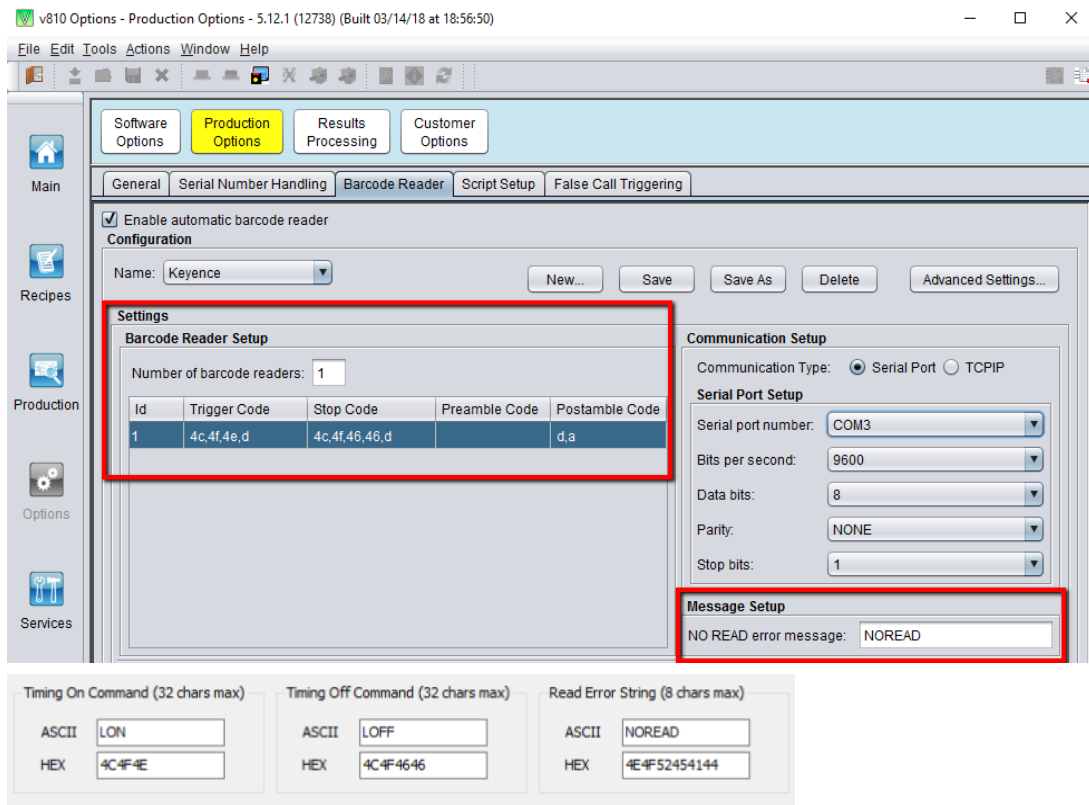

NOTE	Trigger Code = Timing On Command HEX (AutoID Network Navigator) + "d" = 4c,4f,4e,d
	Stop Code = Timing Off Command HEX (AutoID Network Navigator) + "d" = 4c,4f,44,46,d

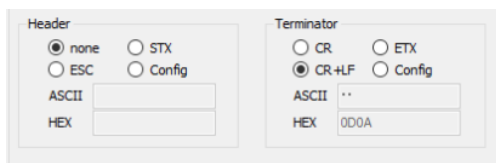


NOTE	Preamble = Header HEX (AutoID Network Navigator)
	Postamble = Terminator HEX (AutoID Network Navigator)

	Guideline	Page No.	31 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

- Click **Advance Settings...**. **Enable Response Delay** and set time to **2500ms**(recommended response delay time for Serial Port Communication Type).


Enable response delay to allow some buffer time for reader to complete decoding.

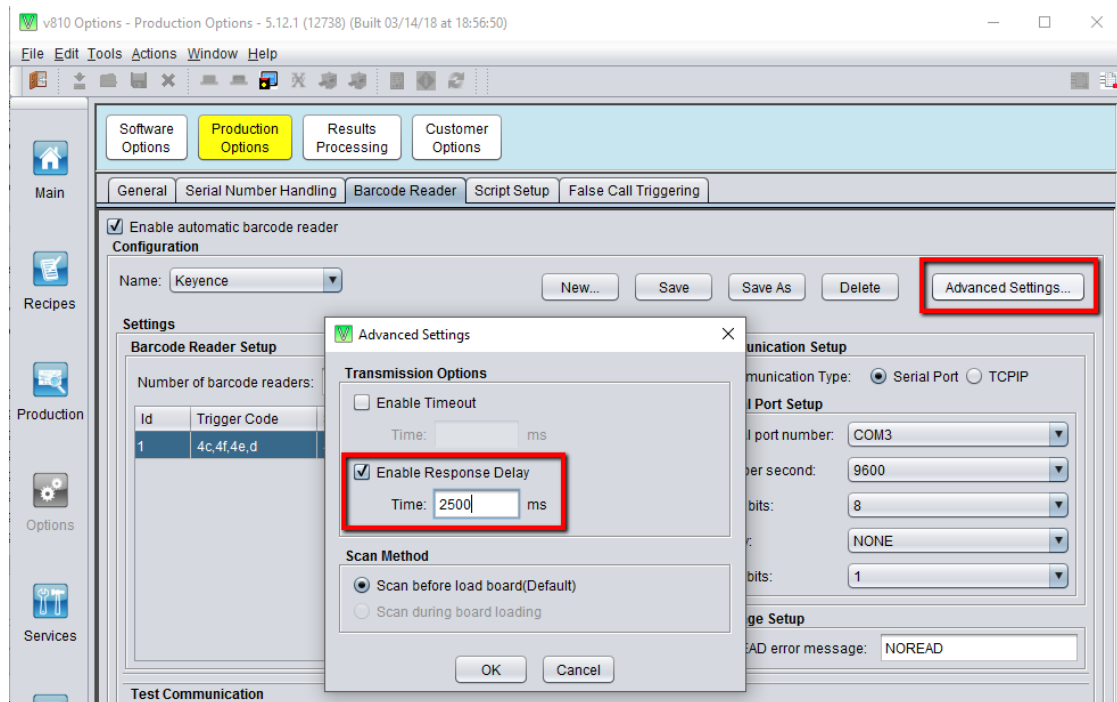


- Click **Connect** to test communication with reader.



- Click **Test** to start barcode reading test at V810.

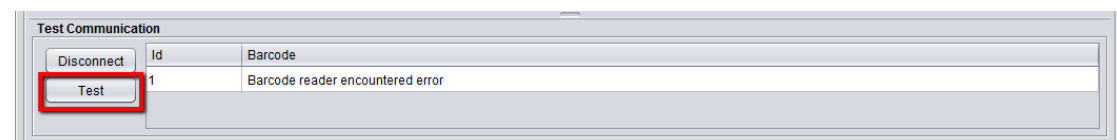


- Success read barcode will be displayed.

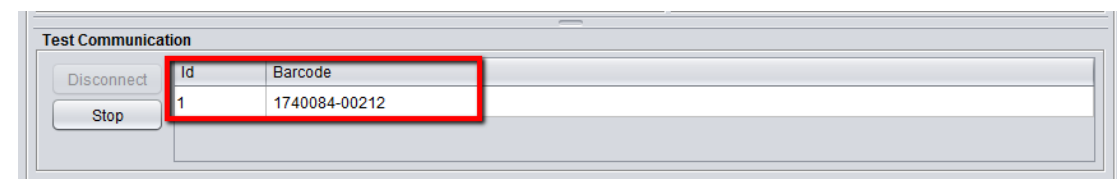

- Click **Stop** to end reading test.


	Guideline	Page No.	32 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

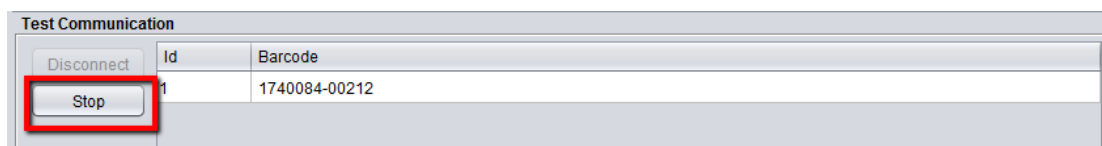

Test Communication	
Id	Barcode
1	1740084-00212

Buttons: Disconnect, Stop (highlighted)

10. Finally, select “**Keyence**” for barcode configuration to use in production.

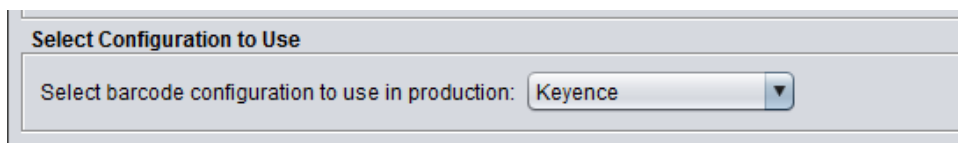

Select Configuration to Use


Select barcode configuration to use in production: Keyence ▼

	Guideline	Page No.	33 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	


5.4 Ethernet Communication Setup

5.4.1 Install Setup Tool – AutoID Network Navigator

- Open folder **AutoID Network Navigator**, then execute **setupAI.exe**.

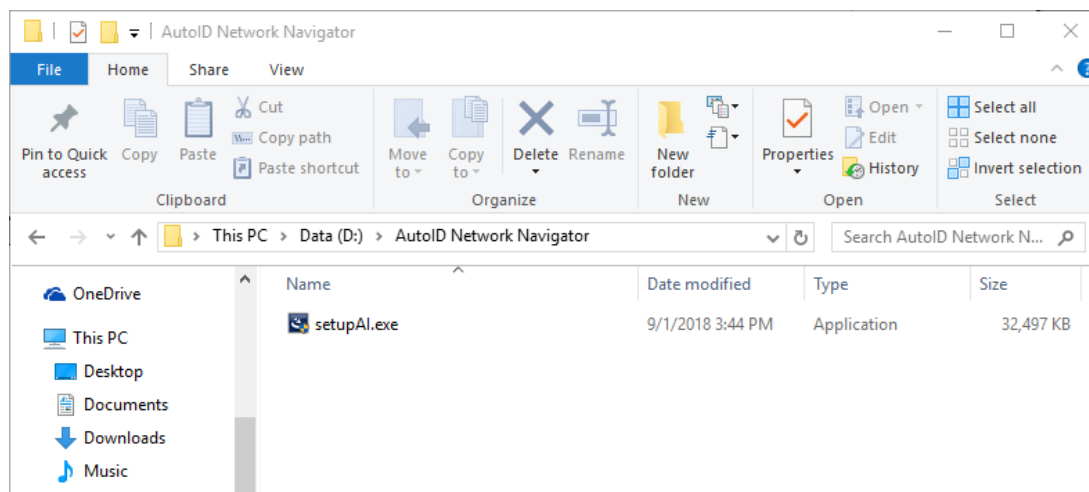


- Click **Next**.




	Guideline	Page No.	34 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

8. Remain **Destination Folder** as default. Click **Next**.




9. Click **Install**.



	Guideline	Page No.	35 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

10. Click **Finish** after installation completed.




	Guideline	Page No.	36 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

5.4.2 Configuring SR-710 with AutoID Network Navigator


1. Connect configuration USB from SR-710 to V810.
2. Double click shortcut at Desktop to launch **AutoID Network Navigator**.



3. Go to **File** then click **Open**.

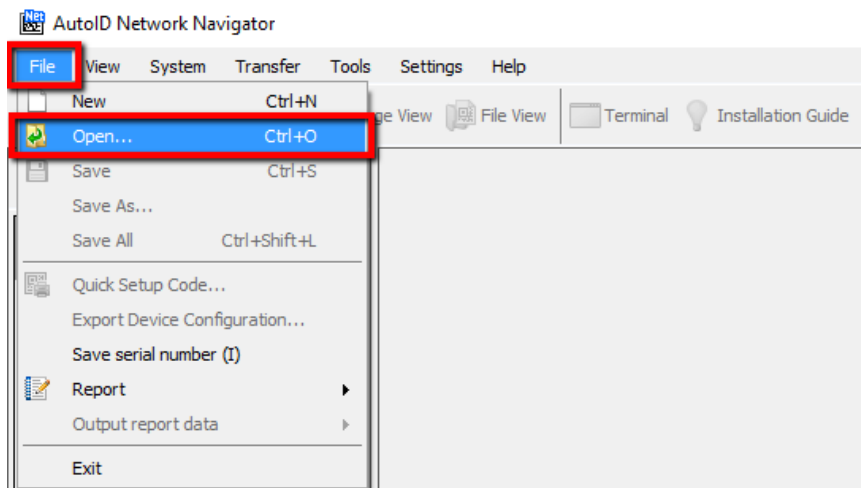


4. Look for **Keyence-SR710.ptc** file and click Open.

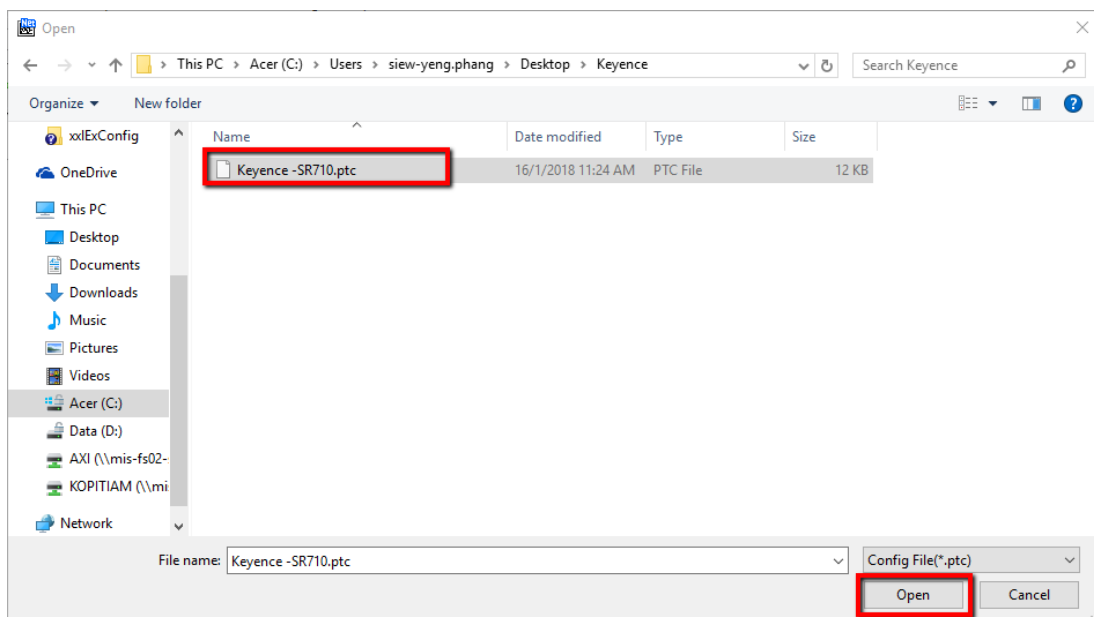


	Guideline	Page No.	37 of 60
		Doc. No.	
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. Revision	
		Effective Date	

5. Click to connect to reader SR-710 if it is not connected.

(If **Keyence-SR710.ptc** is loaded at **Step 4**, you may skip **Steps 6-9** and continue with **Step 10** to tune SR710).




6. Click **Retrieve configuration** to get current settings from reader.

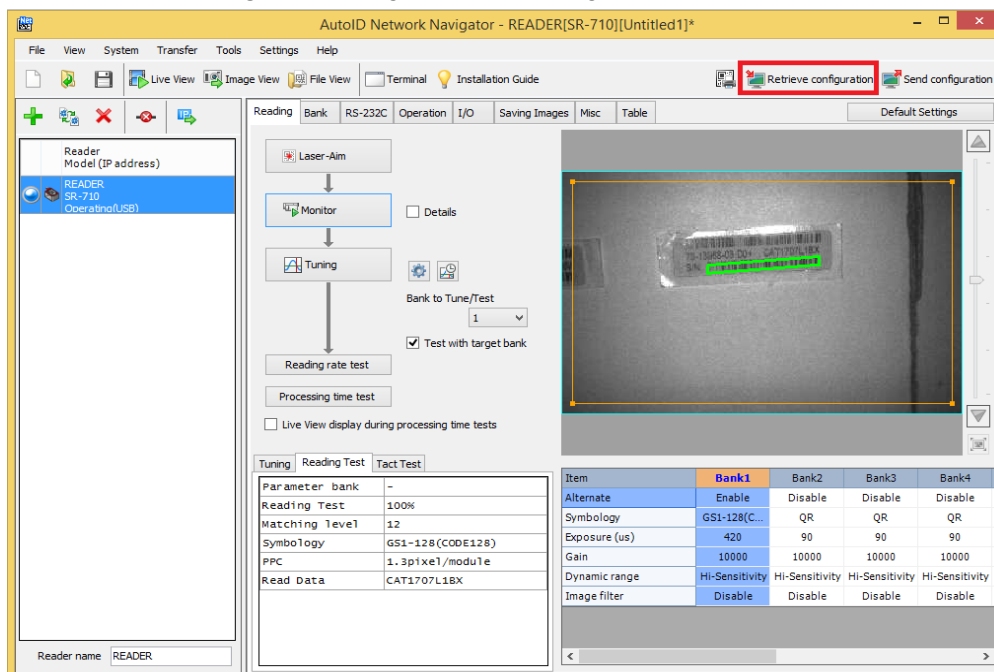

7. Switch to **RS-232C** tab. Make sure communication settings are tally with **Device Manager Port** settings. (Recommended Settings: Baud Rate **9600bps**, Data Bits **8bit**, Parity **None** and Stop Bit **1bit**).

	Guideline	Page No.	38 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

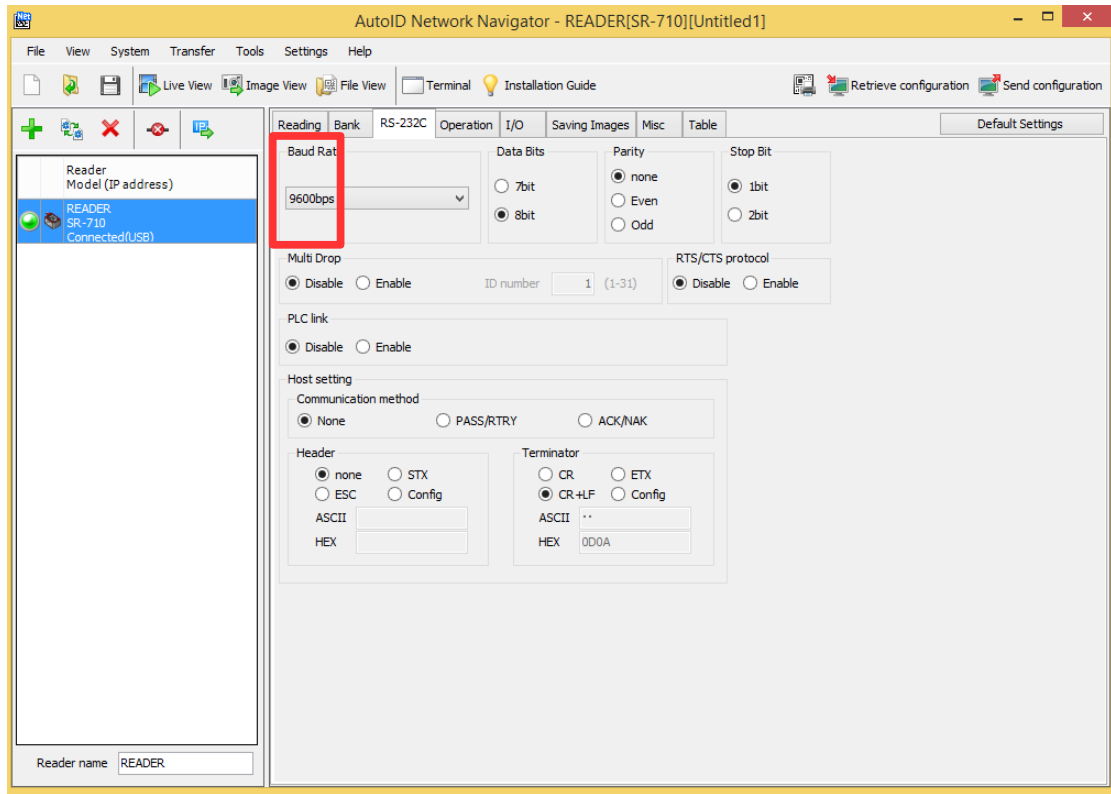

AutoID Network Navigator - READER[SR-710][Untitled1]

File View System Transfer Tools Settings Help

Live View Image View File View Terminal Installation Guide

Retrieve configuration Send configuration

Reading Bank RS-232C Operation I/O Saving Images Misc Table Default Settings

Reader Model (IP address)

READER SR-710 Connected(USB)

Baud Rate: 9600bps

Data Bits: 7bit 8bit

Parity: none Even Odd

Stop Bit: 1bit 2bit

Multi Drop: Disable Enable ID number: 1 (1-31)

RTS/CTS protocol: Disable Enable

PLC link: Disable Enable

Host setting: Communication method: None PASS/RTRY ACK/NAK


Header: none STX ESC Config ASCII: HEX:

Terminator: CR CR+LF Config ASCII: ** HEX: 0D0A

Reader name: READER

	Guideline	Page No.	39 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

8. Set **Header** to “none” and **Terminator** to “CR+LF”.

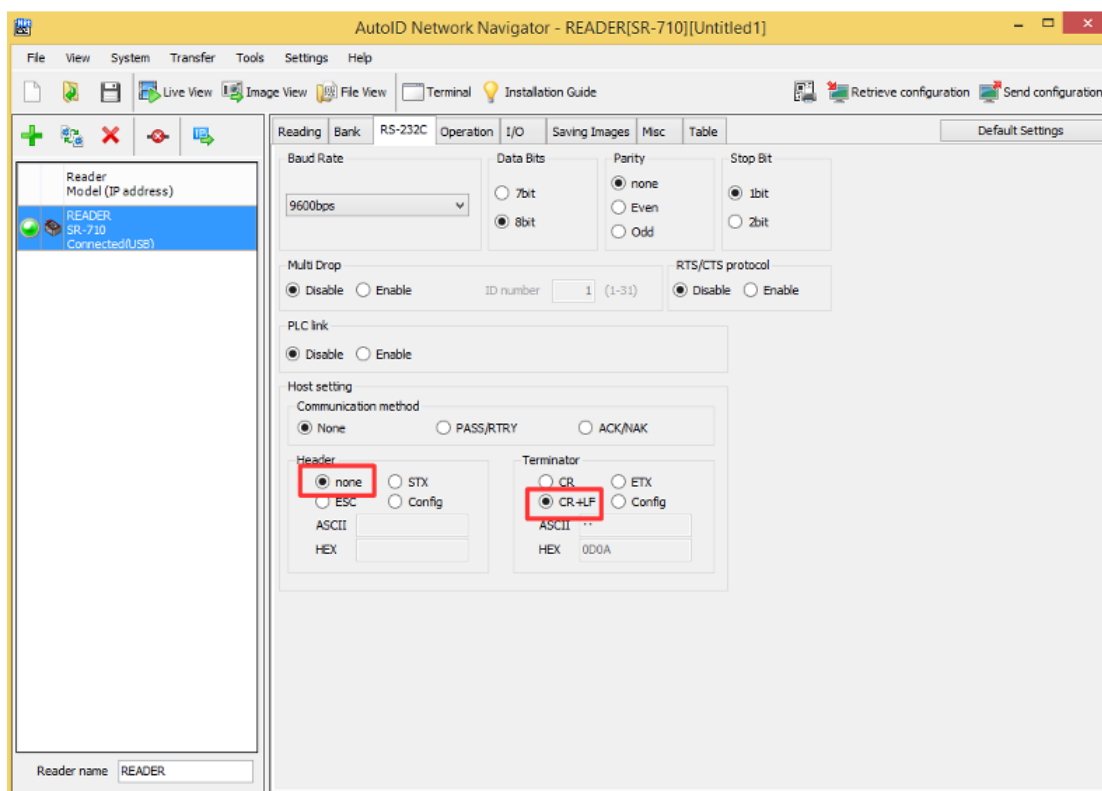


NOTE:

AutoID Network Navigator	V810
Header	Preamble
Terminator	Postamble

	Guideline	Page No.	40 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

9. Switch to Operation tab. Configure the settings accordingly.

Reading Mode: **Single**
Data Transmission: **Send after read**
Timing Mode: **One-shot trigger**
Duration: **200 (x10ms)**
Timing on Command ASCII: **LON (default)**
Read Error String ASCII: **NOREAD**

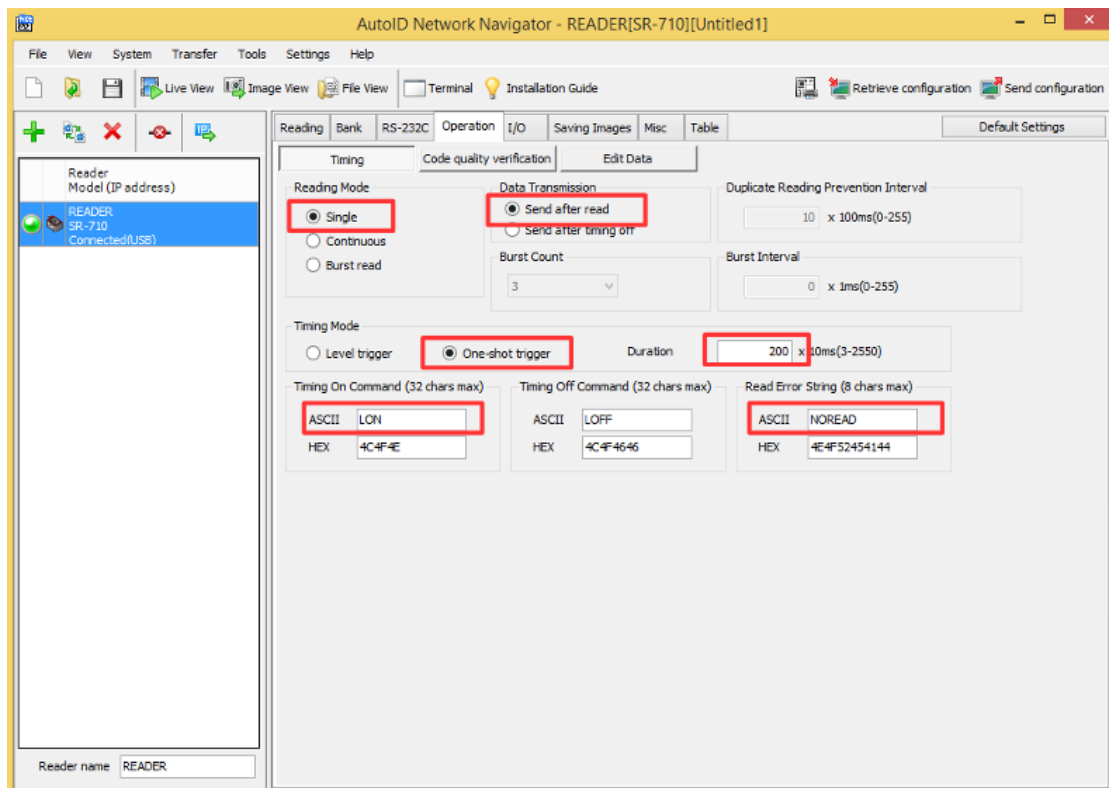

NOTE:

AutoID Network Navigator	V810
Timing on Command	Trigger Code
Timing off Command	Stop Code

	Guideline	Page No.	41 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

10. Switch to Reading tab and follow the 3 simple steps for SR-710 tuning to read barcode.

Step 1 – Laser-Aim


Align to the center of the code with the red laser pointer from reader.

Step 2 – Monitor(Live View)

Adjust the code position and tilt reader at a suitable angle. Once barcode read successfully, click Monitor button again to end.

Step 3 - Tuning


Auto Tune the most appropriate scan condition. Settings will set into targeted bank.

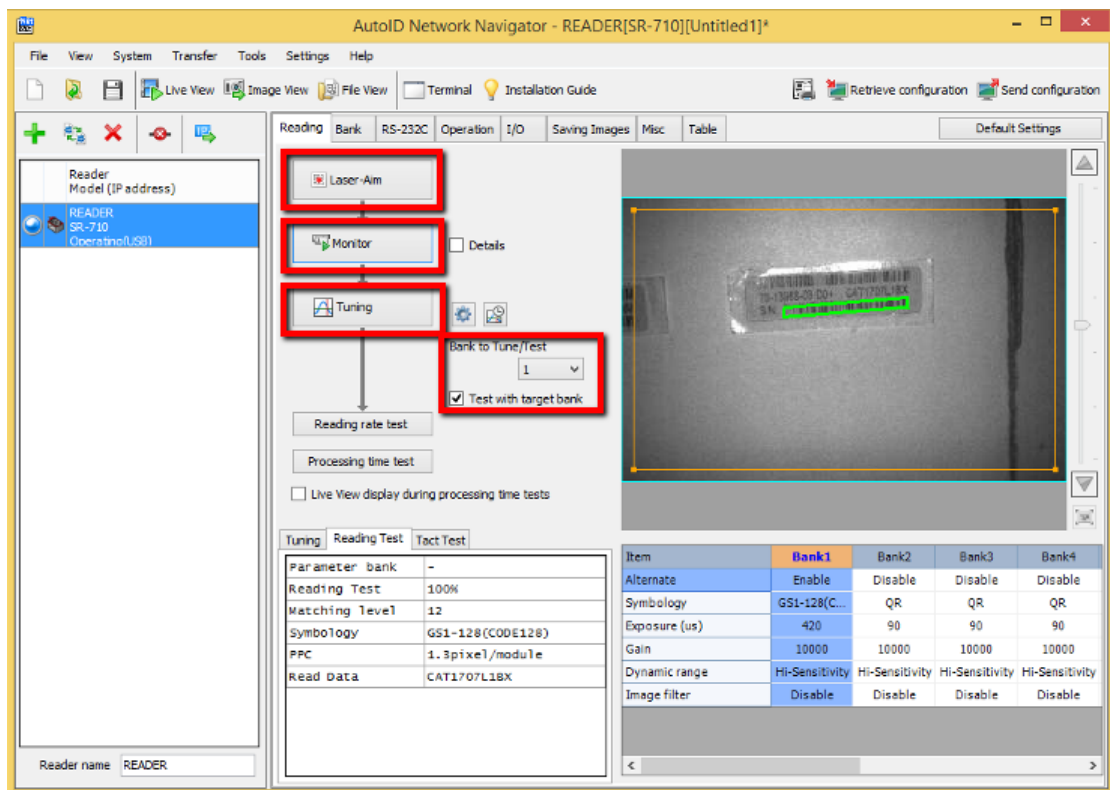

	Guideline	Page No.	42 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	


11. Click **Reading rate test** to perform reading test to confirm reading stability.

NOTE Reading Test Result – Reading Percentage higher, reading more stable.

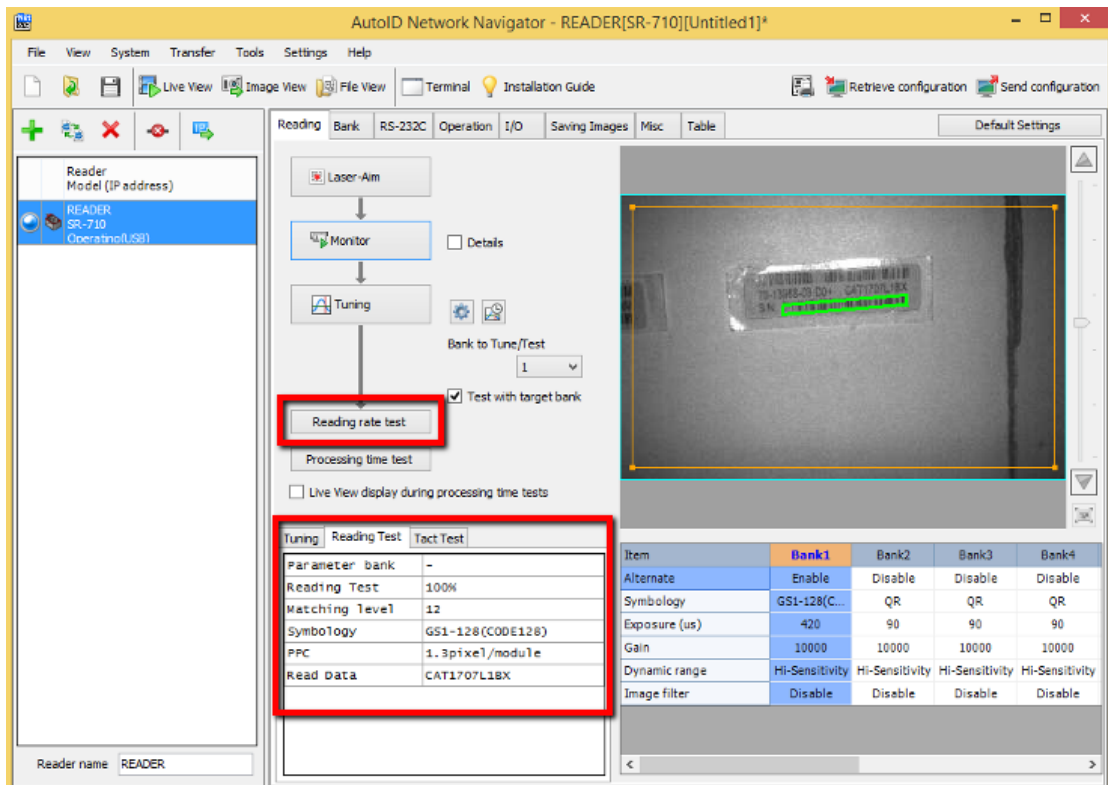

	Guideline	Page No.	43 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	


12. Click **Send Configuration** to save settings into reader.

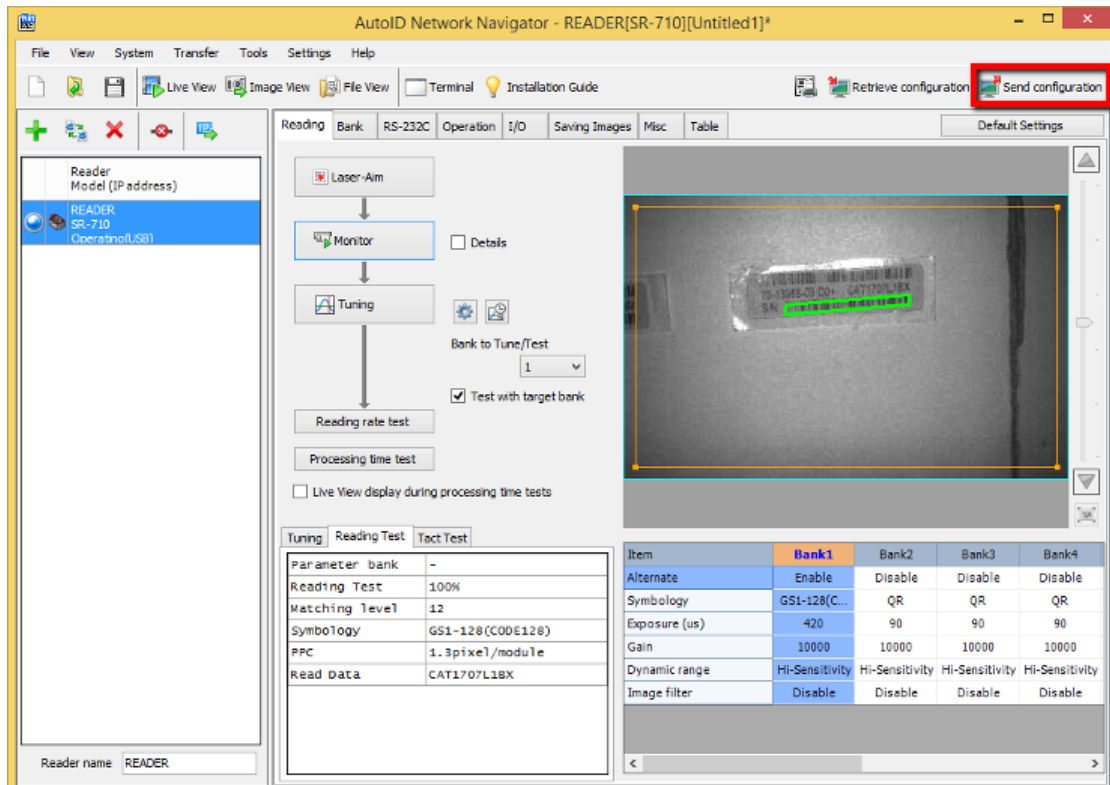

	Guideline	Page No.	44 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

13. Click button to disconnect the reader from **AutoID Network Navigator**.

NOTE Reader **MUST** disconnect before connecting at V810

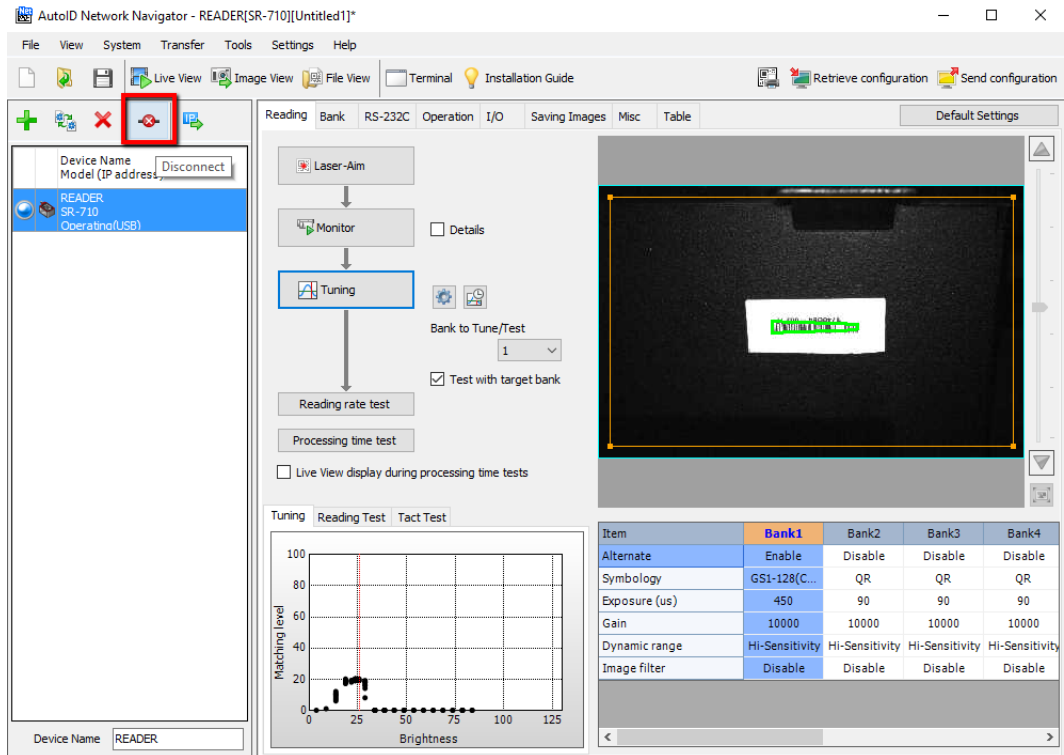

	Guideline	Page No.	45 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

5.4.3 Configuring N-L20 with AutoID Network Navigator

1. Connect N-L20 to V810 with OP-51580, configuration USB.

NOTE Make sure **ONLY ONE** configuration USB is connected to V810 at once.

2. Double click shortcut at Desktop to launch **AutoID Network Navigator**.


NOTE AutoID Network Navigator version 4.2 or later support N-L20 setup.



When the message below is shown, the auto connection is successful.




3. Click “Retrieve Configuration” to get the current settings of N-L20.

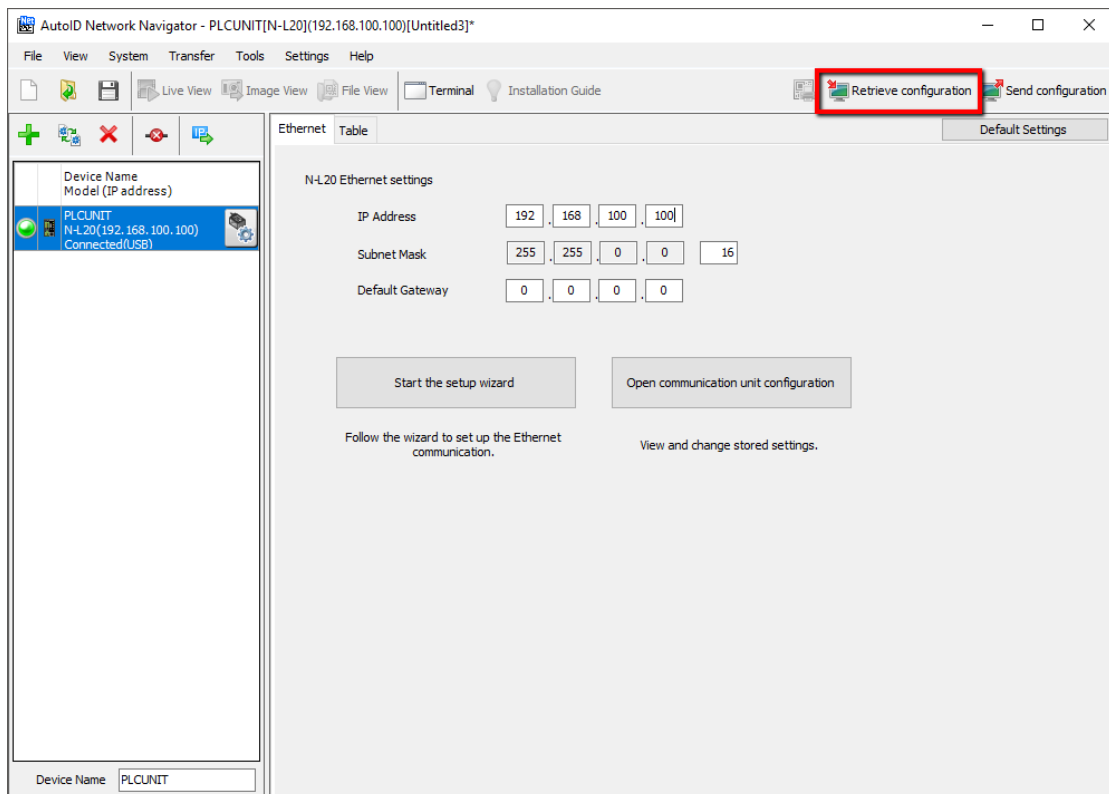

	Guideline	Page No.	46 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

4. Set the Ethernet settings based on the recommended settings as below.

NOTE	IP Address must start with 192.168.128.2xx IF LAN cable from N-L20 is plugged at Cisco switch at V810 machine.
-------------	--

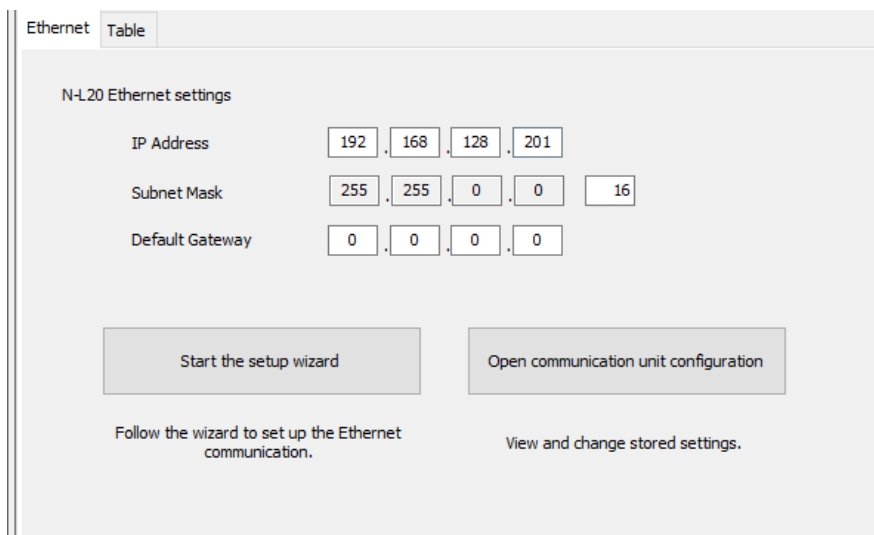

Ethernet Table

N-L20 Ethernet settings

IP Address: 192 . 168 . 128 . 201

Subnet Mask: 255 . 255 . 0 . 0 16

Default Gateway: 0 . 0 . 0 . 0


Start the setup wizard

Open communication unit configuration

Follow the wizard to set up the Ethernet communication.

View and change stored settings.

5. Click **Start the setup wizard** to setup the Ethernet communication.

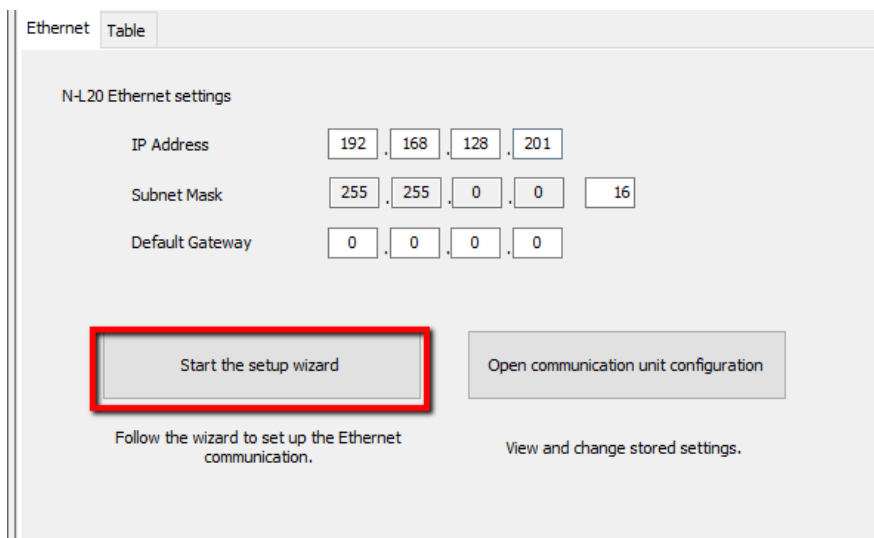

Ethernet Table

N-L20 Ethernet settings

IP Address: 192 . 168 . 128 . 201

Subnet Mask: 255 . 255 . 0 . 0 16

Default Gateway: 0 . 0 . 0 . 0

Start the setup wizard


Open communication unit configuration

Follow the wizard to set up the Ethernet communication.

View and change stored settings.

	Guideline	Page No.	47 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

6. Select **Command Input**, then click **Next**.

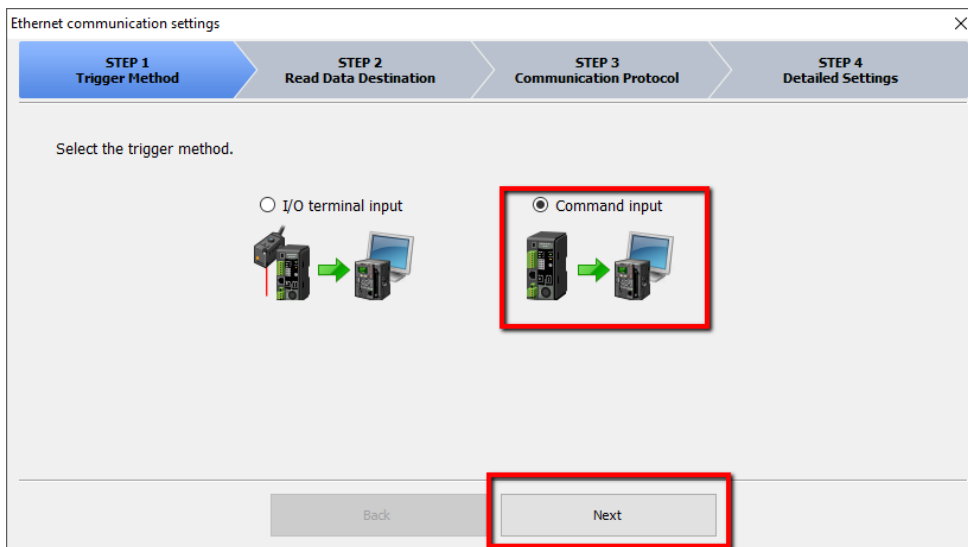

Ethernet communication settings


STEP 1 Trigger Method STEP 2 Read Data Destination STEP 3 Communication Protocol STEP 4 Detailed Settings

Select the trigger method.

☐ I/O terminal input ☒ Command input

Back Next

7. Select **Computer**, then click **Next**.

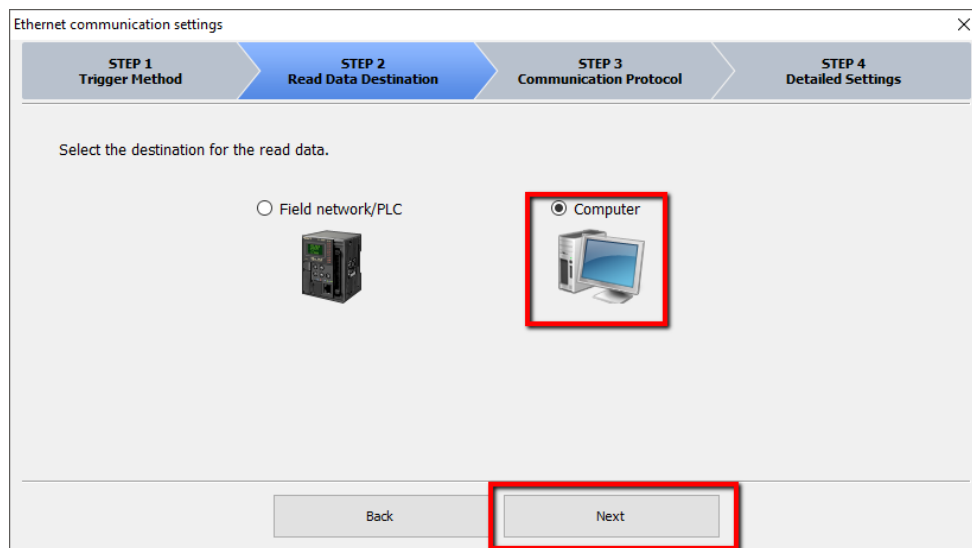

Ethernet communication settings

STEP 1 Trigger Method STEP 2 Read Data Destination STEP 3 Communication Protocol STEP 4 Detailed Settings

Select the destination for the read data.

☐ Field network/PLC ☒ Computer


Back Next

	Guideline	Page No.	48 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

8. Select **TCP**, then click **Next**.




9. Set **Port** as **9004**, then click **Completed**.

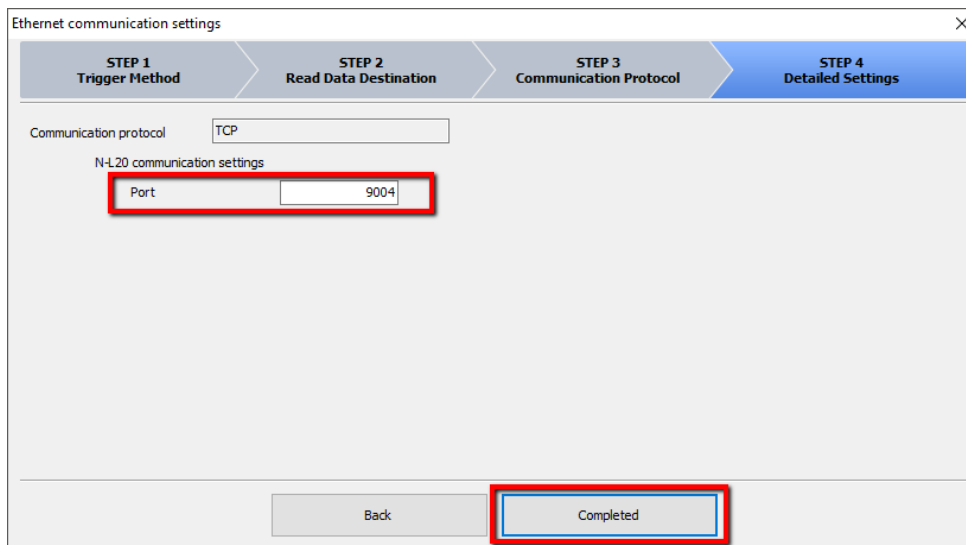


	Guideline	Page No.	49 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

10. Switch to **table** tab. Make sure the **RS-232** settings are the same with SR-710 reader.
(SR-710 RS232 settings can be retrieved based on **Step 7 at Section 5.3.4**)

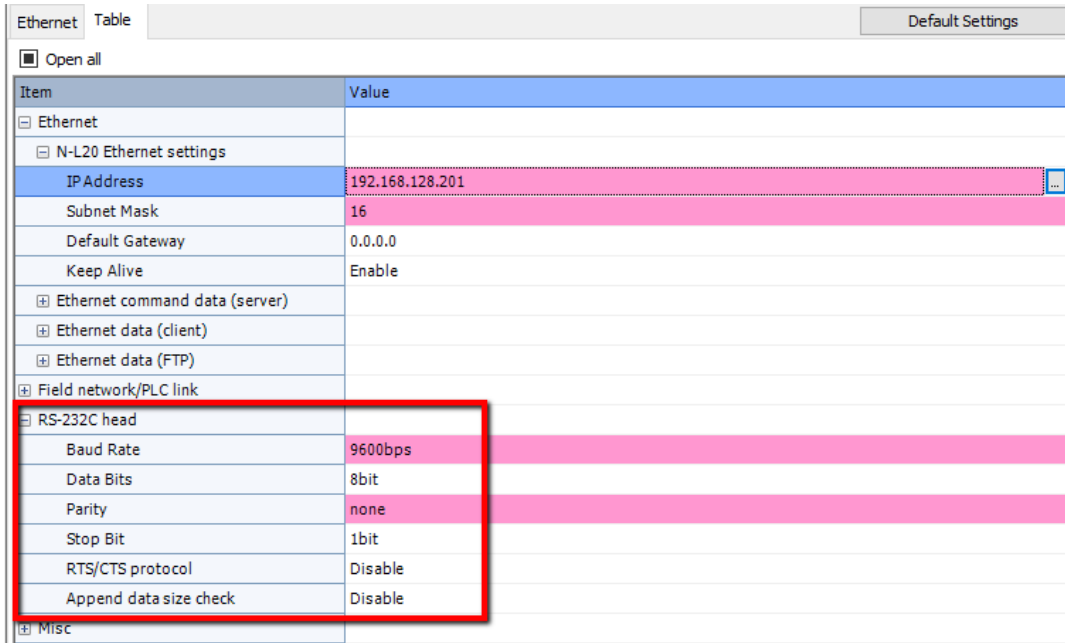

Item	Value
Ethernet	
N-L20 Ethernet settings	
IP Address	192.168.128.201
Subnet Mask	16
Default Gateway	0.0.0.0
Keep Alive	Enable
Ethernet command data (server)	
Ethernet data (client)	
Ethernet data (FTP)	
Field network/PLC link	
RS-232C head	
Baud Rate	9600bps
Data Bits	8bit
Parity	none
Stop Bit	1bit
RTS/CTS protocol	Disable
Append data size check	Disable
MISC	

11. Click **Send Configuration** to save settings into N-L20.

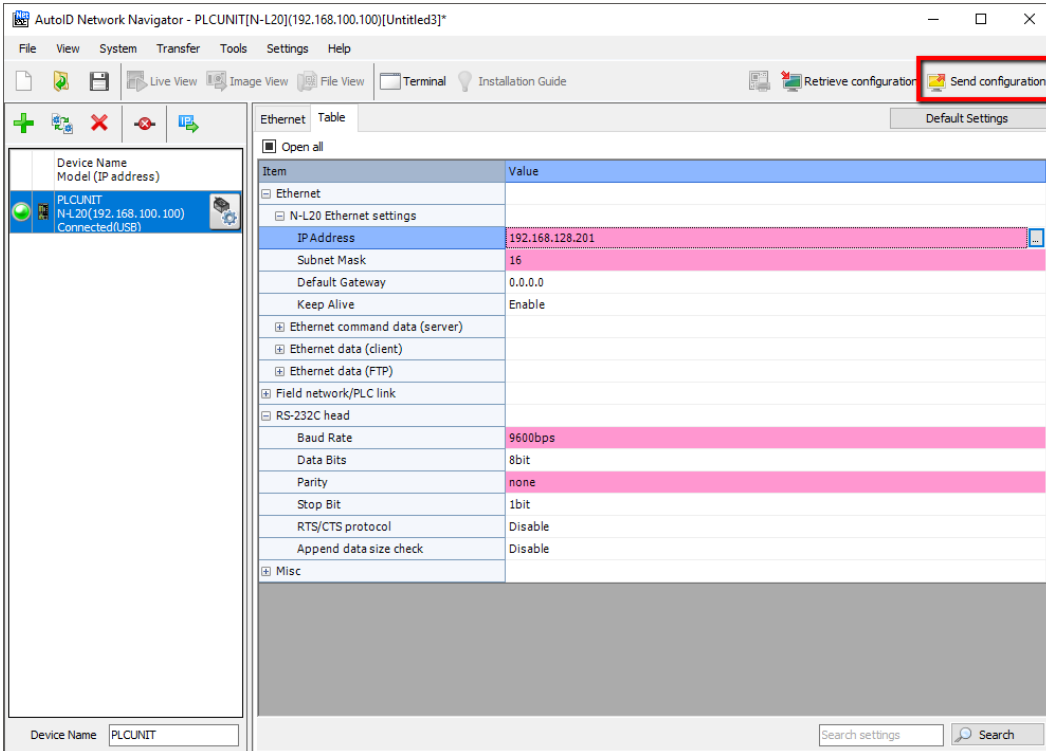

AutoID Network Navigator - PLCUNIT[N-L20](192.168.100.100)[Untitled3]*

File View System Transfer Tools Settings Help

Live View Image View File View Terminal Installation Guide

Retrieve configuration Send configuration


Device Name: PLCUNIT

Item	Value
Ethernet	
N-L20 Ethernet settings	
IP Address	192.168.128.201
Subnet Mask	16
Default Gateway	0.0.0.0
Keep Alive	Enable
Ethernet command data (server)	
Ethernet data (client)	
Ethernet data (FTP)	
Field network/PLC link	
RS-232C head	
Baud Rate	9600bps
Data Bits	8bit
Parity	none
Stop Bit	1bit
RTS/CTS protocol	Disable
Append data size check	Disable
Misc	


Search settings Search

	Guideline	Page No.	50 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	


12. Click **Yes** to proceed.

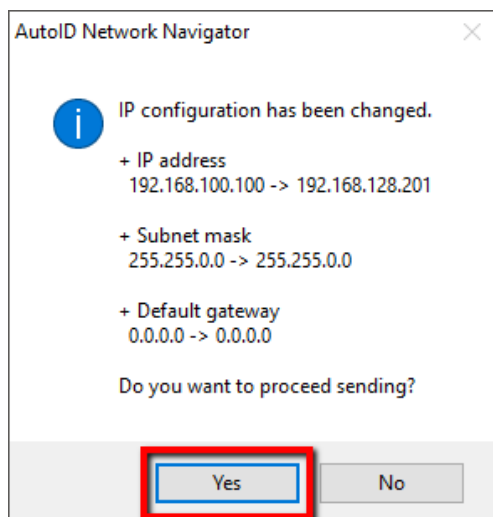

13. When IP Address is changed successful, the configured IP Address will be displayed.

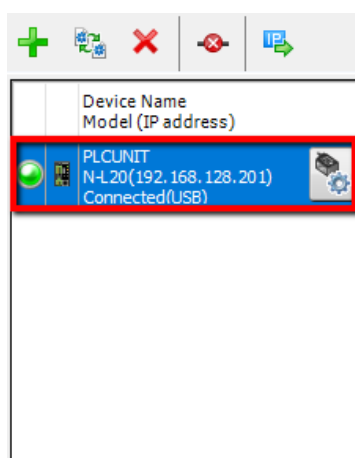


14. To verify communication between N-L20 and SR-710, connect SR-710 to N-L20. Click the head connection button and select SR-700.

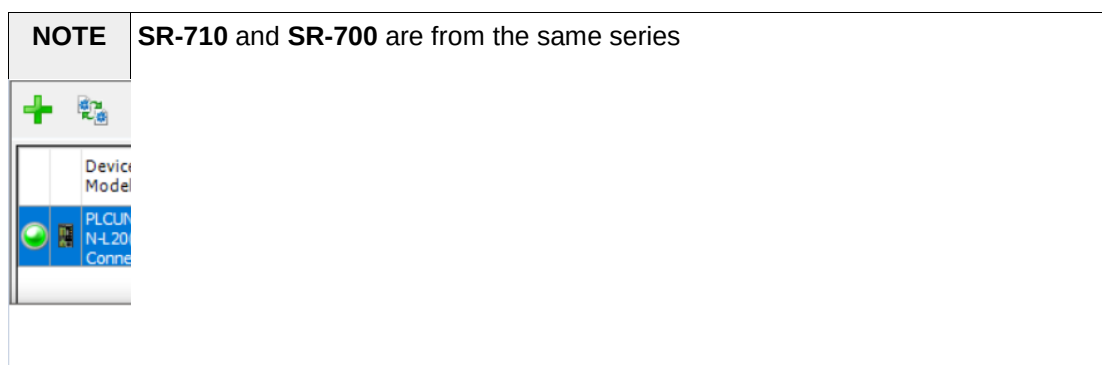


	Guideline	Page No.	51 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

15. When message below is shown, the connection between N-L20 and SR-710 is successful.

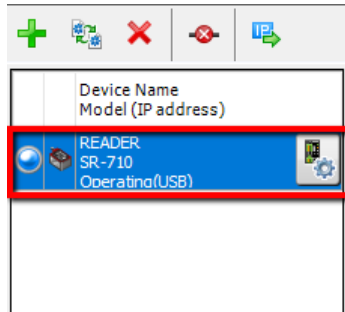


16. Disconnect from **AutoID Network Navigator**.

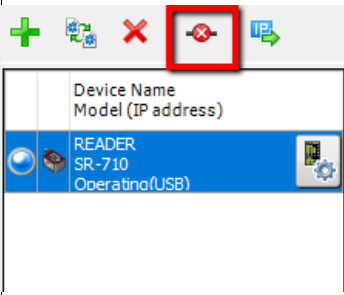NOTE	Disconnect from AutoID Network Navigator is MUST before connecting at V810
	

	Guideline	Page No.	52 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

5.4.4 Verify Communication


- Double click at **AutoID Terminal** shortcut to verify communication with reader.



- Select the communication interface based on communication type.


For Ethernet Communication, choose **TCP/IP**.

Set the **Host** and **Port** based on settings that configured to N-L20 at **AutoID Network Navigator**. Then, click **Connect**.

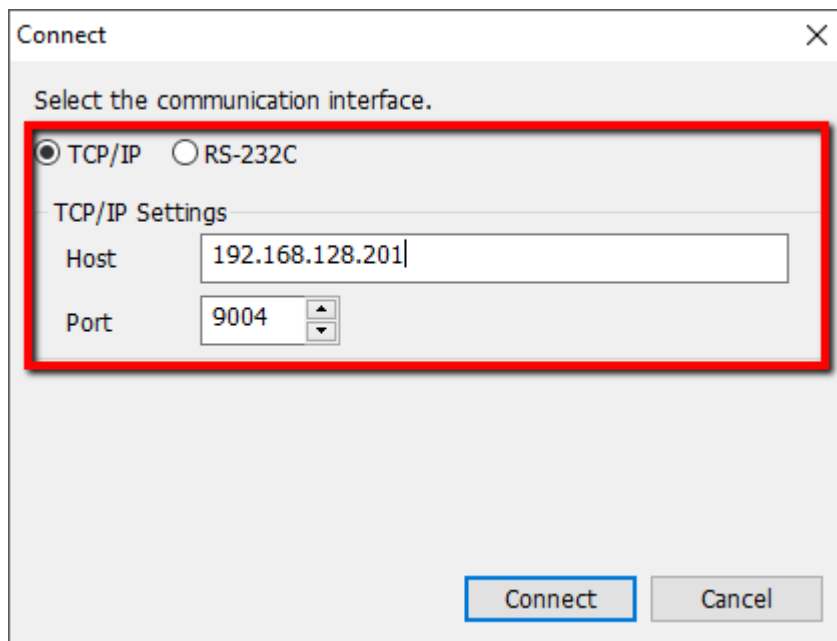


	Guideline	Page No.	53 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

8. Key in **Command “LON”** and click **Send** to trigger reader to scan barcode.

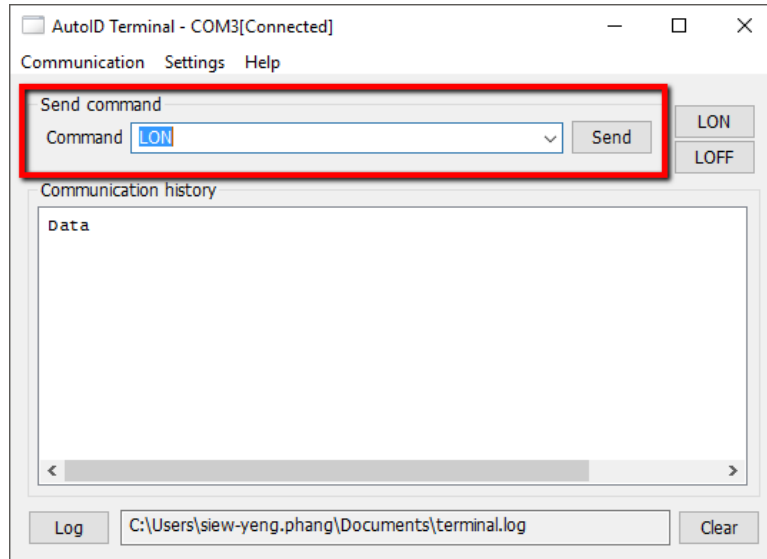


9. A success read barcode will be displayed if reader is triggered.

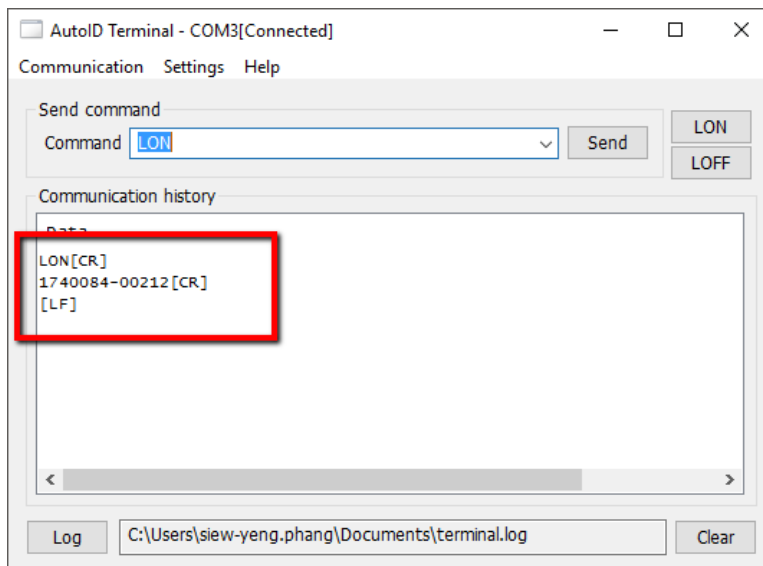

	Guideline	Page No.	54 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	


10. Click **Communication** then click **Disconnect** to disconnect reader from AutoID Terminal.

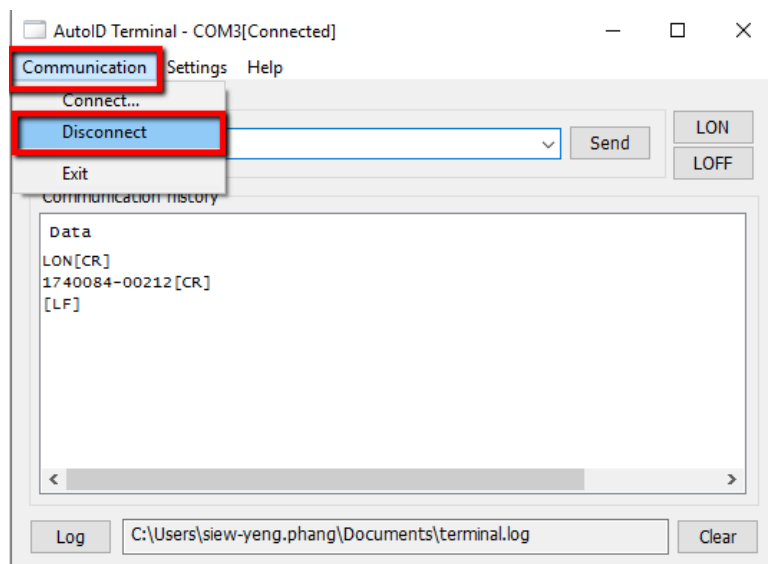

	Guideline	Page No.	55 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

5.4.5 V810 Barcode Reader Setup

1. Go to **Options** → **Production Options** → **Barcode Reader** tab. **Enable automatic barcode reader.**

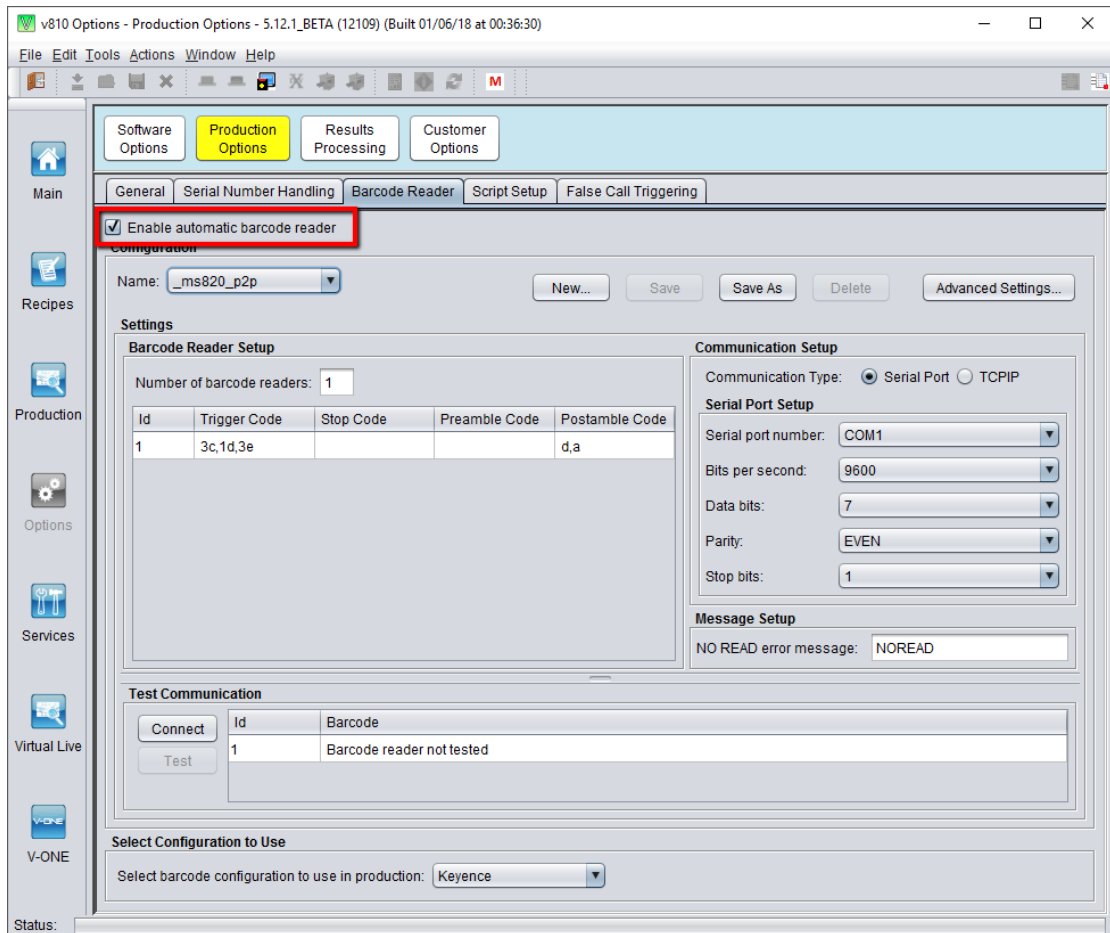

v810 Options - Production Options - 5.12.1_BETA (12109) (Built 01/06/18 at 00:36:30)

File Edit Tools Actions Window Help

Software Options **Production Options** Results Processing Customer Options

General Serial Number Handling **Barcode Reader** Script Setup False Call Triggering

☒ Enable automatic barcode reader

Name: _ms820_p2p New... Save Save As Delete Advanced Settings...

Settings

Barcode Reader Setup

Number of barcode readers: 1

Id	Trigger Code	Stop Code	Preamble Code	Postamble Code
1	3c,1d,3e			d,a

Communication Setup

Communication Type: ☒ Serial Port ☐ TCP/IP

Serial Port Setup

Serial port number: COM1

Bits per second: 9600

Data bits: 7

Parity: EVEN

Stop bits: 1

Message Setup

NO READ error message: NOREAD

Test Communication

Connect Test

Id	Barcode
1	Barcode reader not tested


Select Configuration to Use

Select barcode configuration to use in production: Keyence


Status:

	Guideline	Page No.	56 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

- Click **"New..."** to create a new barcode configuration and named it as **Keyence_TCPIP**.

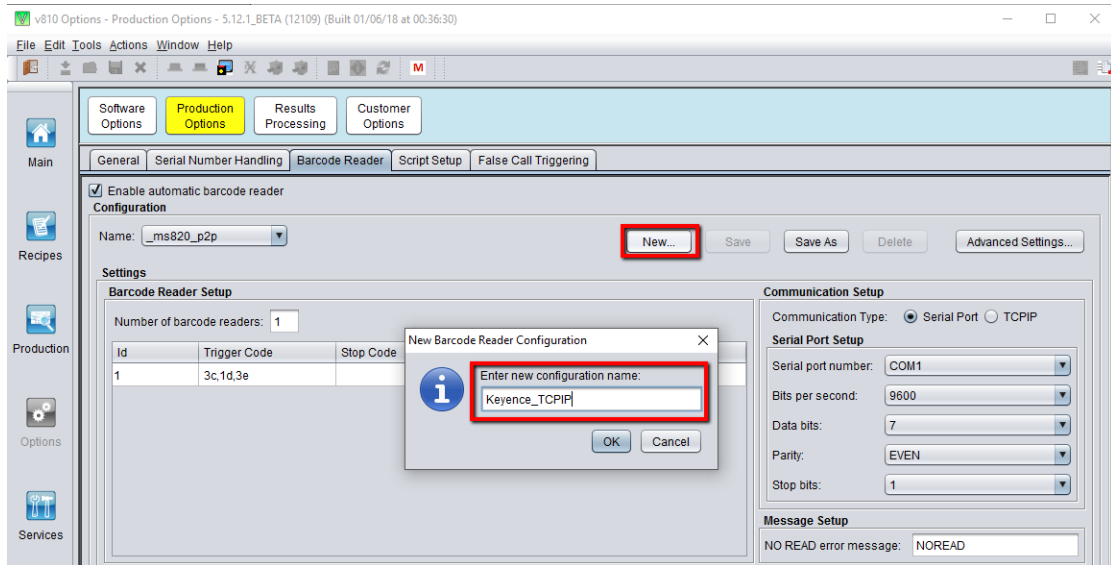


- Select **TCPIP** at **Communication Setup**. Remain **Host IP Address** as default **192.168.128.60** if reader is connected to Cisco switch.

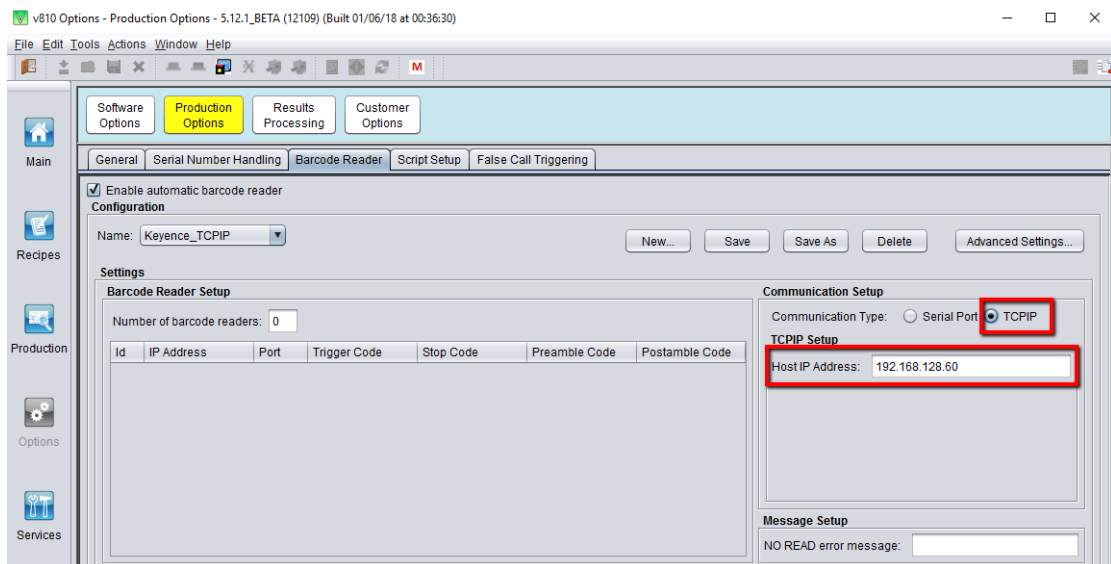

	Guideline	Page No.	57 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

4. Set Barcode Reader Setup as below:

Number of barcode readers: **1**
 IP Address: **192.168.128.201**
 Port: **9004**
 Trigger Code: **4c,4f,4e,d**
 Stop Code: **4c,4f,46,46,d (Optional for V810)**
 Postamble: **d,a**
 NO READ error message: **NOREAD**

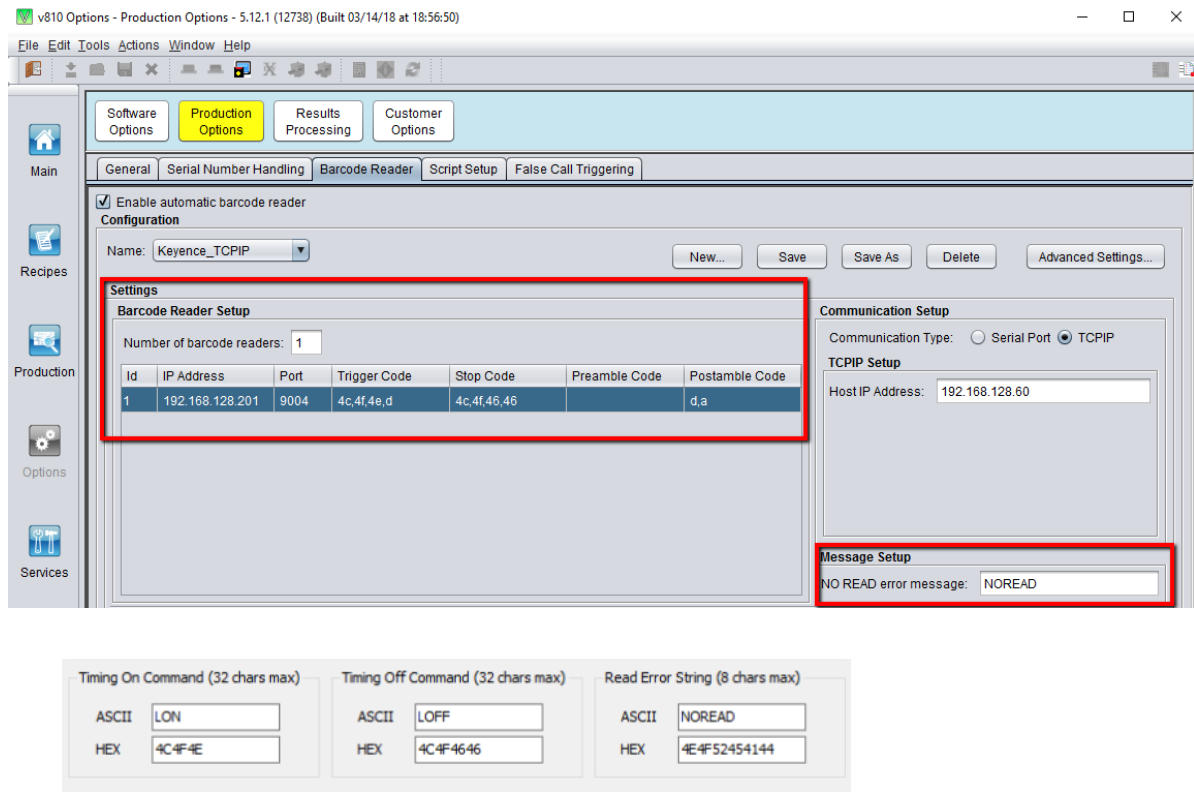

NOTE	Trigger Code = Timing On Command HEX (AutoID Network Navigator) + "d" = 4c,4f,4e,d
	Stop Code = Timing Off Command HEX (AutoID Network Navigator) + "d" = 4c,4f,44,46,d


	Guideline	Page No.	58 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

Header ☒ none ☐ STX ☐ ESC ☐ Config ASCII: HEX:	Terminator ☐ CR ☐ ETX ☒ CR+LF ☐ Config ASCII: HEX: 0D0A
--	--


NOTE	Preamble = Header HEX (AutoID Network Navigator)
	Postamble = Terminator HEX (AutoID Network Navigator)

- Click "**Advance Settings...**". **Enable Response Delay** and set time to **500ms** (recommended response delay time for TCP/IP Communication Type).


Enable response delay to allow some buffer time for reader to complete decoding.

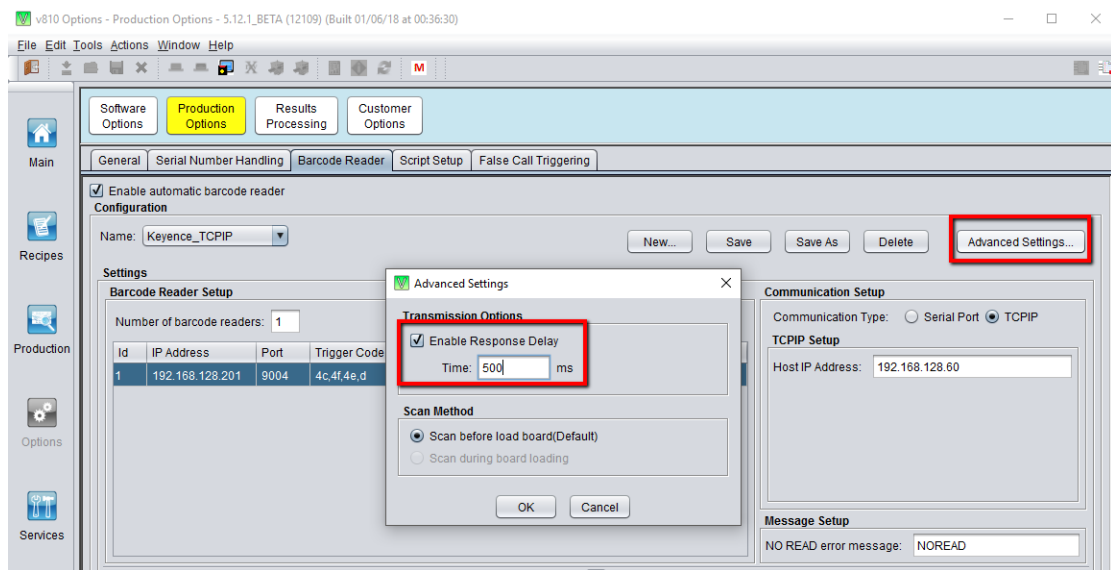

- Click **Connect** to test communication with reader.

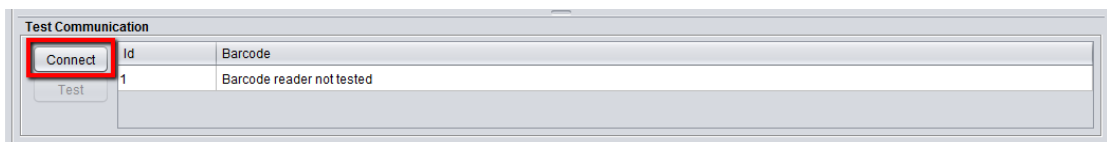


- Click **Test** to start barcode reading test at V810.

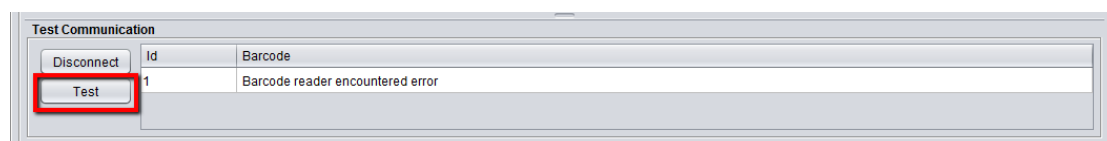


	Guideline	Page No.	59 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	


8. Success read barcode will be displayed.

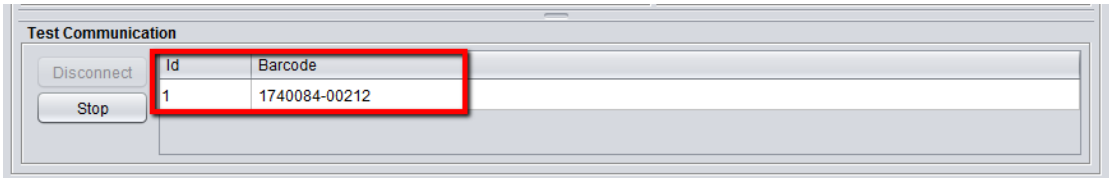

9. Click **Stop** to end reading test.

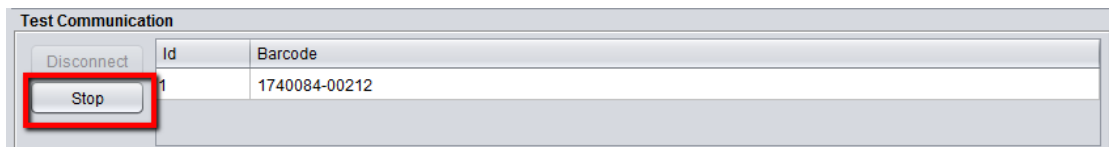

10. Finally, select **Keyence_TCPIP** for barcode configuration to use in production.

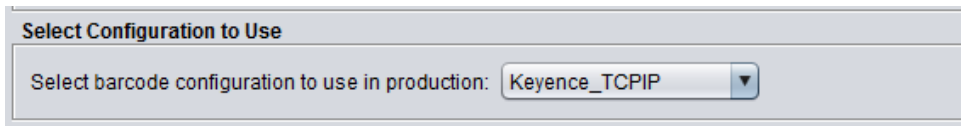

	Guideline	Page No.	60 of 60
	Keyence SR-710 Barcode Reader Setup Work Instruction at V810 AXI machine	Doc. No.	
		Doc. Revision	
		Effective Date	

6.0 TOOLS & EQUIPMENTS

ID	Location	Tools & Equipments
6.1		
6.2		
6.3		

7.0 RECORDS & ATTACHMENTS

ID	Doc No.	Document Title
7.1		
7.2		
7.3		

8.0 DEFINITION

ID	Acronym /Term	Description
8.1		
8.2		
8.3		

9.0 REVISION HISTORY

Rev	DCN No.	Effective Date	Description	Doc Change Requestor
00				