

	Work Instruction	Doc. Revision	01
	AXI V810 XXL Sava Cable Removal and Replacement Procedure	Effective Date	2 Oct 2016

This procedure is applicable to below models:

V810 STD	☐	S1	☐	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	07 Dec 2015	First Release	CHIN CHEE YAN
01	2 Oct 2016	Template Changes & Content Update	ONG KEAN SHENG

	Work Instruction	Doc. Revision	01
	AXI V810 XXL Sava Cable Removal and Replacement Procedure	Effective Date	2 Oct 2016

Content

XXL Sava Cable Removal.....	3
XXL Sava Cable Replacement	5

	Work Instruction	Doc. Revision	01
	AXI V810 XXL Sava Cable Removal and Replacement Procedure	Effective Date	2 Oct 2016

XXL Sava Cable Removal

1. Turn off X-Ray and completely shutdown machine. Close the main power source and air inlet.
MUST close SSCA main power inlet.
2. Open the front access door for ease of R&R process.
3. Lift up the outer barrier access door and place an object to maintain outer barrier at opening position as shown .Remarks: Caution on handling.



Figure 1 Outer barrier

4. Open Outer Barrier by unscrew 2x tamper proof screws as shown for ease of R&R process.

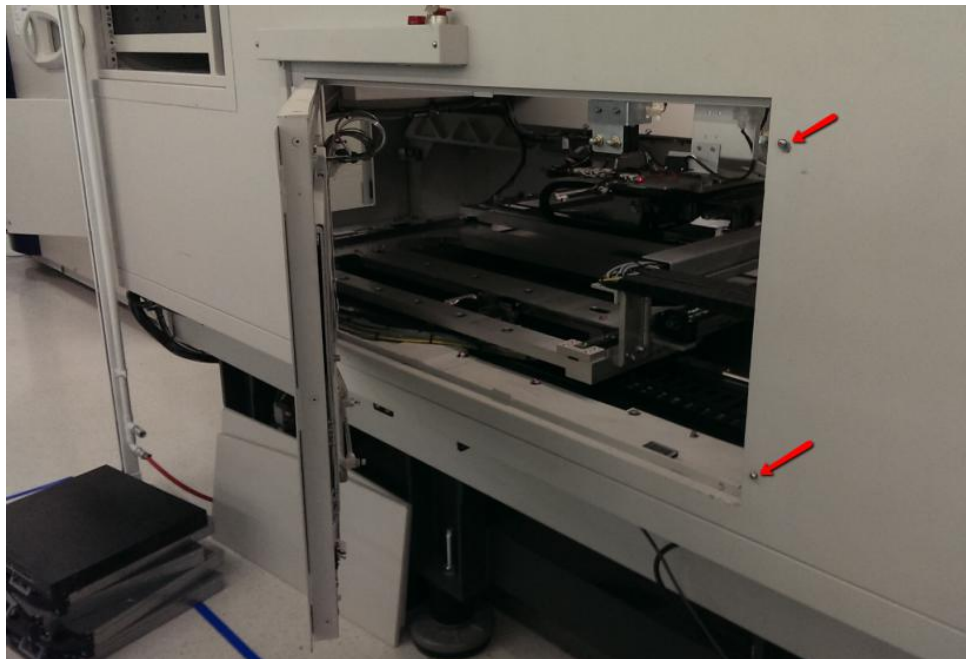


Figure 2 Outer barrier

	Work Instruction	Doc. Revision	01
	AXI V810 XXL Sava Cable Removal and Replacement Procedure	Effective Date	2 Oct 2016

5. Remove 7 x screws as Figure 3 and remove the Inner gate cover assembly from outer barrier.

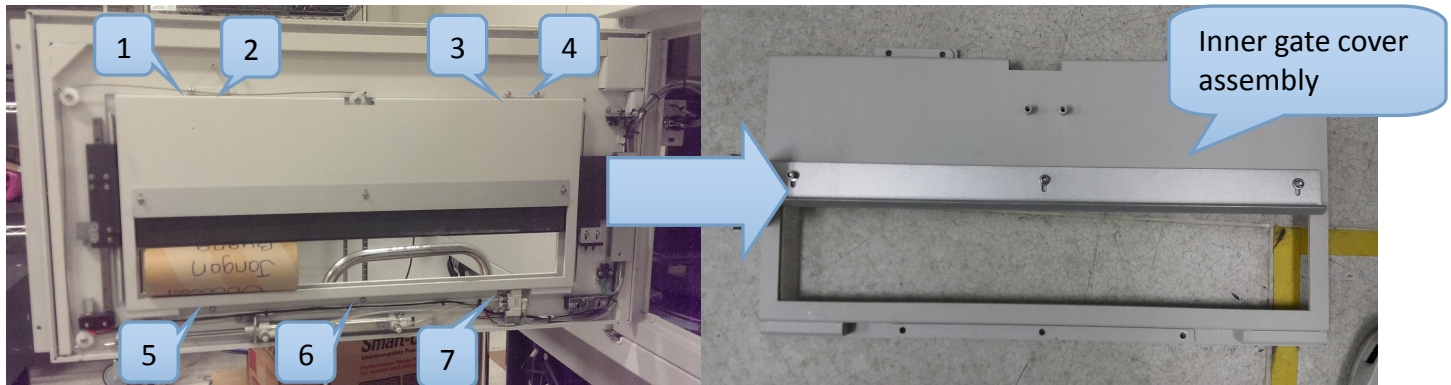


Figure 3 Inner gate cover assembly

6. Unscrew 3 x shoulder screws (M5) and 2 x screws (M5) at OUTER CYLINDER LOCATE BRACKET (P/N, 4LABM-090) as shown. Remove the 4LABM-090 and 3 x Outer Barrier Sava Cable Pulley (P/N, 4XABM-052).

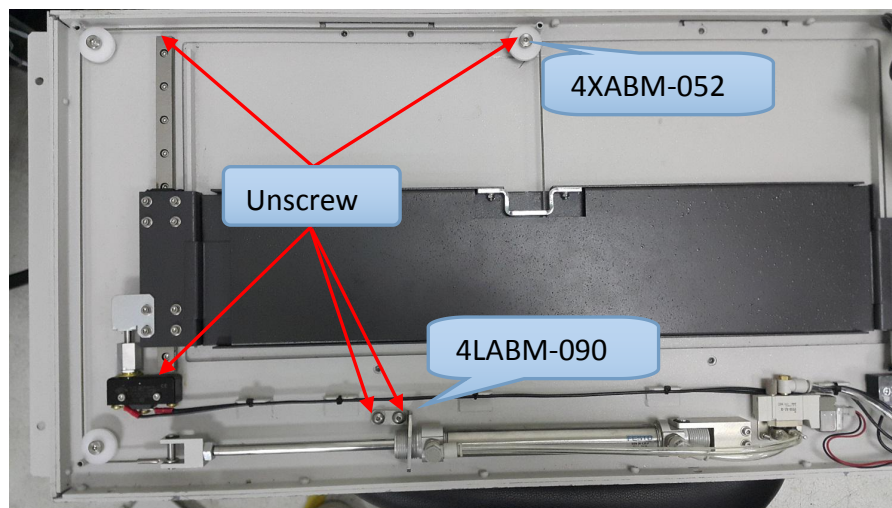


Figure 4

7. Remove the 2 x screws (M3) from the INNER GATE BRACKET (P/N, 4XABM-006) which is holding the end of the OUTER BARRIER SAVA CABLE (P/N, 4LABM-070) as shown. Remove the Sava cable from bracket.

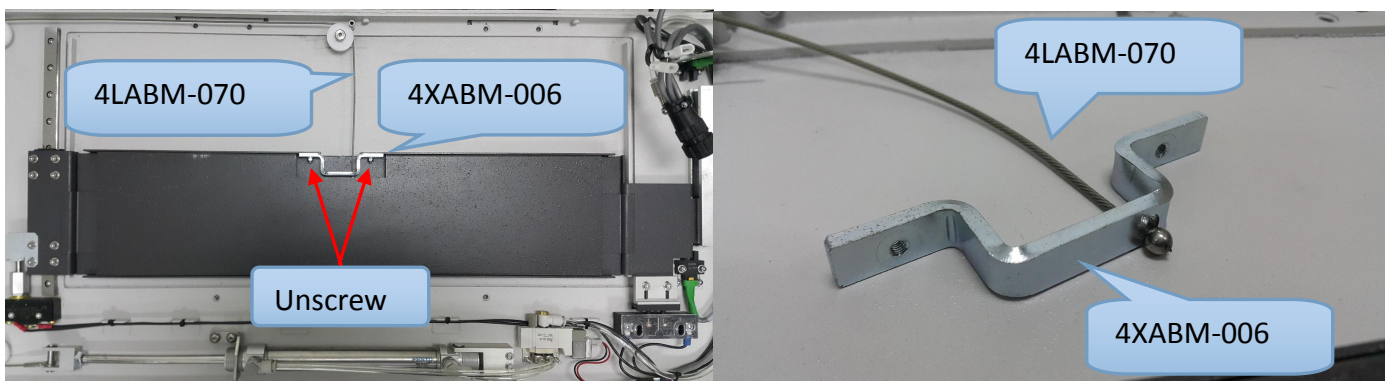


Figure 5

	Work Instruction	Doc. Revision	01
	AXI V810 XXL Sava Cable Removal and Replacement Procedure	Effective Date	2 Oct 2016

8. For another end, use a **C-Clip Plier** to open 1 x c-clip as shown. Gently pull off half stroke of CYLINDER HINGE SHAFT (P/N, 4XABM-055) from OUTER BARRIER CYLINDER PULLER BLOCK (P/N, 4XABM-054) and remove Sava Cable (P/N, 4LABM-070) as shown.

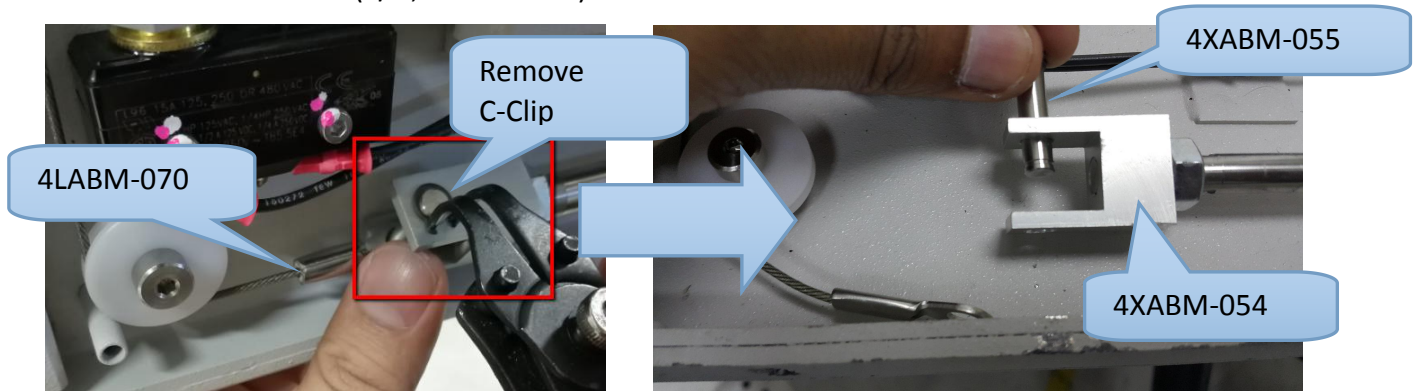


Figure 6

XXL Sava Cable Replacement

9. Prepare a new part OUTER BARRIER SAVA CABLE (P/N, 4LABM-070) as shown.



Figure 7 XXL outer barrier sava cable

10. Insert the end of the new 4LABM-070 into 4XABM-006 slot as shown.

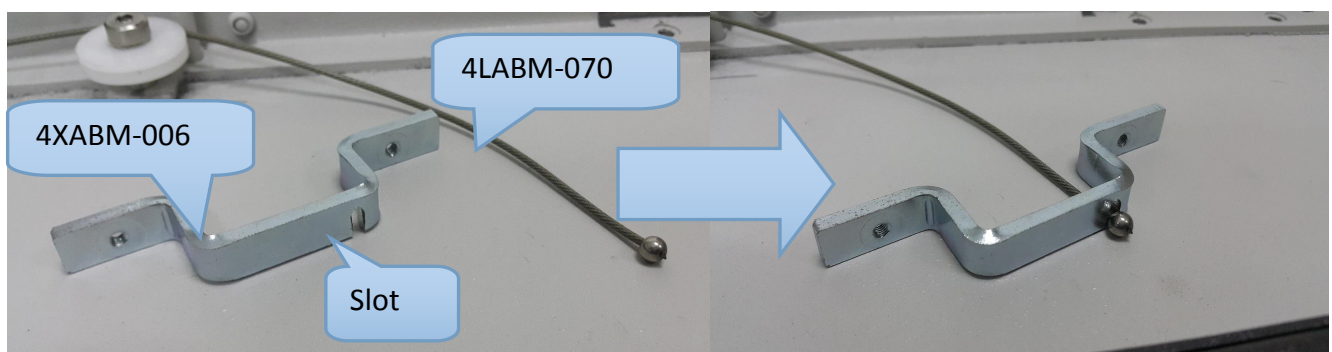


Figure 8

	Work Instruction	Doc. Revision	01
	AXI V810 XXL Sava Cable Removal and Replacement Procedure	Effective Date	2 Oct 2016

11. Install the bracket back into the INNER GATE ASSEMBLY (P/N, 4LABM-A004) as shown. Caution, DO NOT clamp the sava cable and ensure opening slot orientation is towards inner area)

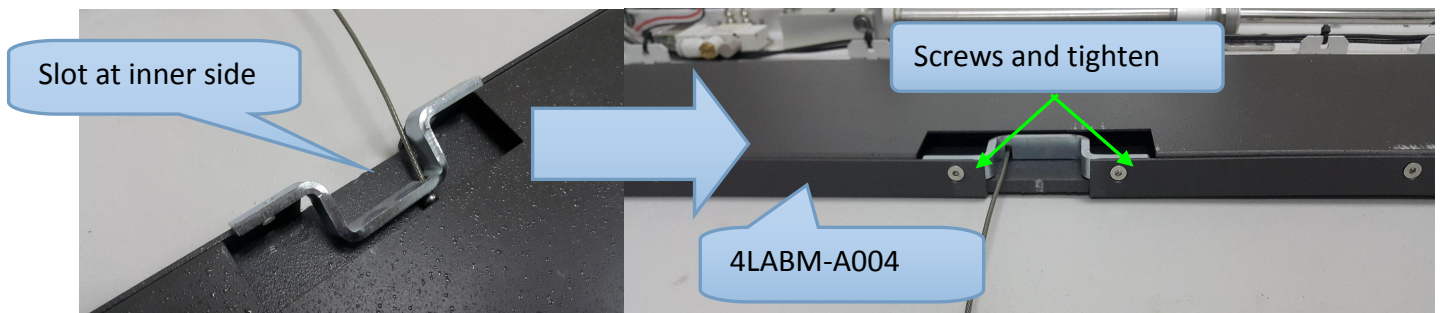


Figure 9

12. Route the Sava cable (P/N, 4LABM-070) as shown.

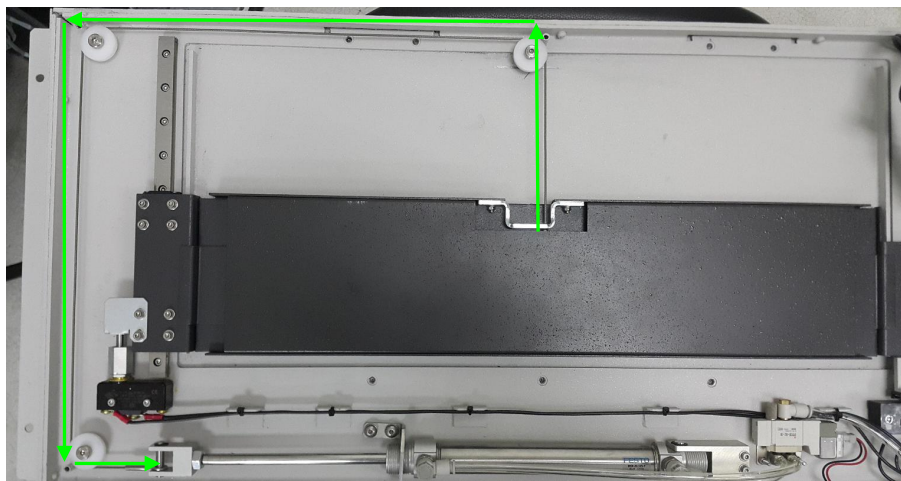


Figure 10 Sava cable routing

13. Install 3 xOuter Barrier Sava Cable Pulley (P/N, 4XABM-052).Sava cable must be within the pulley track.Ensure cable is not friction with stand off point.



Figure 11

	Work Instruction	Doc. Revision	01
	AXI V810 XXL Sava Cable Removal and Replacement Procedure	Effective Date	2 Oct 2016

14. Slot the round clip at other end of the sava cable (P/N :4LABM-070) into the pin CYLINDER HINGE SHAFT (P/N, 4XABM-055) as shown.

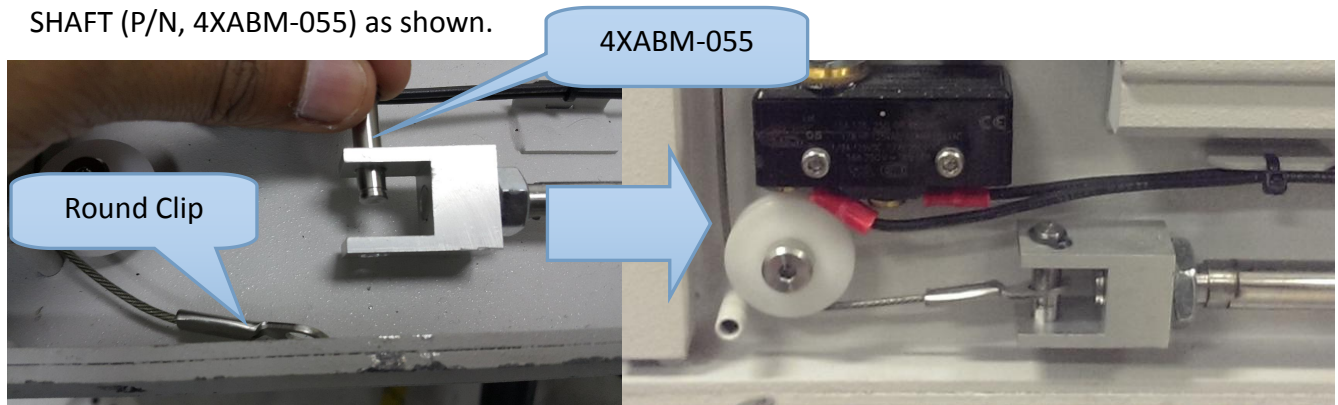


Figure 12

15. By using c-clip plier to lock c-clip at CYLINDER HINGE SHAFT (P/N, 4XABM-055) as shown.

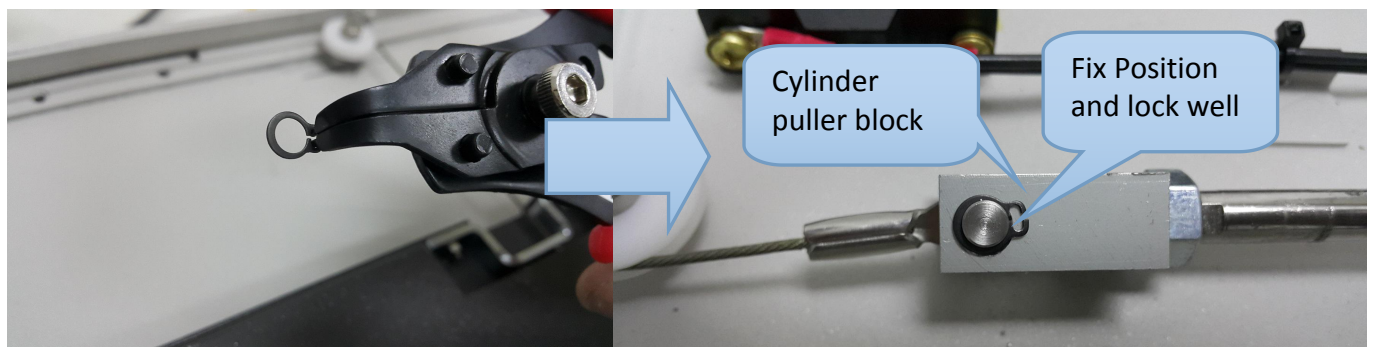


Figure 13

16. Re-assemble the INNER GATE COVER ASSEMBLY (P/N, 4LABM-A027) to outer barrier and tighten all the screws. Caution on Sava cable upon parts assembly

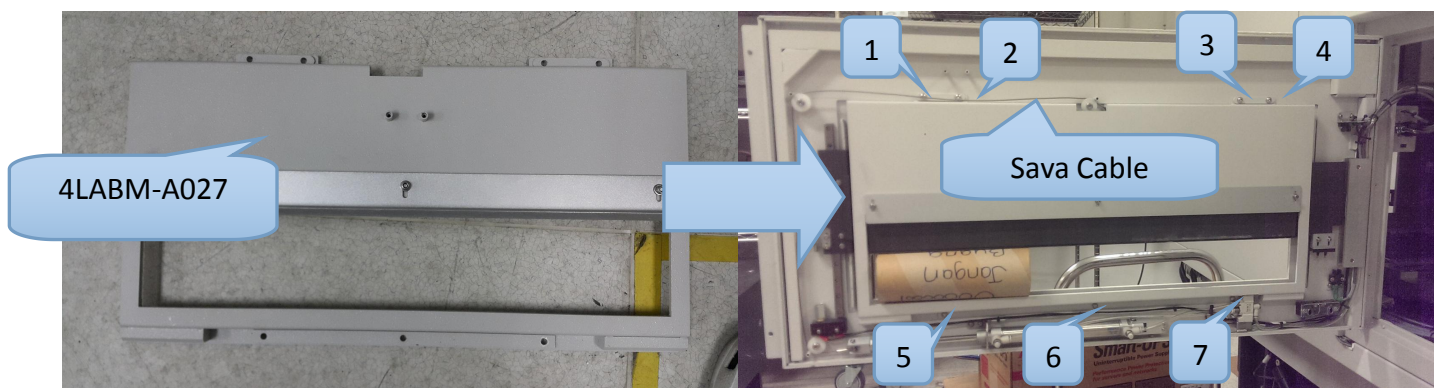


Figure 14

ViTrox	Work Instruction	Doc. Revision	01
	AXI V810 XXL Sava Cable Removal and Replacement Procedure	Effective Date	2 Oct 2016

17. Re-assembly the OUTER CYLINDER LOCATE BRACKET (P/N, 4LABM-090) back to origin position and tighten the screws. Then rotate the OUTER BARRIER CYLINDER PULLER BLOCK (P/N, 4XABM-054) as shown to avoid friction with outer barrier.

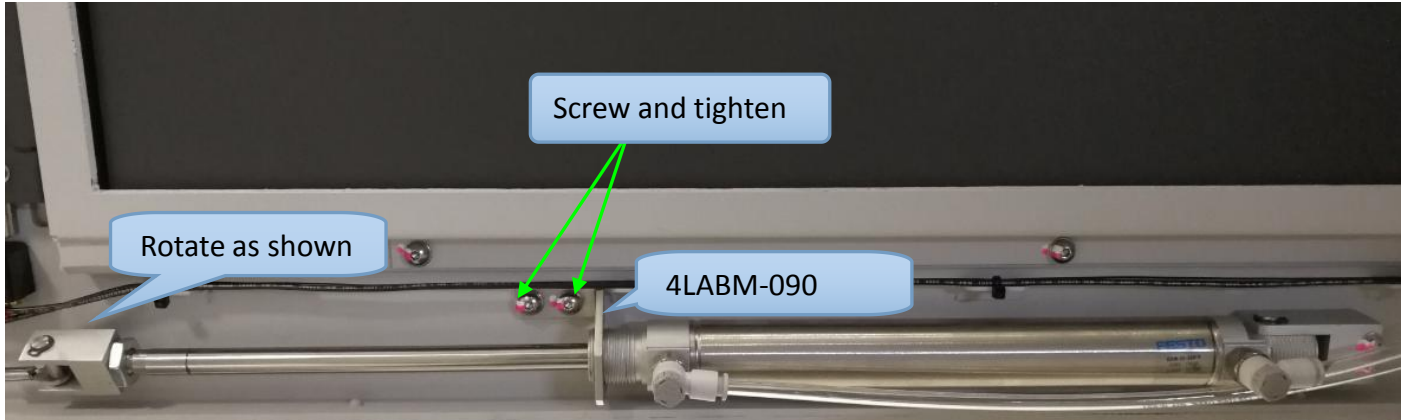


Figure 15

18. Remove the holder.



Figure 17

	Work Instruction	Doc. Revision	01
	AXI V810 XXL Sava Cable Removal and Replacement Procedure	Effective Date	2 Oct 2016

19. Turn on Incoming Air Pressure and power on machine.

20. Open/Close Outer Barrier at Digital IO Page.

21. Visual Check save cable by refer to below criteria.

a) No friction during movement.

b) No Gap at Inner gate assembly upon barrier closing.

Remarks :Slightly adjust 4XABM-054 position to adjust if gaping is encounter

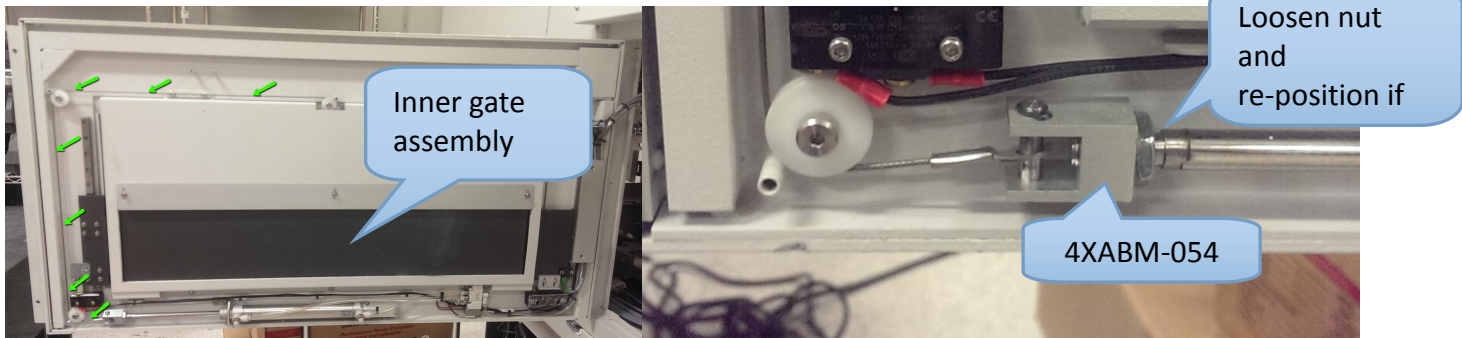


Figure 18

22. Gently close the outer barrier at its respective place and tighten 2 x tamper proof screws.

23. Ensure all tools and parts remove from machine internal stage and close the main front access door.

24. Turn on the x-ray and perform x-ray survey.

25. Start-up machine as usual.