

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0039) Replacement Procedure	Effective Date	12 Sep 2017

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	12 Sep 2017	First Release	ONG KEAN SHENG

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0039) Replacement Procedure	Effective Date	12 Sep 2017

Content

Trigger Board Power Supply Removal.....	3
Trigger Board Power Supply Replacement.....	10

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0039) Replacement Procedure	Effective Date	12 Sep 2017

Trigger Board Power Supply Removal

1. Turn Off X Ray Source
2. Power Off entire machine
3. Turn Off Trigger Board Power Switch (PDU Rear Area). Unplug the power cord as well as below
Figure 1



Figure 1

4. Unscrew and remove TOP, TRIGGER BOX (P/N, 4XACM-007).

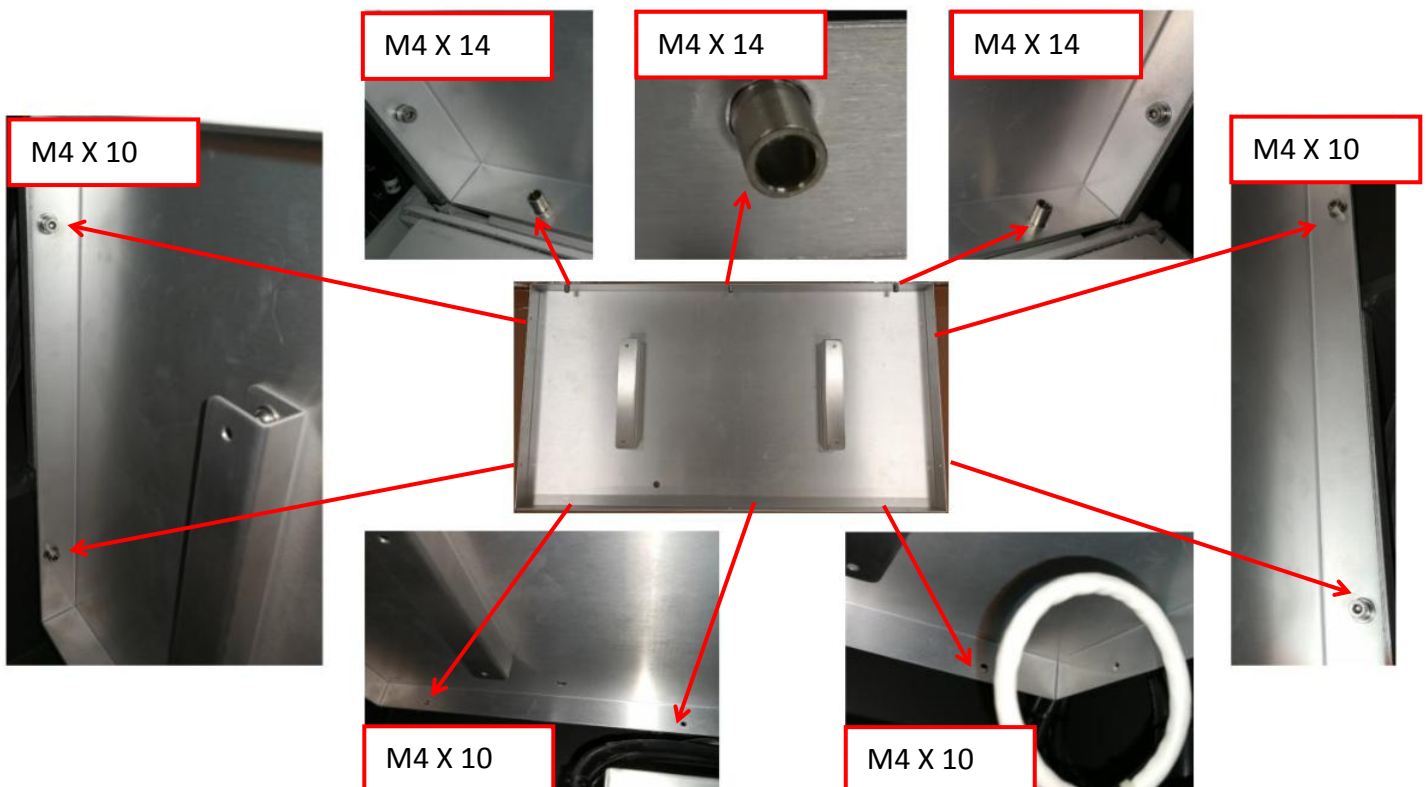


Figure 2 Trigger board Tray Cover removal

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0039) Replacement Procedure	Effective Date	12 Sep 2017

5. Disconnect 14 x Fire Wires from Embedded System Support MISC Board-Trigger Board 1 Input Channel 12 Output Channels ports (P/N, 2210-0016) as Figure 3.



Figure 3 Trigger board

6. Disconnect the power cable from J424v connector as Figure 4.

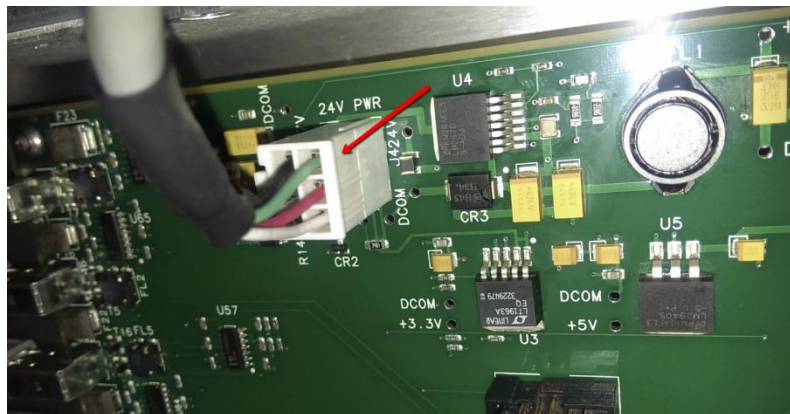


Figure 4 Trigger board power removal

7. Use a short slotted screwdriver unscrew and disconnect the CABLE, TRIGGER IO, DBN 15 (P/N, 4XASC-A039) cable from Trigger Board as Figure 5.

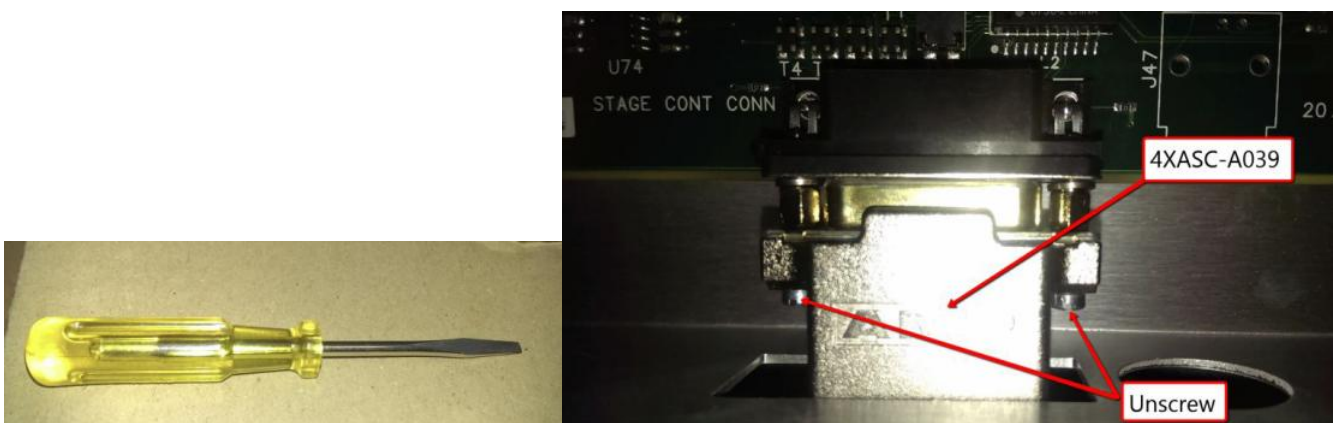


Figure 5 Connector removal

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0039) Replacement Procedure	Effective Date	12 Sep 2017

8. Remove Life, Neutral & Ground Cable From Trigger Board Power Switch as below Figure 6

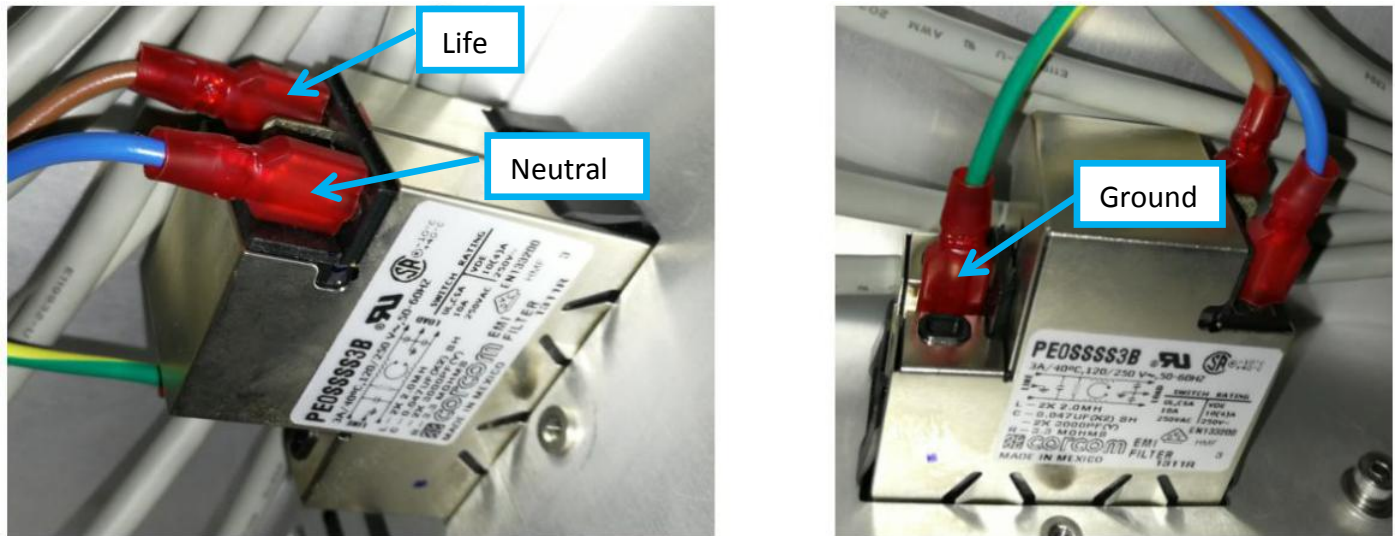


Figure 6 Power cable removal

9. Gently press on both side of Power Switch simultaneously by using Flat Head Screw Driver & remove accordingly.

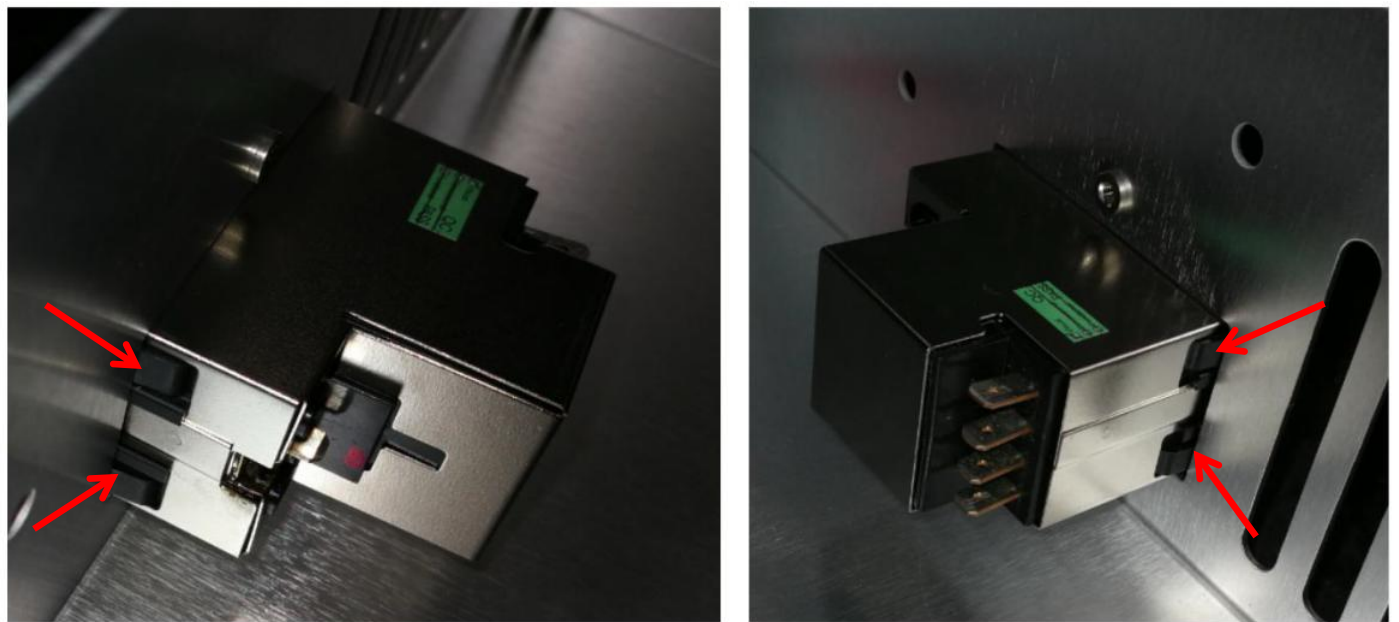


Figure 7 Power switch removal

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0039) Replacement Procedure	Effective Date	12 Sep 2017

10. Loosen 5 x screws at Trigger Board Tray as below Figure 8

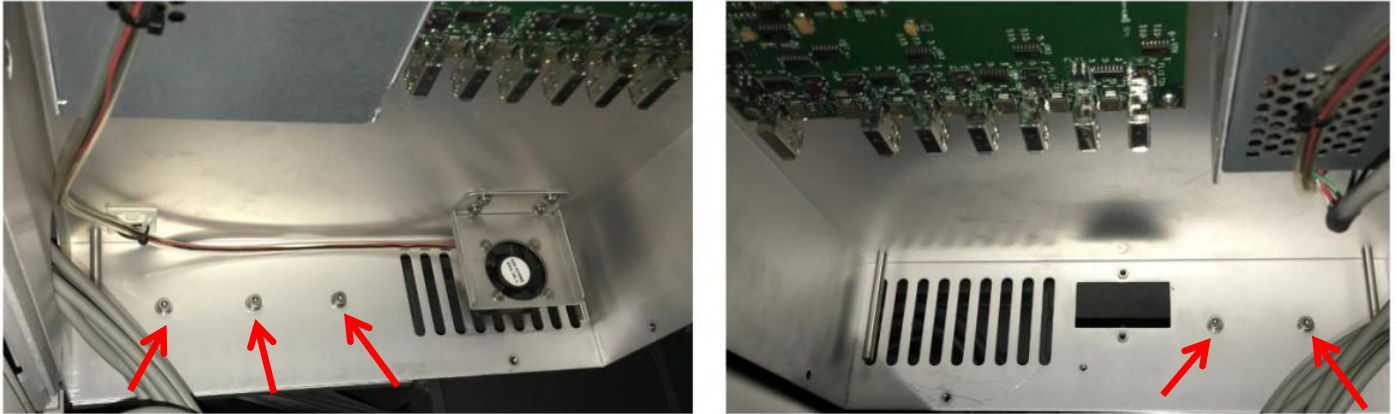


Figure 8 Trigger Board Tray removal

11. Gently remove 14 x Fire Wire through both tray opening as below Figure 9

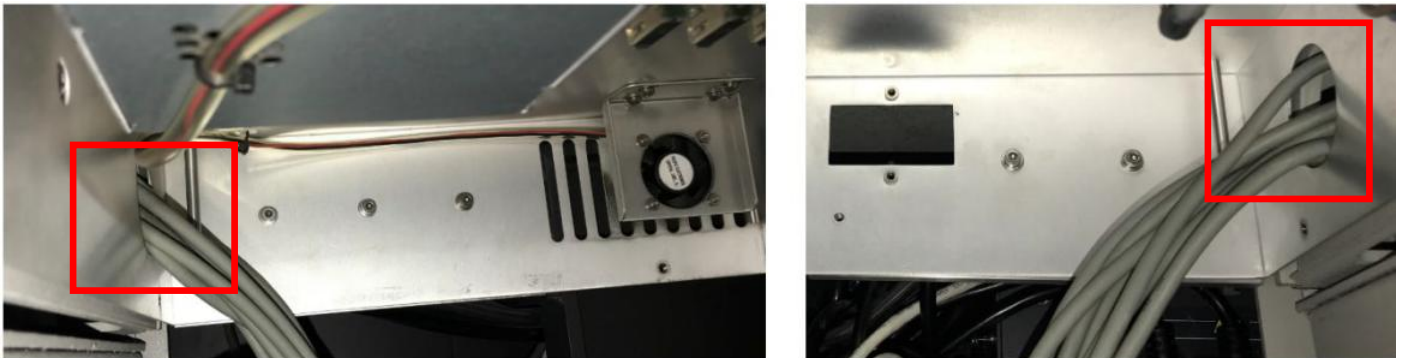


Figure 9 Fire Wire removal

12. Gently remove entire Trigger Board Tray to visible location

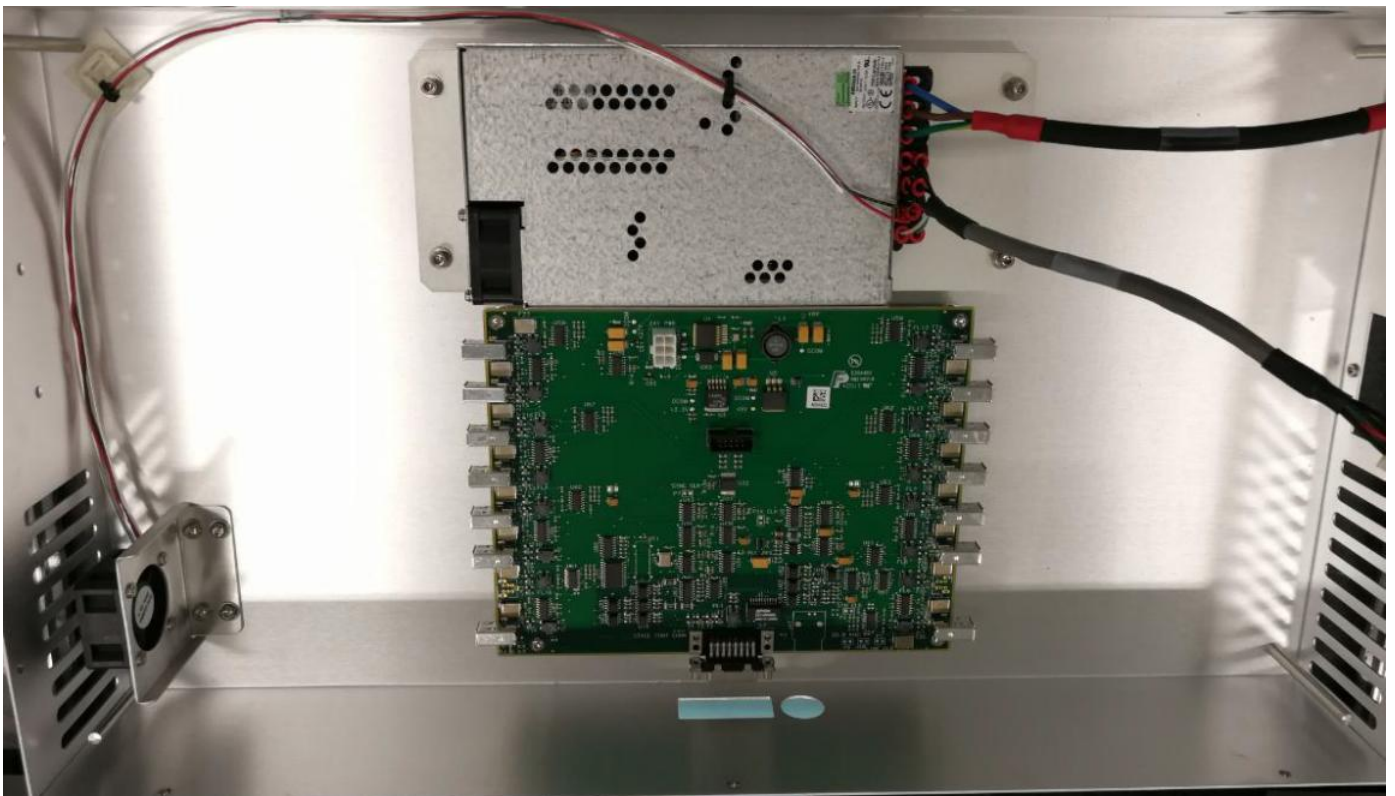


Figure 10 Trigger Board Tray

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0039) Replacement Procedure	Effective Date	12 Sep 2017

13. Loosen 4 x Screws to remove Trigger Board Power Supply Adapter as below Figure 11.

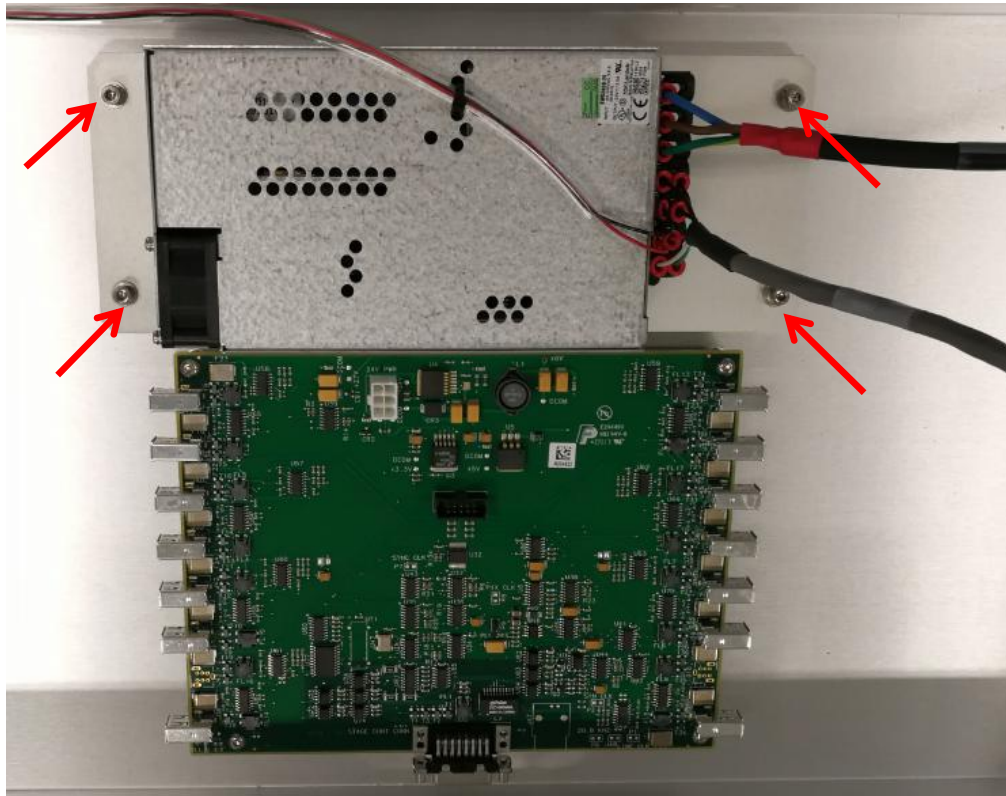


Figure 11 Trigger Board Power Supply Adapter removal

14. Flip the Trigger Power Supply Adapter. Loosen 2 x Screws to remove Trigger Power Supply Adapter as Figure 12

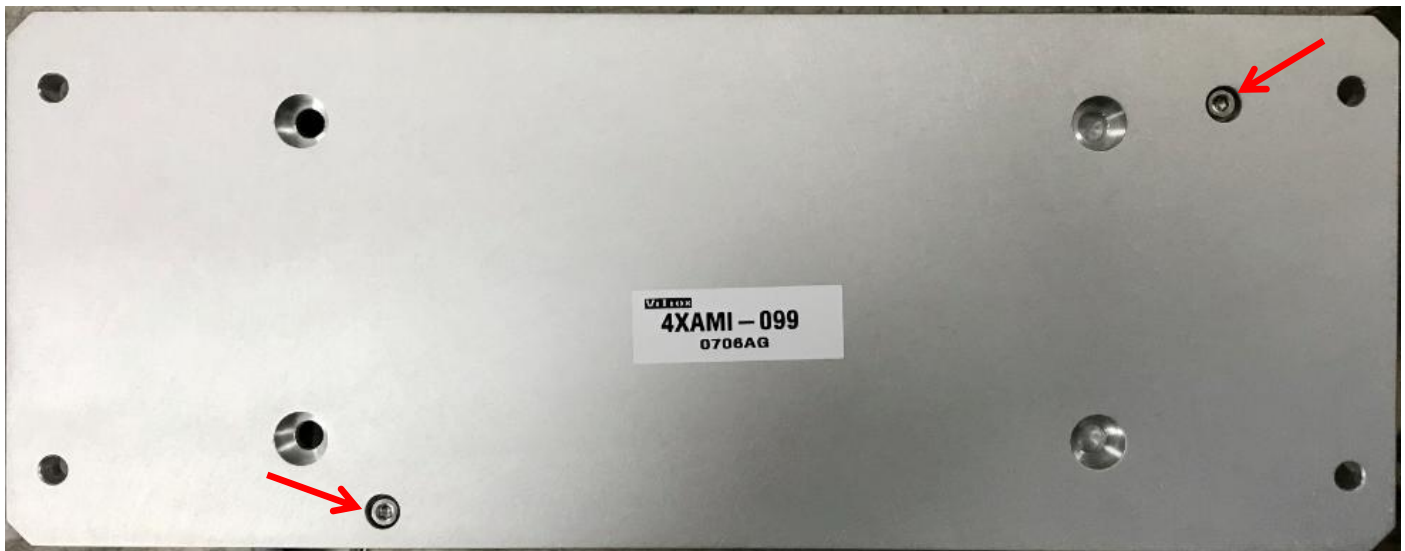


Figure 12 Trigger Board Power Supply removal

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0039) Replacement Procedure	Effective Date	12 Sep 2017

15. Remove Cable Ties at Trigger Board Power Supply Convection Casing as below Figure 13

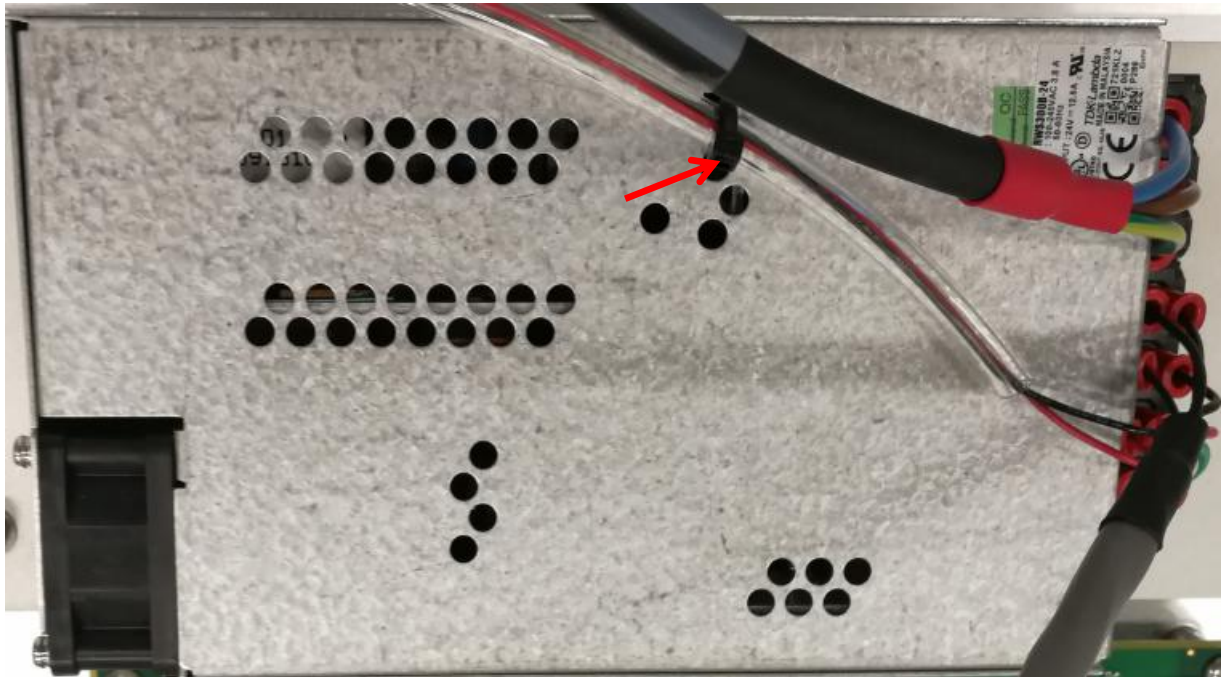


Figure 13 Cable Tie removal

16. Remove Ventilation Fan Power Cable from Trigger Board Power Supply as below Figure 14

Remarks : May identify through Ventilation Fan Routing Or Tubing Protector.

Perform Marking upon cable removal

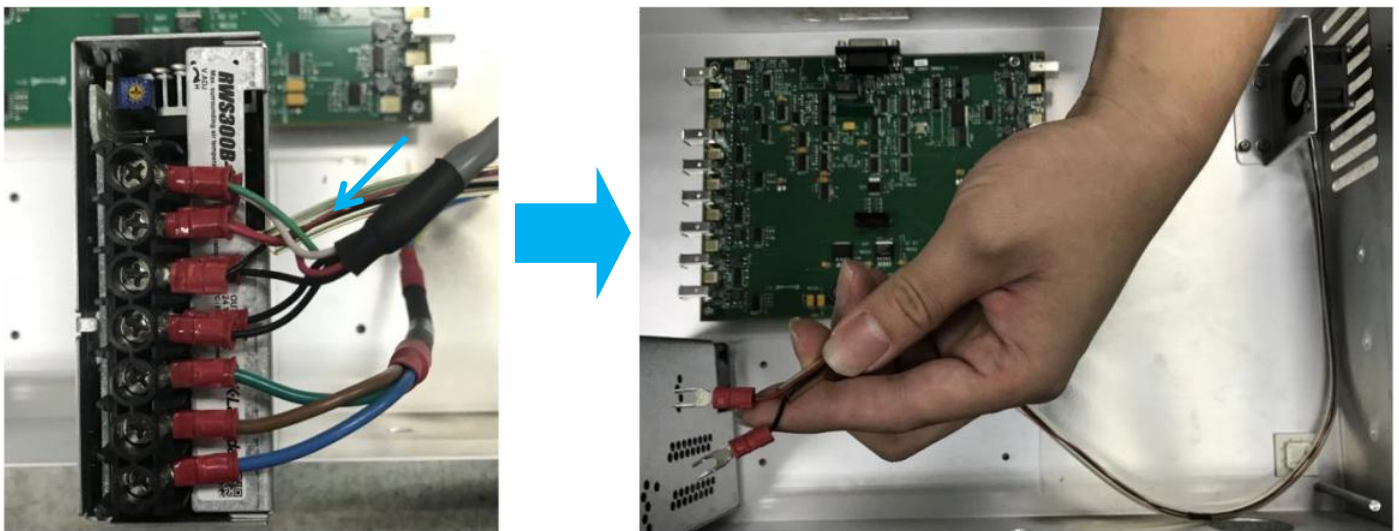


Figure 14 Ventilation Fan Power Cable Removal

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0039) Replacement Procedure	Effective Date	12 Sep 2017

17. Remove Trigger Board End Power Cable from Power Supply as below Figure 15

Remarks : Perform Marking upon cable removal

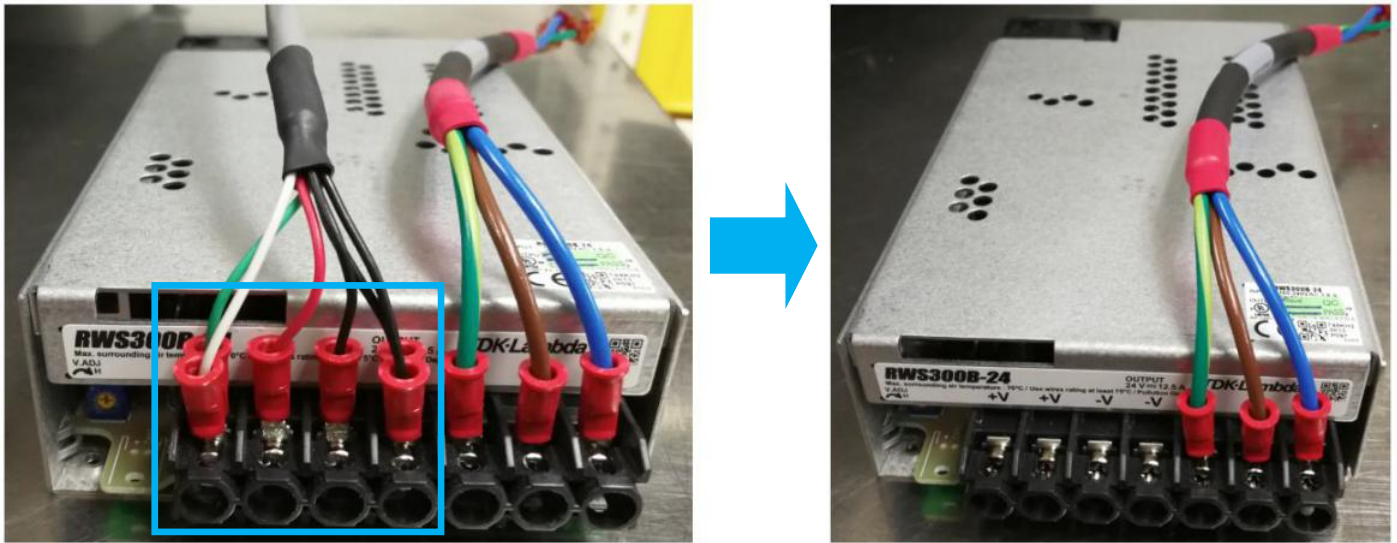


Figure 15 Trigger Board End Power Cable removal

18. Remove Power Switch Cable from Power Supply as below Figure 16

Remarks : Perform Marking upon Cable Removal

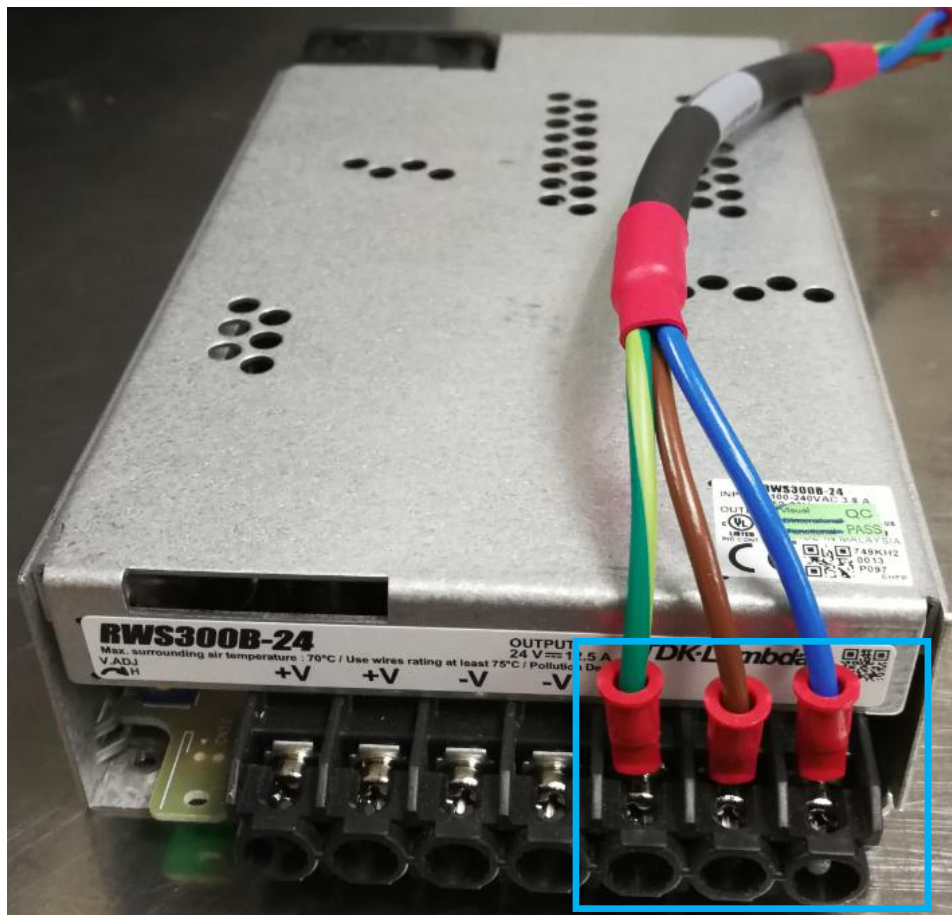


Figure 16 Power Switch Cable Removal

Trigger Board Power Supply Replacement

1. Prepare below parts :

AC/DC CONVERTER 24V 300W (P/N, 2140-0039) - Figure 17



Figure 17 Trigger Board Power Supply

2. Connect Power Switch Cable to Trigger Board Power Supply by refer to below Table 1.

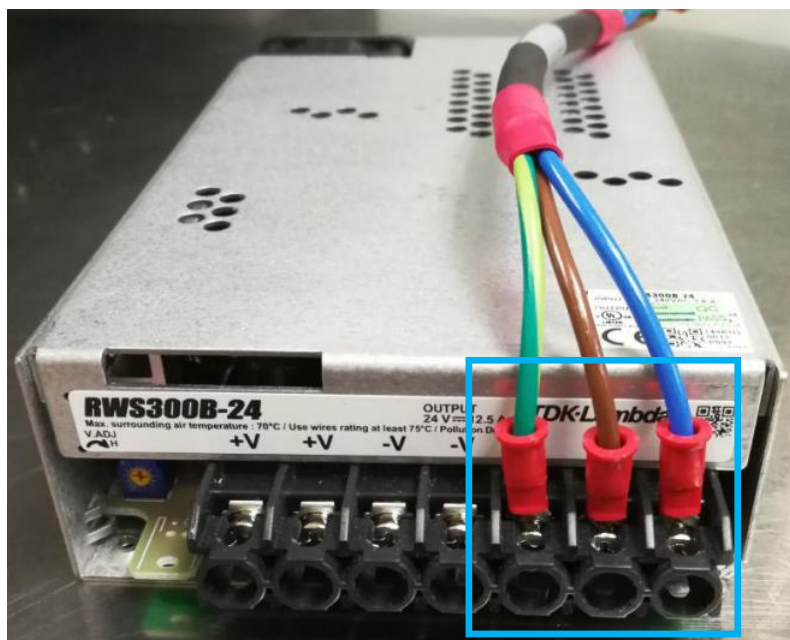


Figure 18 Power Switch Cable Connection

Power Switch Cable	Ground (Green)	Life (Brown)	Neutral (Blue)
Trigger Board Power Supply		L	N

Table 1

3. Connect Trigger Board End Power Cable to Power Supply by refer to Table 2

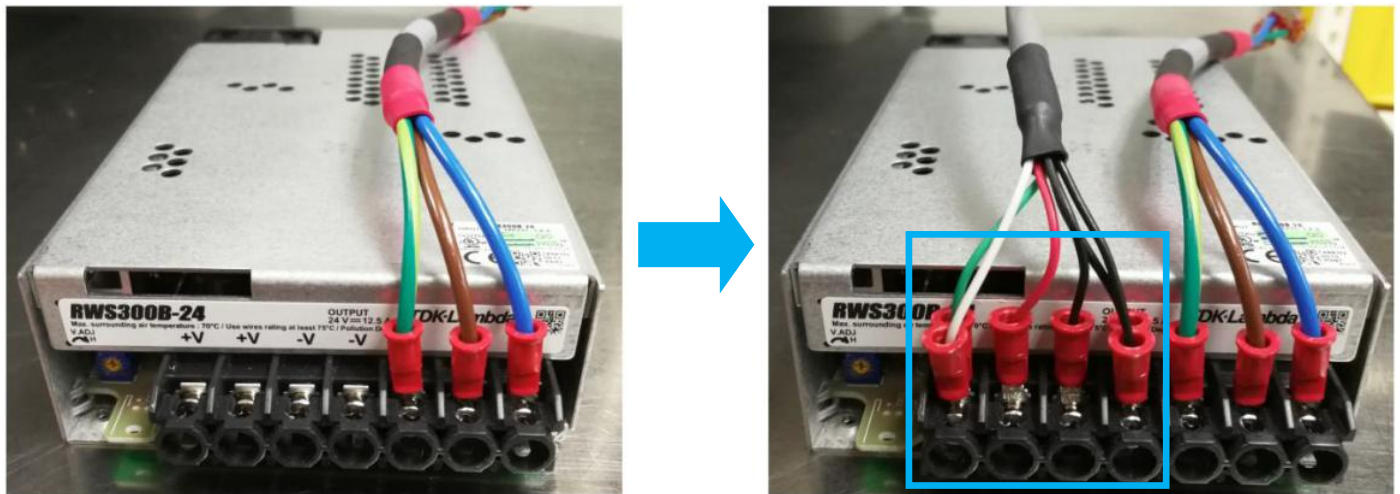


Figure 19 Trigger Board End Power Cable Connection

Trigger Board End Power Cable Colour	Green & White	Red	Black	Black & Black
Trigger Board Power Supply	+V	+V	-V	-V

Table 2

4. Connect Ventilation Fan Power Cable to Trigger Board Power Supply by refer to Table 3 (Red Colour Highlight)

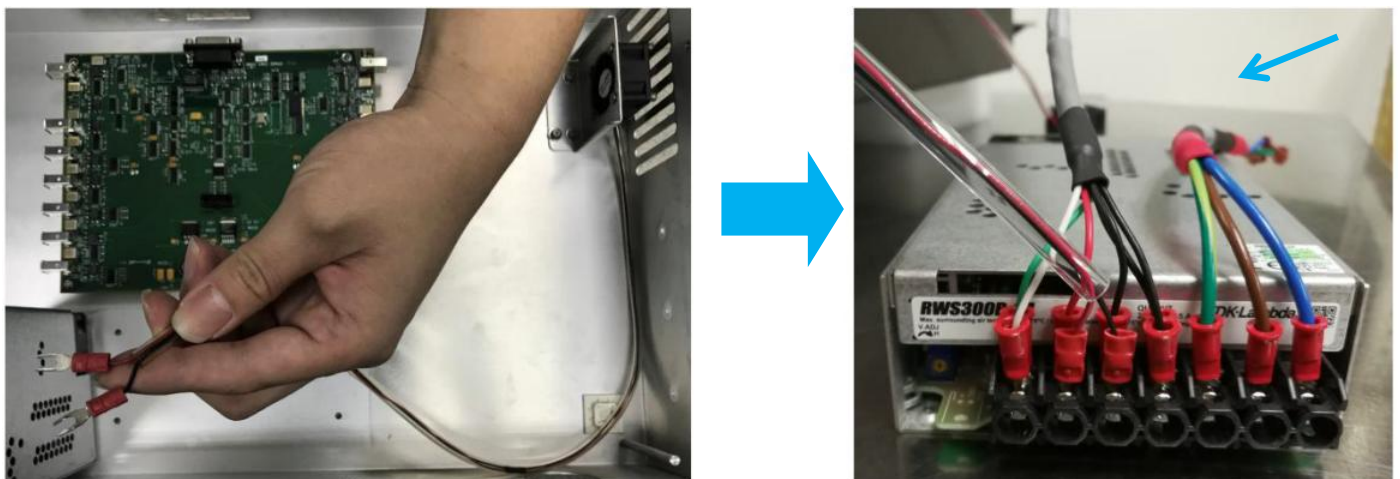


Figure 20 Ventilation Fan Power Cable Connection

Ventilation Fan Power Cable	NA	Red	Black	NA
Trigger Board Power Supply	+V	+V	-V	-V

Table 3

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0039) Replacement Procedure	Effective Date	12 Sep 2017

5. Flip the Power Supply Adapter. While attach New Trigger Board Supply to Adapter, tighten below fastening kit as below Figure 21

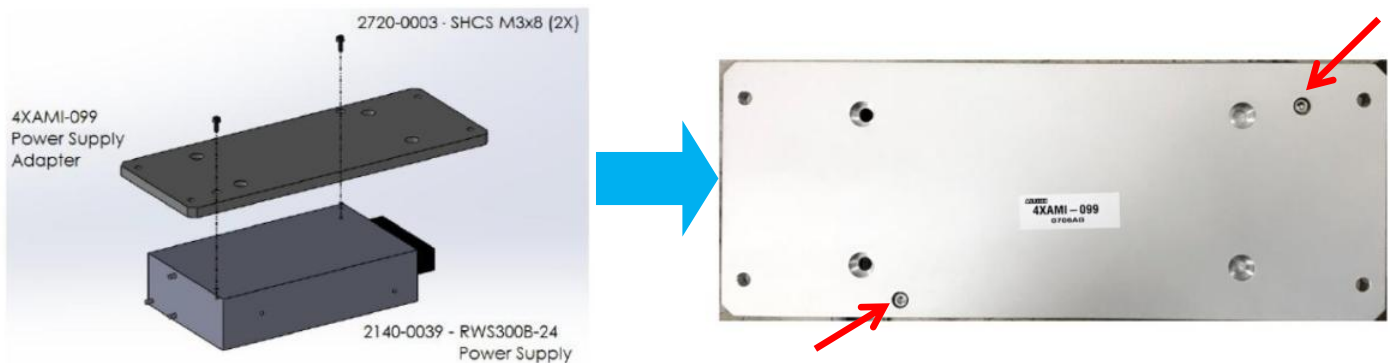


Figure 21 Trigger Board Adapter Assembly

6. Assemble Trigger Board Power Supply & Adapter at Trigger Board Tray as below Figure 22. Tighten 4 pcs M4 x 12 Screws & M4 Spring Locks

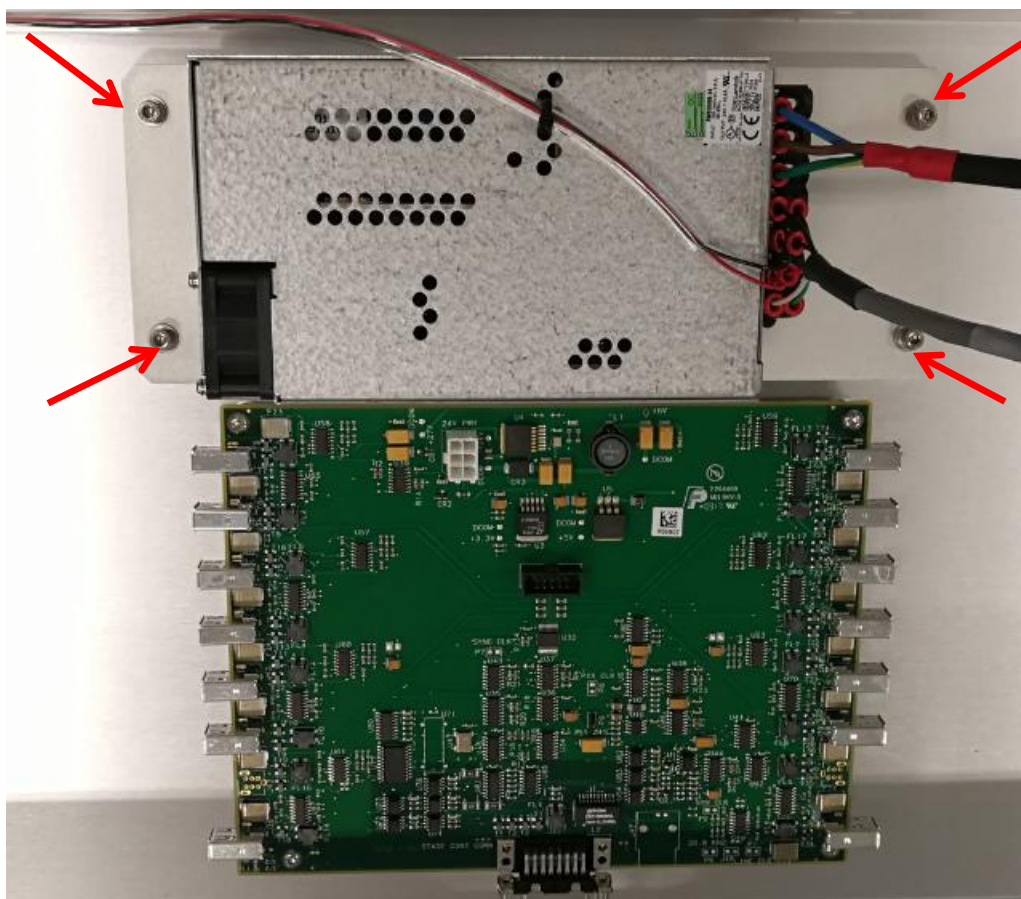


Figure 22 Trigger Board Power Supply & Adapter Assembly

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0039) Replacement Procedure	Effective Date	12 Sep 2017

7. Secure Ventilation Fan Power Cable with Cable Ties at Trigger Board Power Supply Convection Casing as below Figure 23



Figure 23

8. Assemble entire Trigger Board Tray to origin location. Tighten 5 x screws at Trigger Board Tray as below Figure 24

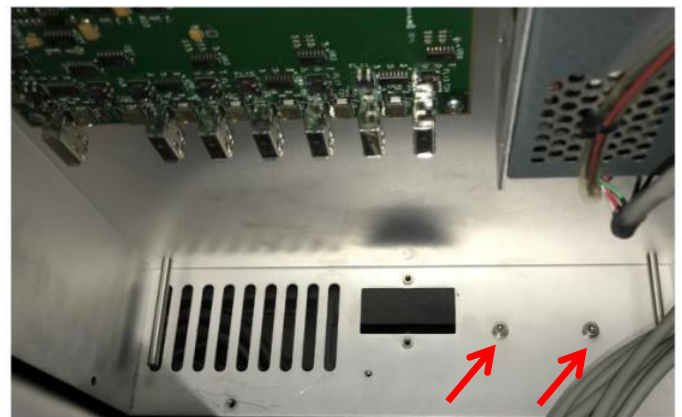
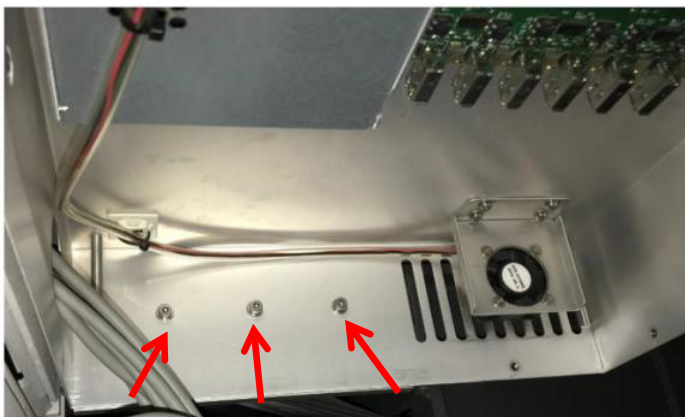


Figure 24 Trigger Board Tray assembly

9. Gently pull 14 x Fire Wire into both tray opening as below Figure 25

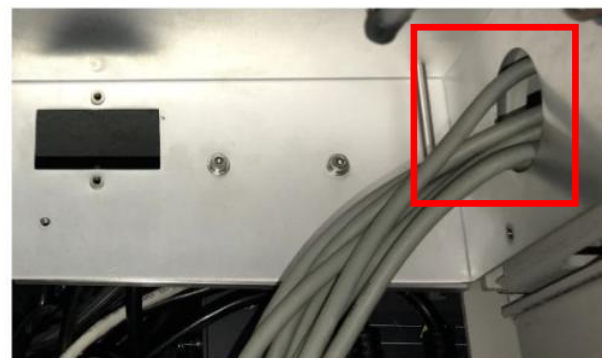
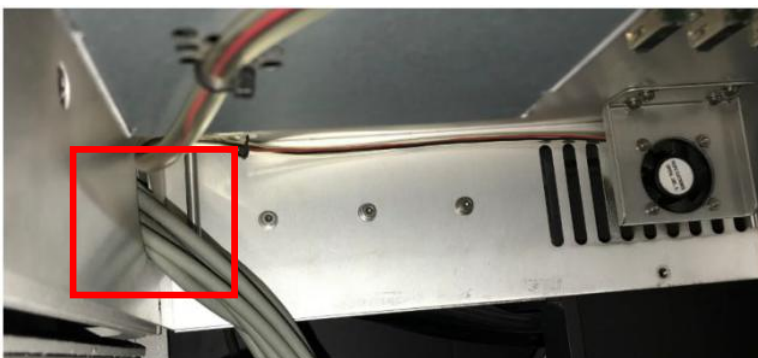


Figure 25 Retrieve 14 X Fire Wire

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0039) Replacement Procedure	Effective Date	12 Sep 2017

10. Gently connect the Power Switch by refer to below orientation to Trigger Board Tray. Connect the Power Cord as well as Figure 26

Remarks : May assemble from external



Figure 26 Power Switch assembly

11. Connect Power Switch Ground Cable into Power Switch Ground Slot as below Figure 27



Figure 27 Power Switch Ground Cable connection

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0039) Replacement Procedure	Effective Date	12 Sep 2017

12. Connect Power Switch Life & Neutral Cable into Power Switch by refer to below orientation. May refer to Figure 28

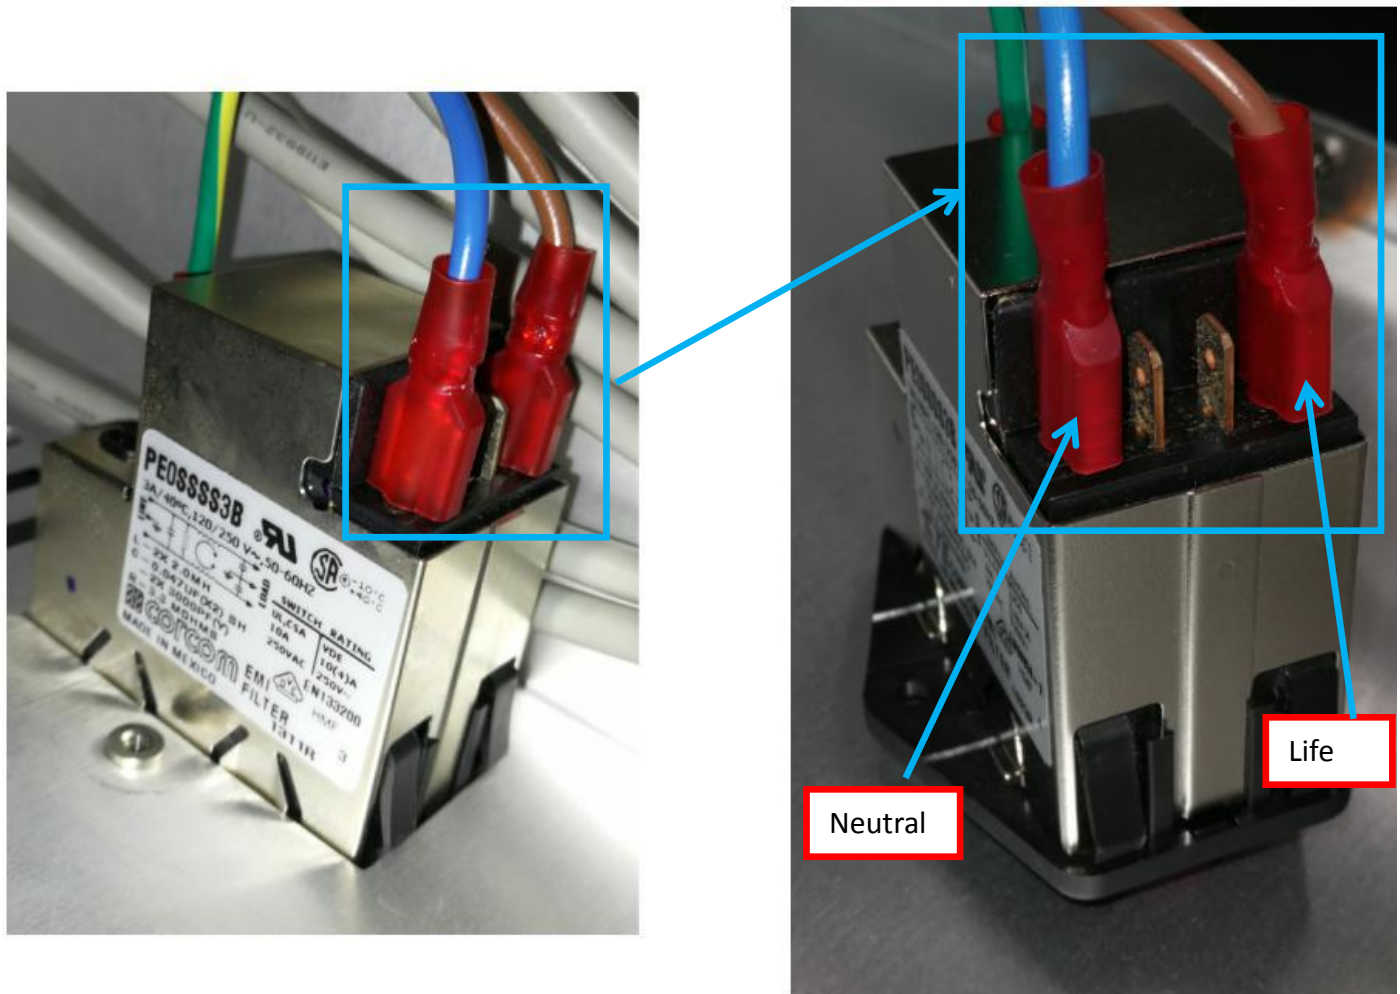


Figure 28 Power Switch Power Cable connection

13. Connect the CABLE, TRIGGER IO, DBN 15 (P/N, 4XASC-A039) cable into Trigger Board as Figure 29

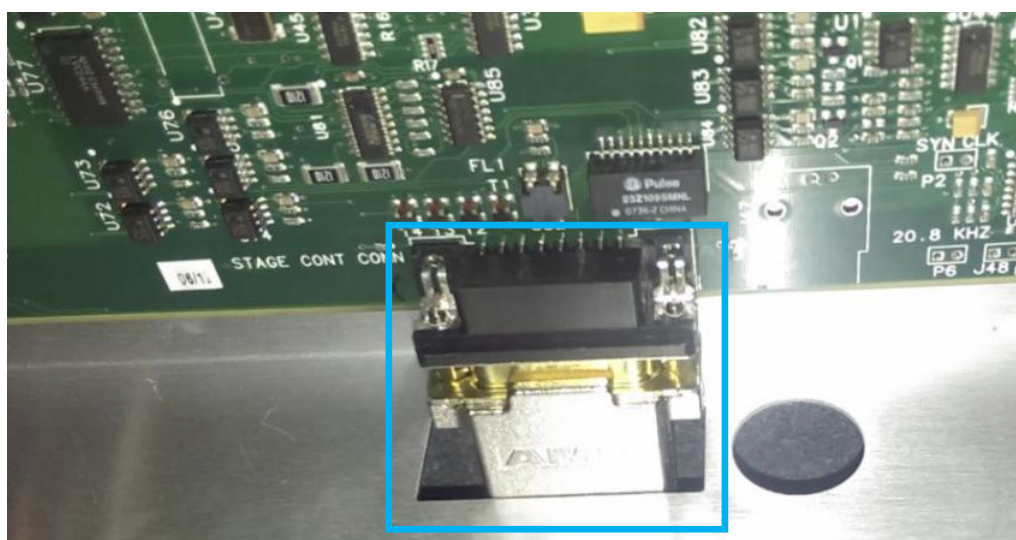


Figure 29 Trigger Board IO Cable connection

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0039) Replacement Procedure	Effective Date	12 Sep 2017

14. Connect Trigger Board Power Cable End Connector into Trigger Board (J424v Connector Slot) as
Figure 30

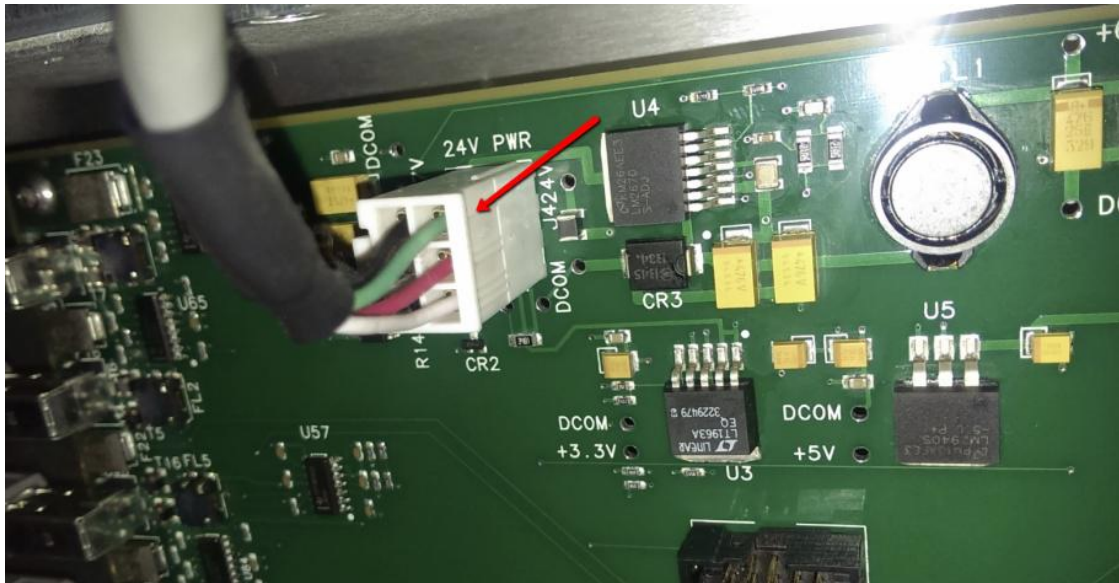


Figure 30 Trigger Board Power Connector

15. Connect 14 x Fire Wires into Trigger Board Fire Wire Port as below Figure 31

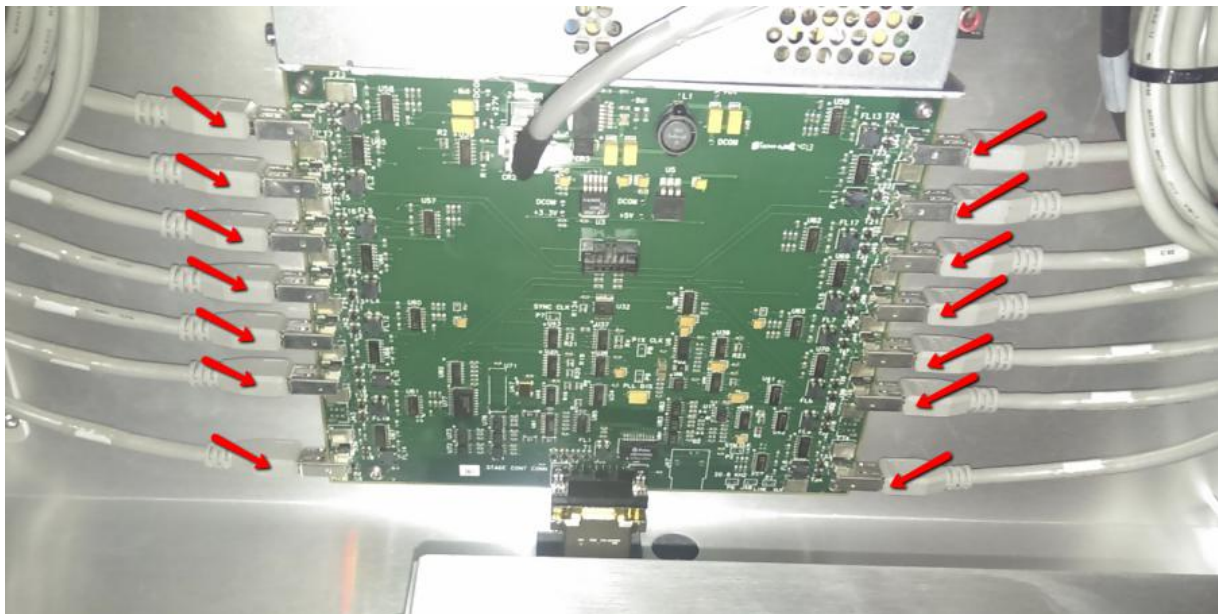


Figure 31 Fire Wire connection

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0039) Replacement Procedure	Effective Date	12 Sep 2017

16. Assemble the TOP, TRIGGER BOX (P/N, 4XACM-007) back to origin position. Tighten 9 x Screws.

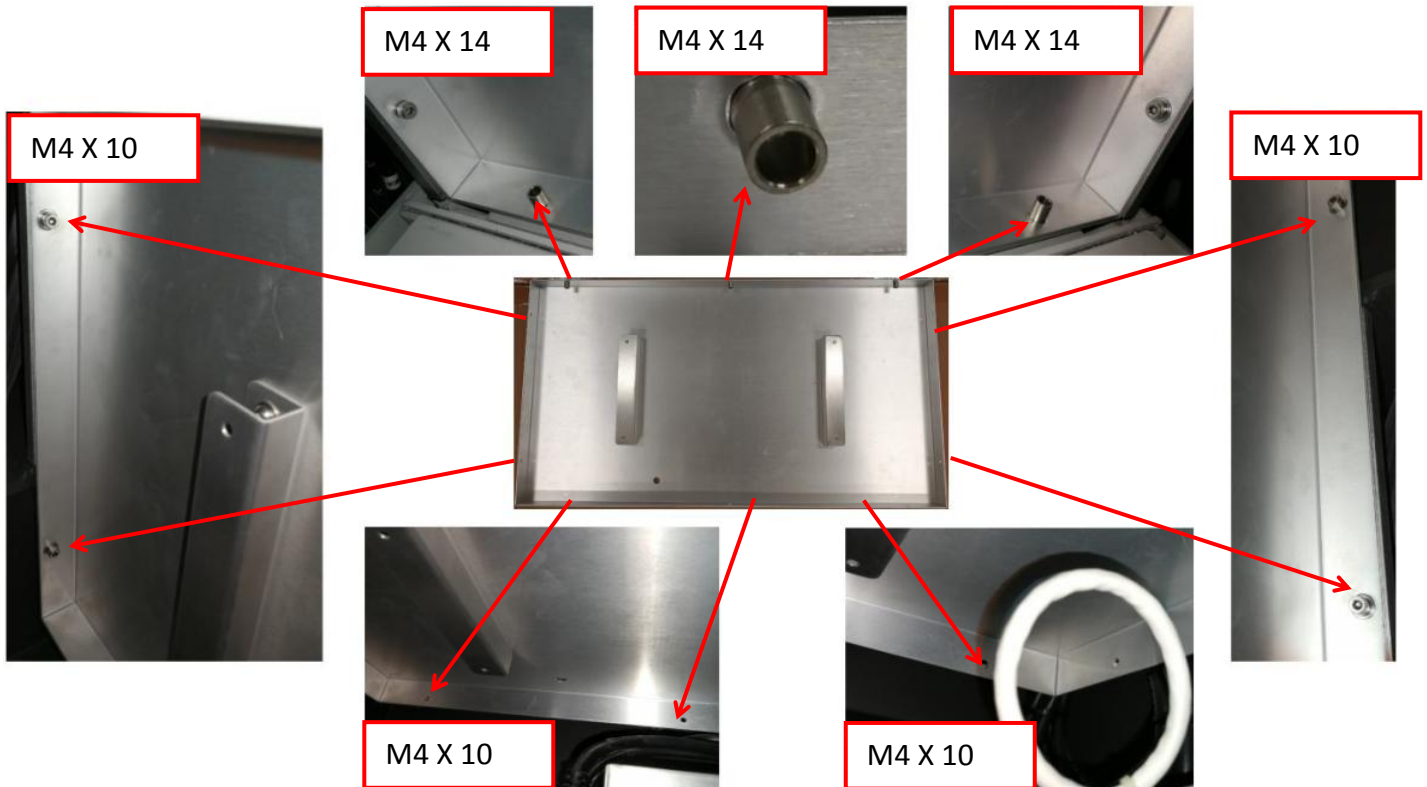


Figure 32 Trigger Board Tray Cover assembly

17. Power-up machine as usual.

18. Run 1 loop of C D & A