

	Work Instruction	Doc. Revision	00
	AXI V810 Clamper Speed Controller Fitting Removal & Replacement Procedure	Effective Date	30 May 2017

This procedure is applicable to below models:

V810 STD	☐	S1	☐	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	30 May 2017	First Release	Tan Liang Kai

	Work Instruction	Doc. Revision	00
	AXI V810 Clamper Speed Controller Fitting Removal & Replacement Procedure	Effective Date	30 May 2017

Content

Adjustable Rail Clamper Speed Controller Fitting.....	3
Clamper speed controller fitting removal.....	3
Clamper speed controller fitting replacement.....	4
Fixed Rail Clamper Speed Controller Fitting.....	6
Clamper speed controller fitting removal.....	6
Clamper opening speed controller fitting replacement.....	7

	Work Instruction	Doc. Revision	00
	AXI V810 Clamper Speed Controller Fitting Removal & Replacement Procedure	Effective Date	30 May 2017

Adjustable Rail Clamper Speed Controller Fitting

Clamper speed controller fitting removal

1. Turn off X-ray source & Air Pressure Regulator
2. Perform Marking at Tubing. Remove 4 x Tubing & 2 x Screws as shown in Figure 1

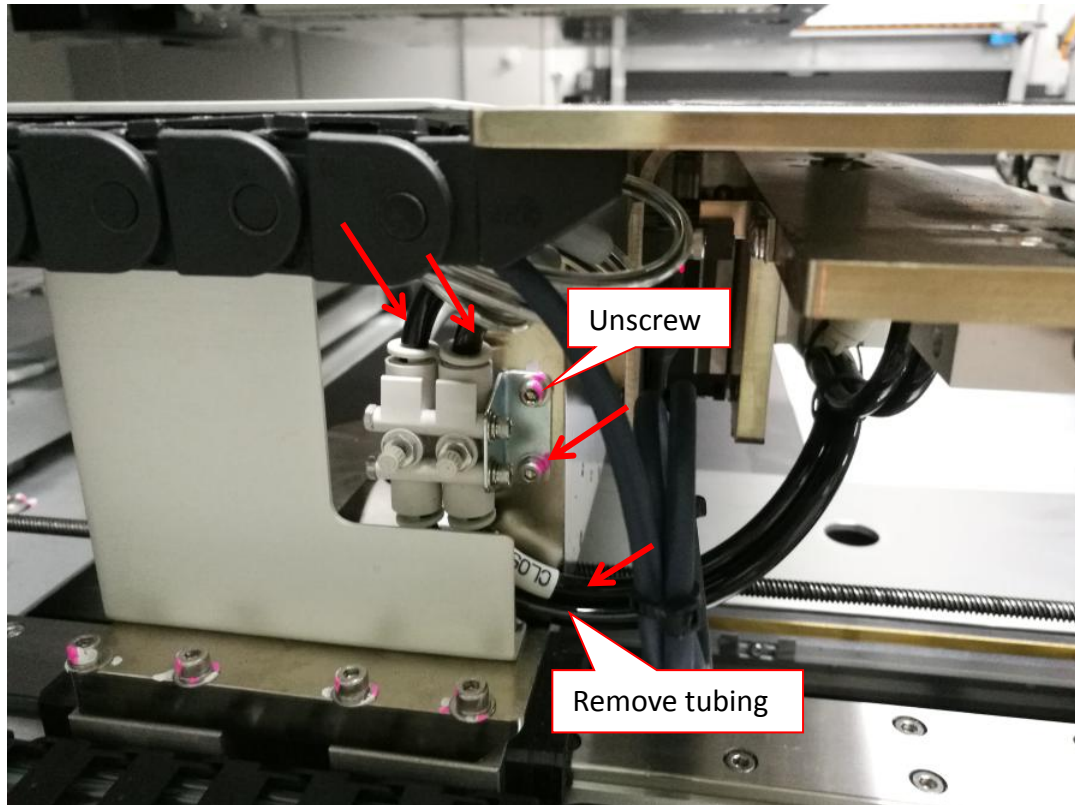


Figure 1 Tubing Removal

3. Loosen 2 x Screws & remove defective Speed Controller Fitting as shown in Figure 2

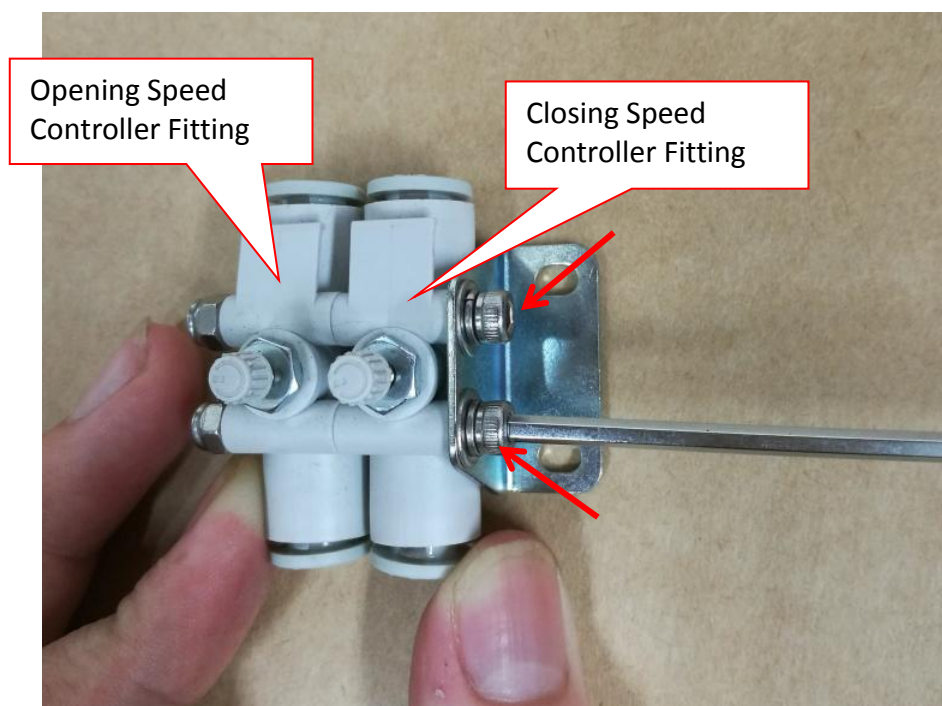


Figure 2 Speed Controller Fitting Removal

	Work Instruction	Doc. Revision	00
	AXI V810 Clamper Speed Controller Fitting Removal & Replacement Procedure	Effective Date	30 May 2017

Clamper speed controller fitting replacement

4. Prepare 1 x Speed Controller Fitting (PN : 2820-0060)
5. Assemble Speed Controller Fitting & tighten-up 2 x Screws as shown in Figure 3

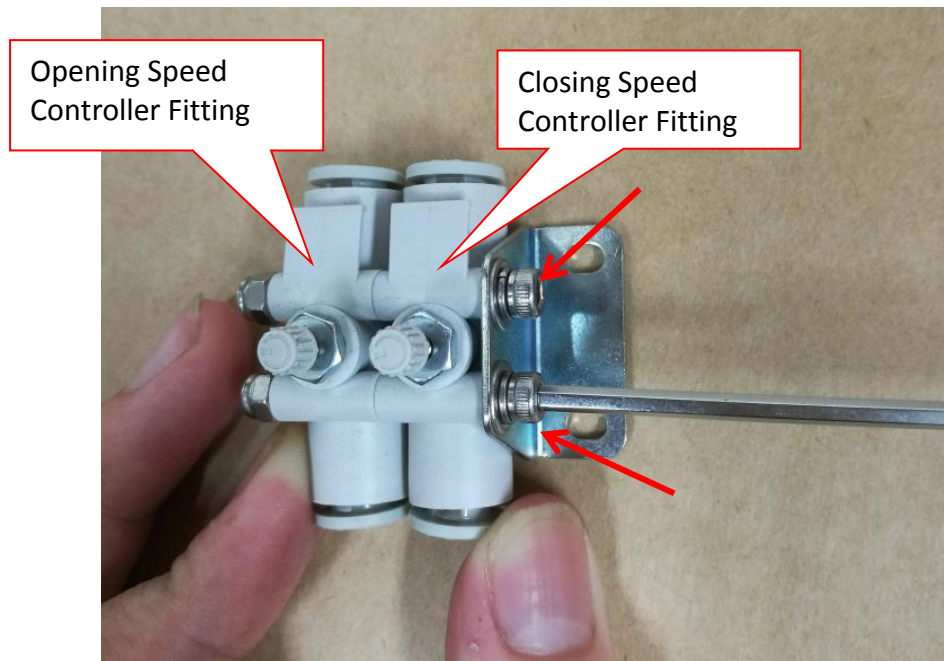


Figure 3 Speed Controller Fitting Assembly

6. Assemble Speed Controllers at Adj Rail. Plug 4x tubing accordingly by refer previous marking. Tighten-up 2 x screws as shown in Figure 4.

Special remarks : Speed Controller Fin Orientation require face upwards

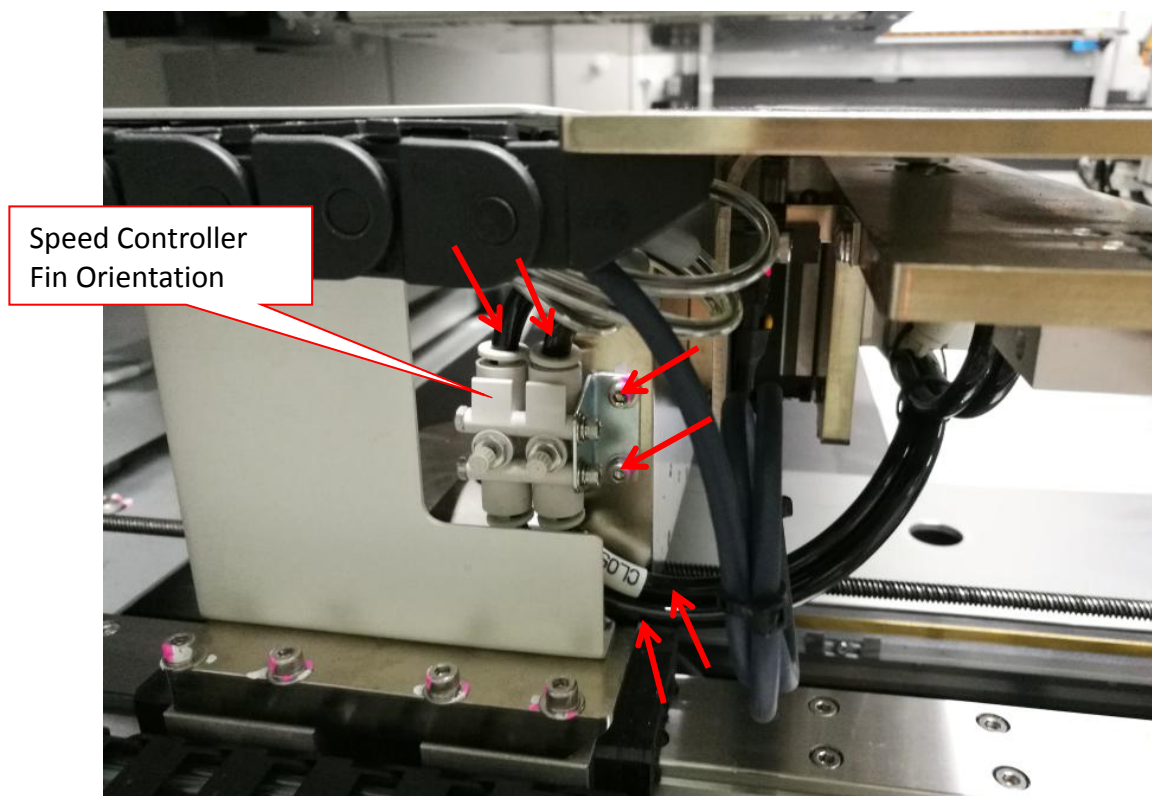


Figure 4 Speed Controller Fitting Assembly

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 Clamper Speed Controller Fitting Removal & Replacement Procedure	Effective Date	30 May 2017

7. Turn on Air Pressure Supply.
8. Go to Panel Handling & Initialize. Manually open left outer barrier.
9. Manually Clamp & Unclamp as shown in Figure 5

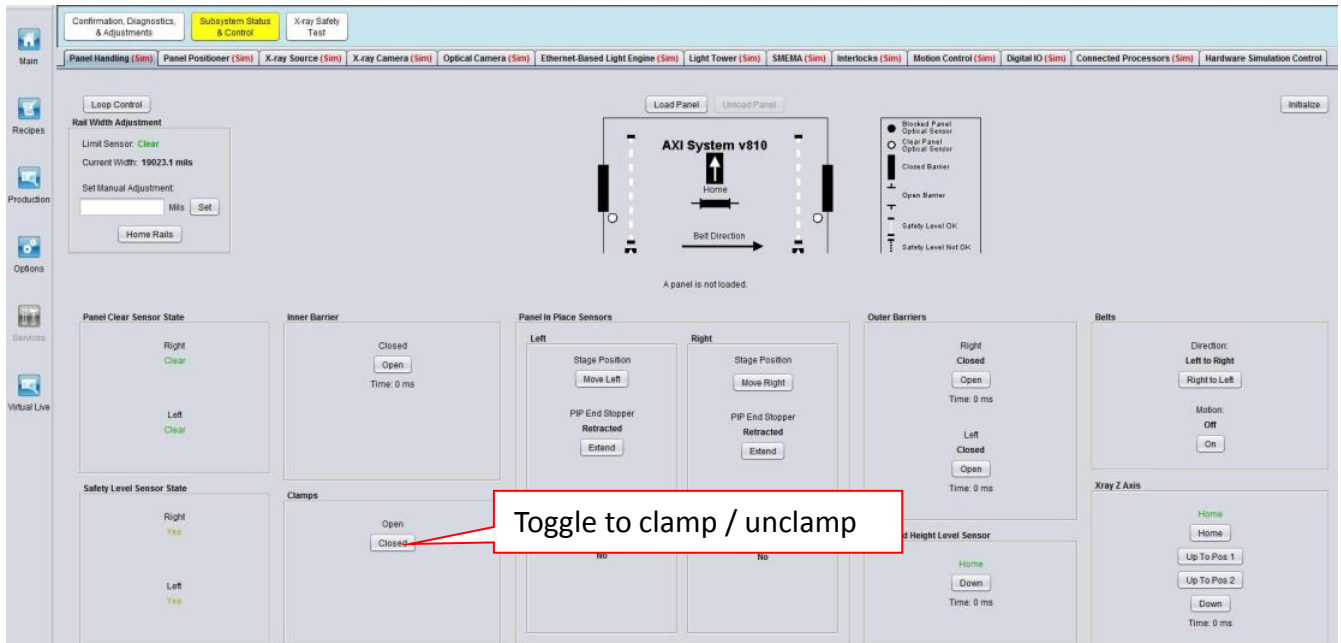


Figure 5 Clamping & Unclamping

10. Visual check on Clamping Movement at Fixed and Adjustable Rail Clamper where must synchronize at both side. Adjust speed controller fitting if there is a necessary

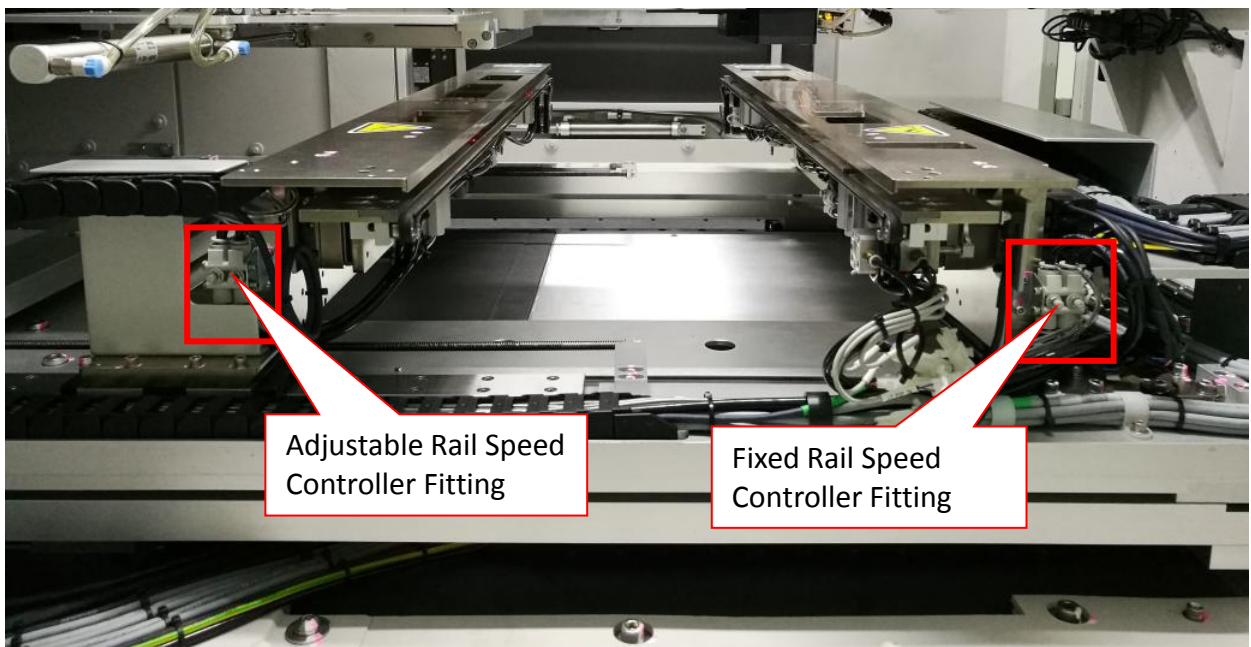


Figure 6 Clamping & unclamping speed adjustment

11. Close front access doors & turn on x-ray source.
12. Run 3 loops of CD&A.

	Work Instruction	Doc. Revision	00
	AXI V810 Clamper Speed Controller Fitting Removal & Replacement Procedure	Effective Date	30 May 2017

Fixed Rail Clamper Speed Controller Fitting

Clamper speed controller fitting removal

13. Turn off X-ray source & Air Pressure Regulator
14. Open Front Access Doors.
15. Perform Marking at Tubing. Remove x 2 screws & 4 x Tubing as shown in Figure 7

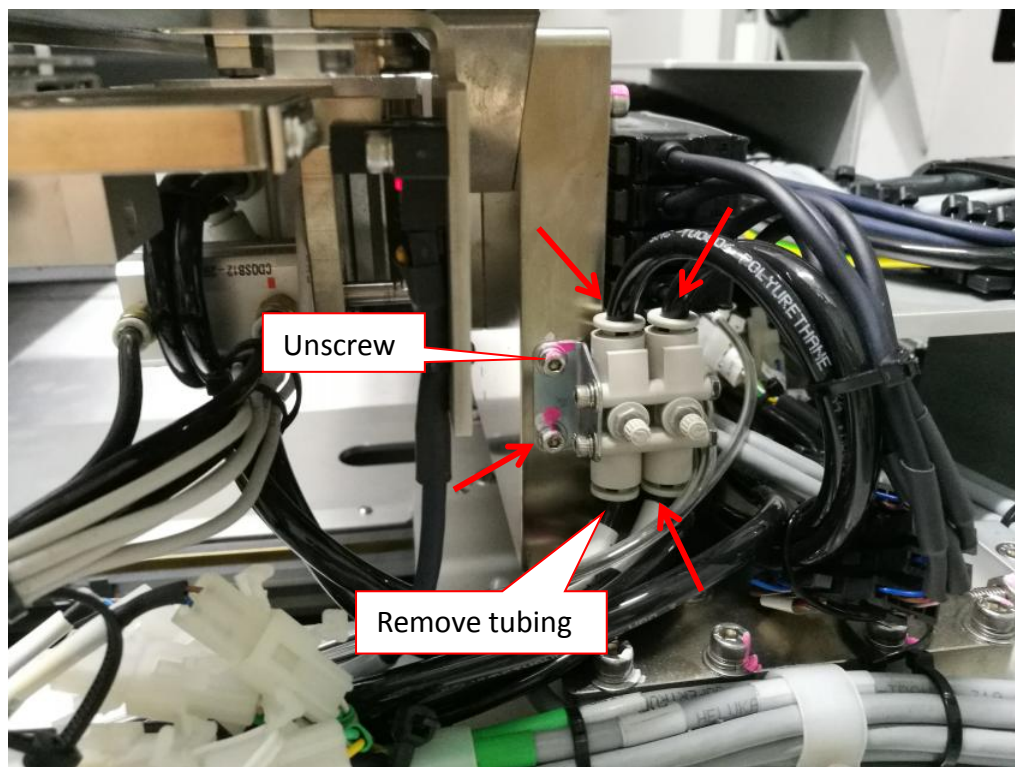


Figure 7 Tubing Removal

16. Remove 2 x Screws & Defective Speed Controller Fitting as shown in Figure 8

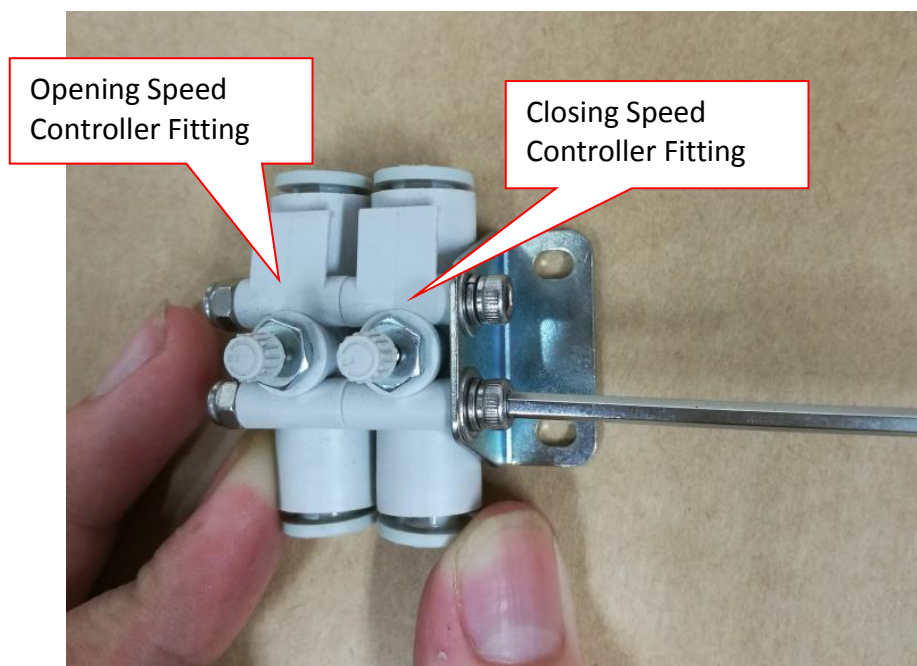


Figure 8 Speed Controller Fitting Removal

	Work Instruction	Doc. Revision	00
	AXI V810 Clamper Speed Controller Fitting Removal & Replacement Procedure	Effective Date	30 May 2017

Clamper opening speed controller fitting replacement

17. Prepare 1 x Speed Controller Fitting (PN : 2820-0060)
18. Assemble Speed Controller Fitting & tighten-up 2 x Screws as shown in Figure 9

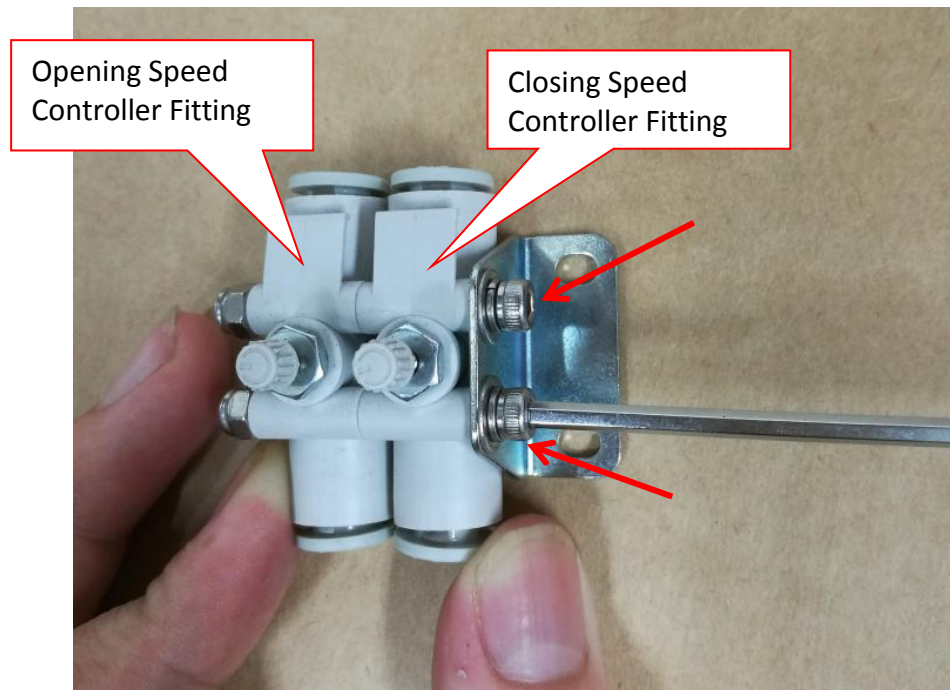


Figure 9 Speed Controller Fitting Assembly

19. Assemble Speed Controllers at Adj Rail. Plug 4x tubing accordingly by refer previous marking. Tighten-up 2 x screws as shown in Figure 10

Special remarks : Speed Controller Fin Orientation require face upwards

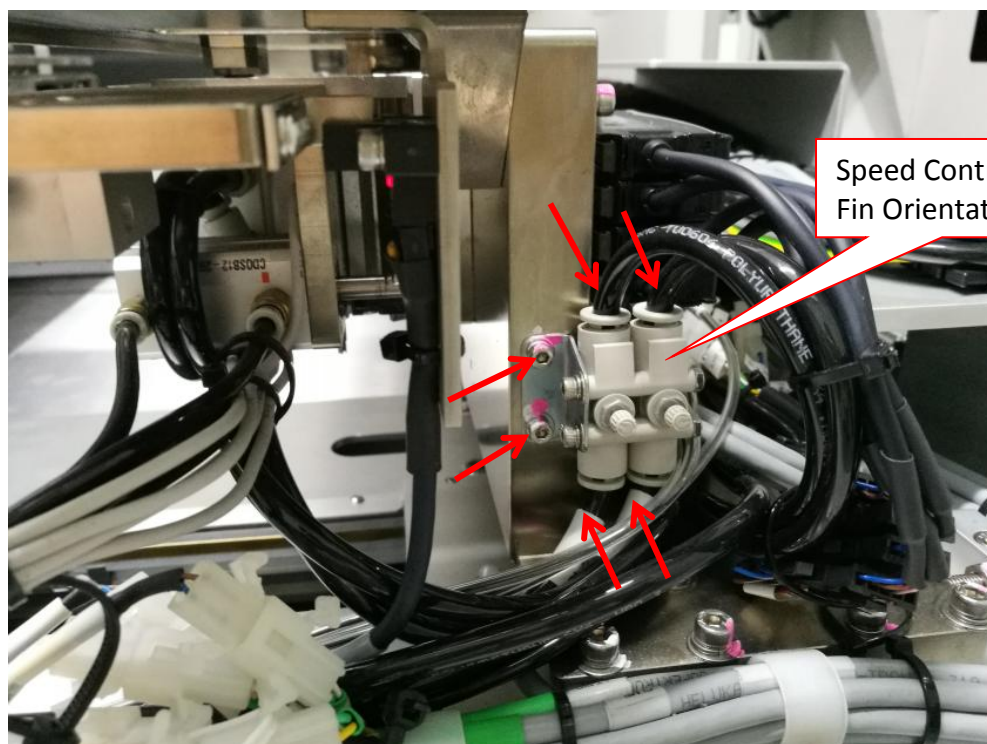


Figure 10 Speed Controller Fitting Assembly

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 Clamper Speed Controller Fitting Removal & Replacement Procedure	Effective Date	30 May 2017

20. Turn on Air Pressure Supply.
21. Go to Panel Handling & Initialize. Manually open left outer barrier.
22. Manually Clamp & Unclamp as shown in Figure 11

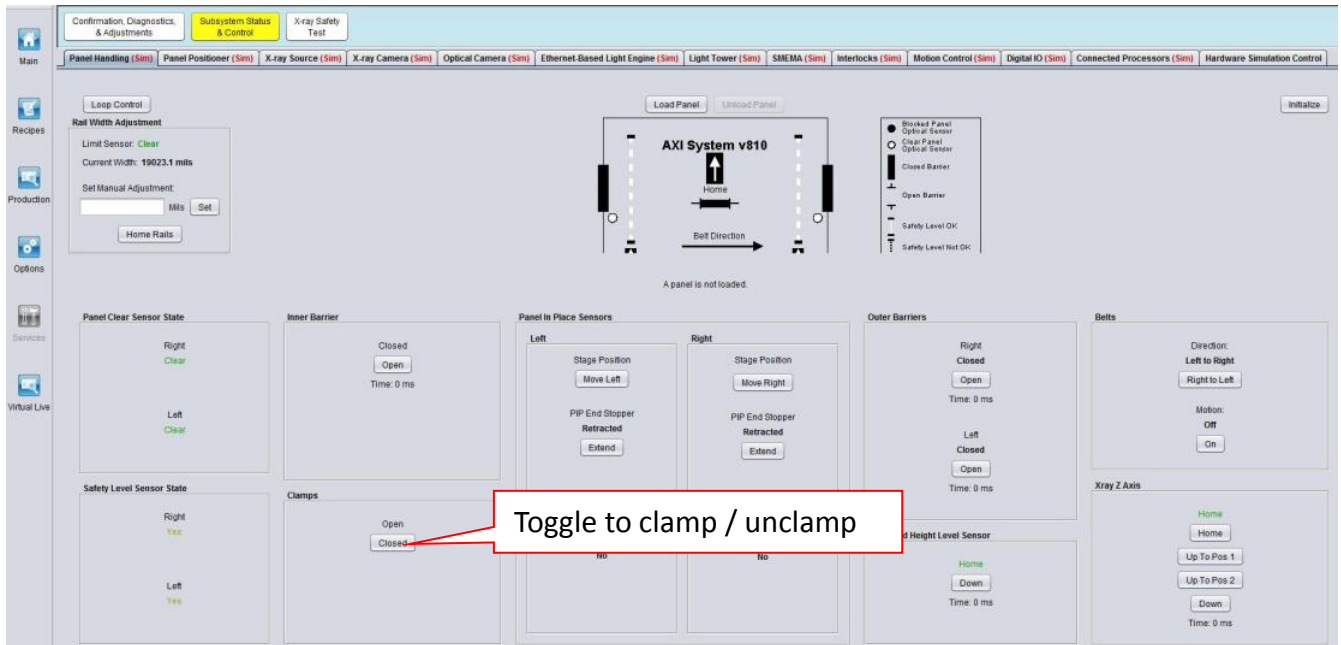


Figure 11 Clamping & Unclamping

23. Visual check on Clamping Movement at Fixed and Adjustable Rail Clamper where must synchronize at both side. Adjust speed controller fitting if there is a necessary

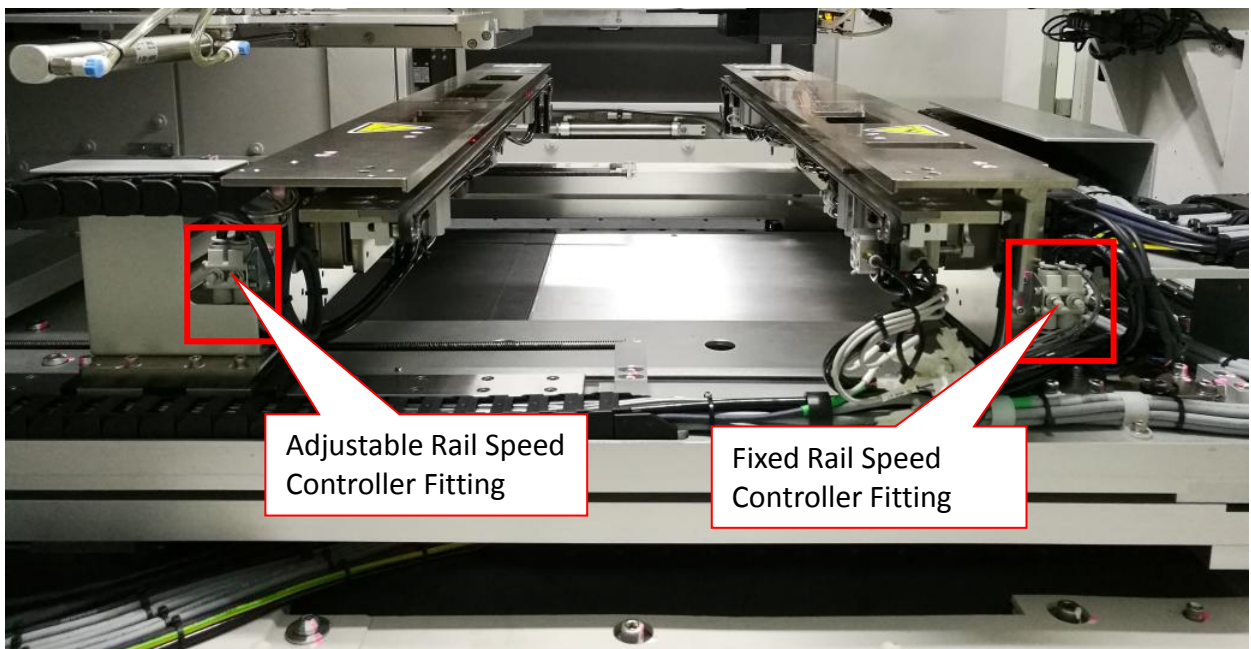


Figure 12 Clamping & Unclamping speed adjustment

24. Close Front Access Doors & turn on X-ray source.
25. Run 3 loops of CD&A.