

	Work Instruction	Doc. Revision	01
	AXI V810 Festo Type Air Pressure Regulator Removal & Replacement Procedure	Effective Date	2 Oct 2016

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	01 Dec 2015	First Release	ONG KEAN SHENG
01	2 Oct 2016	Template update & Content update	ONG KEAN SHENG

	Work Instruction	Doc. Revision	01
	AXI V810 Festo Type Air Pressure Regulator Removal & Replacement Procedure	Effective Date	2 Oct 2016

Content

Festo Type Air Pressure Regulator Removal.....	3
Air Pressure Regulator Replacement procedure.....	8

ViTrox⁺	Work Instruction	Doc. Revision	01
	AXI V810 Festo Type Air Pressure Regulator Removal & Replacement Procedure	Effective Date	2 Oct 2016

Festo Type Air Pressure Regulator Removal

1. Close Incoming Air Pressure Input as below Figure 1.

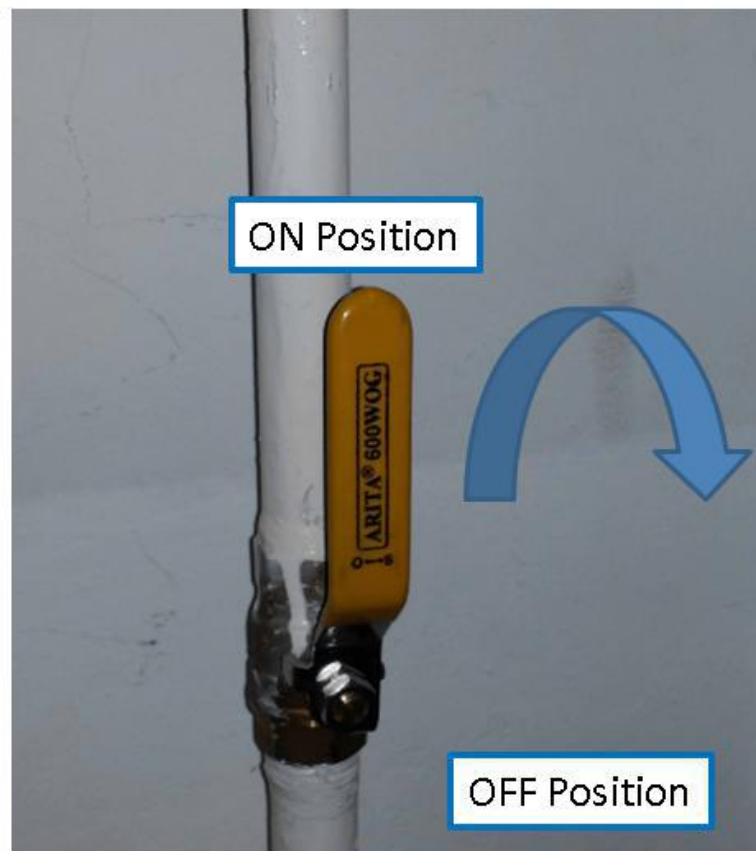


Figure 1 Incoming Air Pressure Input

	Work Instruction	Doc. Revision	01
	AXI V810 Festo Type Air Pressure Regulator Removal & Replacement Procedure	Effective Date	2 Oct 2016

- Insert Festo Air pressure regulator Key and turn to unlock position. Slightly twist the knob until “Tick” Sound is heard. Stop the twisting when “Tick” sound is heard. May refer to below Figure 2.



Unlock position



Lock position



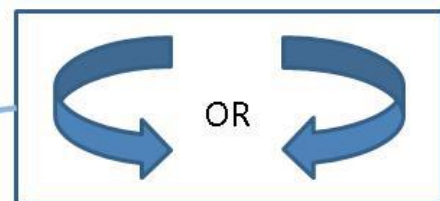


Figure 2 Air Pressure Regulator Knob Twisting

	Work Instruction	Doc. Revision	01
	AXI V810 Festo Type Air Pressure Regulator Removal & Replacement Procedure	Effective Date	2 Oct 2016

- May refer to “Knob Direction - Negative Marking” and twist until the Air Pressure Pascal (PSI) is drop to Zero at the scale. May refer to below Figure 3.

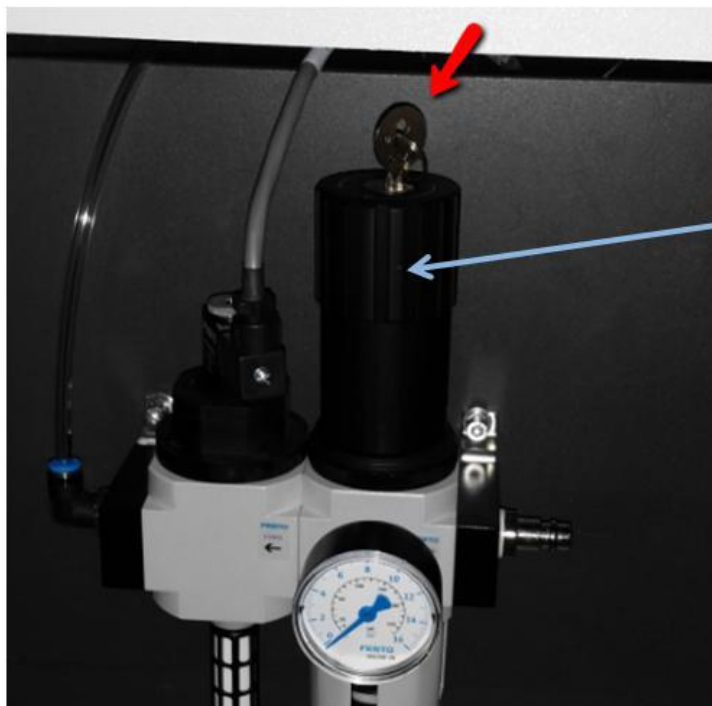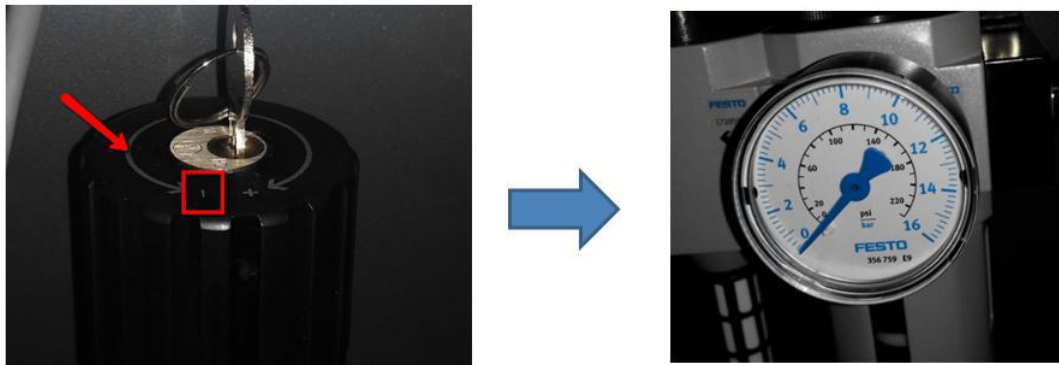

Follow the negative marking direction and twist the knob until Air pressure is drop to Zero PSI

Figure 3 Air pressure release

- Unplug the Incoming Air Pressure Input as below Figure 4.

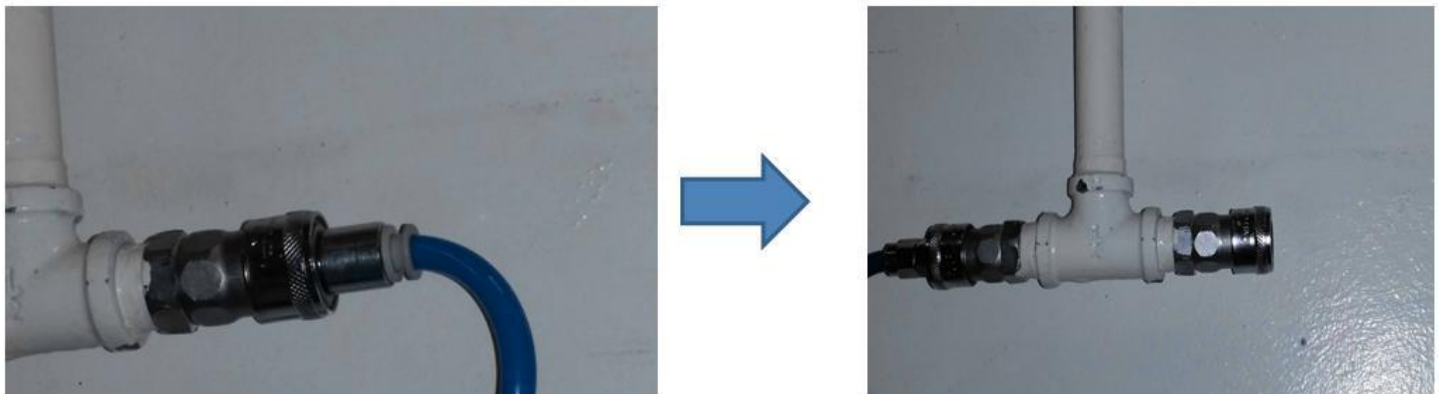


Figure 4 Air Pressure Input Removal

- Unplug other end of Air Pressure Input Port at Air Pressure Regulator as below Figure 5.

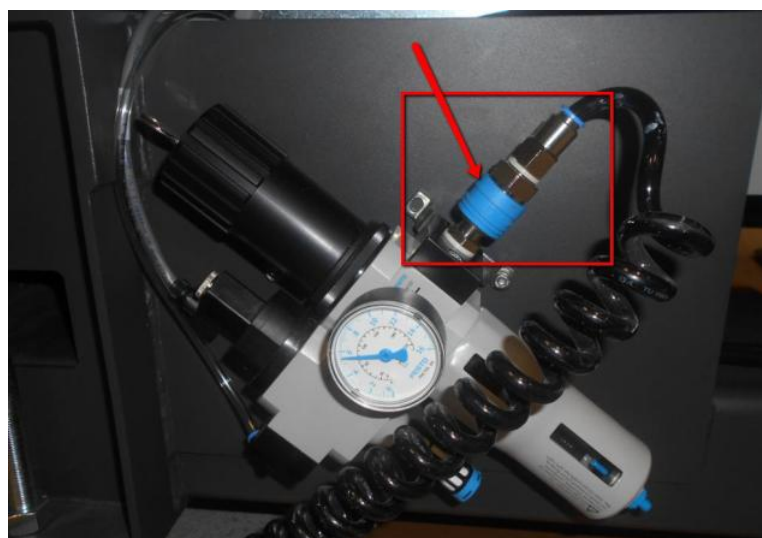


Figure 5 Air pressure Regulator Input Port

ViTrox⁺	Work Instruction	Doc. Revision	01
	AXI V810 Festo Type Air Pressure Regulator Removal & Replacement Procedure	Effective Date	2 Oct 2016

6. Remove 4 x Screws to remove the Air Pressure Regulator from the base frame. May refer to below Figure 6.

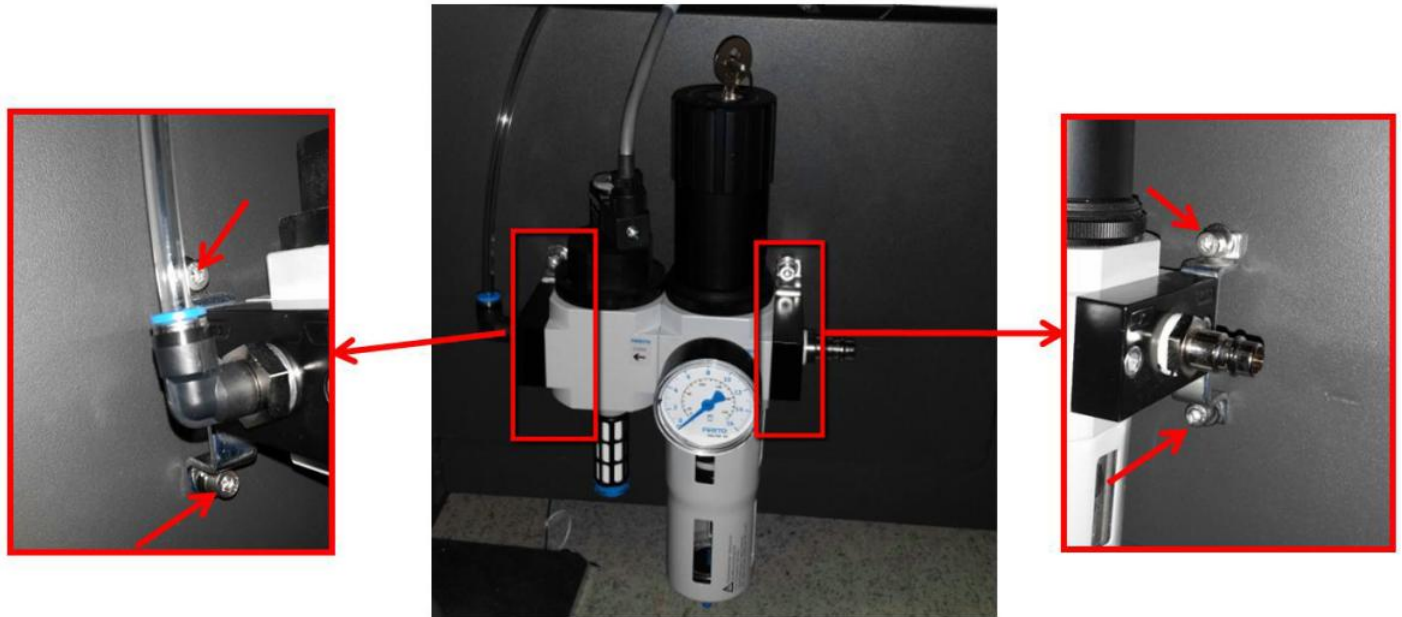


Figure 6 Air Pressure Regulator Removal

7. Remove the Tubing from the Fitting as below Figure 7.

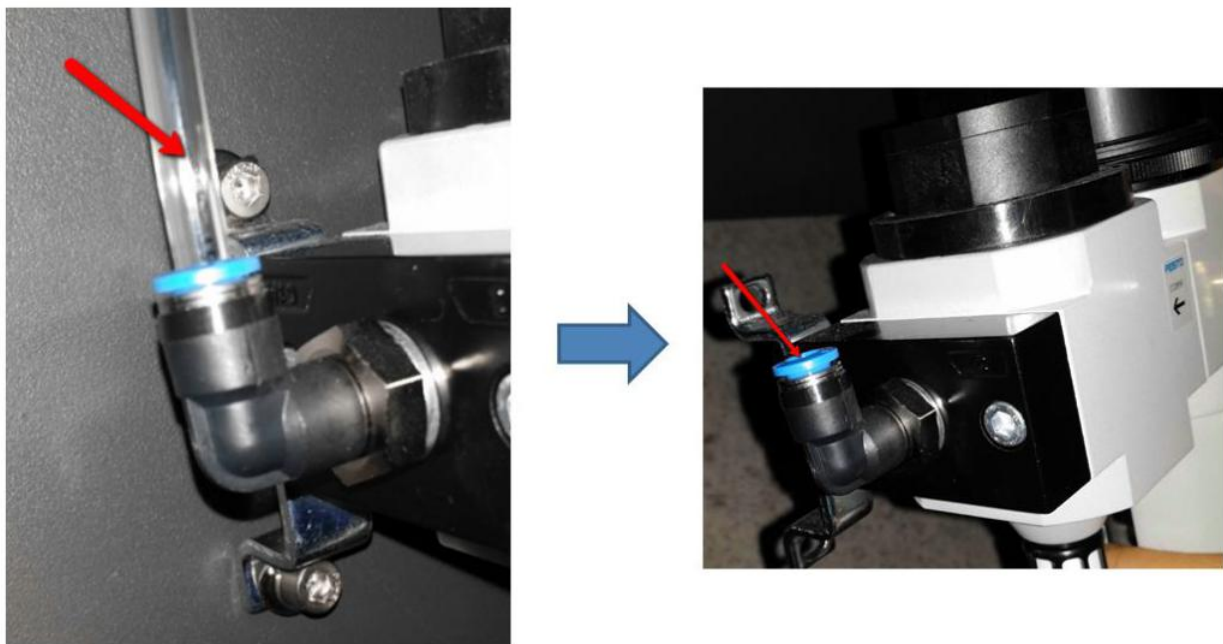


Figure 7 Tubing Removal

ViTrox 	Work Instruction	Doc. Revision	01
	AXI V810 Festo Type Air Pressure Regulator Removal & Replacement Procedure	Effective Date	2 Oct 2016

8. Remove the valve connector as below Figure 8.

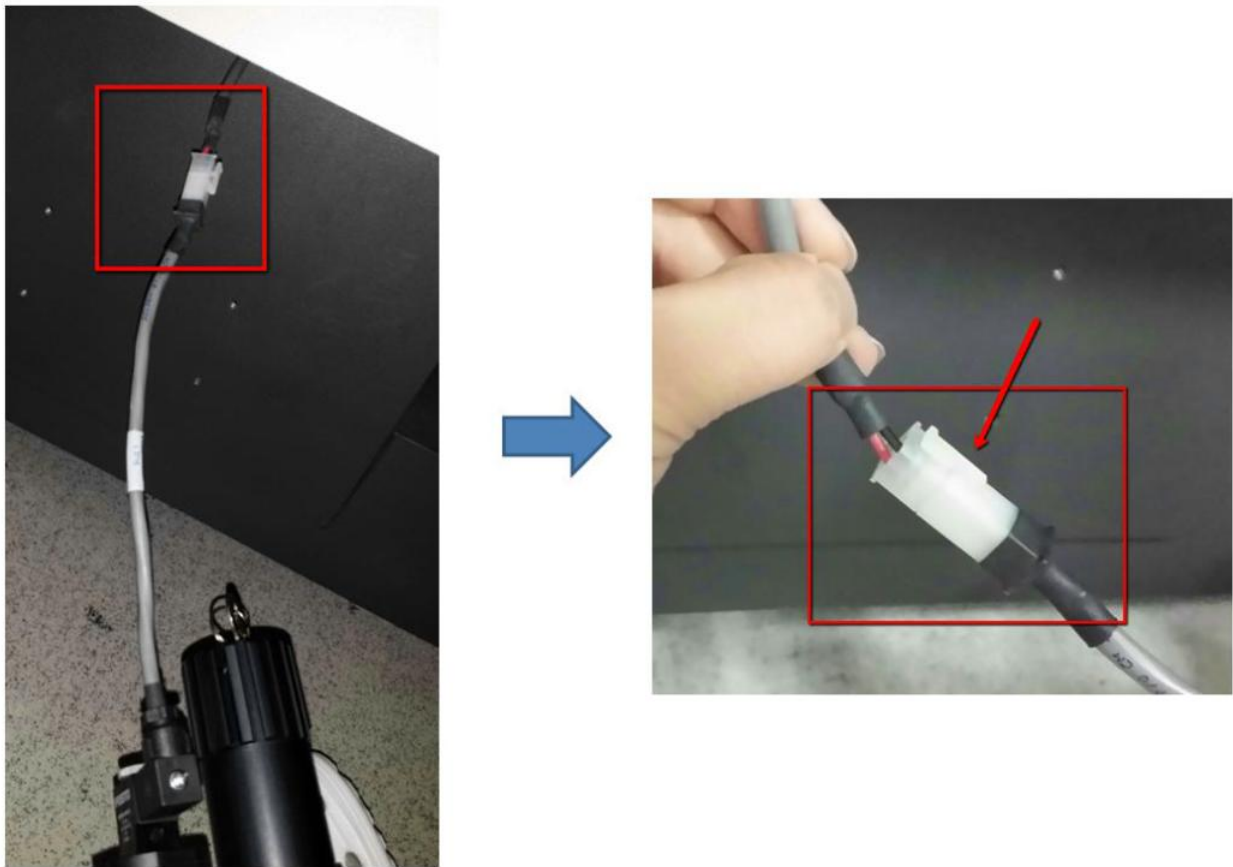


Figure 8 Valve Connector Removal

9. Remove the Air Pressure Regulator Key.

ViTrox	Work Instruction	Doc. Revision	01
	AXI V810 Festo Type Air Pressure Regulator Removal & Replacement Procedure	Effective Date	2 Oct 2016

Air Pressure Regulator Replacement procedure

1. Close Incoming Air Pressure Input as below Figure 1.

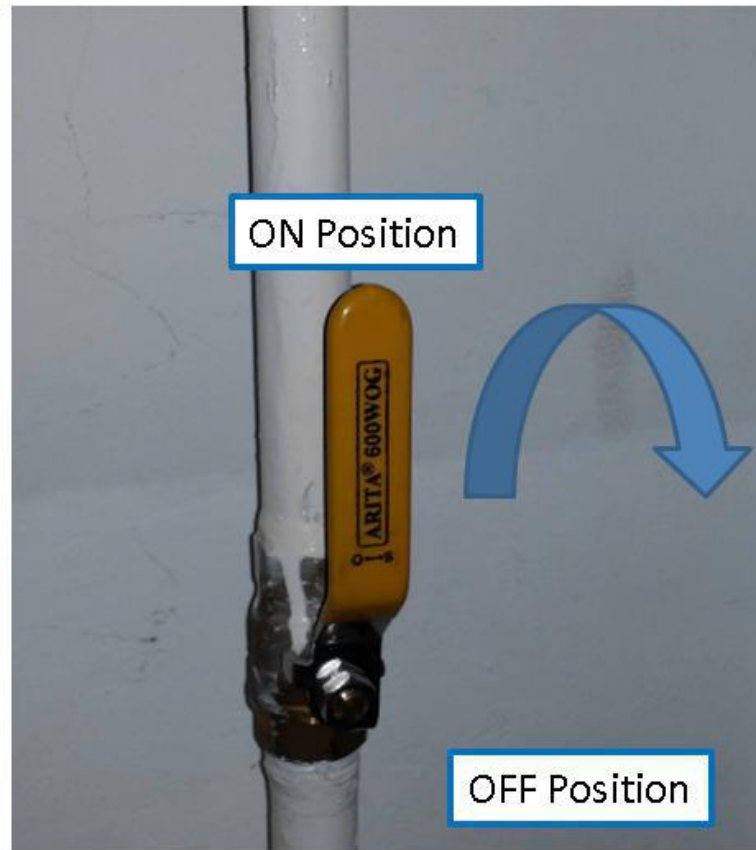


Figure 9 Air Pressure Input

2. Plug the tubing into the fitting as below Figure 10.

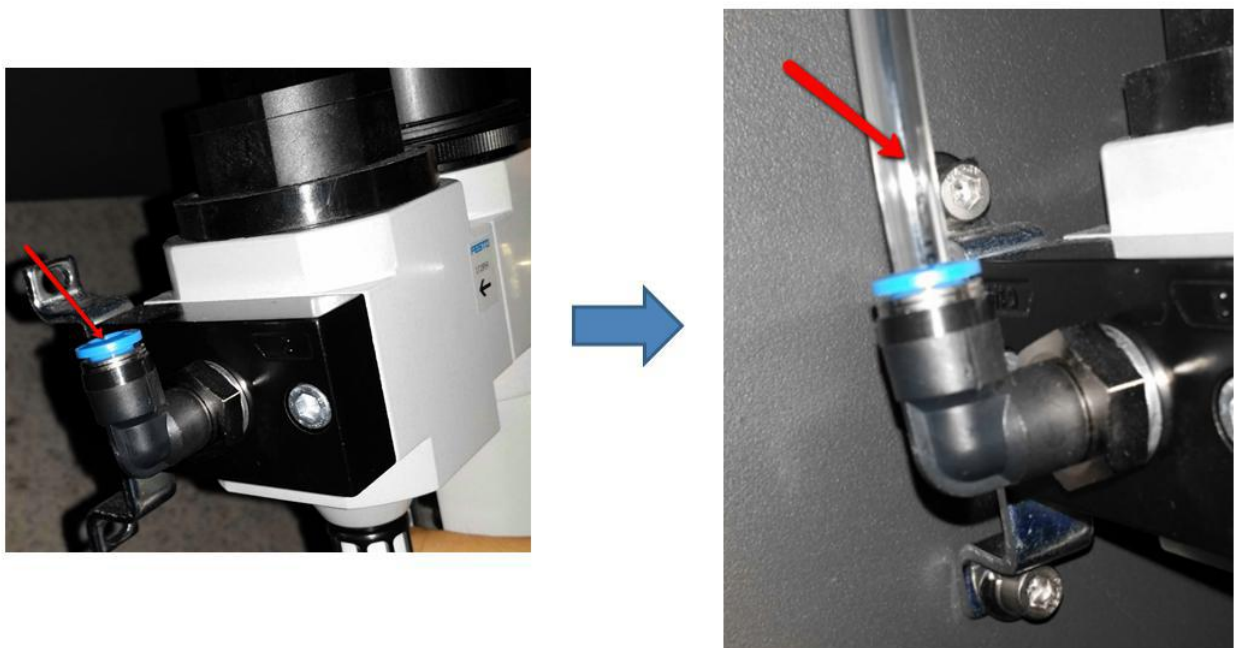


Figure 10 Tubing Assembly

ViTrox	Work Instruction	Doc. Revision	01
	AXI V810 Festo Type Air Pressure Regulator Removal & Replacement Procedure	Effective Date	2 Oct 2016

3. Connect the Air Pressure regulator's valve connector to V810 machine's valve connector. May refer to below Figure 11.

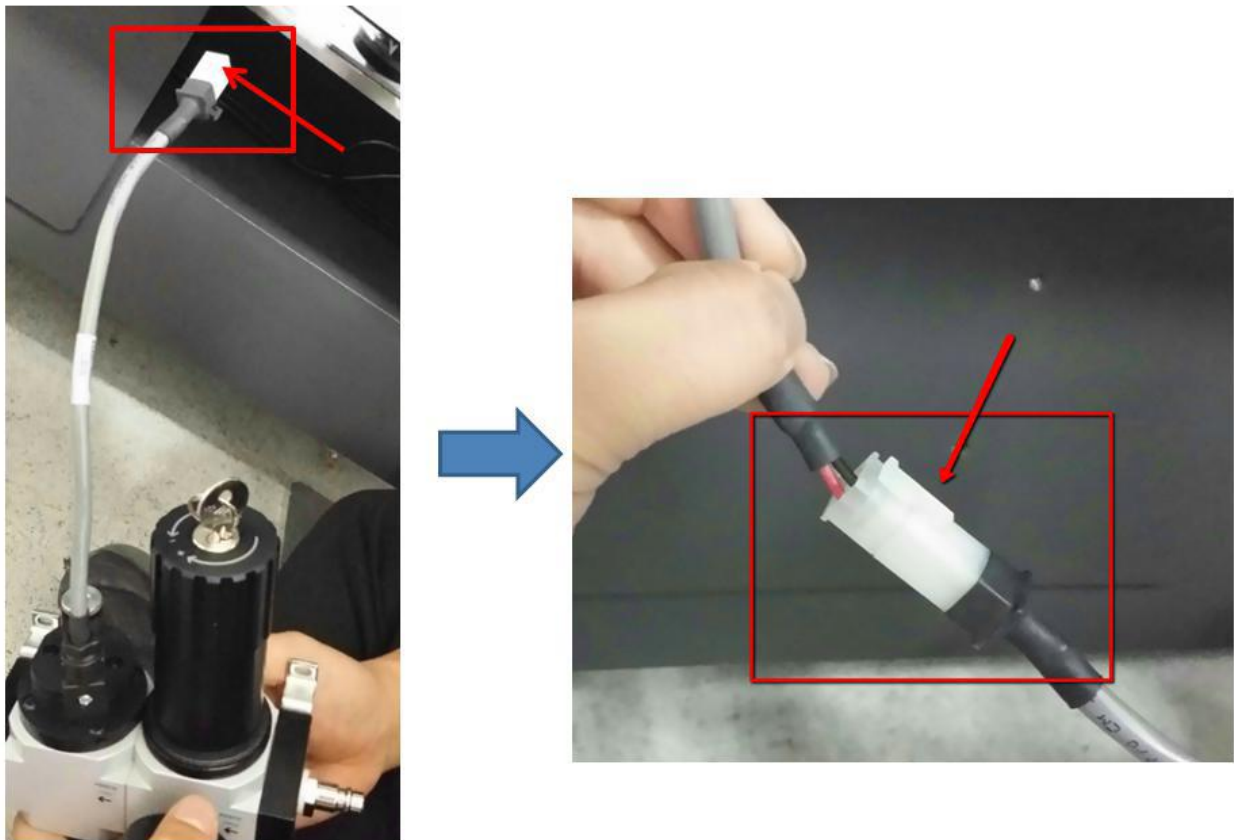


Figure 11 Valve Connector Assembly

4. Assemble Air Pressure Regulator at base frame by tighten 4 x Screws. May refer to below Figure 12.

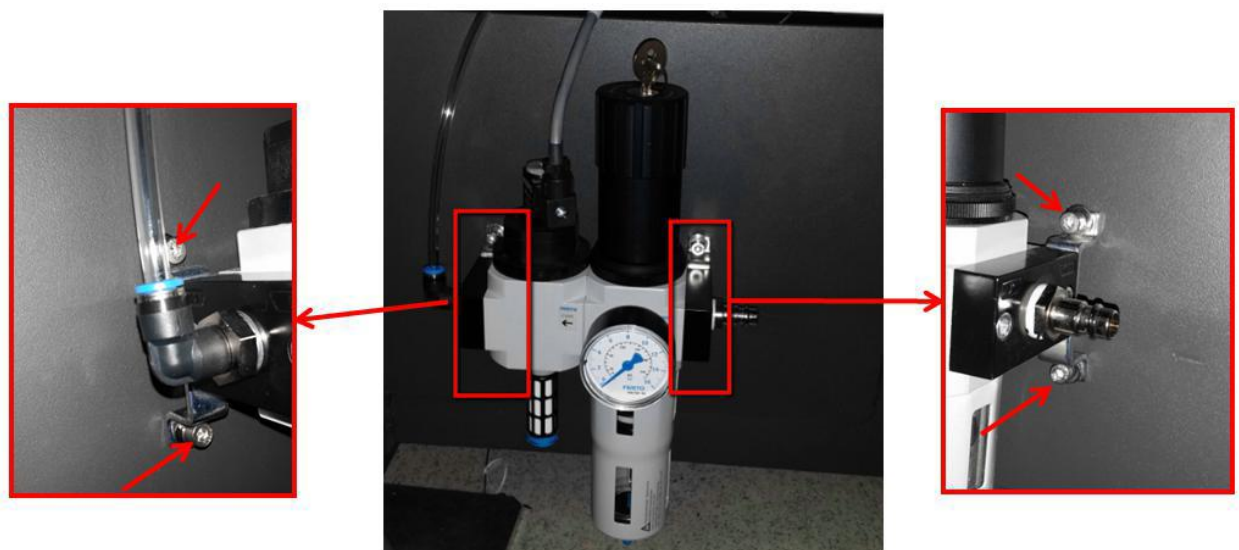


Figure 12 Air Pressure Regulator Assembly

	Work Instruction	Doc. Revision	01
	AXI V810 Festo Type Air Pressure Regulator Removal & Replacement Procedure	Effective Date	2 Oct 2016

5. Connect the incoming input port to Air Pressure regulator as below Figure 13.

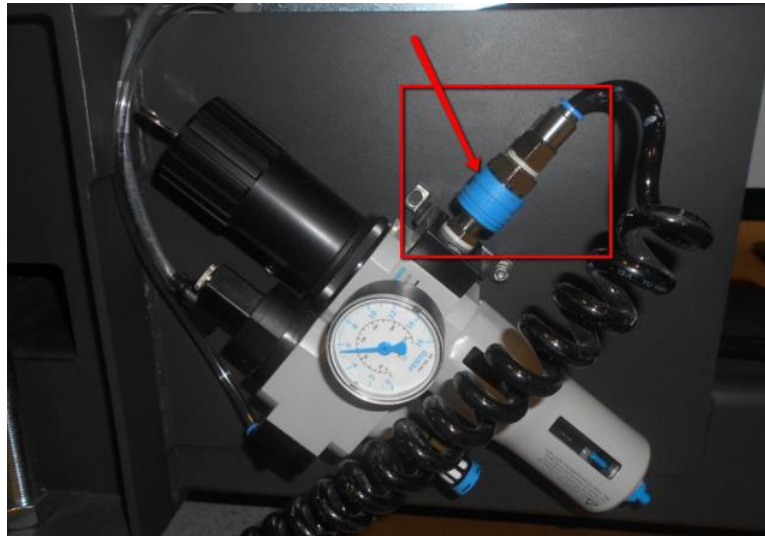


Figure 13 Input port to Air Pressure Regulator

6. Connect another end of Input port to Incoming Air pressure Port. May refer to below Figure 14.



Figure 14 Input Port assembly

7. Turn on Air Pressure Input Plug as below Figure 15.

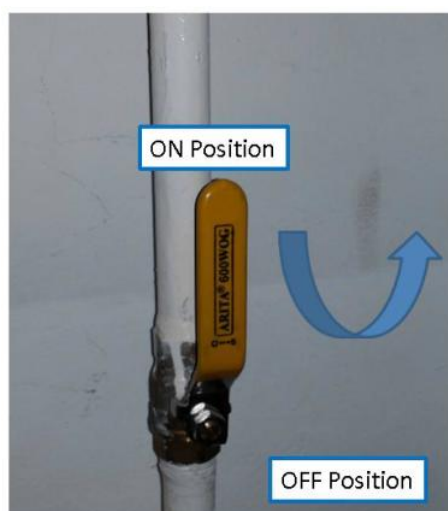


Figure 15 Air Pressure Input Port Plug

	Work Instruction	Doc. Revision	01
	AXI V810 Festo Type Air Pressure Regulator Removal & Replacement Procedure	Effective Date	2 Oct 2016

8. Insert Festo Air pressure regulator Key and turn to unlock position. Slightly twist the knob until “Tick” Sound is heard. Stop the twisting when “Tick” sound is heard. May refer to below Figure 16.



Unlock position



Lock position

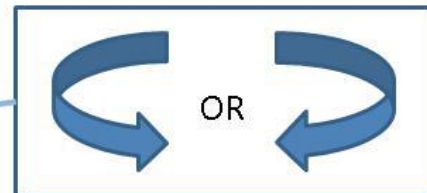
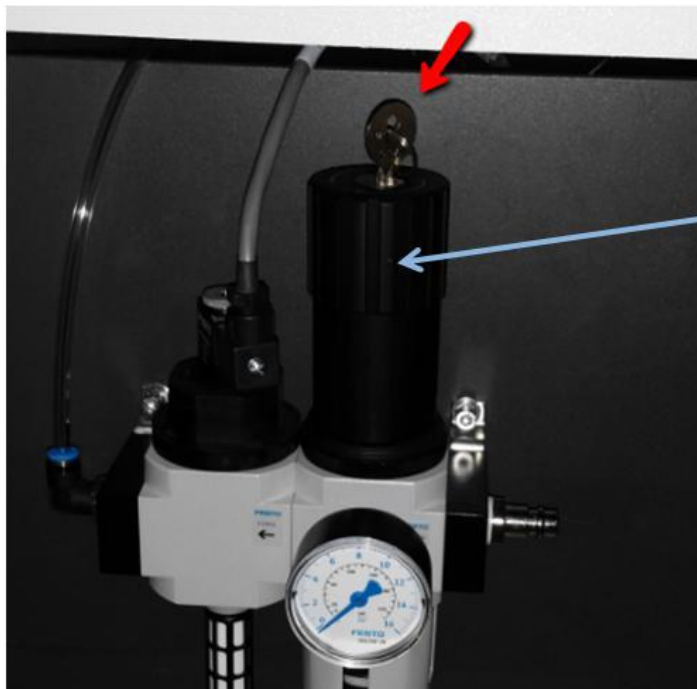


Figure 16 Air pressure regulator Knob Twisting

	Work Instruction	Doc. Revision	01
	AXI V810 Festo Type Air Pressure Regulator Removal & Replacement Procedure	Effective Date	2 Oct 2016

9. May refer to “Knob Direction - Positive Marking” and twist until the Air Pressure Pascal (PSI) is increase from Zero PSI to 80 PSI.

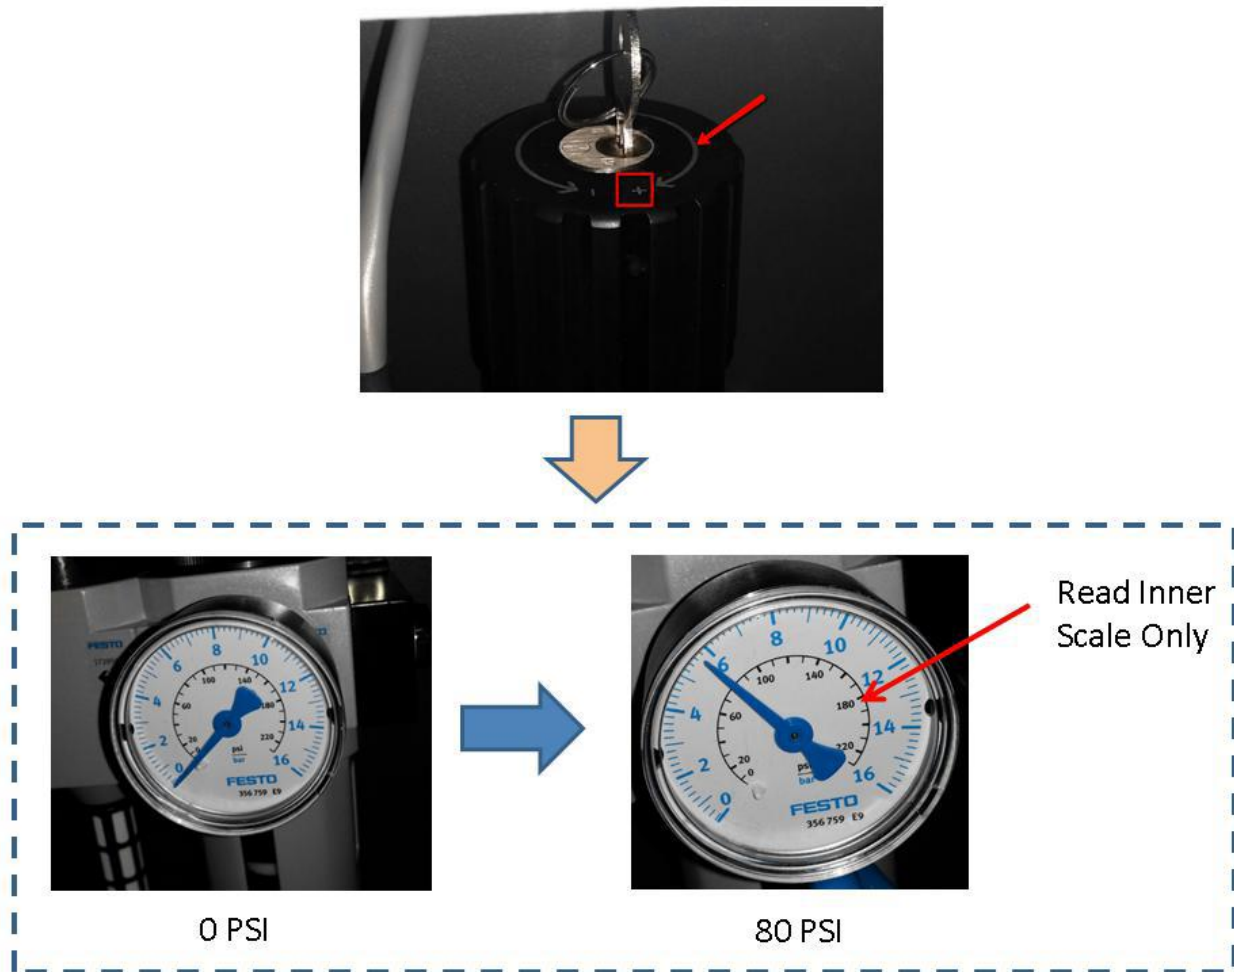


Figure 17 Air Pressure Adjustment

10. Turn the Festo Key to “Lock Position” as Figure 18.

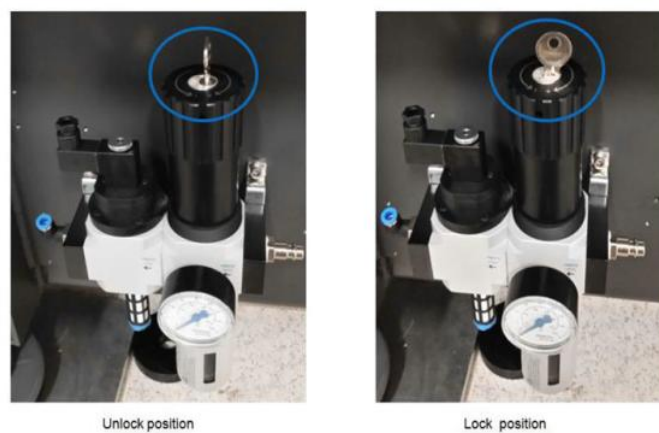


Figure 18 Air Pressure Regulator Locking Mechanism

11. Remove the Festo Key.