

	Work Instruction	Doc. Revision	00
	AXI V810 Inner Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	1 May 2017

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	1 May 2017	First Release	Tan Liang Kai

	Work Instruction	Doc. Revision	00
	AXI V810 Inner Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	1 May 2017

Content

Inner barrier speed control fitting (Closing).....	3
Inner barrier speed control fitting (Closing) removal.....	3
Inner barrier speed controller fitting (Closing) replacement.....	4
Inner barrier speed controller fitting(Opening).....	6
Inner barrier speed controller fitting (Opening) removal.....	6
Inner barrier speed control fitting (Opening) replacement.....	7

	Work Instruction	Doc. Revision	00
	AXI V810 Inner Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	1 May 2017

Inner barrier speed control fitting (Closing)

Inner barrier speed control fitting (Closing) removal

1. Close X-ray source & Air Pressure Supply.
2. Open Front Access Doors.
3. Remove Cable Tie & 2 x Tubing as shown in Figure 1

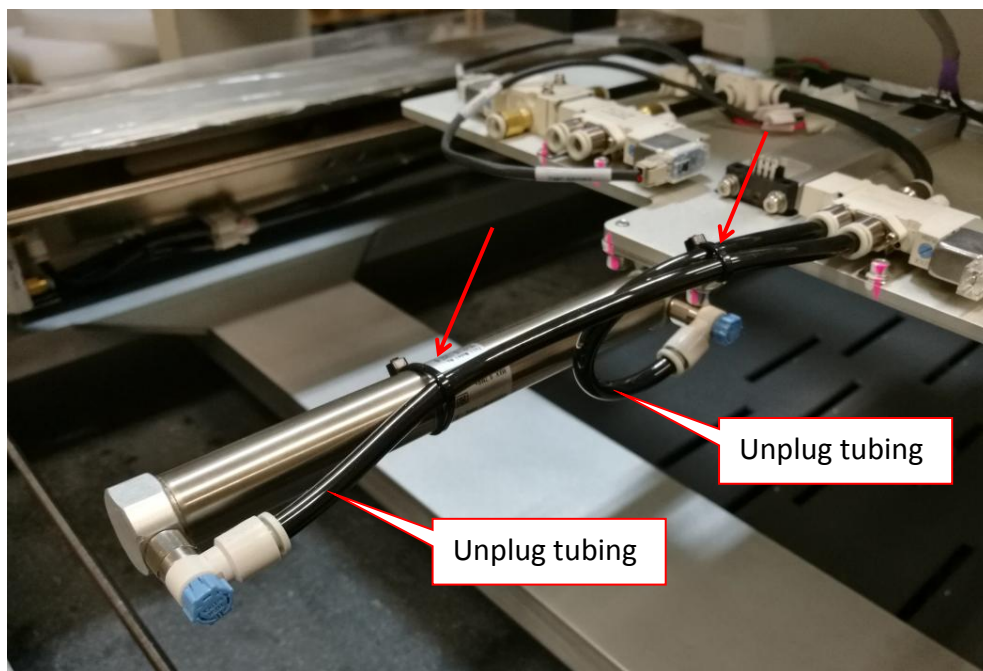


Figure 1 Tubing & cable tie removal

4. Remove Speed Controller Fitting by Adjustable Wrench as shown in Figure 2

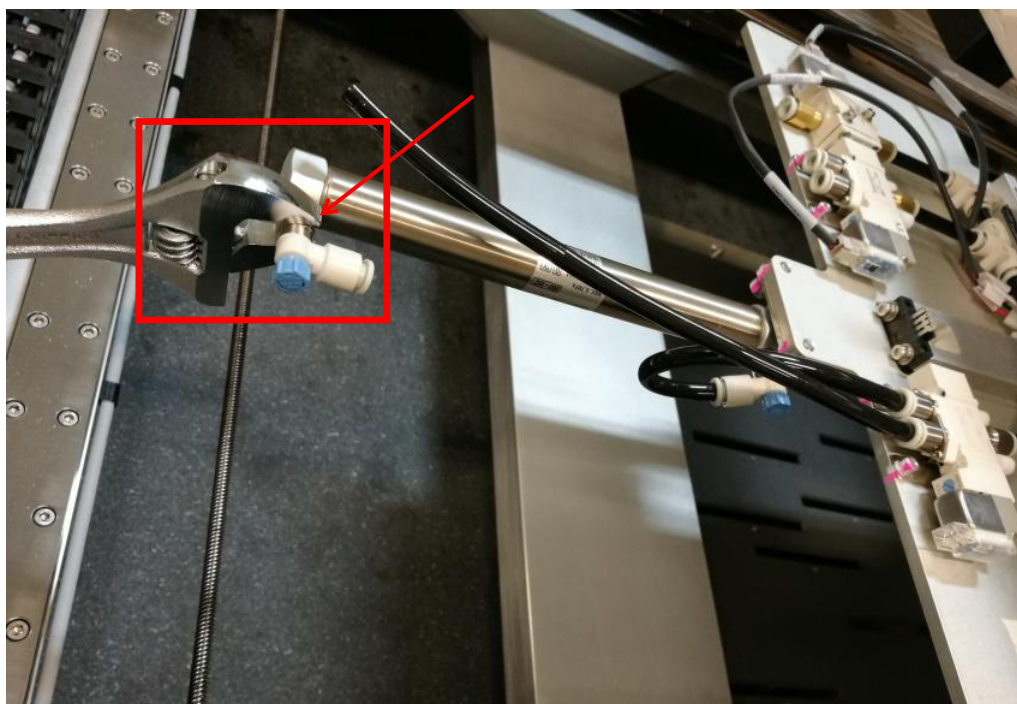


Figure 2 Speed control fitting removal

	Work Instruction	Doc. Revision	00
	AXI V810 Inner Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	1 May 2017

Inner barrier speed controller fitting (Closing) replacement

5. Prepare Inner Barrier Speed Controller Fitting (P/N: 2820-0009)
6. Assemble & Tighten up Speed Controller Fitting as shown in Figure 3

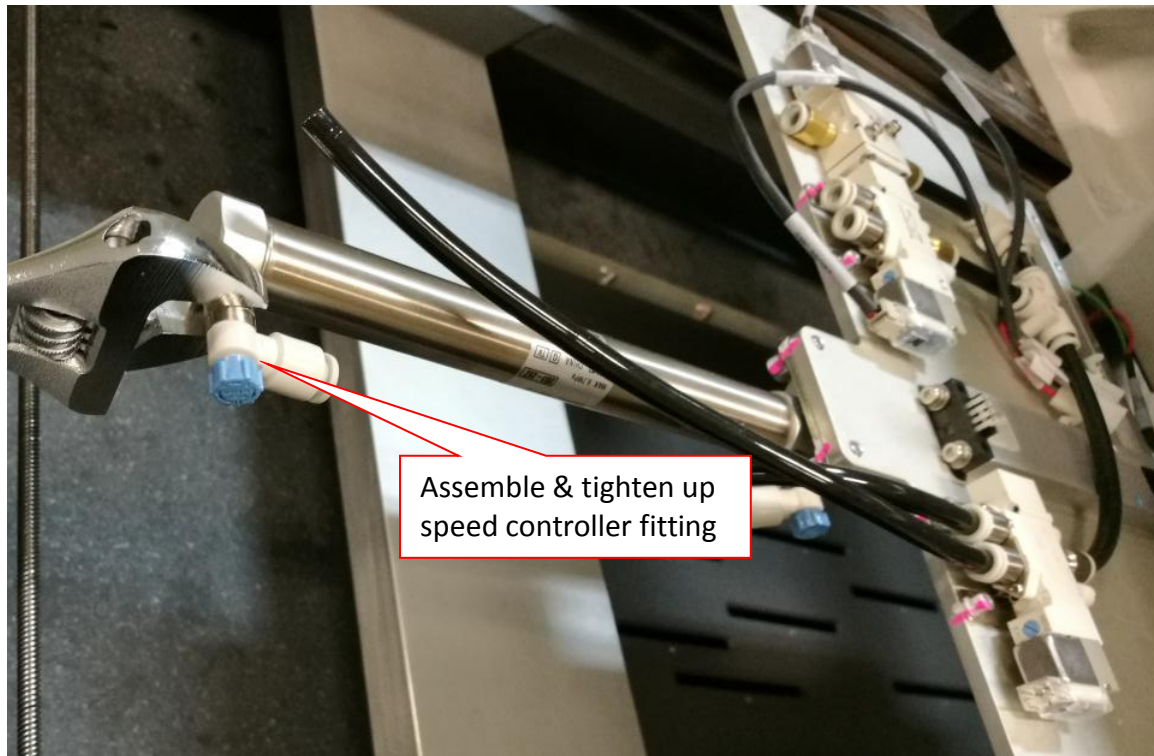


Figure 3 Speed controller fitting assembly

7. Plug back 2 x Tubing. Apply Cable Tie as shown in Figure 4

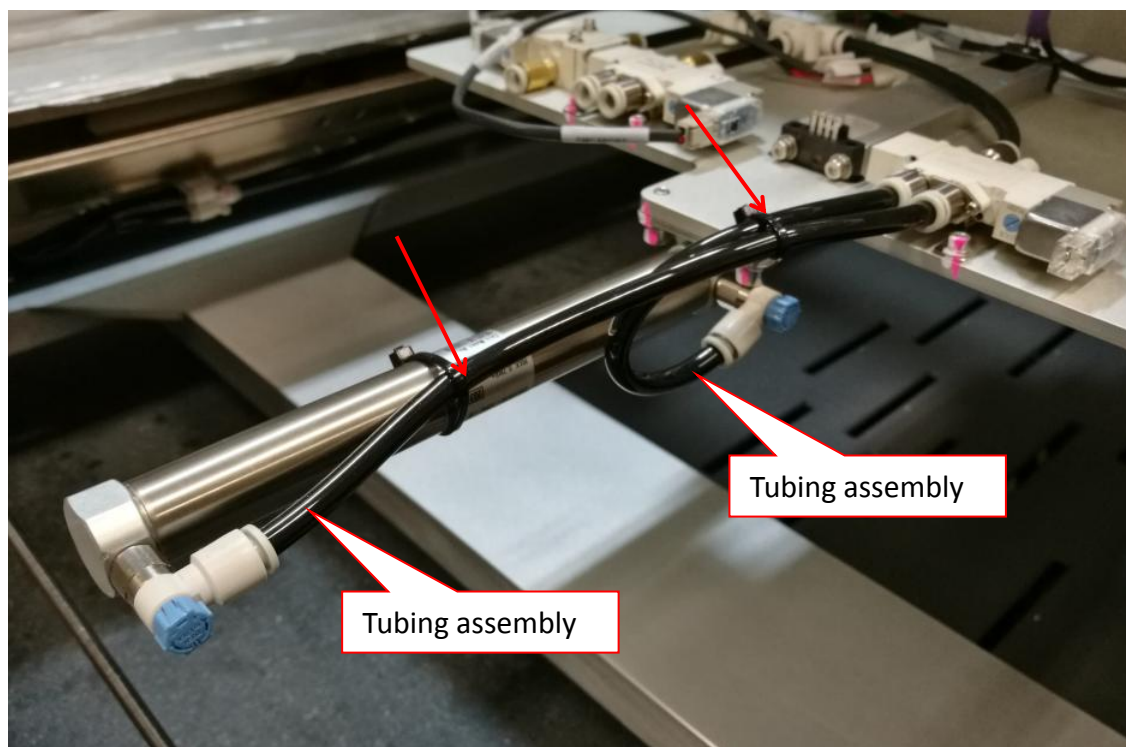


Figure 4 Tubing assembly

8. Turn on Air Pressure Supply.
9. Go to Panel Handling & Initialize. Manually toggle inner barrier as shown in Figure 5

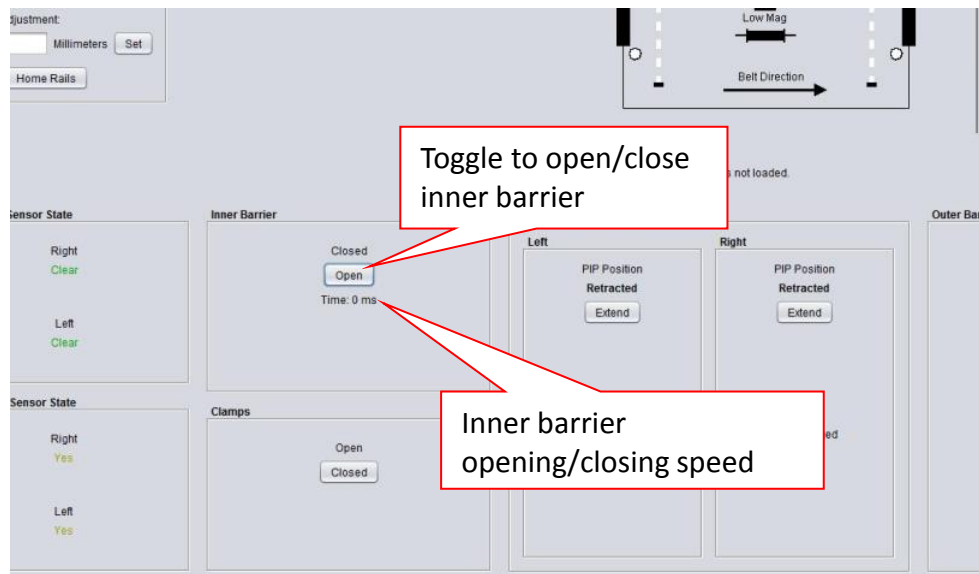


Figure 5 Inner barrier status

10. Pull out speed control fitting knob, then adjust until Opening/Closing speed is within below range

Machine Model	Task	Speed (ms)
V810 STD with VM option	Inner barrier Opening & Closing	800 ~ 1000
V810 STD without VM option	Inner barrier Opening & Closing	600 ~ 750
V810 XXL	Inner barrier Opening & Closing	800 ~ 1000
V810 S2EX	Inner barrier Opening & Closing	1000 ~ 1200

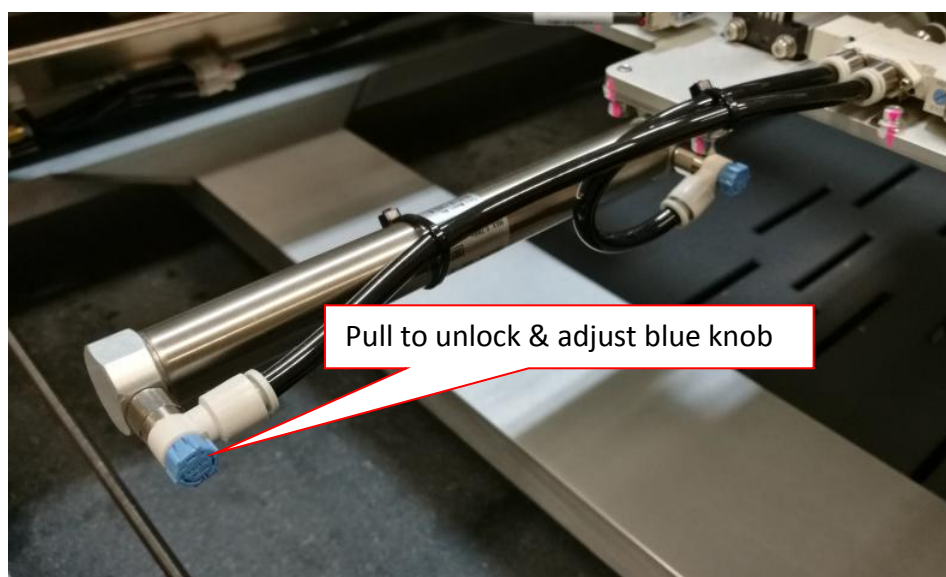


Figure 6 Inner barrier speed adjustment

11. Release Inner Barrier Speed Control Fitting Knob. Close Front doors.
12. Turn on X-ray sources & run 3 loops of CD&A.

	Work Instruction	Doc. Revision	00
	AXI V810 Inner Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	1 May 2017

Inner barrier speed controller fitting(Opening)

Inner barrier speed controller fitting (Opening) removal

13. Close X-ray source & Air Pressure Supply.
14. Open Front Access Doors.
15. Remove Cable Tie & 2 x Tubing as shown in Figure 7

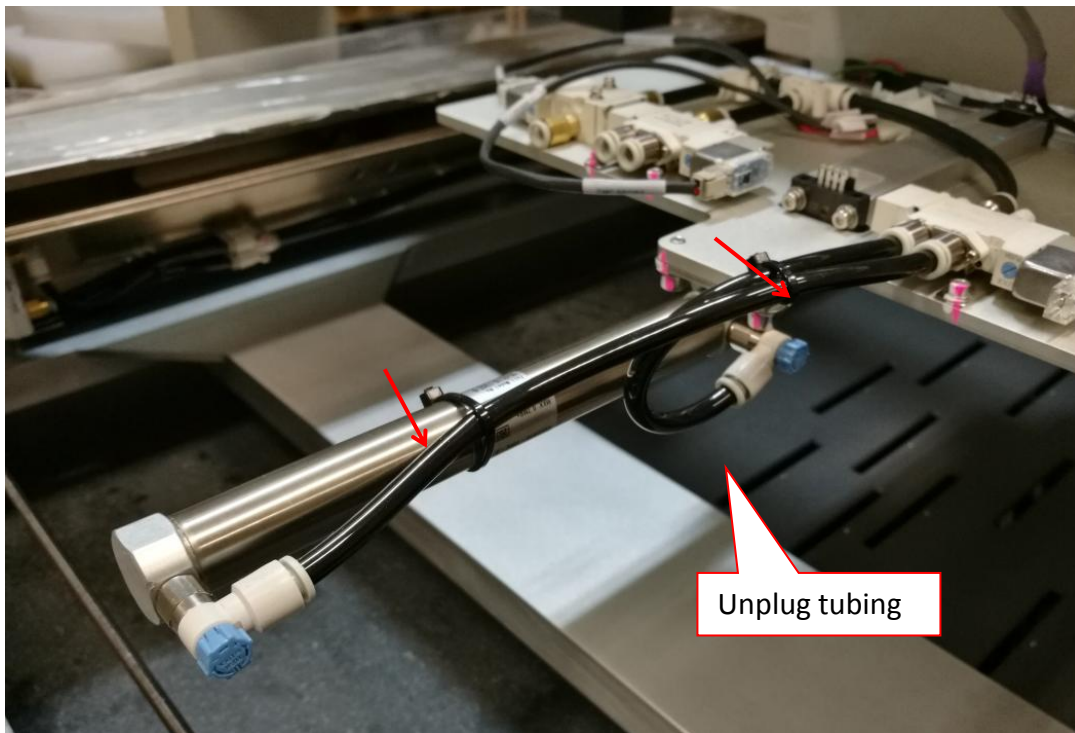


Figure 7 Tubing & cable tie removal

16. Loosen Inner Barrier Cylinder Holding Nut. Gently pull out Inner Barrier Cylinder as shown in Figure 8

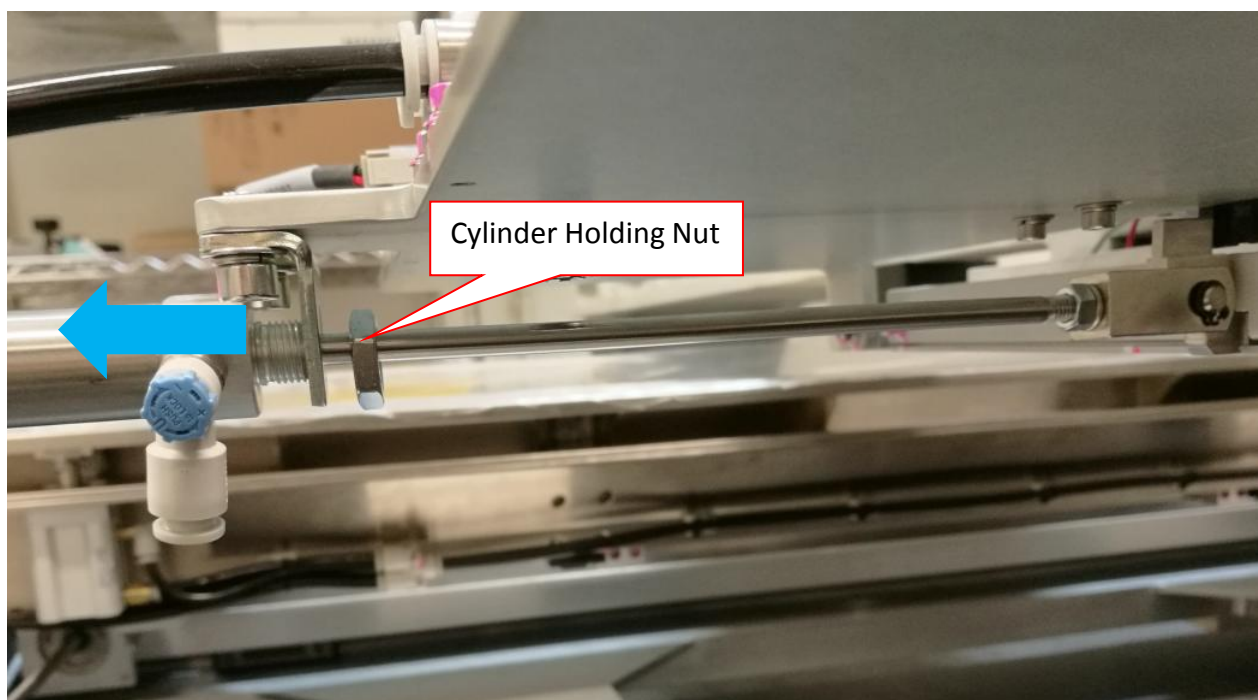


Figure 8 Inner barrier cylinder screw removal

	Work Instruction	Doc. Revision	00
	AXI V810 Inner Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	1 May 2017

17. Remove Speed controller Fitting by Adjustable Wrench as shown in Figure 9

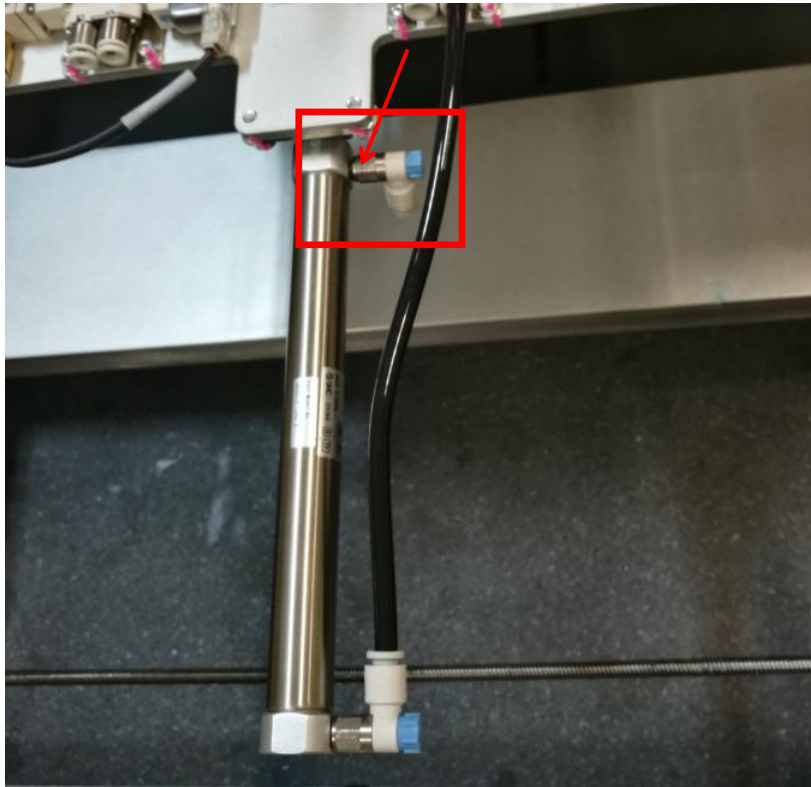


Figure 9 Speed control fitting removal

Inner barrier speed control fitting (Opening) replacement

18. Prepare Inner Barrier Speed Controller Fitting (P/N: 2820-0009)

19. Assemble & Tighten up Inner Barrier Speed Controller Fitting as shown in Figure 10

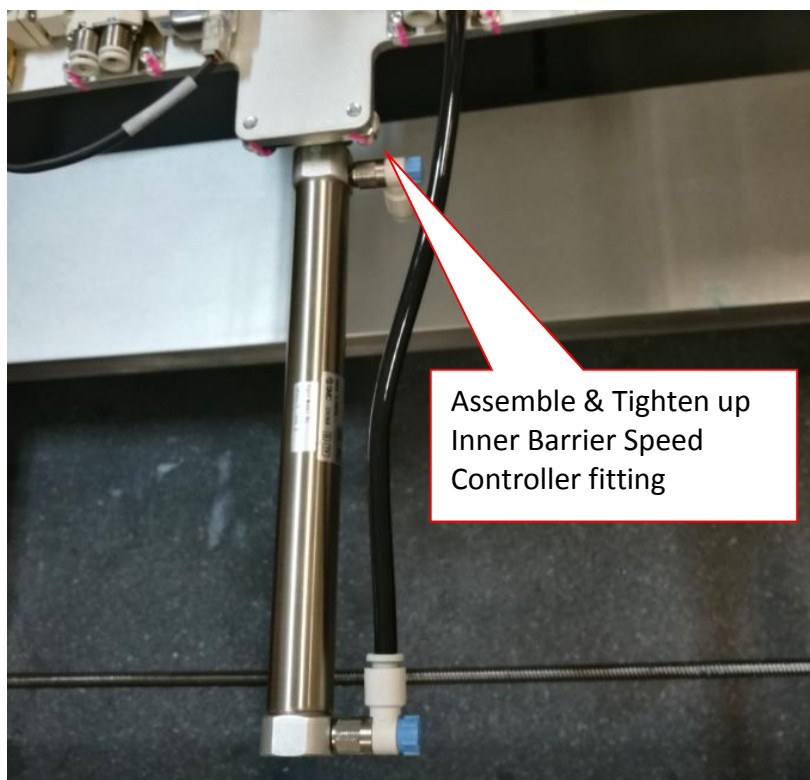


Figure 10 Speed control fitting assembly

	Work Instruction	Doc. Revision	00
	AXI V810 Inner Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	1 May 2017

20. Assemble Inner Barrier Cylinder. Tighten up Inner Barrier Cylinder Holding Nut. as shown in Figure 11

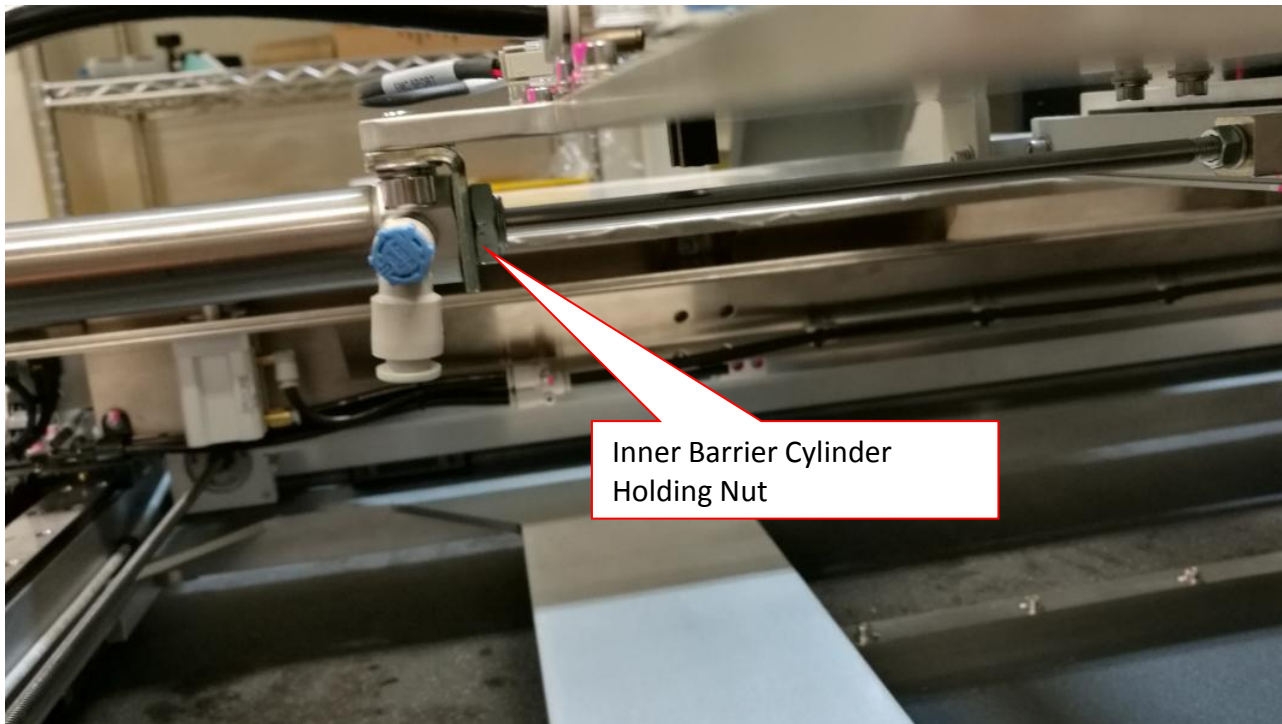


Figure 11 Inner barrier cylinder nut assembly

21. Plug back tubing & apply cable tie as shown in Figure 12

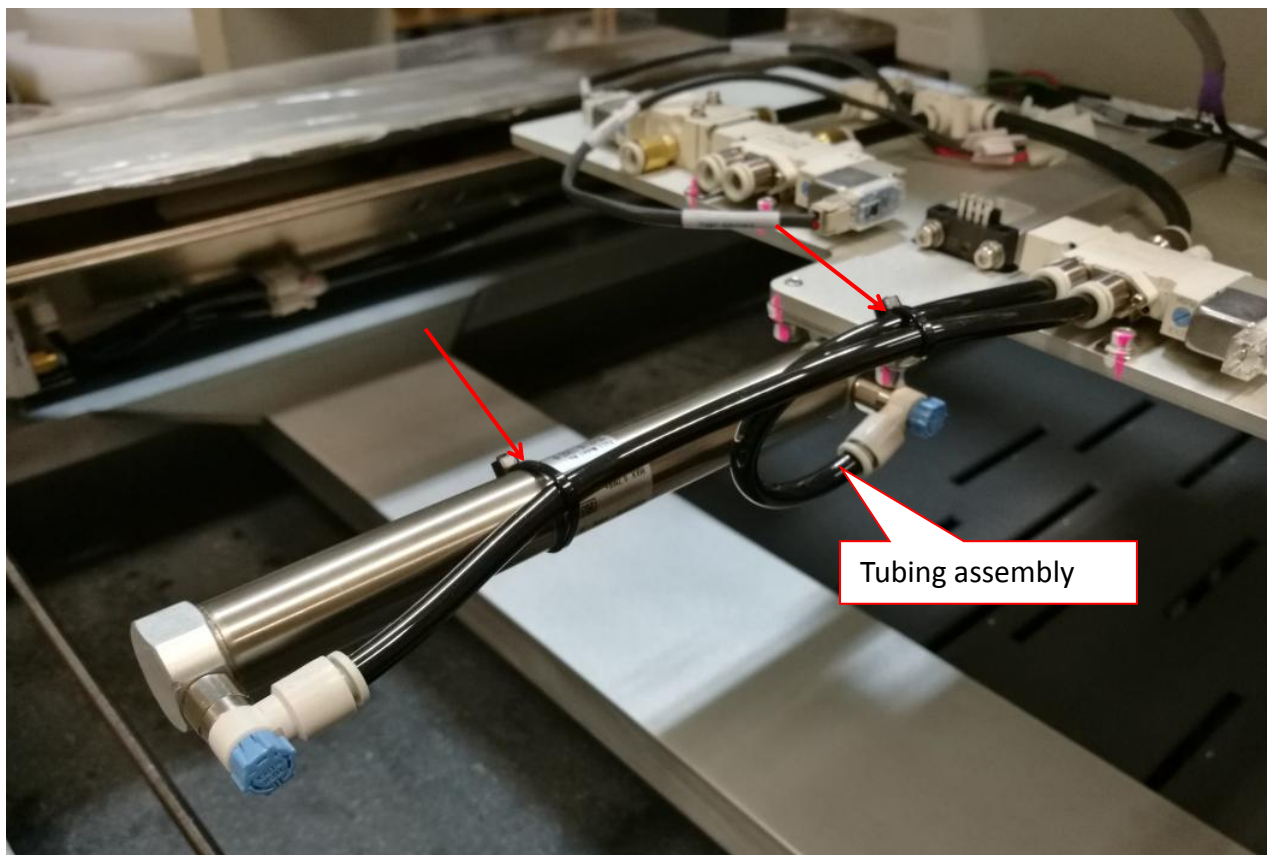


Figure 12 Tubing & cable tie assembly

22. Turn on Air Pressure Supply.

23. Go to Panel handling & Initialize. Manually toggle inner barrier as shown in Figure 13

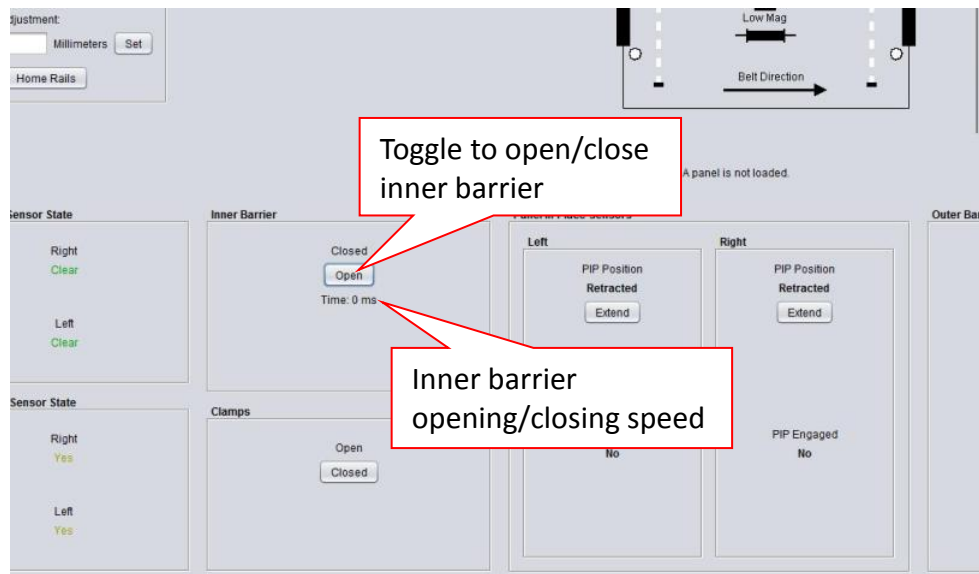


Figure 13 Inner barrier status

24. Pull out speed control fitting knob, then adjust until Opening/Closing speed is within below range

Machine Model	Task	Speed (ms)
V810 STD with VM option	Inner barrier Opening & Closing	800 ~ 1000
V810 STD without VM option	Inner barrier Opening & Closing	600 ~ 750
V810 XXL	Inner barrier Opening & Closing	800 ~ 1000
V810 S2EX	Inner barrier Opening & Closing	1000 ~ 1200

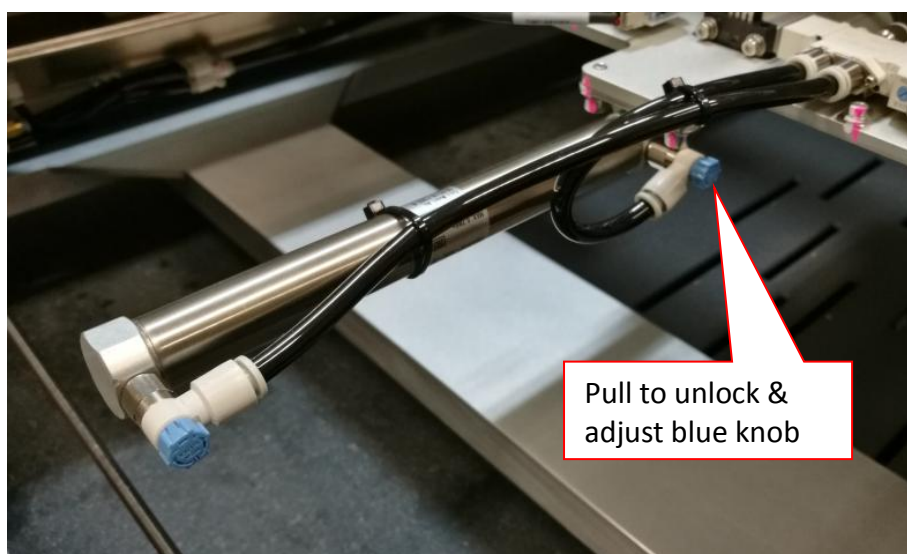


Figure 14 Inner barrier opening speed adjustment

25. Release Inner Barrier Speed Control Fitting Knob. Close front doors.

26. Turn on X-ray source & run 3 loops of CD&A.