

	Work Instruction	Doc. Revision	00
	AXI V810 Outer Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	30 May 2017

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	30 May 2017	First Release	Tan Liang Kai

	Work Instruction	Doc. Revision	00
	AXI V810 Outer Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	30 May 2017

Content

Outer barrier speed control fitting(Closing).....	3
Outer barrier speed control fitting (Closing) removal.....	3
Outer barrier speed control fitting (Closing) replacement.....	4
Outer barrier speed control fitting (Opening).....	6
Outer barrier speed control fitting (Opening) removal.....	6
Outer barrier speed control fitting (Opening) replacement.....	7

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 Outer Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	30 May 2017

Outer barrier speed control fitting(Closing)

Outer barrier speed control fitting (Closing) removal

1. Turn off X-ray source & Air Pressure Supply.
2. Open Front Access Doors.
3. Remove 1 x Tubing as shown in Figure 1

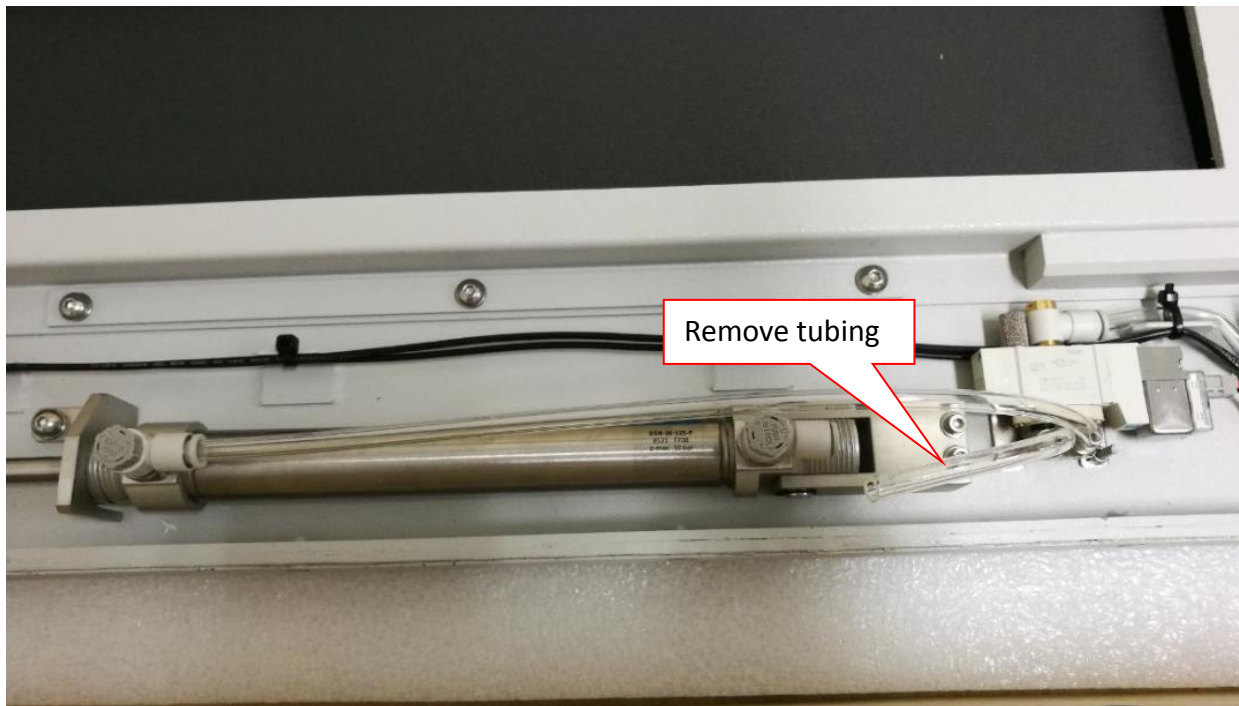


Figure 1 Tubing removal

4. Remove Speed Controller Fitting by Adjustable Wrench as shown in Figure 2



Figure 2 Speed controller fitting removal

ViTrox 	Work Instruction	Doc. Revision	00
	AXI V810 Outer Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	30 May 2017

Outer barrier speed control fitting (Closing) replacement

5. Prepare Outer Barrier Speed Controller Fitting (P/N: 2820-0117)
6. Assemble Speed Controller Fitting as shown in Figure 3. Tighten up with Adjustable Wrench



Figure 3 Speed controller fitting assembly

7. Connect tubing as shown in Figure 4

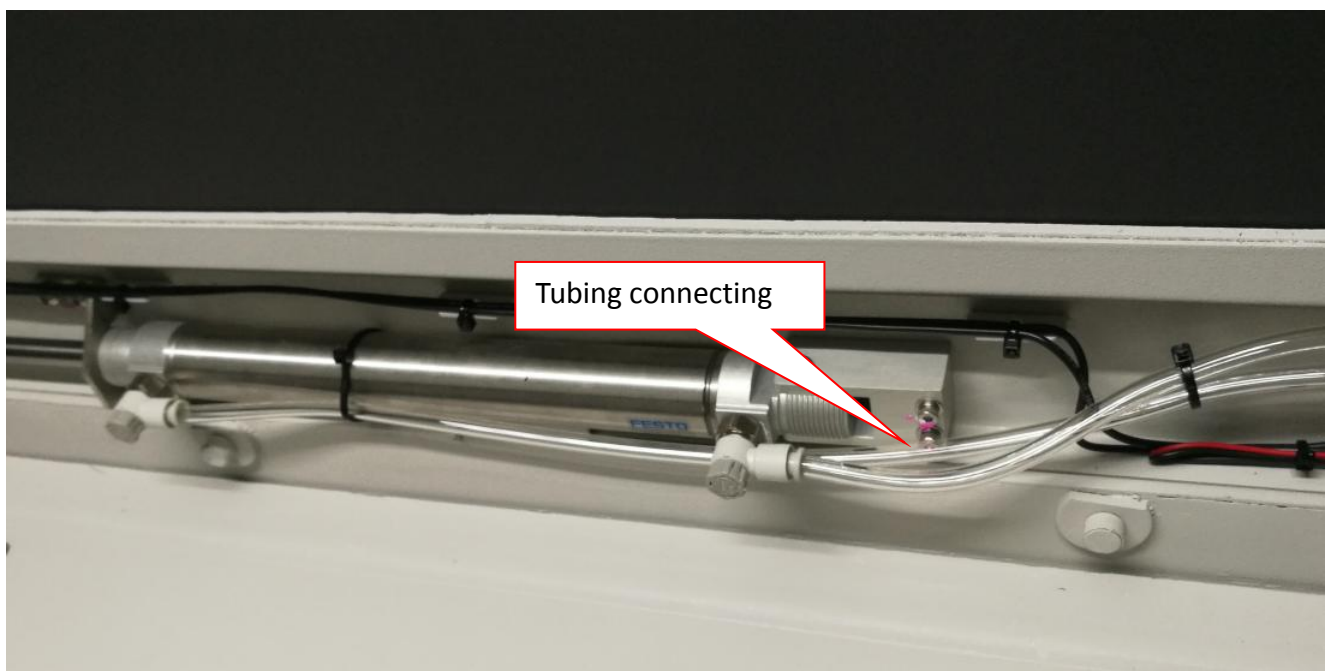


Figure 4 Tubing assembly

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 Outer Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	30 May 2017

8. Turn on Air Pressure Supply.
9. Go to Panel Handling & Initialize. Manually toggle particular Outer Barrier as shown in Figure 5

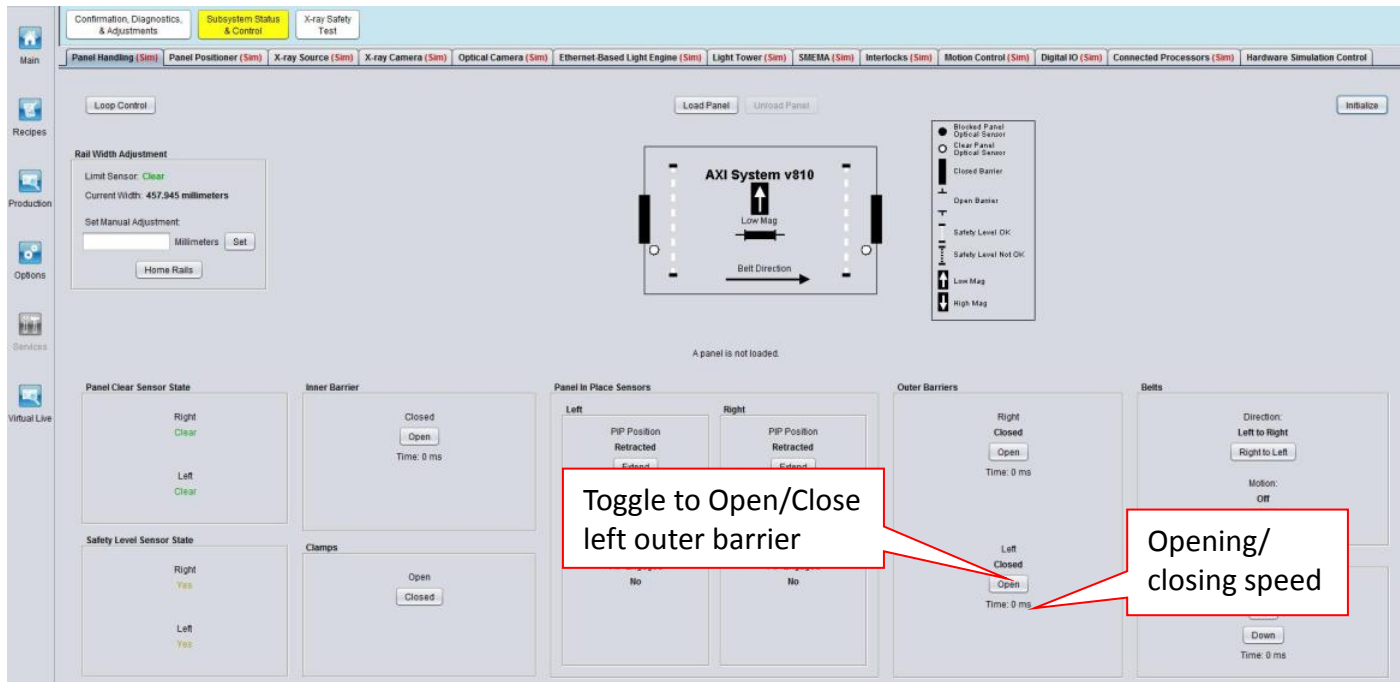


Figure 5 Outer barrier status (Reference Picture Only)

10. Pull out speed controller fitting knob, adjust until closing speed is within below range. Release the knob after adjustment

Machine Type	Task	Speed (ms)
V810 STD	Outer barrier Opening & Closing	600 ~ 750
V810 XXL	Outer barrier Opening & Closing	1200 ~ 1500



Figure 6 Outer barrier speed adjustment

11. Close Front Access Doors & turn on X-ray source.
12. Run 3 loops of CD&A.

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 Outer Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	30 May 2017

Outer barrier speed control fitting (Opening)

Outer barrier speed control fitting (Opening) removal

13. Turn off X-ray source & Air Pressure Supply
14. Open Front Access Door
15. Remove Tubing as shown in Figure 7



Figure 7 Tubing removal

16. Remove Speed Controller Fitting by Adjustable Wrench as shown in Figure 8



Figure 8 Speed controller fitting removal

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 Outer Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	30 May 2017

Outer barrier speed control fitting (Opening) replacement

17. Prepare Outer Barrier Speed Controller Fitting (P/N: 2820-0117)
18. Assemble Speed Controller Fitting. Tighten up by Adjustable Wrench as shown in Figure 9



Figure 9 Speed controller fitting assembly

19. Connect tubing as shown in Figure 10

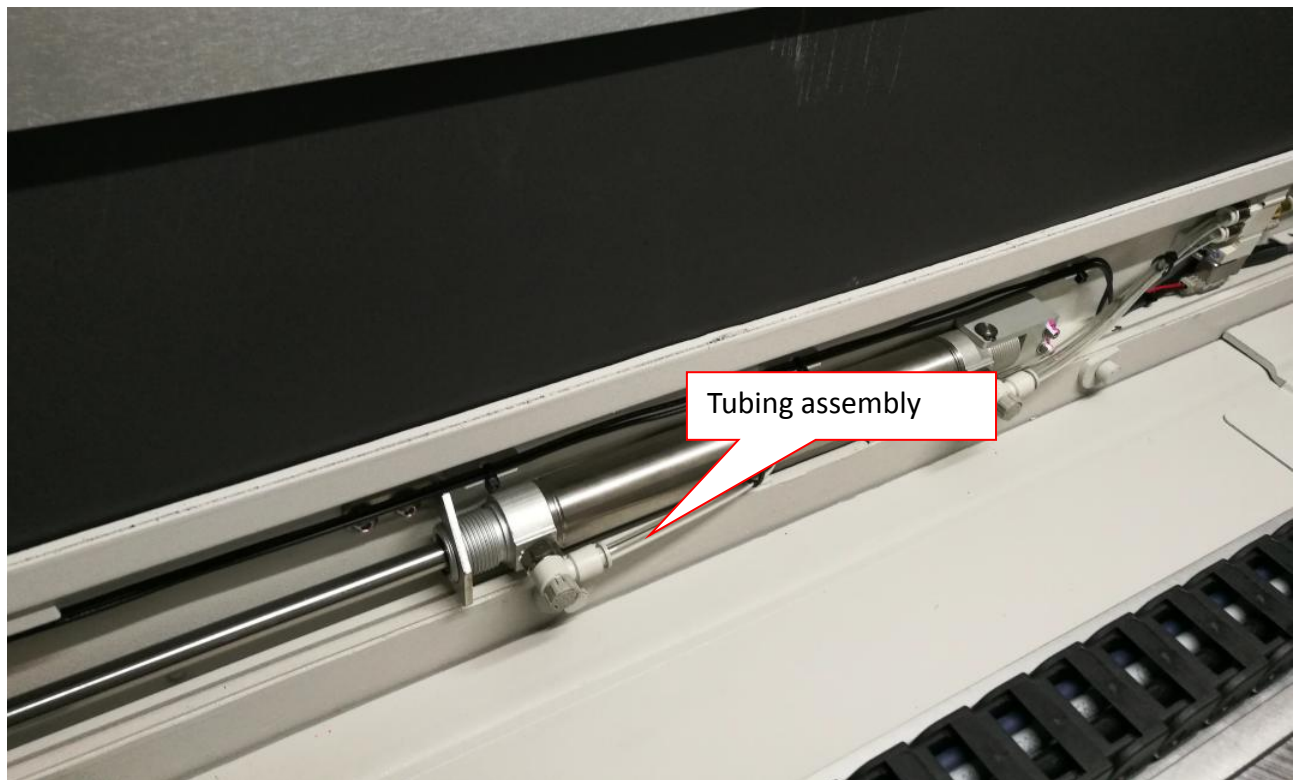


Figure 10 Tubing assembly

20. Turn on Air Pressure Supply.

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 Outer Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	30 May 2017

21. Go to Panel Handling & Initialize. Manually toggle particular outer barrier as shown in Figure 11

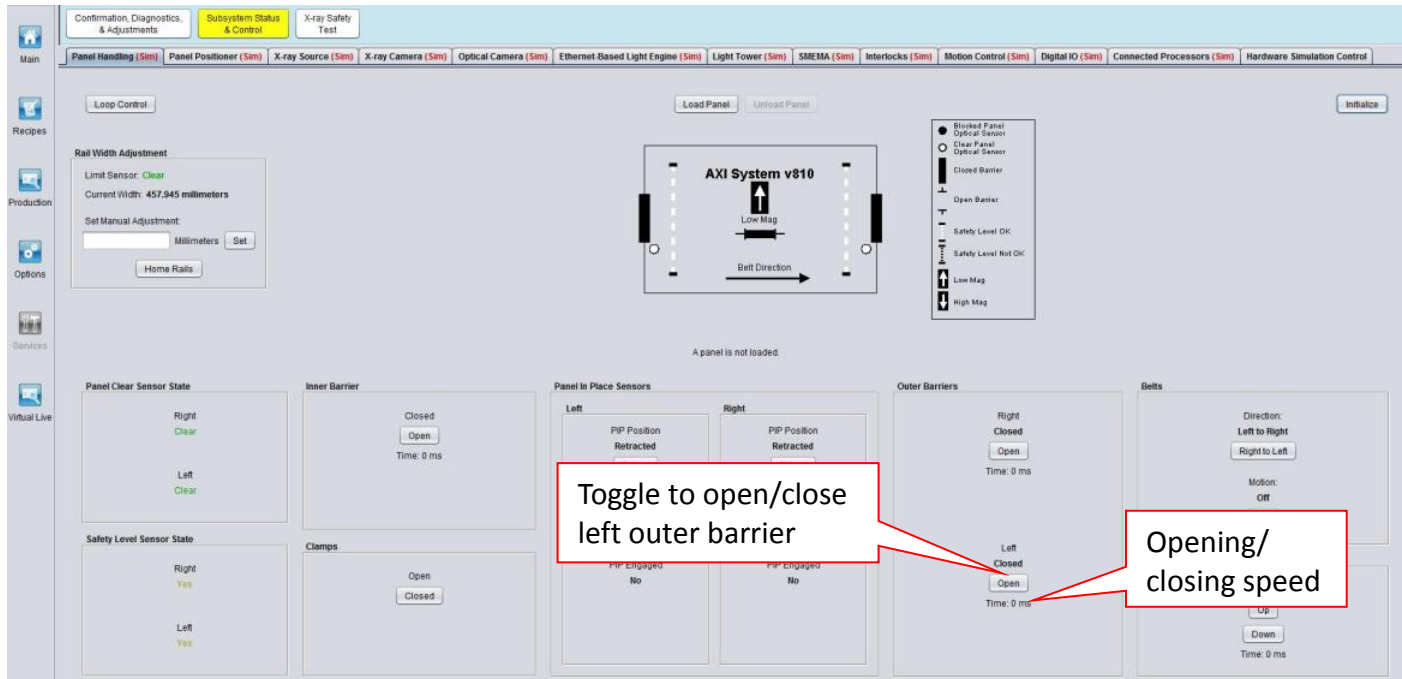


Figure 11 Outer barrier status (Reference Picture Only)

22. Pull out speed controller fitting knob, adjust until opening speed is within below range .Release the knob after adjustment

Machine Type	Task	Speed (ms)
V810 STD	Outer Barrier Opening & Closing	600 ~ 750
V810 XXL	Outer Barrier Opening & Closing	1200 ~ 1500



Figure 12 Outer barrier opening speed adjustment

23. Close Front Access Doors & turn on X-ray source.

24. Run 3 loops of CD&A.