

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Adj Rail Clamper Pneumatic Valve Removal & Replacement Procedure	Effective Date	24 May 2017

This procedure is applicable to below models:

V810 STD	☐	S1	☐	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	24 May 2017	First Release	Chin Chee Yan

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Adj Rail Clamper Pneumatic Valve Removal & Replacement Procedure	Effective Date	24 May 2017

Content

Removal Procedure.....	3
Replacement Procedure.....	5
Validation.....	7

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Adj Rail Clamper Pneumatic Valve Removal & Replacement Procedure	Effective Date	24 May 2017

Removal Procedure

1. **Shutdown and completely power off machine.** Turn off air pressure regulator
2. **Power off the SSCA main power # Important**
3. Open front access door and manual move XY stage towards front door direction
4. Loosen 3 x Screws and remove PIP Cable Cover (P/N, 4JAXYS-N104) at Fix Rail

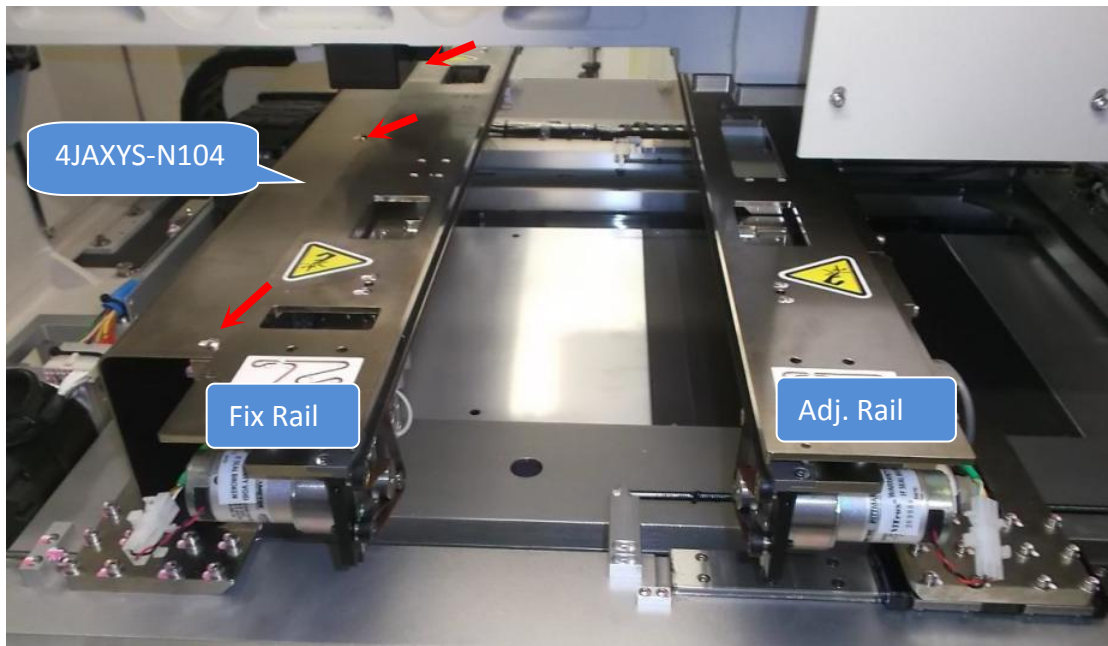


Figure 1 PIP Cable Cover

5. Identify Adj Rail Clamper Pneumatic Valve Location by refer to below Figure 2

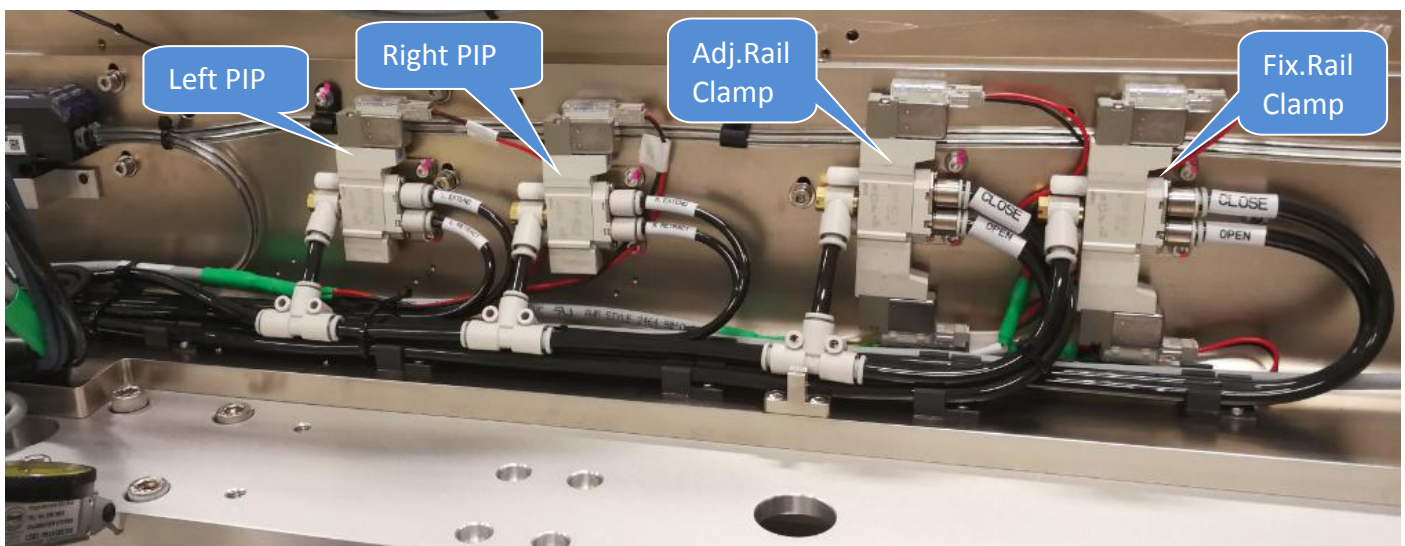


Figure 2 Adj Rail Clamper Pneumatic Valve Location

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Adj Rail Clamper Pneumatic Valve Removal & Replacement Procedure	Effective Date	24 May 2017

6. Disconnect 2 x Solenoid Valve Cable & 3 x Tubing as below Figure 3

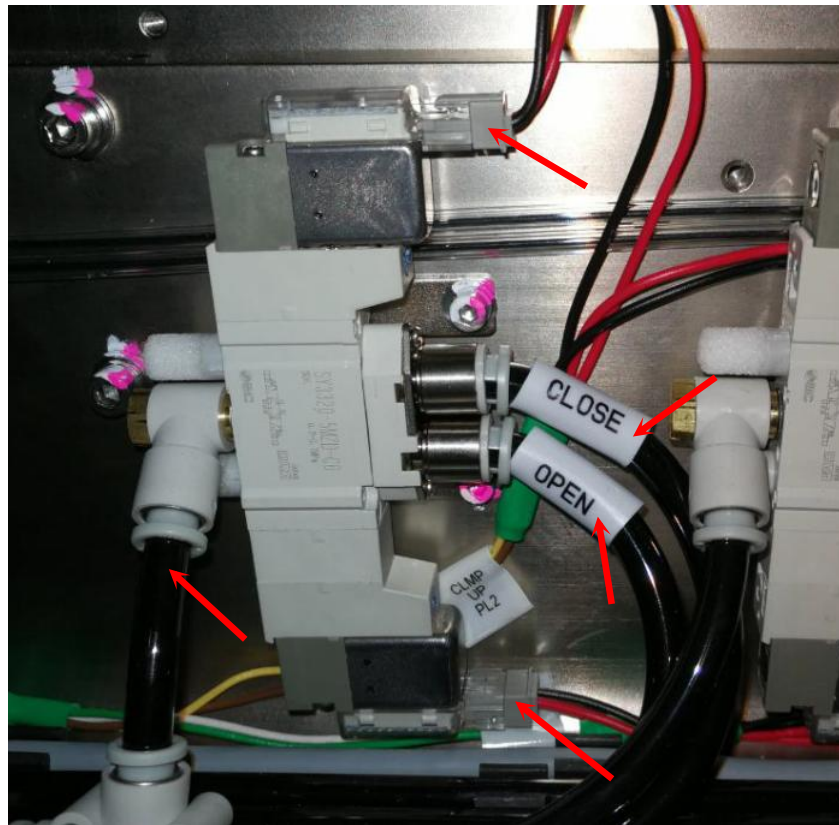


Figure 3 Adj Rail Clamper Solenoid Cable & Tubing Removal

7. Loosen 2 x Screws .Remove Adj Rail Clamper Pneumatic Valve from Fix Rail

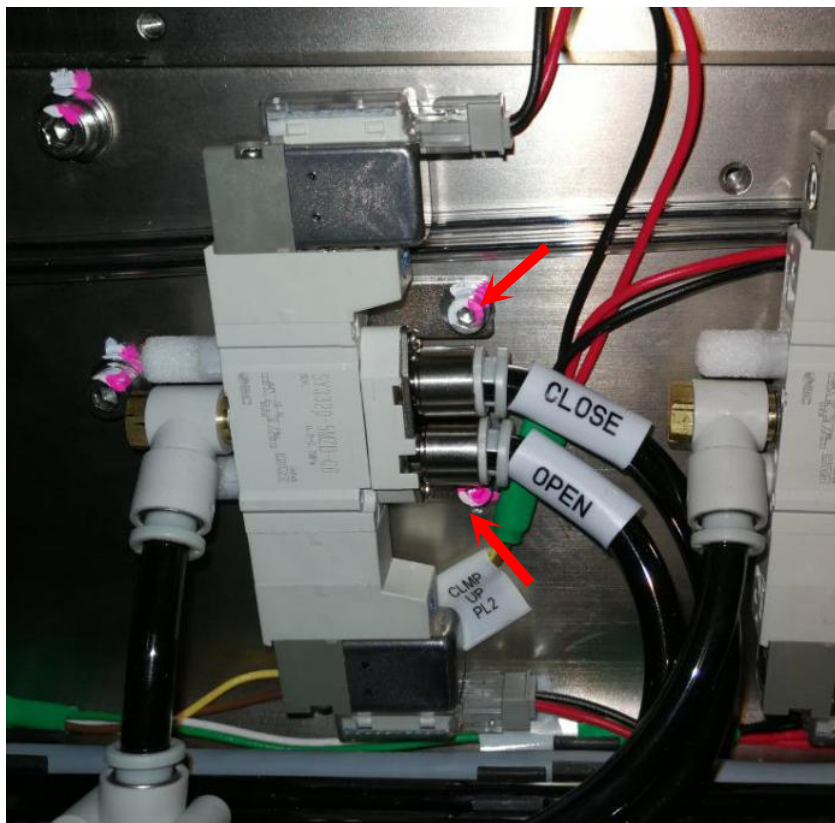


Figure 4 Adj Rail Clamper Pneumatic Valve Removal

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Adj Rail Clamper Pneumatic Valve Removal & Replacement Procedure	Effective Date	24 May 2017

Replacement Procedure

8. Prepare new S2 EX Clamper Controller Kit (P/N, 4XASP-A158)

Remarks :Kit include Solenoid Valve (2 x Build IN Fitting) x 1, Fitting x 1 and Silencer x 2.



Figure 5 S2 EX Clamper Controller Kit

9. Remove the Holding Bracket from Adj Rail Clamper Pneumatic Valve (Previously dismantle). Assemble the Holding Bracket to new “S2 EX Clamper Controller Kit”. May refer to below Figure 6

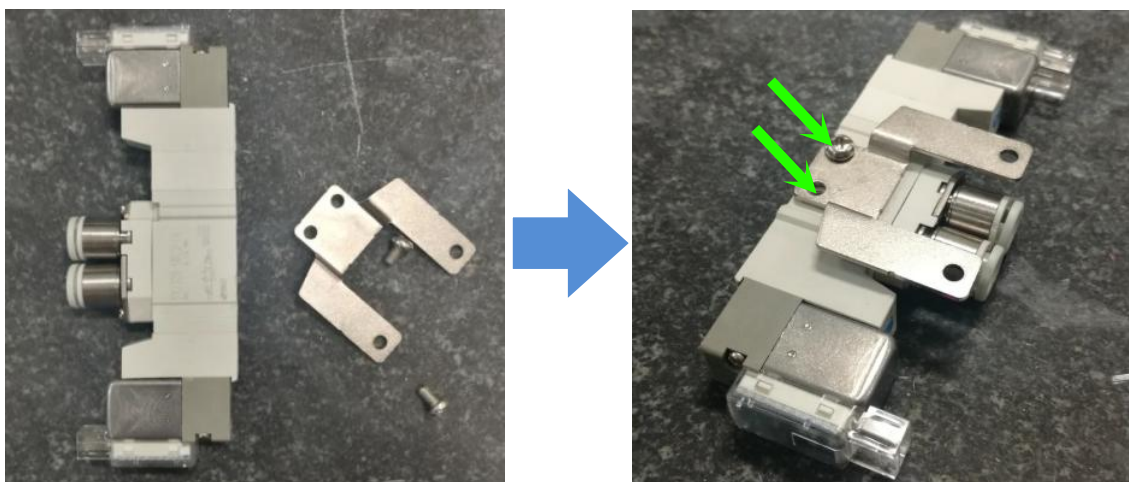


Figure 6 Holding Bracket Transplant

10. Assemble Fitting and Silencer at S2 EX Clamper Controller Kit. May refer to below Figure 7

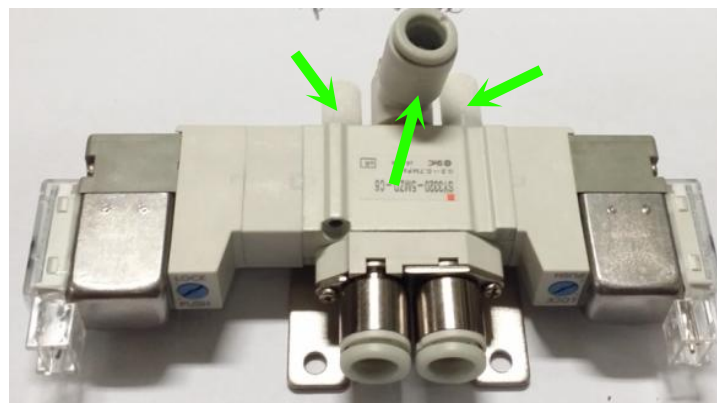


Figure 7 S2EX Clamper Controller Kit

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Adj Rail Clamper Pneumatic Valve Removal & Replacement Procedure	Effective Date	24 May 2017

11. Assemble “S2EX Clamper Controller Kit” at Adj Rail Clamper Pneumatic Valve Location. Tighten 2 x Screws as below Figure 8

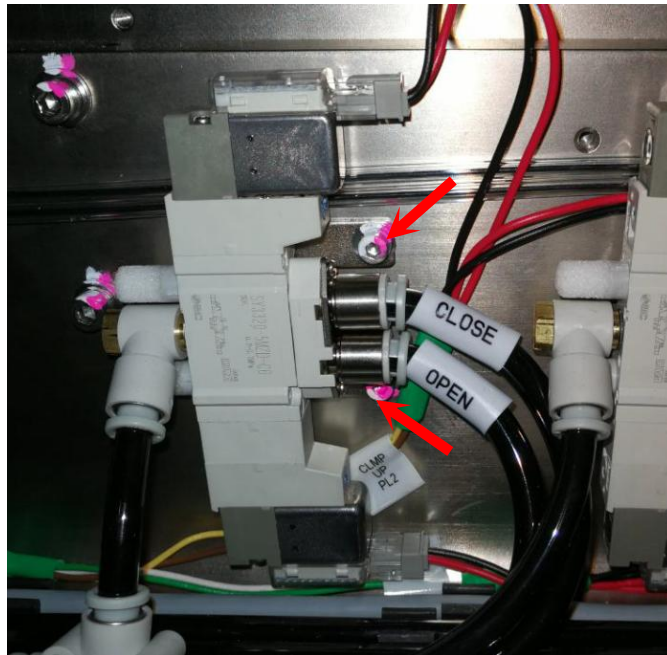


Figure 8 Adj Rail Clamper Pneumatic Valve Assembly

12. Connect below cable by refer below step :

- Connect Solenoid Valve Cable by refer to Label “CLMP UP PL2” as below Figure 9
- Connect Solenoid Valve cable by refer to Label “CLMP DOWN PL9” as below Figure 9
- Connect 2 x Tubing respectively by refer to “CLOSE” & “OPEN” as below Figure 9
- Connect Main tubing as below Figure 9

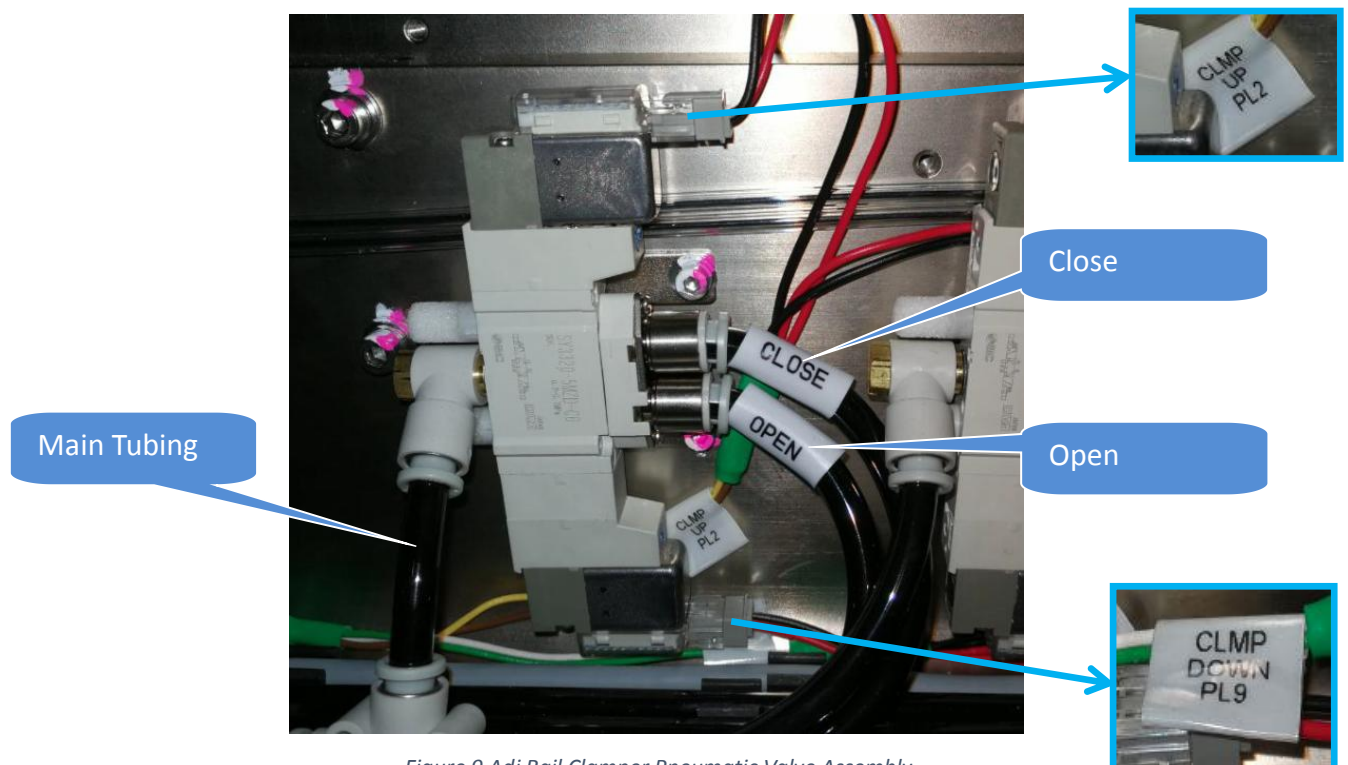


Figure 9 Adj Rail Clamper Pneumatic Valve Assembly

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Adj Rail Clamper Pneumatic Valve Removal & Replacement Procedure	Effective Date	24 May 2017

Validation

13. Log in V810 GUI and initialize DIO.

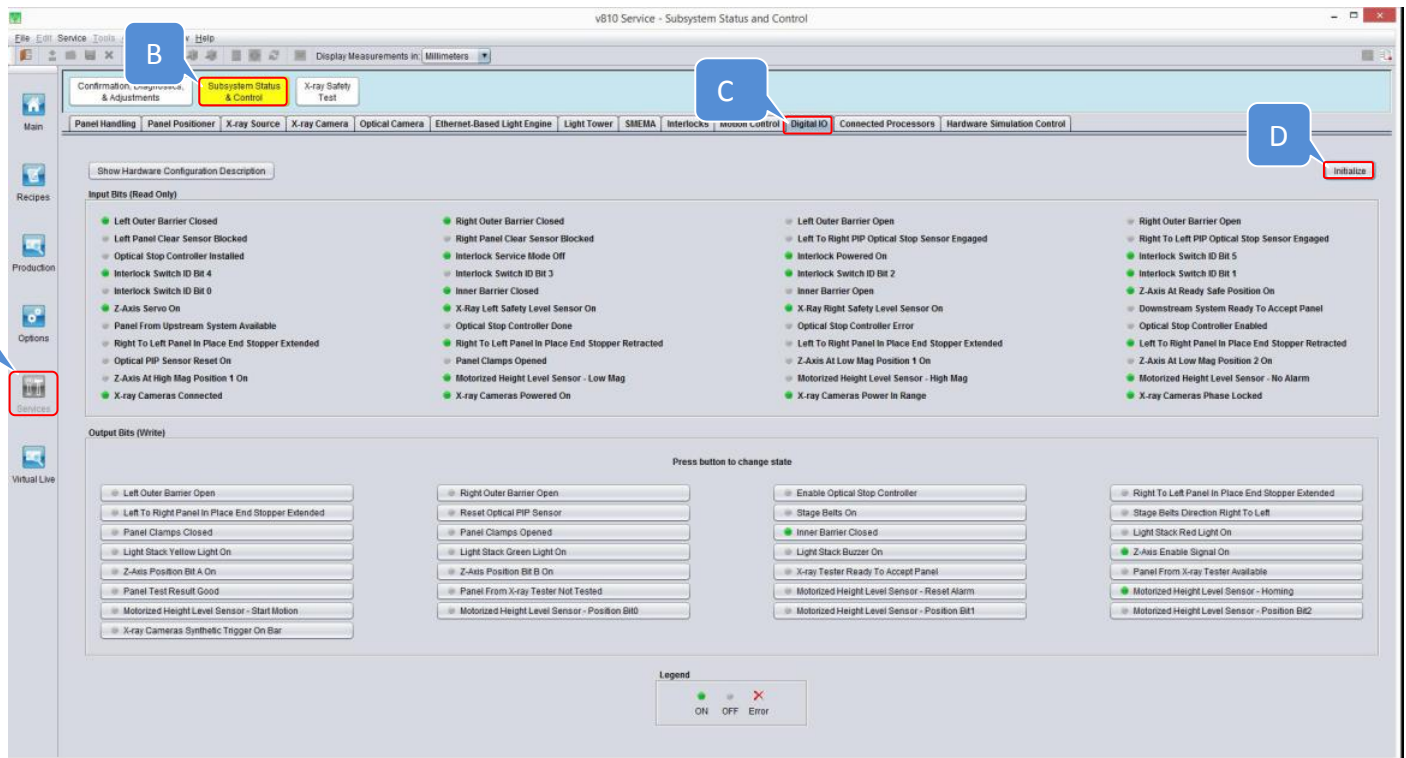


Figure 10 Digital IO

14. Open machine front door and manually exercise clamper visual check on mechanism movement, ensure actual movement is sync with the command toggle.

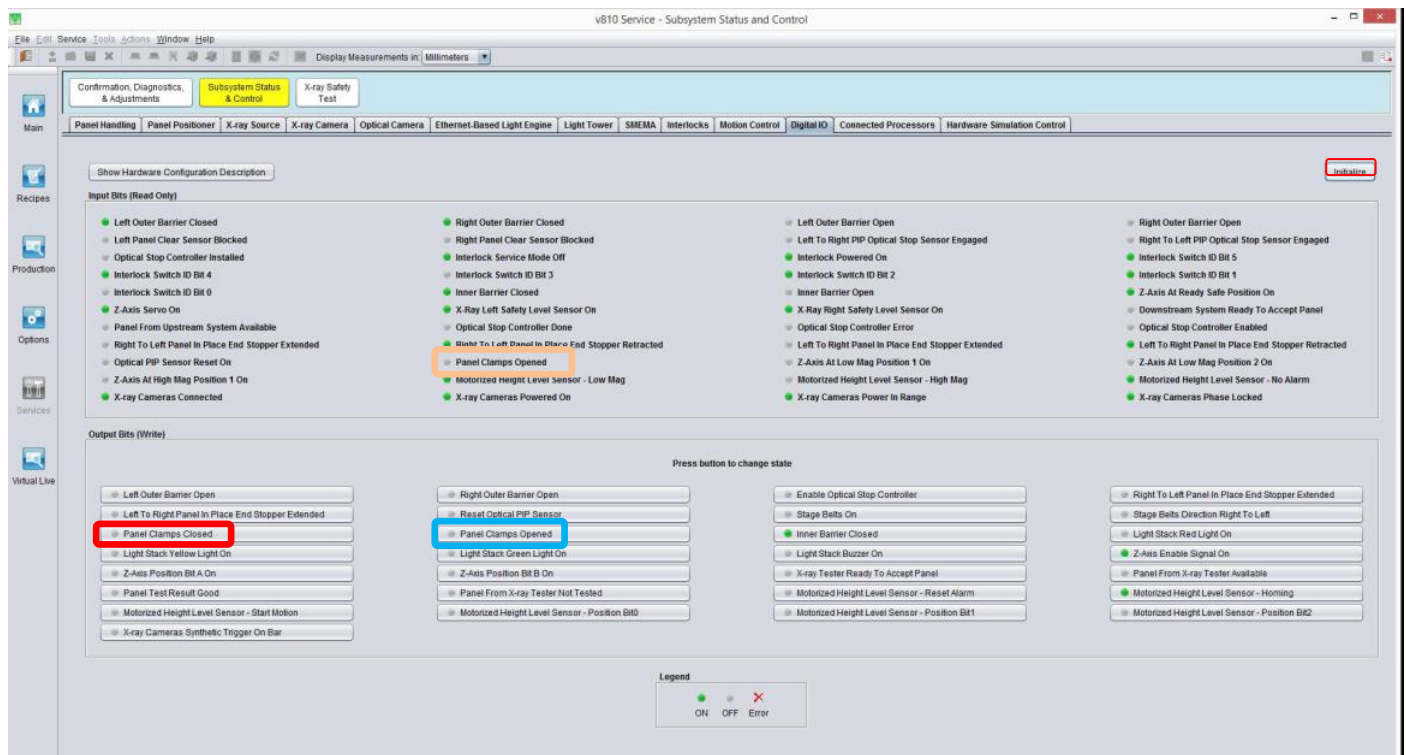


Figure 11 Digital IO (Clamper)

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Adj Rail Clamper Pneumatic Valve Removal & Replacement Procedure	Effective Date	24 May 2017

15. Assemble the PIP Cable Cover (P/N, 4JAXYS-N104). Tighten 3 x Screws

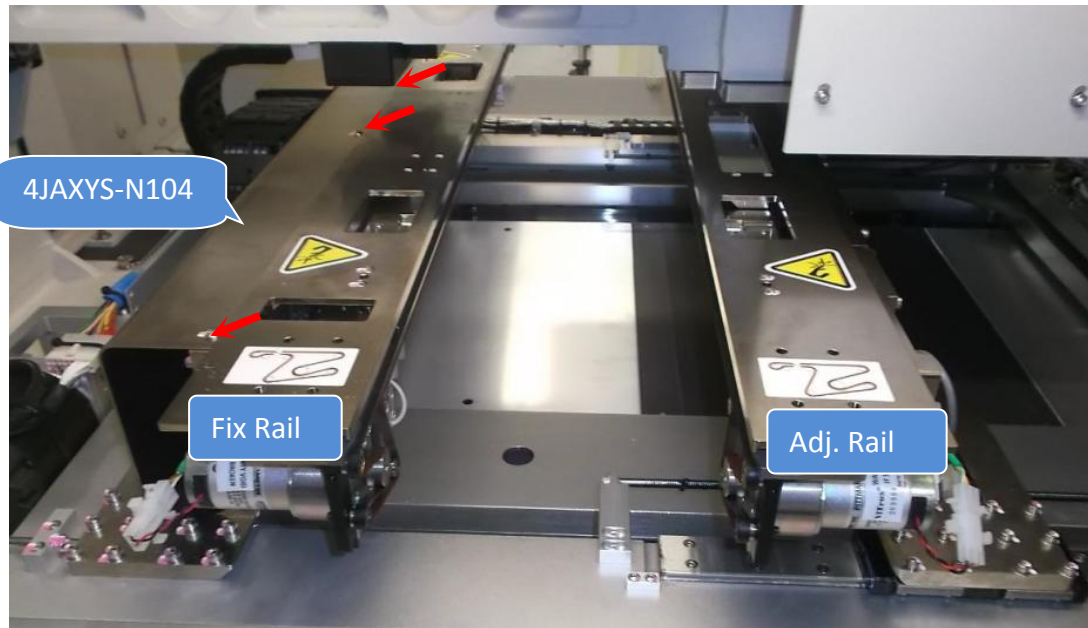


Figure 12 PIP Cable Cover Assembly

16. Start-up system as usual