

|                                                                                  |                                                                        |                |             |
|----------------------------------------------------------------------------------|------------------------------------------------------------------------|----------------|-------------|
|  | Work Instruction                                                       | Doc. Revision  | 00          |
|                                                                                  | AXI V810 S2EX Left PIP Pneumatic Valve Removal & Replacement Procedure | Effective Date | 24 May 2017 |

This procedure is applicable to below models:

|           |                                     |    |                          |    |
|-----------|-------------------------------------|----|--------------------------|----|
| V810 STD  | <input type="checkbox"/>            | S1 | <input type="checkbox"/> | S2 |
| V810 XXL  | <input type="checkbox"/>            | S1 | <input type="checkbox"/> | S2 |
| V810 S2EX | <input checked="" type="checkbox"/> |    |                          |    |
| V810 Mini | <input type="checkbox"/>            |    |                          |    |

#### REVISION HISTORY

| Rev | Effective Date | Description   | Doc Originator |
|-----|----------------|---------------|----------------|
| 00  | 24 May 2017    | First Release | Chin Chee Yan  |
|     |                |               |                |
|     |                |               |                |

|                                                                                  |                                                                                   |                |                    |
|----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|----------------|--------------------|
|  | Work Instruction                                                                  | Doc. Revision  | <b>00</b>          |
|                                                                                  | <b>AXI V810 S2EX Left PIP Pneumatic Valve Removal &amp; Replacement Procedure</b> | Effective Date | <b>24 May 2017</b> |

## Content

|                            |   |
|----------------------------|---|
| Removal Procedure.....     | 3 |
| Replacement Procedure..... | 5 |
| Validation.....            | 7 |

|                                                                                  |                                                                        |                |             |
|----------------------------------------------------------------------------------|------------------------------------------------------------------------|----------------|-------------|
|  | Work Instruction                                                       | Doc. Revision  | 00          |
|                                                                                  | AXI V810 S2EX Left PIP Pneumatic Valve Removal & Replacement Procedure | Effective Date | 24 May 2017 |

## Removal Procedure

1. **Shutdown and completely power off machine.** Turn off air pressure regulator
2. **Power off the SSCA main power # Important**
3. Open front access door and manual move XY stage towards front door direction
4. Loosen 3 x Screws and remove PIP Cable Cover (P/N, 4JAXYS-N104) at Fix Rail.

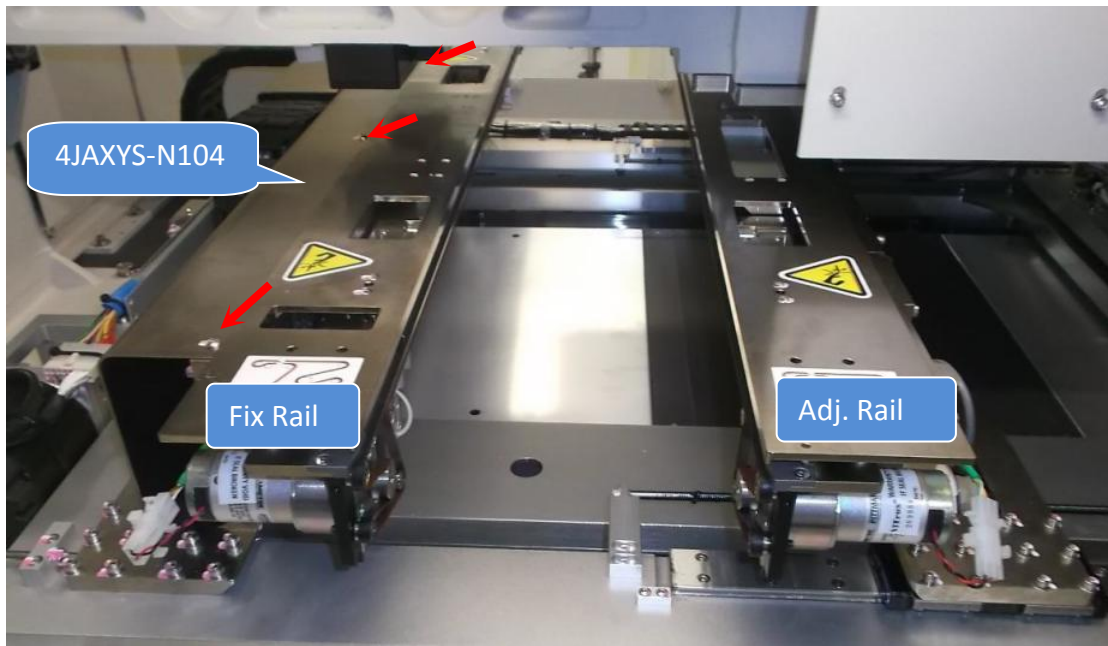


Figure 1 PIP Cable Cover

5. Identify Left PIP Pneumatic Valve Location by refer to below Figure 2


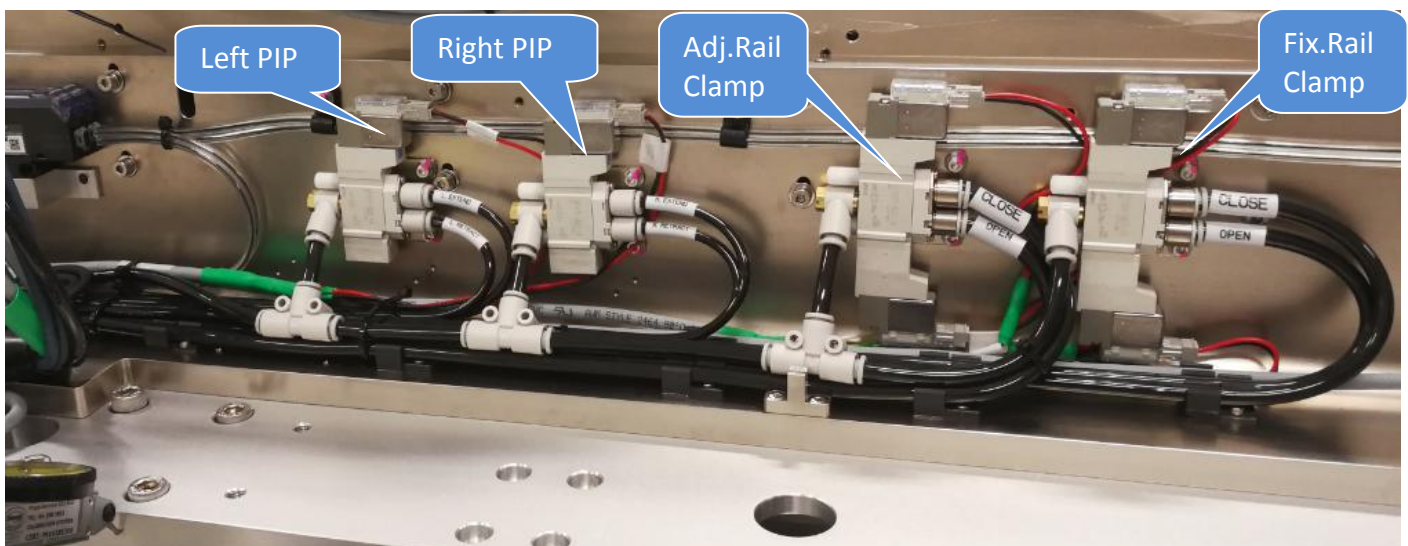


Figure 2 Left PIP Pneumatic Valve Location


|               |                                                                                   |                |                    |
|---------------|-----------------------------------------------------------------------------------|----------------|--------------------|
| <b>ViTrox</b> | Work Instruction                                                                  | Doc. Revision  | <b>00</b>          |
|               | <b>AXI V810 S2EX Left PIP Pneumatic Valve Removal &amp; Replacement Procedure</b> | Effective Date | <b>24 May 2017</b> |

6. Disconnect Solenoid Valve Cable & 3 x Tubing as below Figure 3

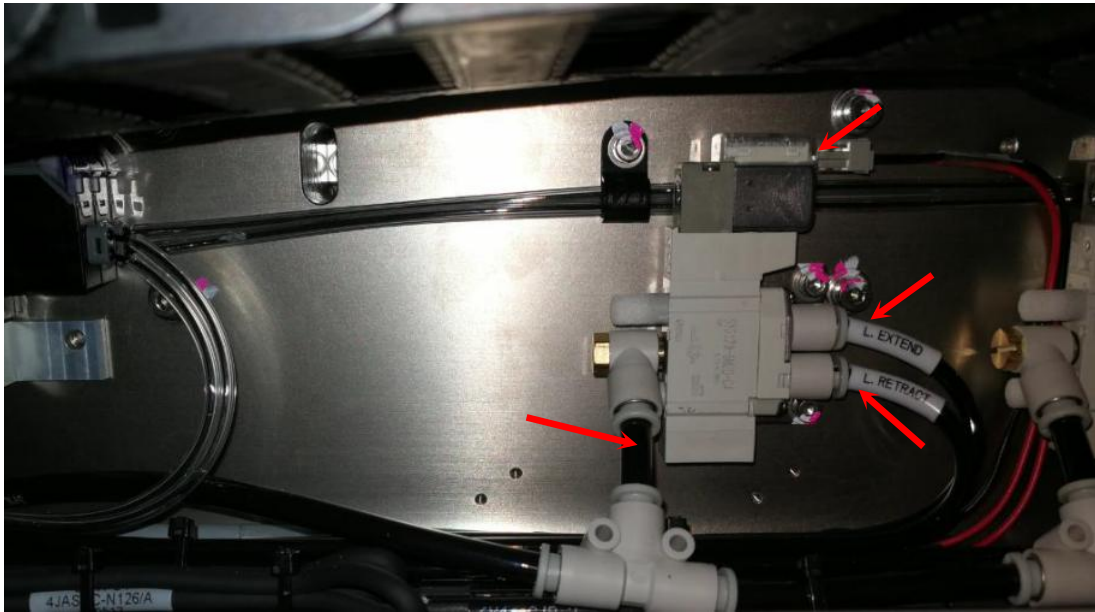

*Figure 3 Left PIP Solenoid Cable & Tubing Removal*

7. Loosen 2 x Screws .Remove Left PIP Pneumatic Valve from Fix Rail

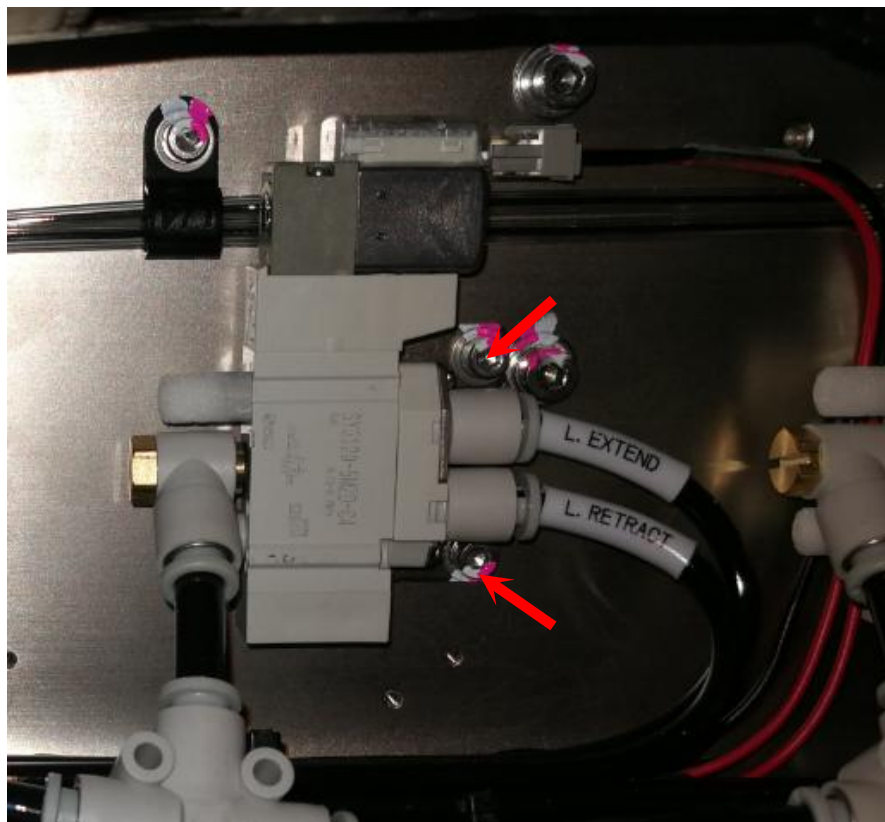

*Figure 4 Left PIP Pneumatic Valve Removal*

|                                                                                  |                                                                        |                |             |
|----------------------------------------------------------------------------------|------------------------------------------------------------------------|----------------|-------------|
|  | Work Instruction                                                       | Doc. Revision  | 00          |
|                                                                                  | AXI V810 S2EX Left PIP Pneumatic Valve Removal & Replacement Procedure | Effective Date | 24 May 2017 |

## Replacement Procedure

8. Prepare new Safety Stop Pneumatic Controller Kit (P/N, 4XASP-A159)

Remarks :Kit include Solenoid Valve (2 x Build IN Fitting) x 1, Fitting x 1 and Silencer x 2.



Figure 5 Safety Stop Pneumatic Controller Kit

9. Remove the Holding Bracket from Left PIP Pneumatic Valve (Previously dismantled). Assemble the Holding Bracket to new “Safety Stop Pneumatic Controller Kit”. May refer to below Figure 6

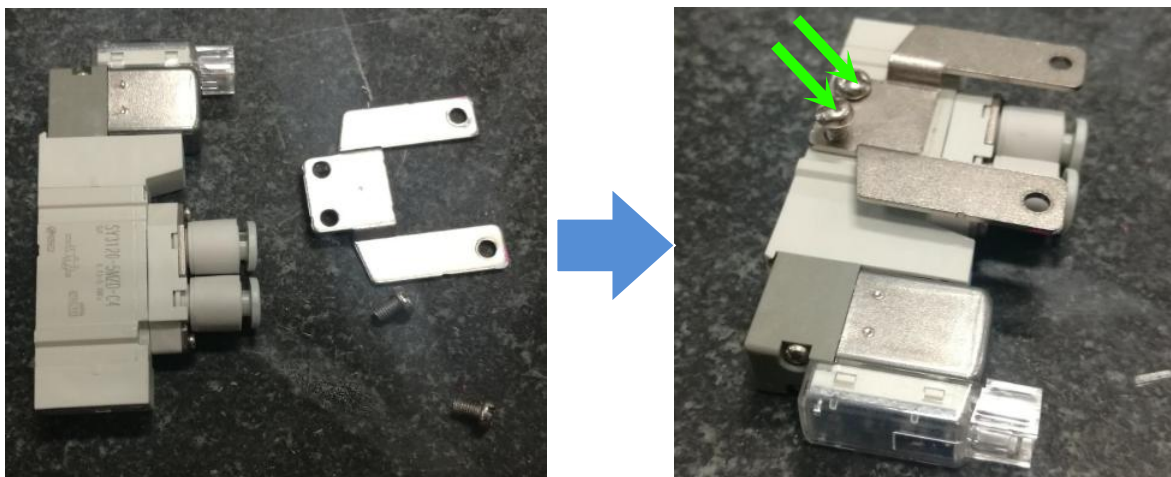


Figure 6 Holding Bracket Transplant

10. Assemble Fitting and Silencer at New Safety Stop Pneumatic Controller Kit. May refer to below Figure 7

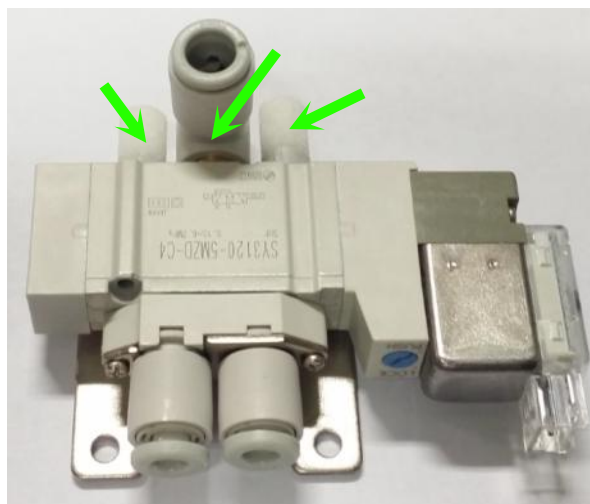


Figure 7 Safety Stop Pneumatic Controller Kit



|                                                                                  |                                                                        |                |             |
|----------------------------------------------------------------------------------|------------------------------------------------------------------------|----------------|-------------|
|  | Work Instruction                                                       | Doc. Revision  | 00          |
|                                                                                  | AXI V810 S2EX Left PIP Pneumatic Valve Removal & Replacement Procedure | Effective Date | 24 May 2017 |

11. Assemble “Safety Stop Pneumatic Controller Kit” at Left PIP Pneumatic Valve Location. Tighten 2 x Screws as below Figure 8

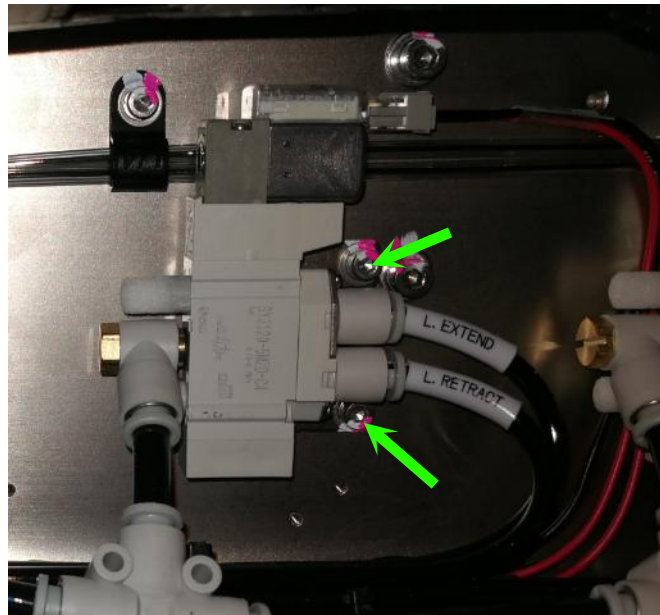


Figure 8 Left PIP Pneumatic Valve Assembly

12. Connect below cable by refer below step :

- Connect Solenoid Valve Cable by refer to Label “ LT STOP PL3” as below Figure 9
- Connect 2 x Tubing respectively by refer to “L.EXTEND” & “L.RETRACT” as below Figure 9
- Connect Main tubing as below Figure 9

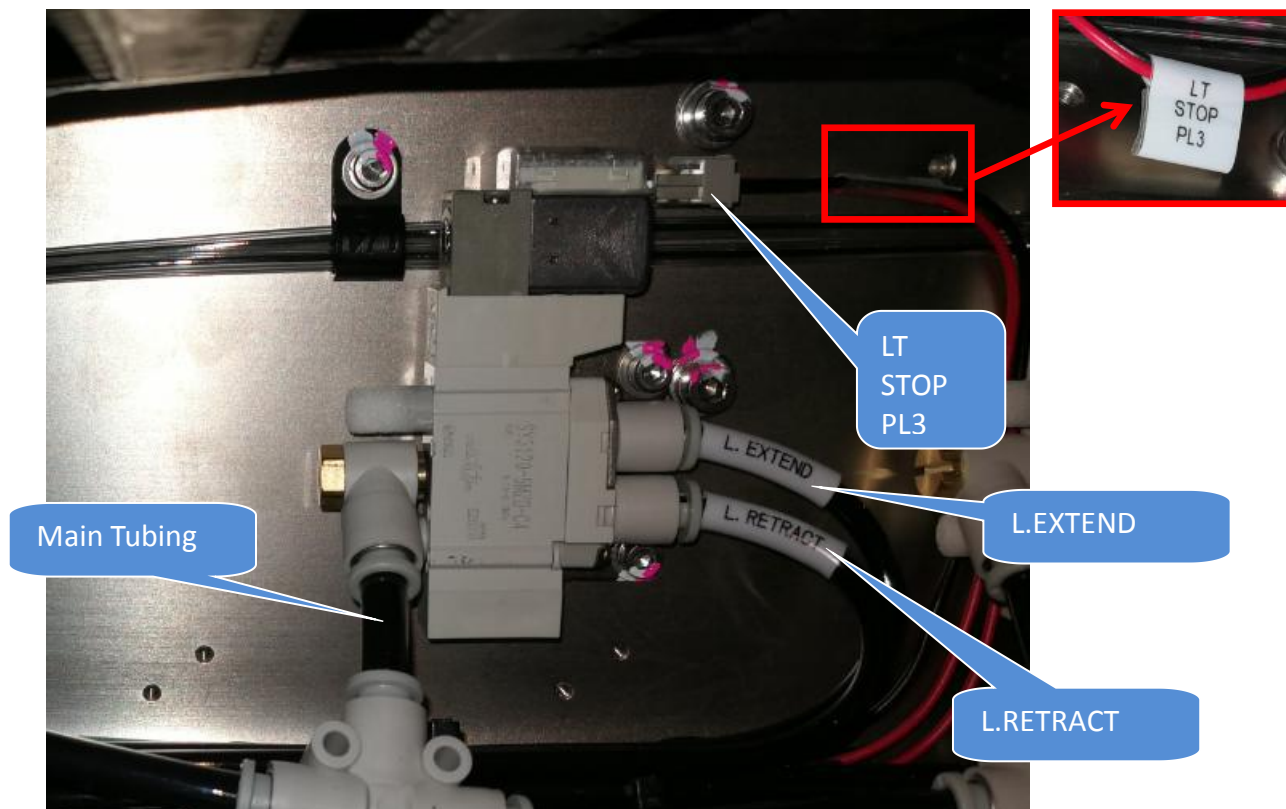


Figure 9 Left PIP Pneumatic Valve Assembly

|               |                                                                                   |                |                    |
|---------------|-----------------------------------------------------------------------------------|----------------|--------------------|
| <b>ViTrox</b> | Work Instruction                                                                  | Doc. Revision  | <b>00</b>          |
|               | <b>AXI V810 S2EX Left PIP Pneumatic Valve Removal &amp; Replacement Procedure</b> | Effective Date | <b>24 May 2017</b> |

## Validation

- Log in V810 GUI and initialize DIO. Open machine front door and manually exercise Left, visual check on mechanism movement, ensure actual movement is sync with the command toggle.

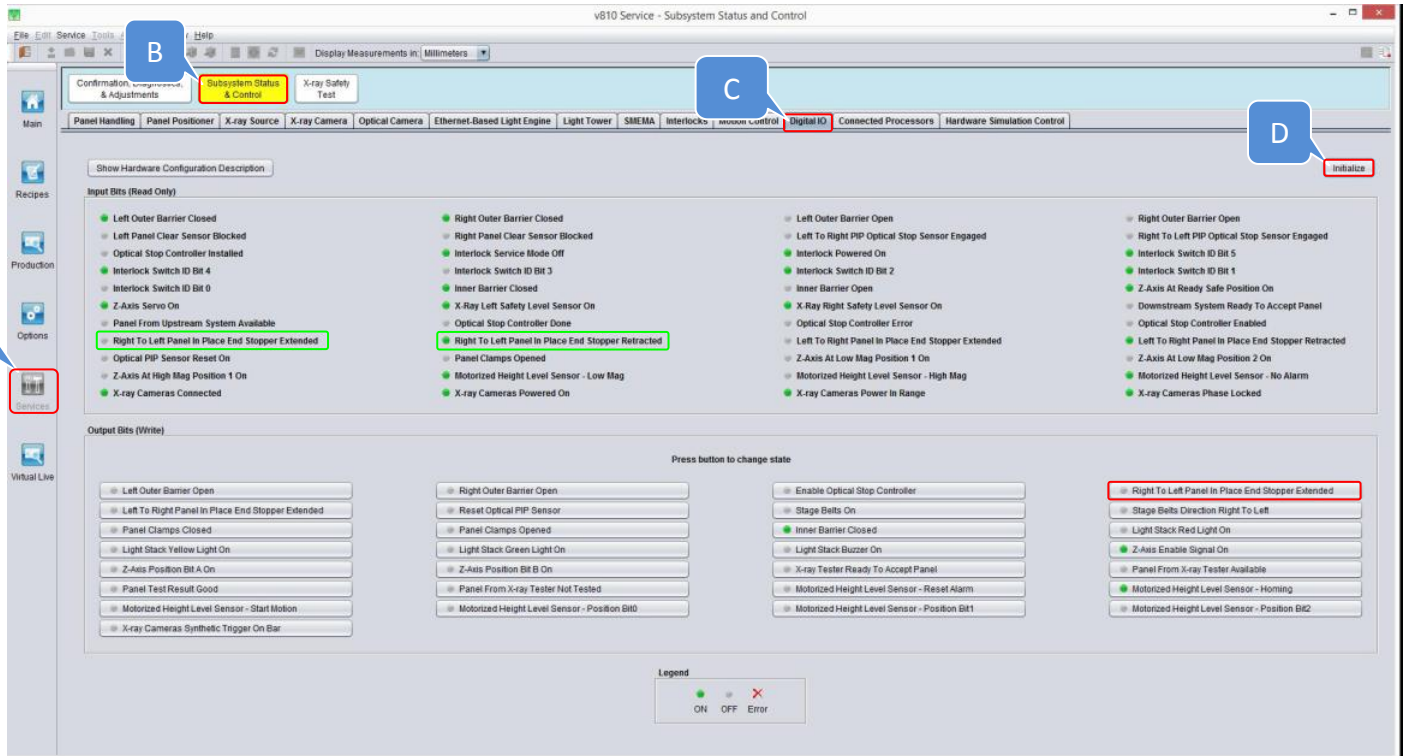


Figure 10 Panel Handling Mechanism Validation (Digital IO)

- Assemble the PIP Cable Cover (P/N, 4JAXYS-N104). Tighten 3 x Screws

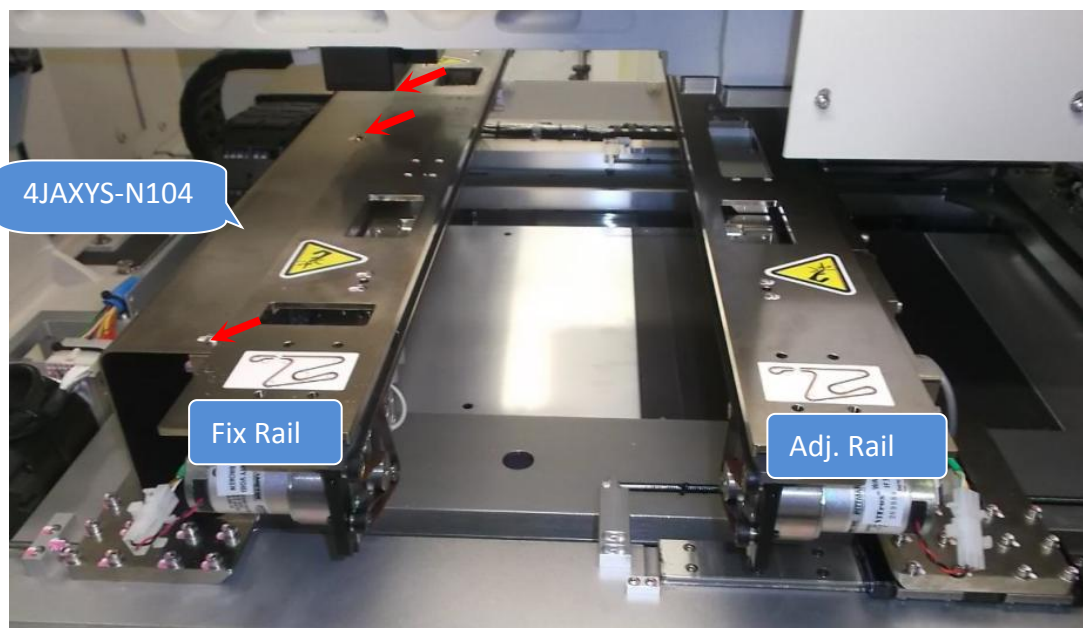


Figure 11 PIP Cable Cover Assembly

- Start-up system as usual