

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Outer Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	30 May 2016

This procedure is applicable to below models:

V810 STD	☐	S1	☐	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	30 May 2016	First Release	Tan Liang Kai

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Outer Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	30 May 2016

Content

S2EX Outer Barrier Speed Control Fitting Removal.....	3
S2EX Outer Barrier Speed Control Fitting Replacement.....	4

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Outer Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	30 May 2016

** This procedure is applicable for speed controller fitting on left & right outer barrier.

S2EX Outer Barrier Speed Control Fitting Removal

1. Turn off X-ray source & Air Pressure Regulator
2. Open front access doors.
3. Remove 4 x Tubing as Figure 1.

Remark: Perform label marking on "Open" & "Close" tubing respectively

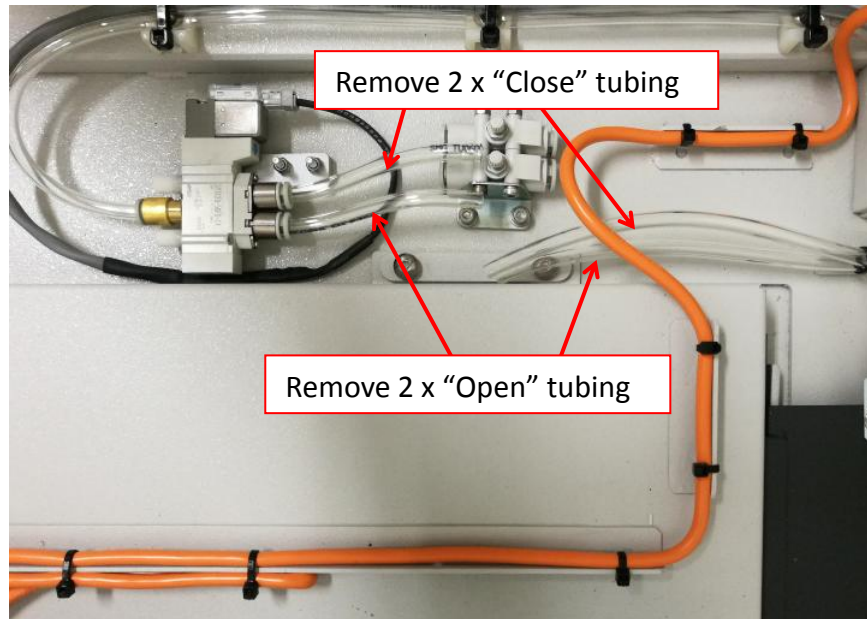


Figure 1 Tubing removal

4. Remove 2 x Screws & Speed Controller Fittings as Figure 2.

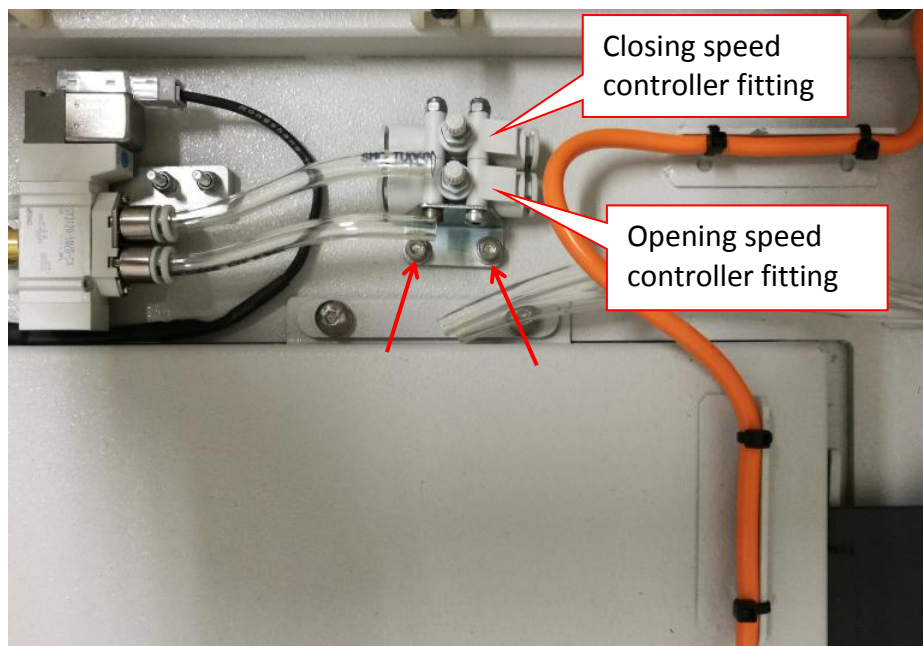


Figure 2 Speed controller fitting removal

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Outer Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	30 May 2016

- Remove 2 x Screws & Defective Speed Controller Fitting as shown in Figure 3.

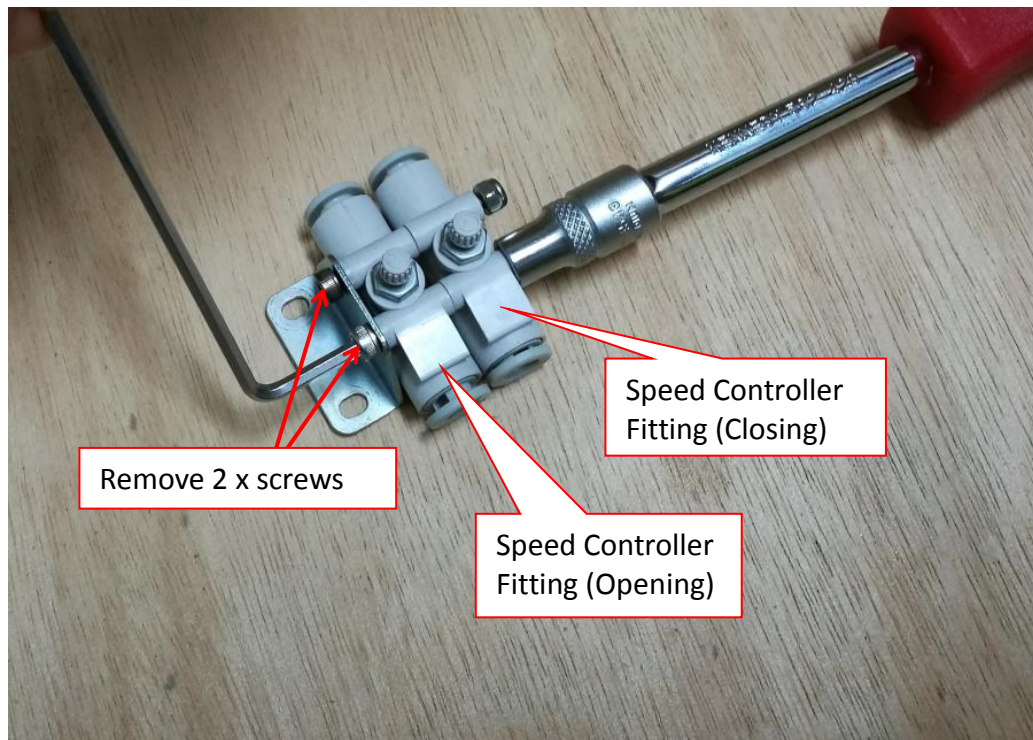


Figure 3 Speed controller fitting removal

S2EX Outer Barrier Speed Control Fitting Replacement

S2EX Outer Barrier Speed Controller Fitting (P/N: 2820-0060)

- Assemble New Speed Controller Fitting & tighten 2 x Screws as shown in Figure 4.

Remark: Caution on Speed Controller Fin orientation

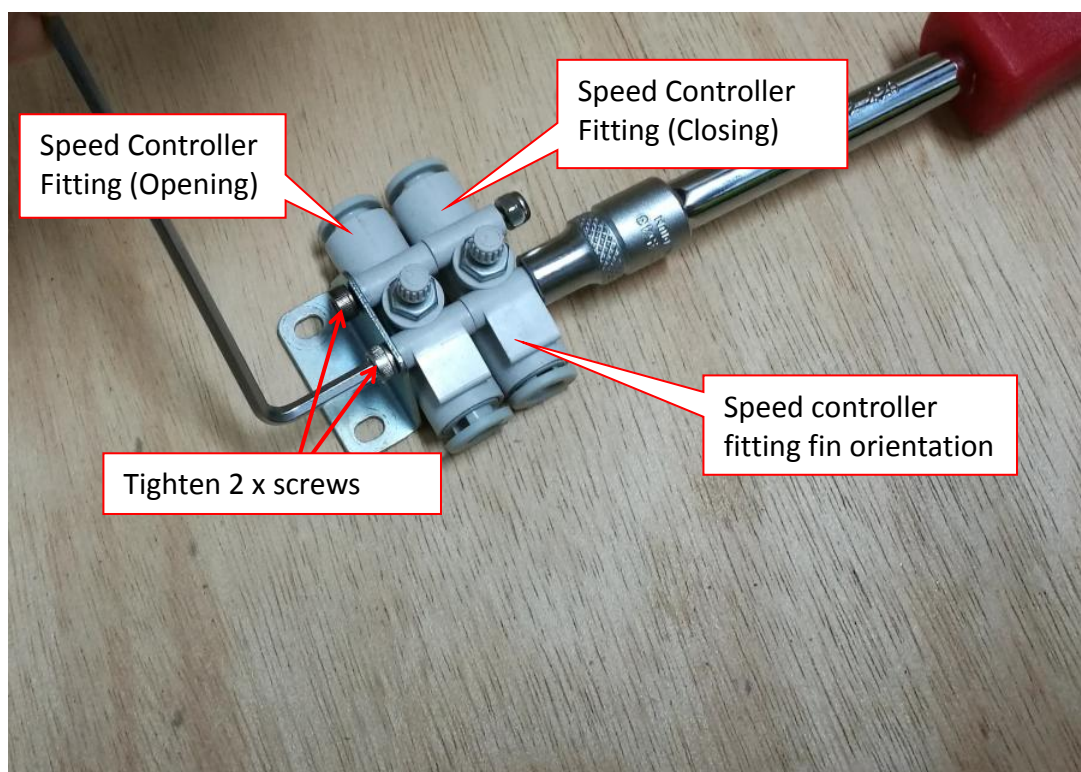


Figure 4 Closing speed controller fitting assembly

ViTrox 	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Outer Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	30 May 2016

2. Assemble Speed Controller Fitting by refer to below orientation. Tighten 2 x Screws as shown in Figure 5.

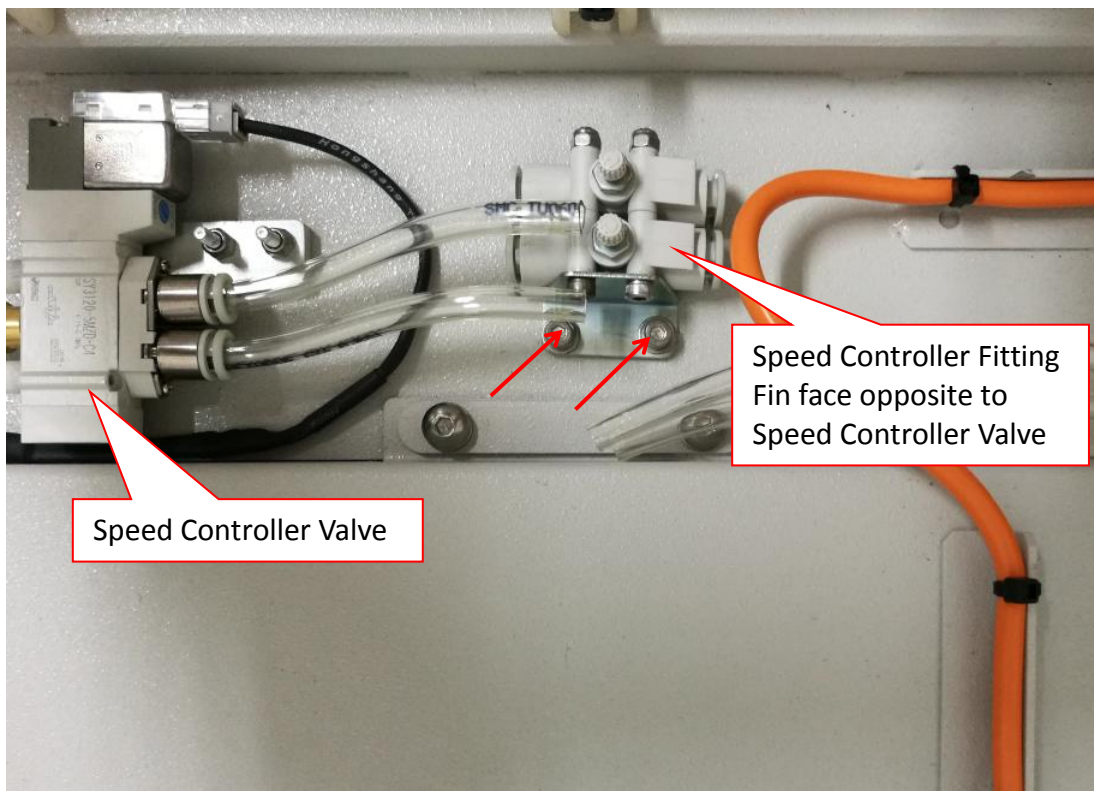


Figure 5 Speed controller fitting assembly

3. By refer to previous label marking in step 3, plug back 4 x Tubing respectively as shown in Figure 6.

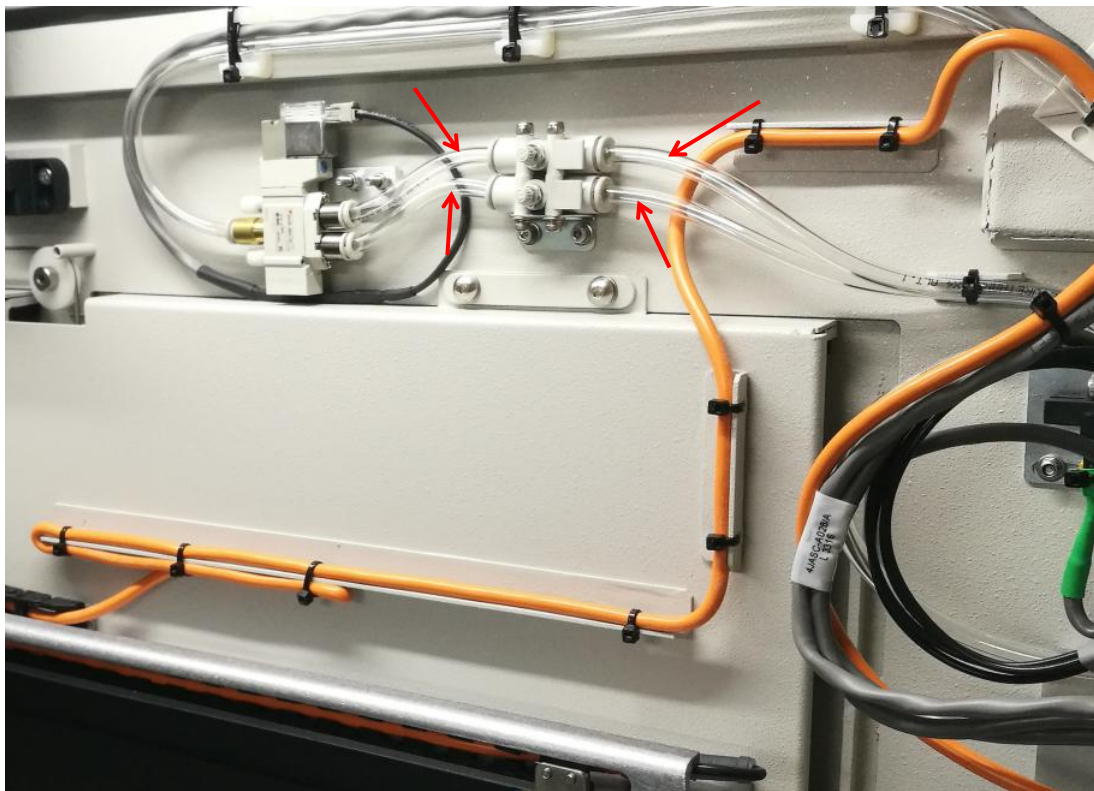


Figure 6 Tubing assembly

4. Turn on air pressure supply & adjust it until 80 psi.

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Outer Barrier Speed Control Fitting Removal & Replacement Procedure	Effective Date	30 May 2016

- Go to Panel Handling, manually toggle outer barrier as shown in Figure 7.

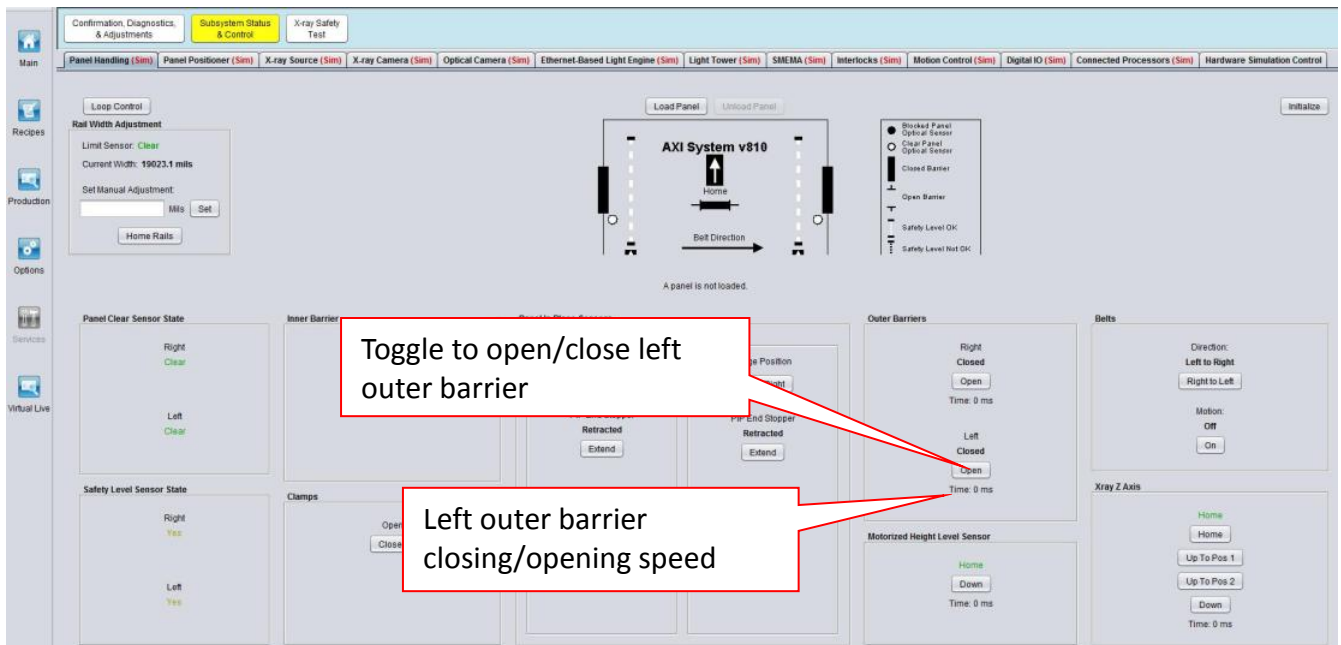


Figure 7 Left outer barrier status

- Loosen Nut & adjust Speed Controller Fitting Knob as shown in Figure 8 until closing / opening speed is within below range. Tighten 2 x Nut after adjustment.

Type of machine	Action	Speed (ms)
S2EX	Outer Barrier Opening & Closing	1000 ~ 1200

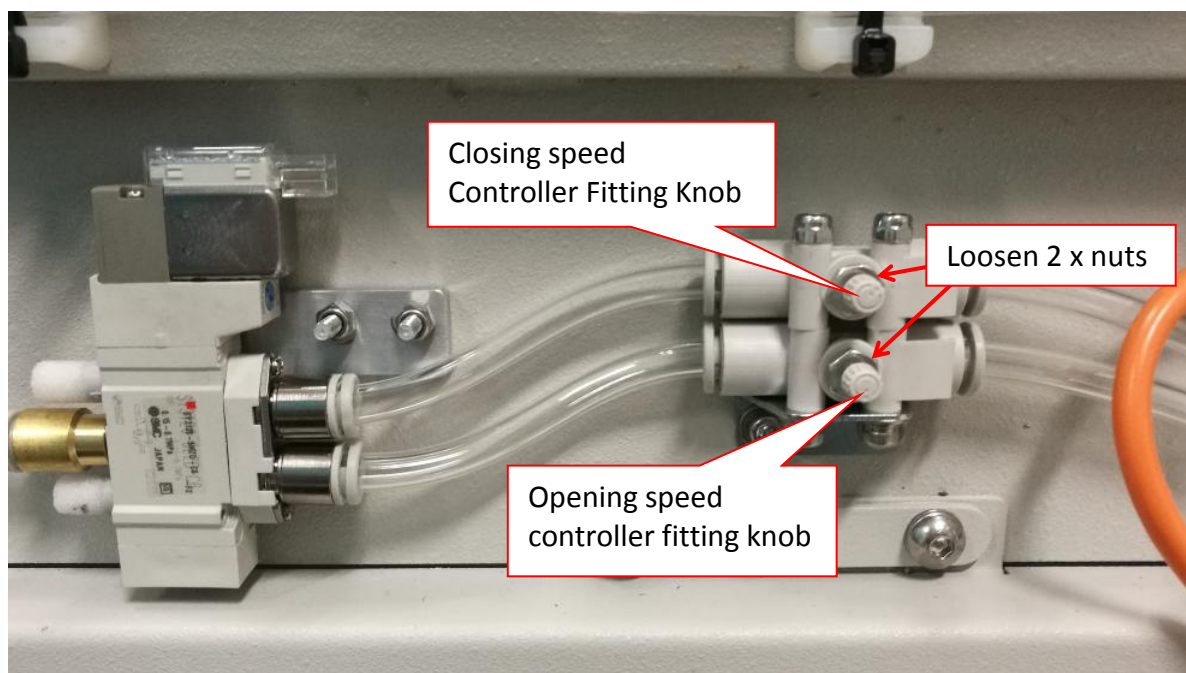


Figure 8 Closing speed adjustment

- Close Front access doors & turn on x-ray source.
- Run 3 loops of CD&A.