

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Right PIP Pneumatic Valve Removal & Replacement Procedure	Effective Date	24 May 2017

This procedure is applicable to below models:

V810 STD	☐	S1	☐	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	24 May 2017	First Release	Chin Chee Yan

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Right PIP Pneumatic Valve Removal & Replacement Procedure	Effective Date	24 May 2017

Content

Removal Procedure.....	3
Replace Procedure.....	5
Validation.....	7

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Right PIP Pneumatic Valve Removal & Replacement Procedure	Effective Date	24 May 2017

Removal Procedure

1. **Shutdown and completely power off machine.** Turn off air pressure regulator
2. **Power off the SSCA main power # Important**
3. Open front access door and manual move XY stage towards front door direction
4. Loosen 3 x Screws and remove PIP Cable Cover (P/N, 4JAXYS-N104) at Fix Rail.

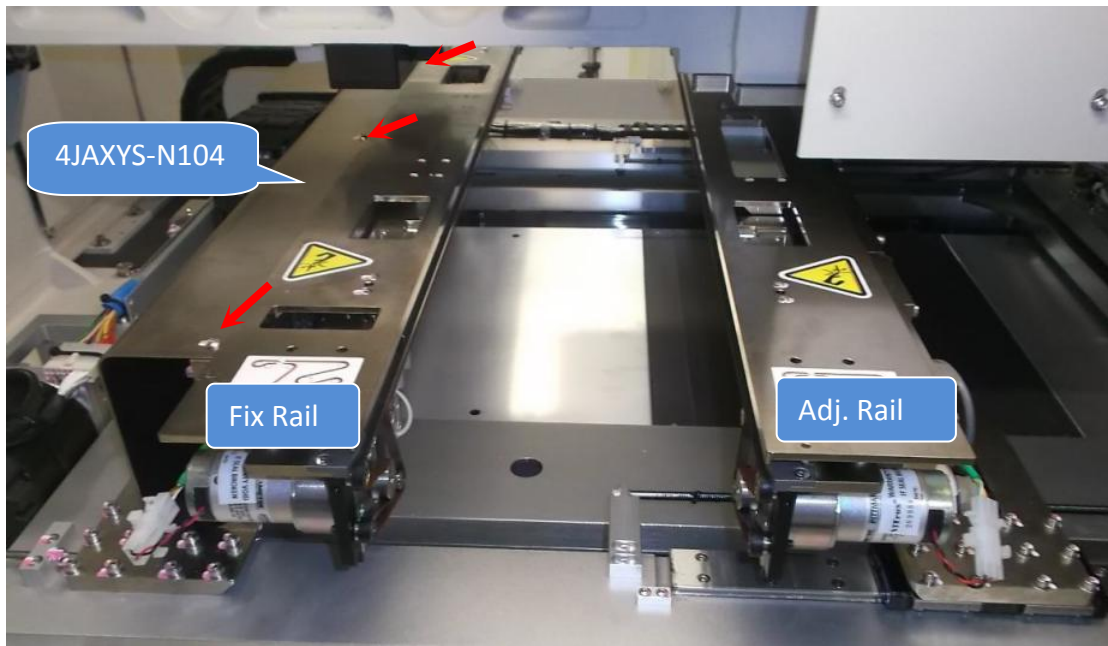


Figure 1 PIP Cable Cover

5. Identify Right PIP Pneumatic Valve Location by refer to below Figure 2

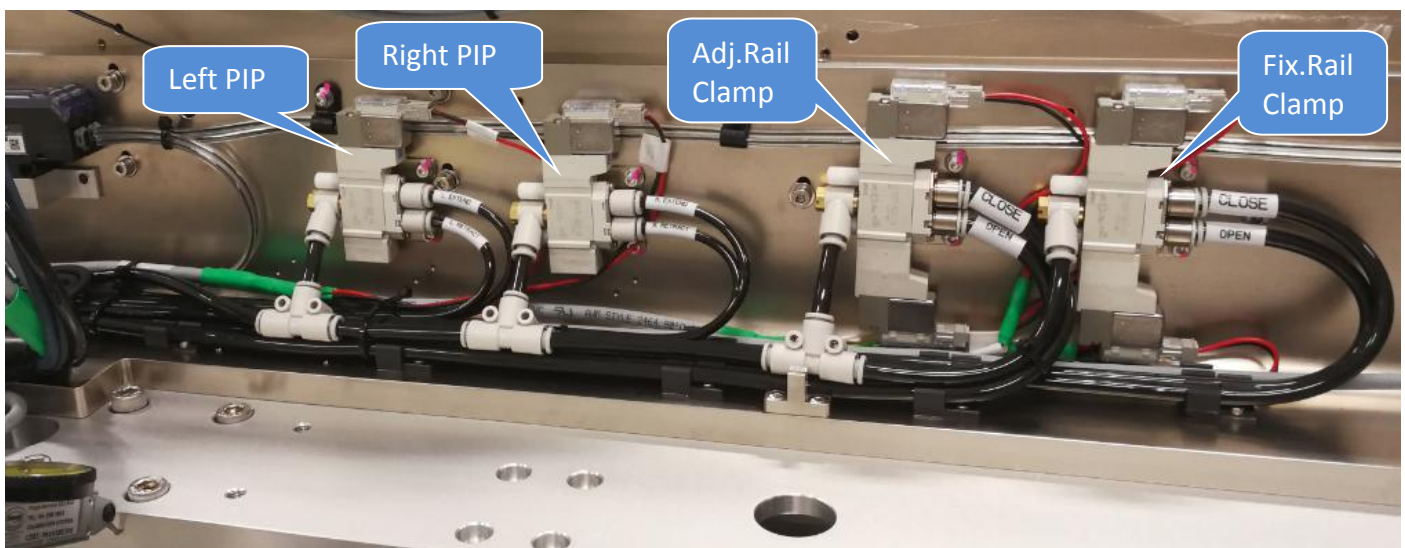


Figure 2 Right PIP Pneumatic Valve Location

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Right PIP Pneumatic Valve Removal & Replacement Procedure	Effective Date	24 May 2017

6. Disconnect Solenoid Valve Cable & 3 x Tubing as below Figure 3

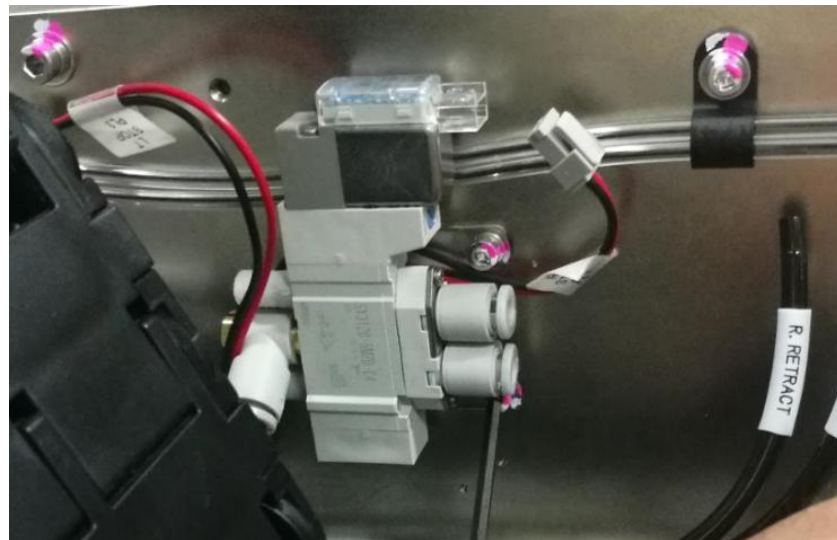
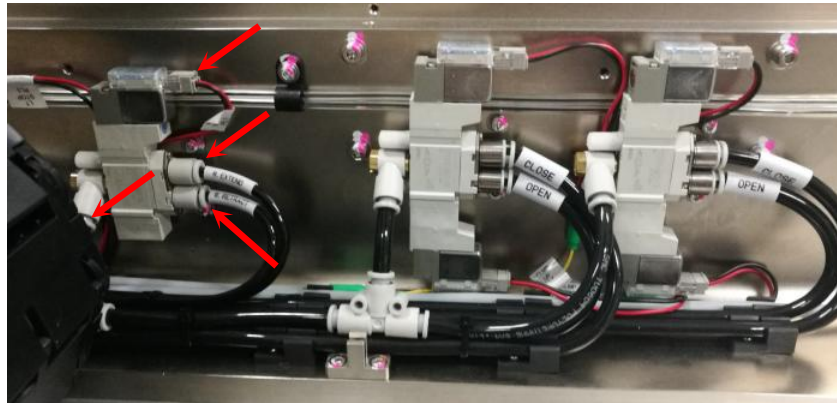


Figure 3 Right PIP Solenoid Cable & Tubing Removal

7. Loosen 2 x Screws .Remove Right PIP Pneumatic Valve from Fix Rail

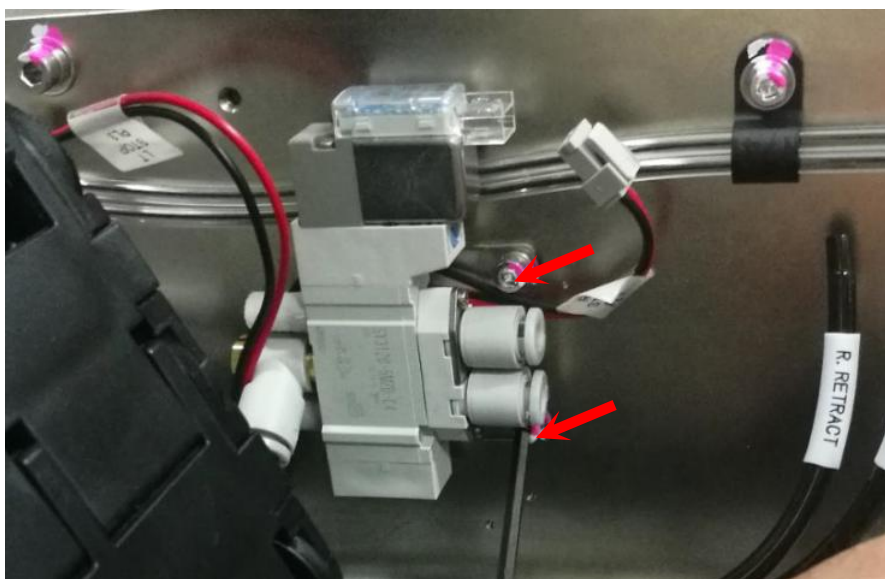


Figure 4 Right PIP Pneumatic Valve Removal

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Right PIP Pneumatic Valve Removal & Replacement Procedure	Effective Date	24 May 2017

Replace Procedure

- Prepare new Safety Stop Pneumatic Controller Kit (P/N, 4XASP-A159)

Remarks :Kit include Solenoid Valve (2 x Build IN Fitting) x 1, Fitting x 1 and Silencer x 2.



Figure 5 Safety Stop Pneumatic Controller Kit

- Remove the Holding Bracket from Right PIP Pneumatic Valve (Previously dismantle). Assemble the Holding Bracket to new “Safety Stop Pneumatic Controller Kit”. May refer to below Figure 6

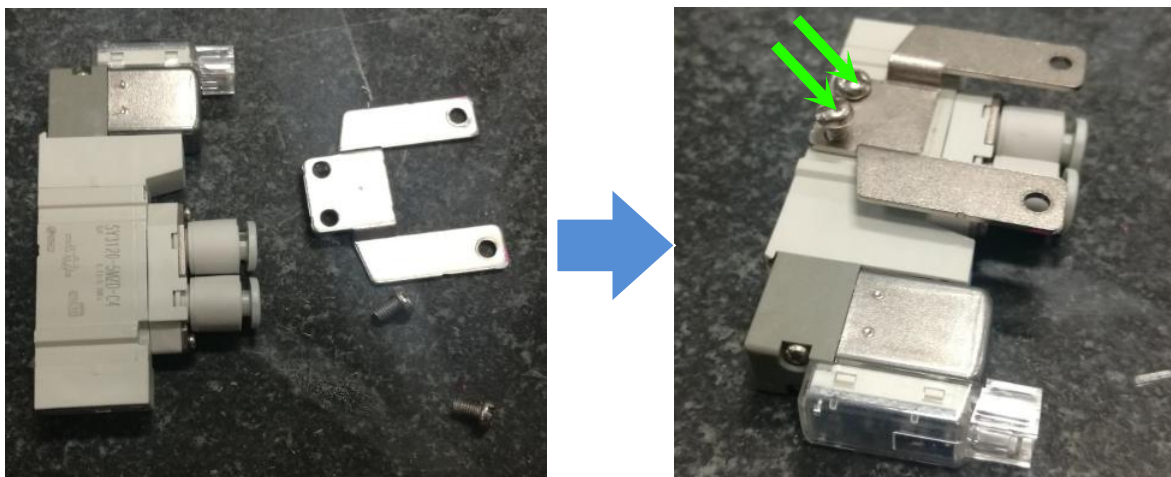


Figure 6 Holding Bracket Transplant

- Assemble Fitting and Silencer at New Safety Stop Pneumatic Controller Kit. May refer to below Figure 7

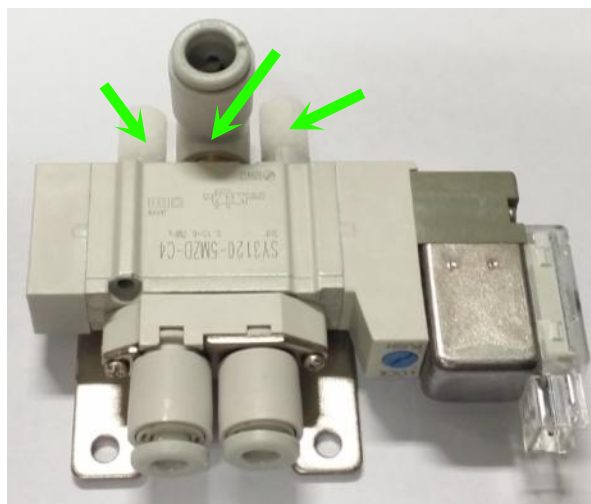


Figure 7 Safety Stop Pneumatic Controller Kit

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Right PIP Pneumatic Valve Removal & Replacement Procedure	Effective Date	24 May 2017

11. Assemble “Safety Stop Pneumatic Controller Kit” at Right PIP Pneumatic Valve Location. Tighten 2 x Screws as below Figure 8

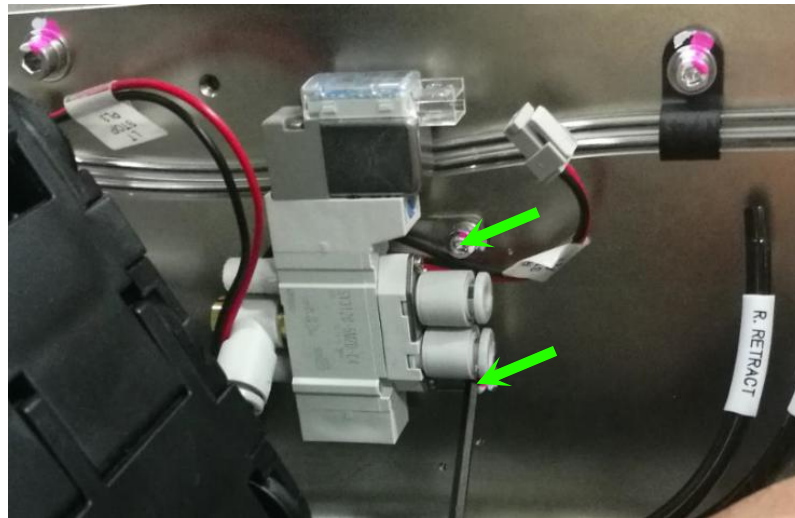


Figure 8 Right PIP Pneumatic Valve Assembly

12. Connect below cable by refer below step :

- Connect Solenoid Valve Cable by refer to Label “ RT STOP PL1” as below Figure 9
- Connect 2 x Tubing respectively by refer to “R.EXTEND” & “R.RETRACT” as below Figure 9
- Connect Main tubing as below Figure 9

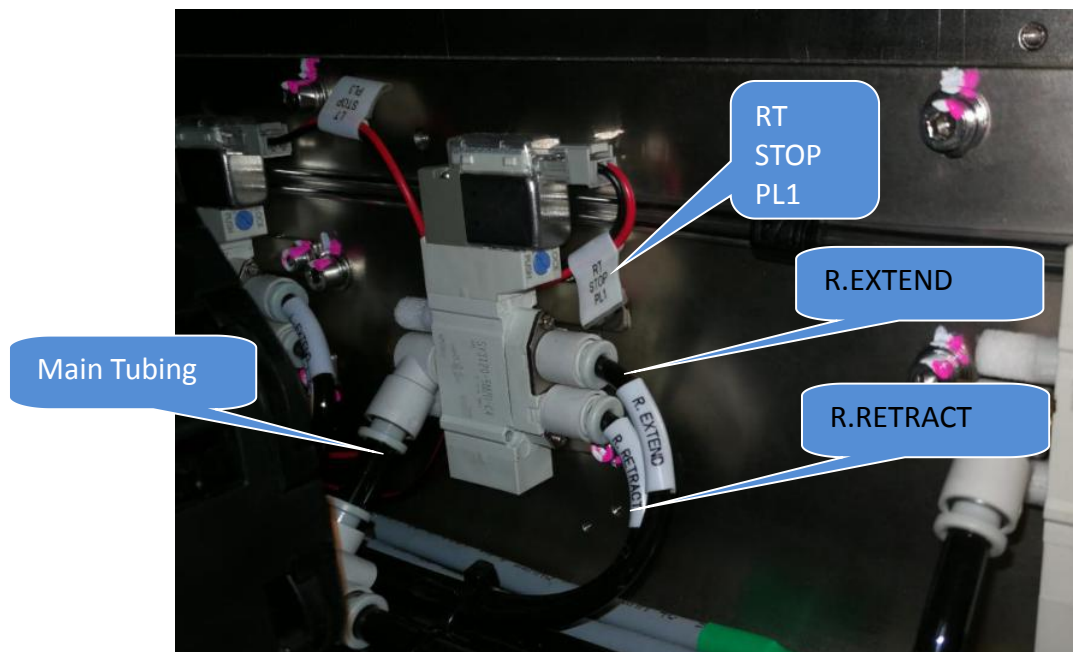


Figure 9 Right PIP Pneumatic Valve Assembly

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Right PIP Pneumatic Valve Removal & Replacement Procedure	Effective Date	24 May 2017

Validation

13. Log in V810 GUI and initialize DIO. Open machine front door and manually exercise Right PIP, visual check on mechanism movement, ensure actual movement is sync with the command toggle.

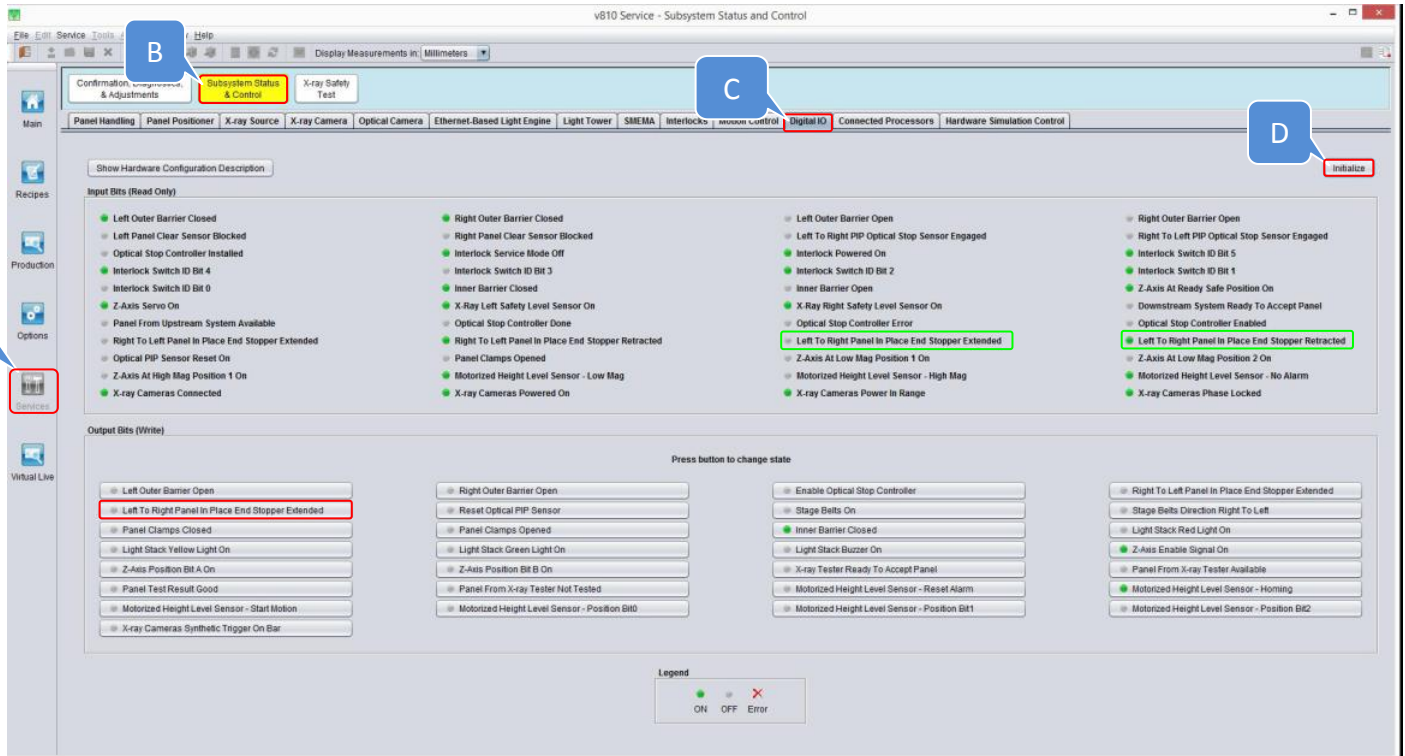


Figure 10 Panel Handling Mechanism Validation (Digital IO)

14. Assemble the PIP Cable Cover (P/N, 4JAXYS-N104). Tighten 3 x Screws

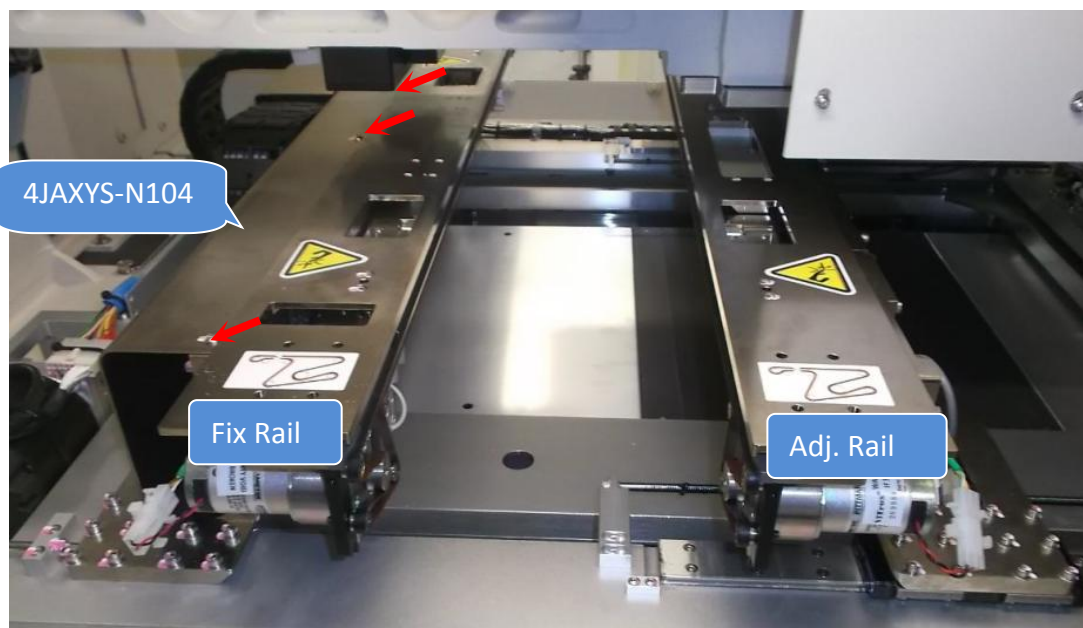


Figure 11 PIP Cable Cover Assembly

15. Start-up system as usual