

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

This procedure is applicable to below models:

V810 STD	☐	S1	☐	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	2 Oct 2016	First Release	ONG KEAN SHENG

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

Content

XXL Outer Barrier Cylinder Removal.....	3
XXL Outer Barrier Cylinder Replacement.....	8

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 XXL Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

XXL Outer Barrier Cylinder Removal

1. Close X ray Source at Operator Console
2. Close SSCA
3. Remove 2 x Tamper Proof screws as below Figure 1



Figure 1

4. Gently open outer barrier
5. Remove 2 x Tubing from Outer Barrier Speed Controller as Figure 2

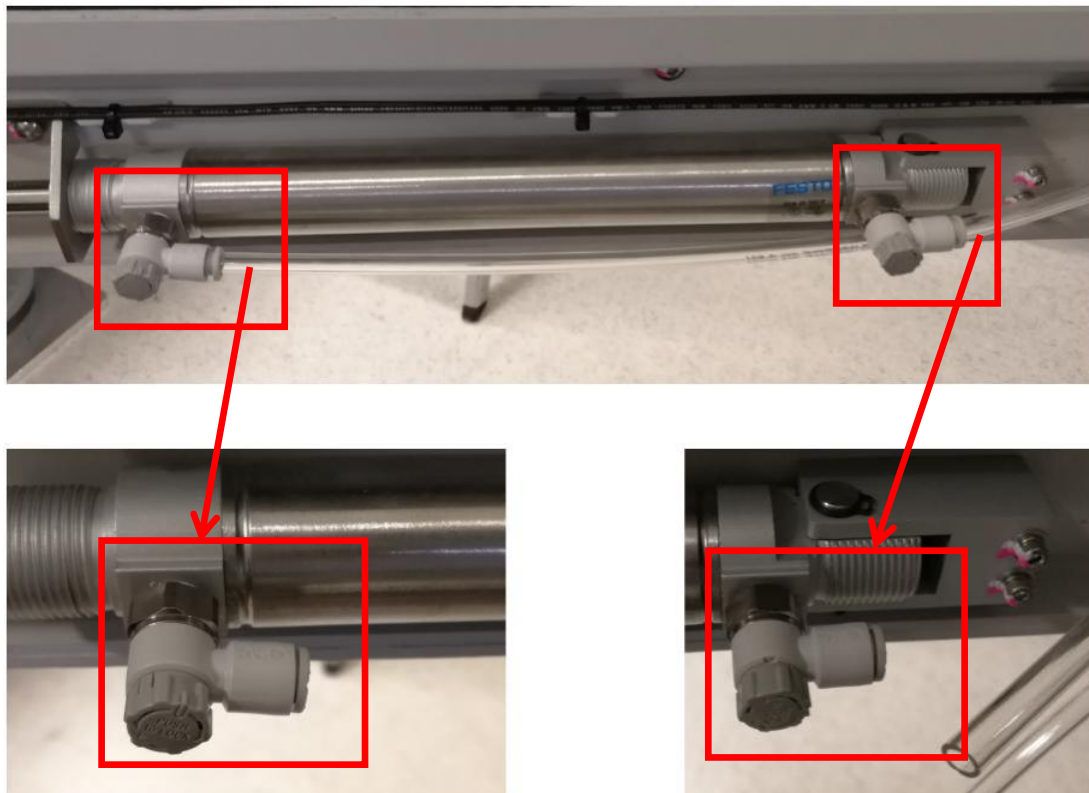


Figure 2

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

6. Loosen 2 x Screws & Remove Front Cylinder Holder as Figure 3

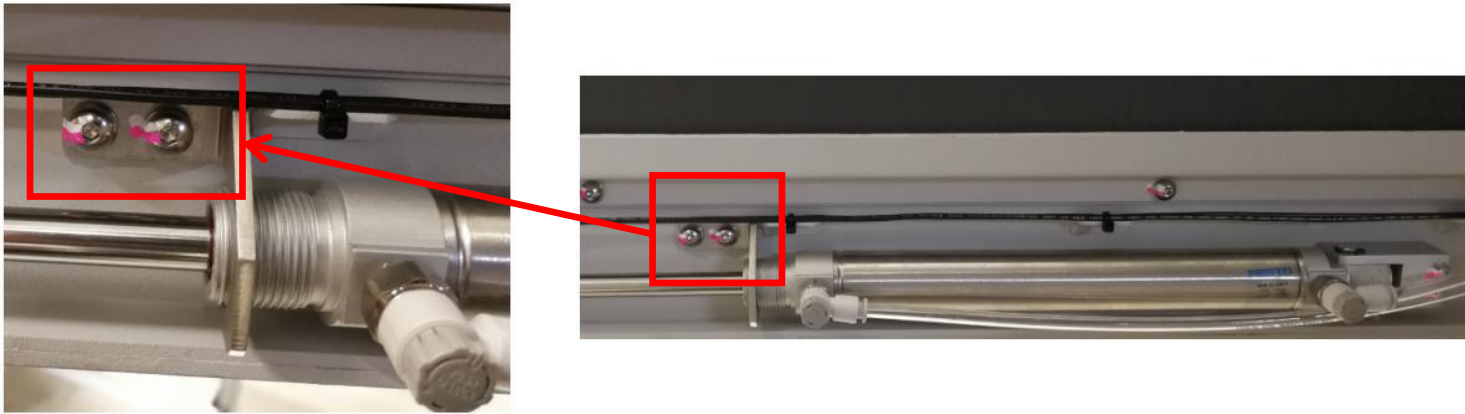


Figure 3

7. Loosen 2 x Screws & remove Rear Cylinder Holder as Figure 4

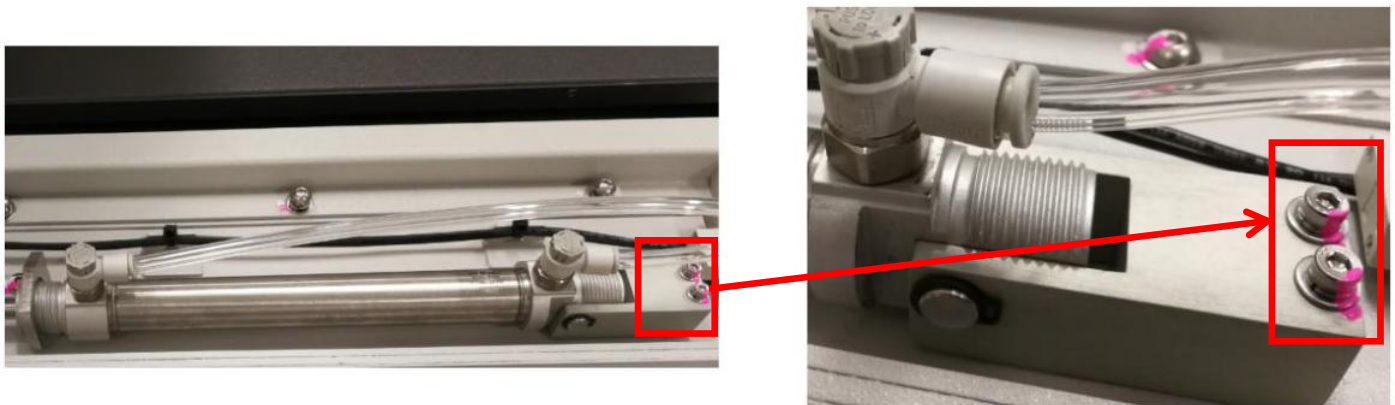


Figure 4

8. Fully retract outer barrier cylinder
9. By using C-Clip Plier ,open 1 x C-Clip from dowel pin as Figure 5
- Remarks : Do not dispose C-Clip as this would require for re-use purpose

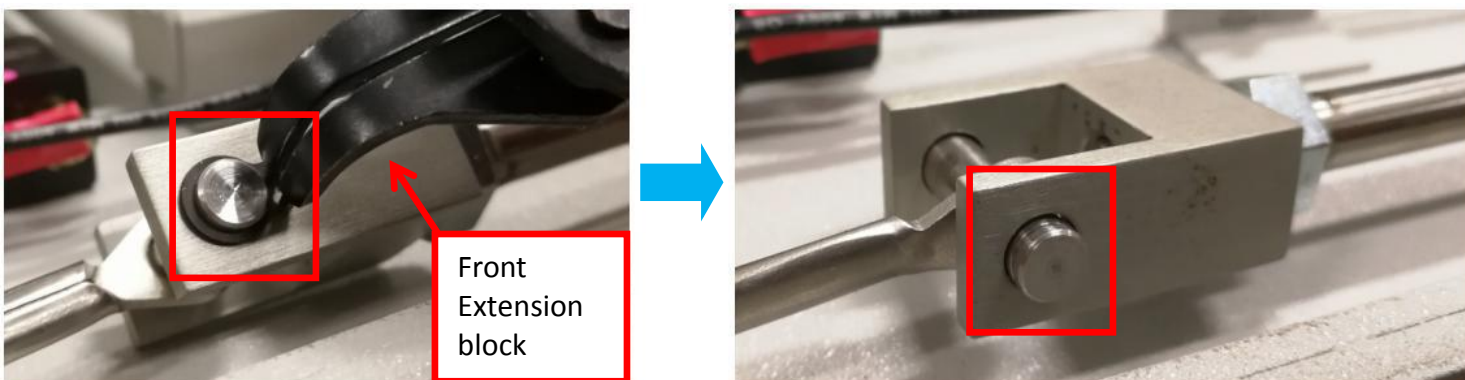


Figure 5

ViTrox 	Work Instruction	Doc. Revision	00
	AXI V810 XXL Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

10. Twist the Front Extension Block and gently push out the dowel pin as Figure 6.

(Remarks : Remain half way of dowel pin in extension block)

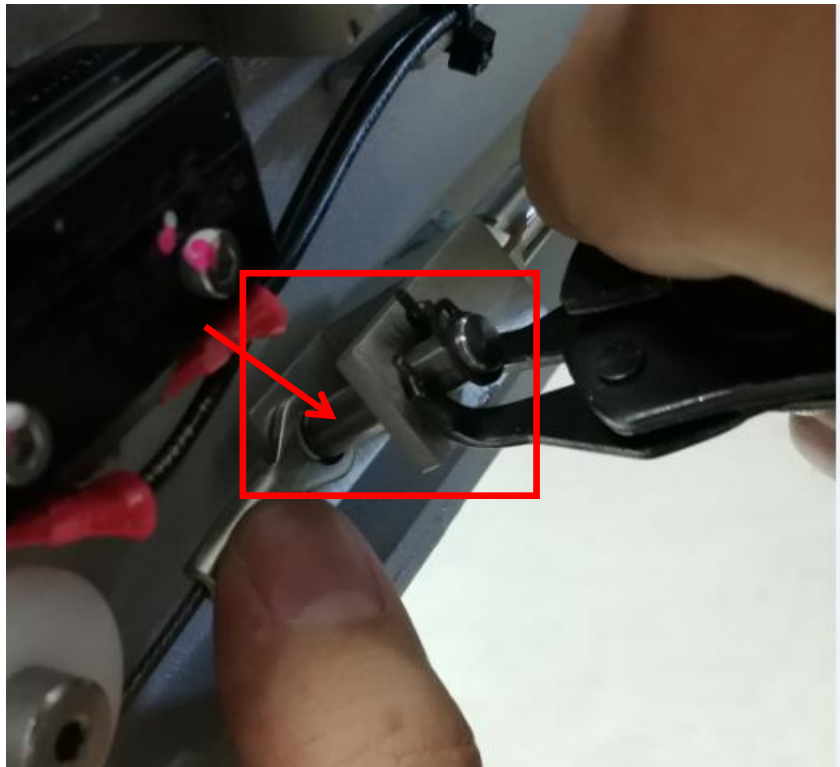


Figure 6

11. Gently remove Sava cable from dowel pin as Figure 7.

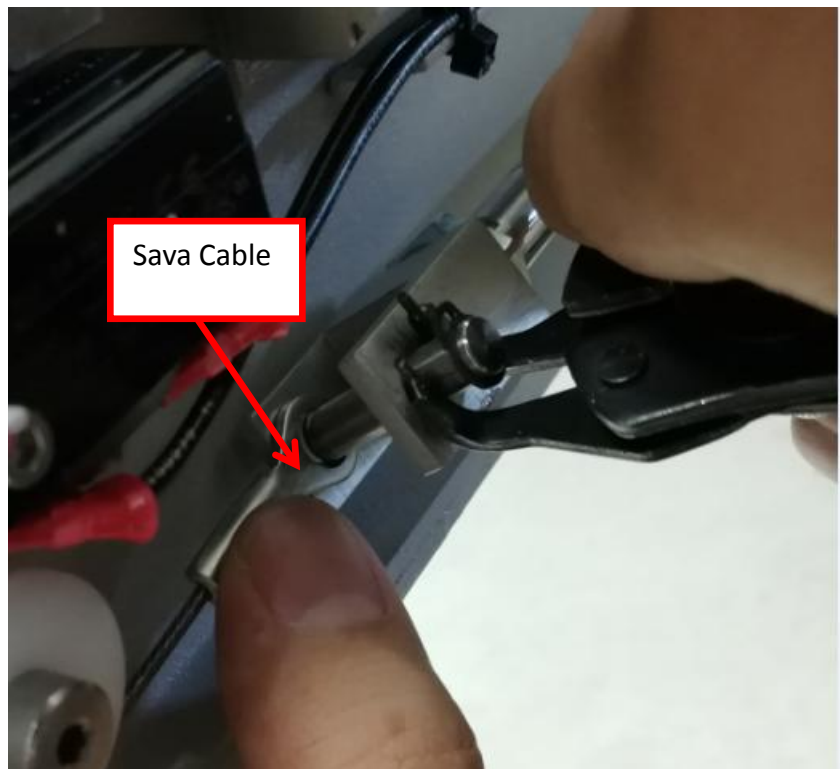


Figure 7

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 XXL Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

12. Remove entire outer barrier cylinder and position at visible location as Figure 8.



Figure 8

13. Remove 2 x Outer Barrier Speed Controllers as Figure 9.

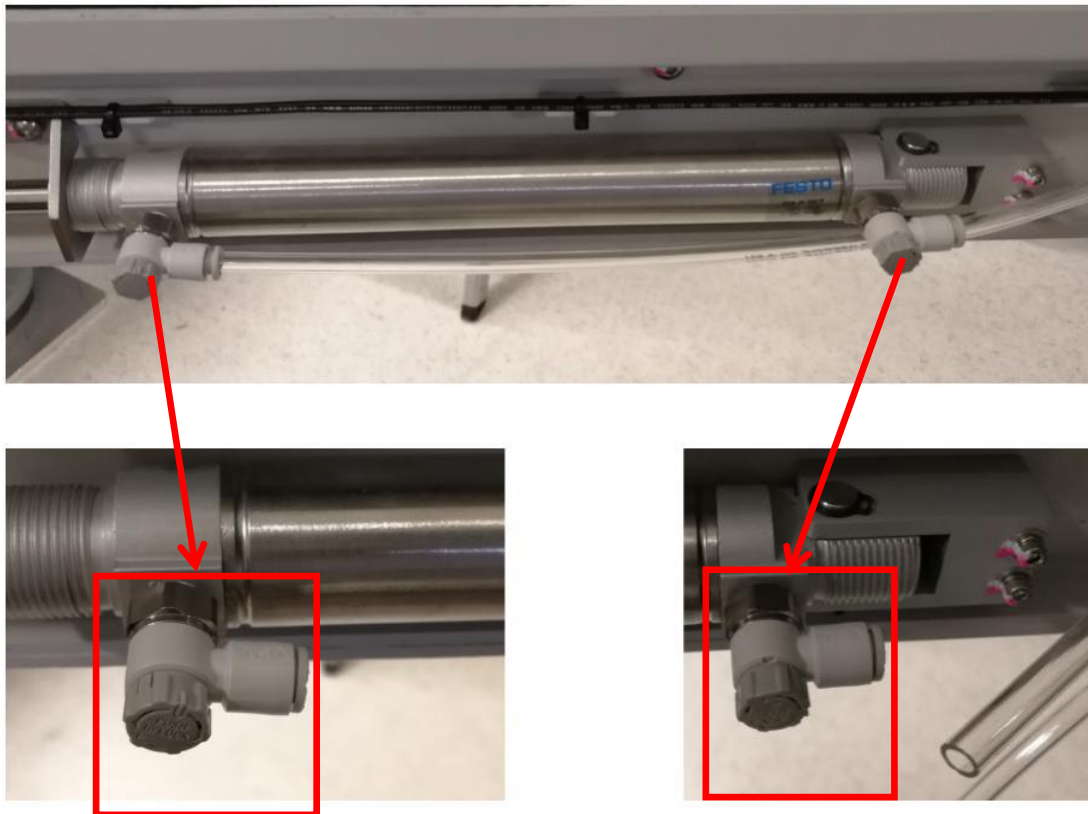


Figure 9

14. Gently remove another C-Clip at Front Extension Block as Figure 10.



Figure 10

ViTrox 	Work Instruction	Doc. Revision	00
	AXI V810 XXL Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

15. Remove Nut & Front Extension Block (With Dowel Pin) as Figure 11.

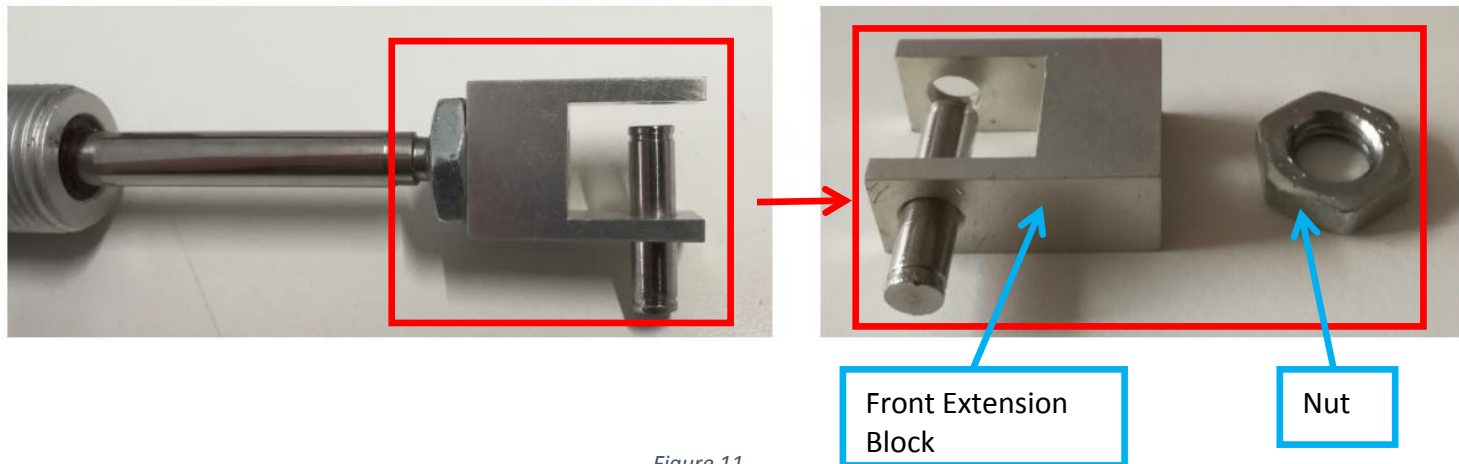


Figure 11

16. Remove 1 x C-Clip at Rear Cylinder Holder as Figure 12. Position C-Clip at visible location.

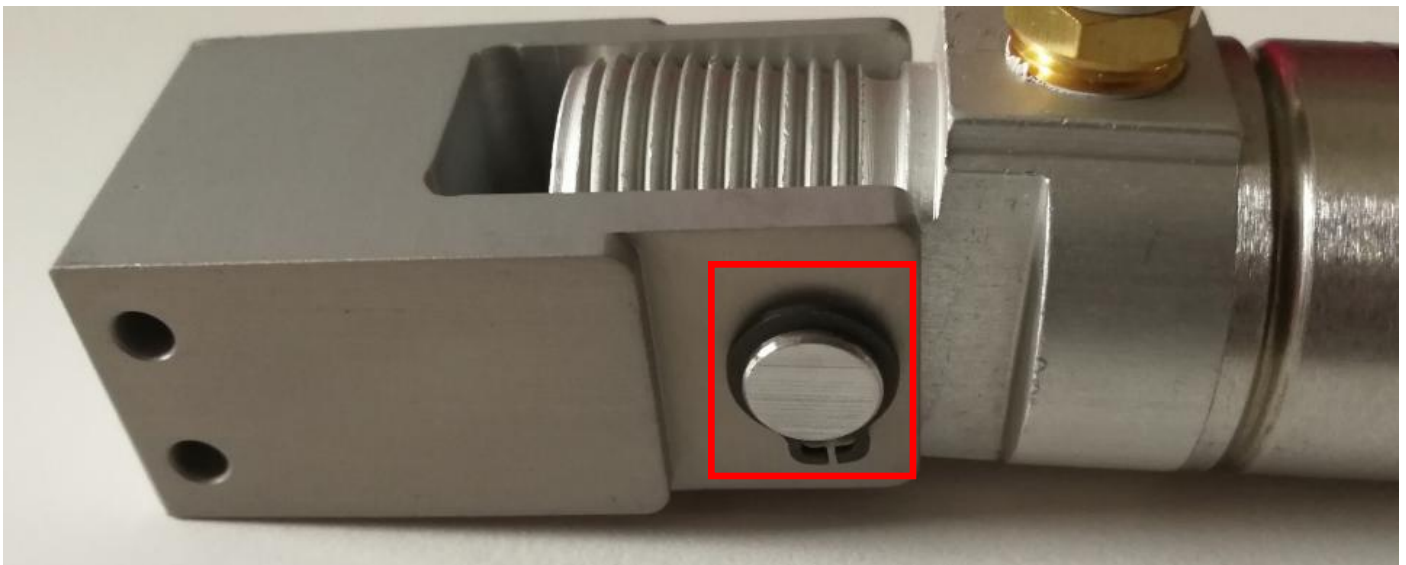


Figure 12

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

17. Gently push out the Dowel Pin from Rear Cylinder Holder as Figure 13. Remove dowel pin & Rear Cylinder Holder as Figure 13

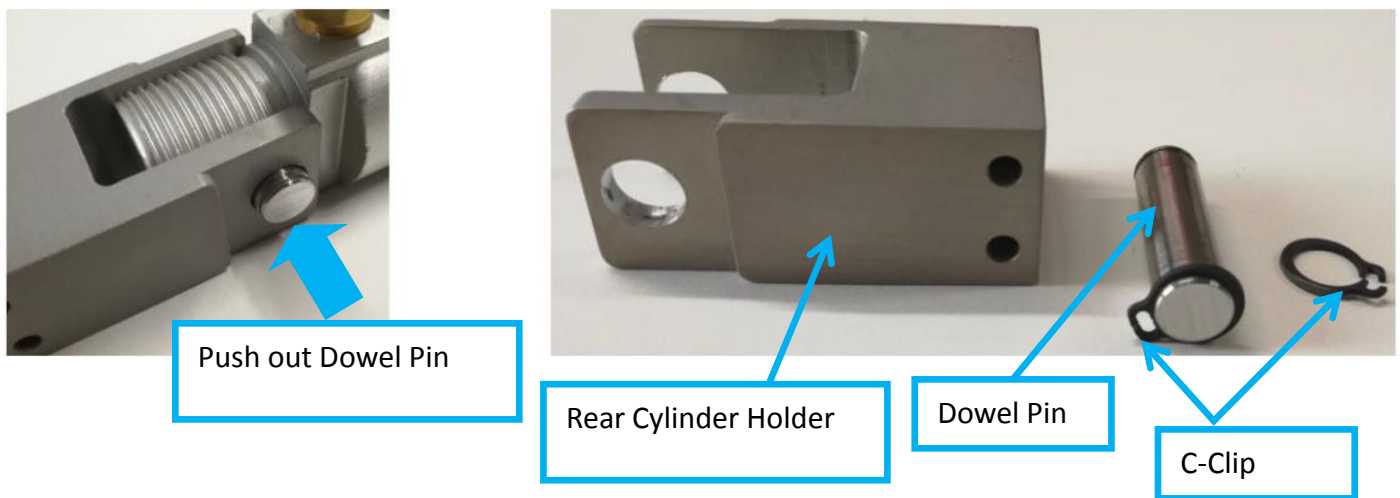


Figure 13

XXL Outer Barrier Cylinder Replacement

18. Prepare New Std Outer Barrier Cylinder (PN, 2810-0043)
19. Assemble Rear Cylinder Holder & Dowel pin into New Outer barrier cylinder. May refer to below Figure 14.

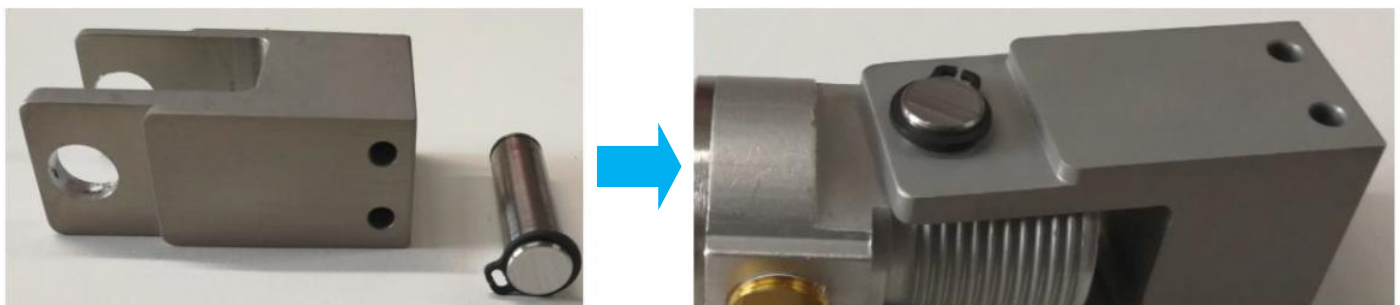


Figure 14

Special remarks : C-Clip require to slot firmly within the dowel pin step.



Figure 15

ViTrox⁺	Work Instruction	Doc. Revision	00
	AXI V810 XXL Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

20. Twist the Rear Cylinder Holder & assemble C-Clip at other side of Dowel Pin as Figure 16.

Special remarks : If C-Clip had worn out, may inquire new parts (PN, 2770-0092) for further replacement.

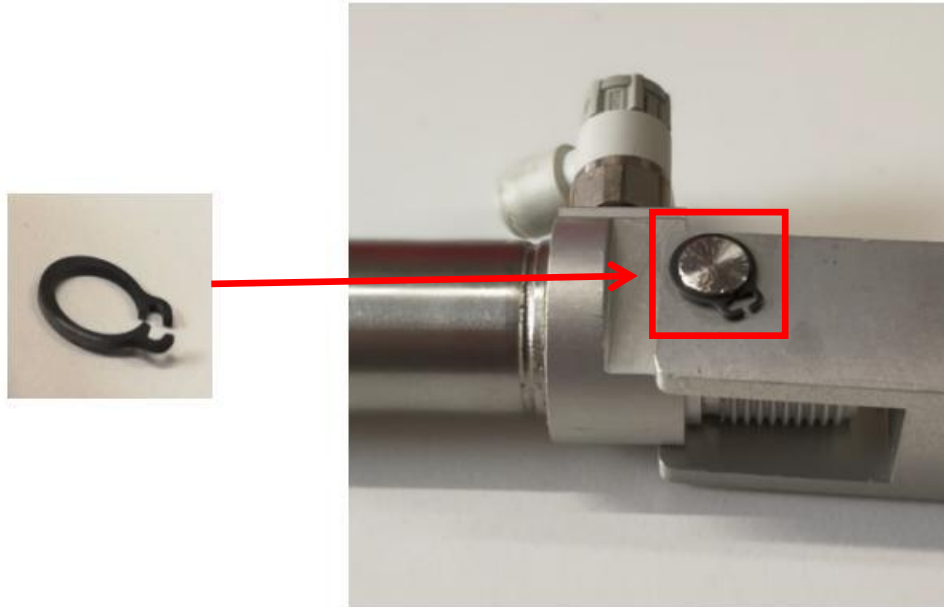


Figure 16

21. Assemble Nut & Front Extension Block (With Dowel Pin) at Outer Barrier Cylinder as Figure 17.

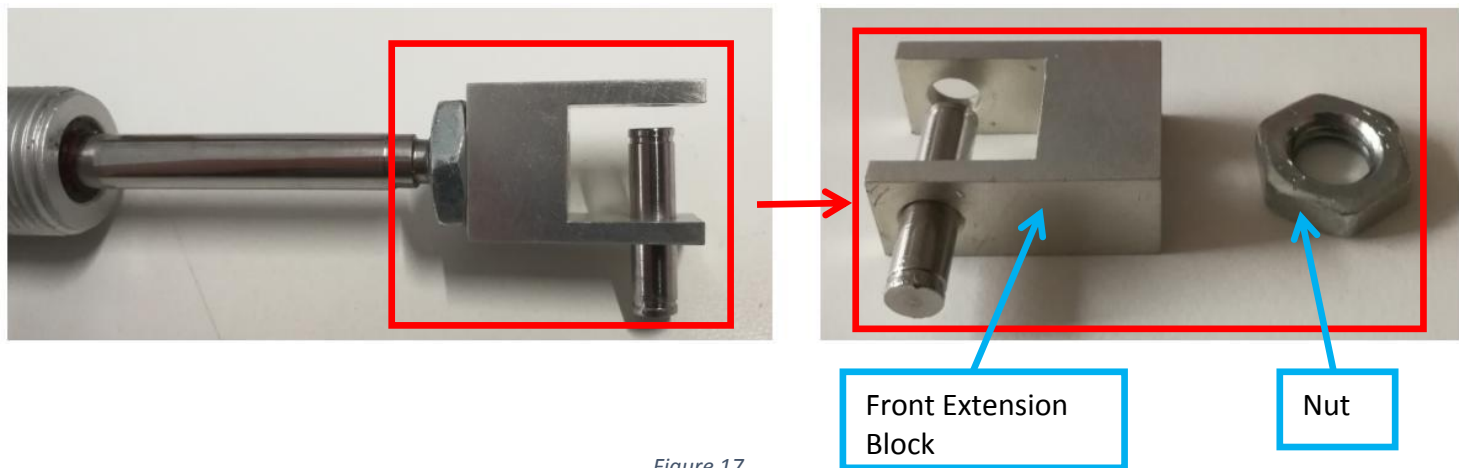


Figure 17

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

22. Assemble 2 x Outer Barrier Speed Controllers as Figure 18

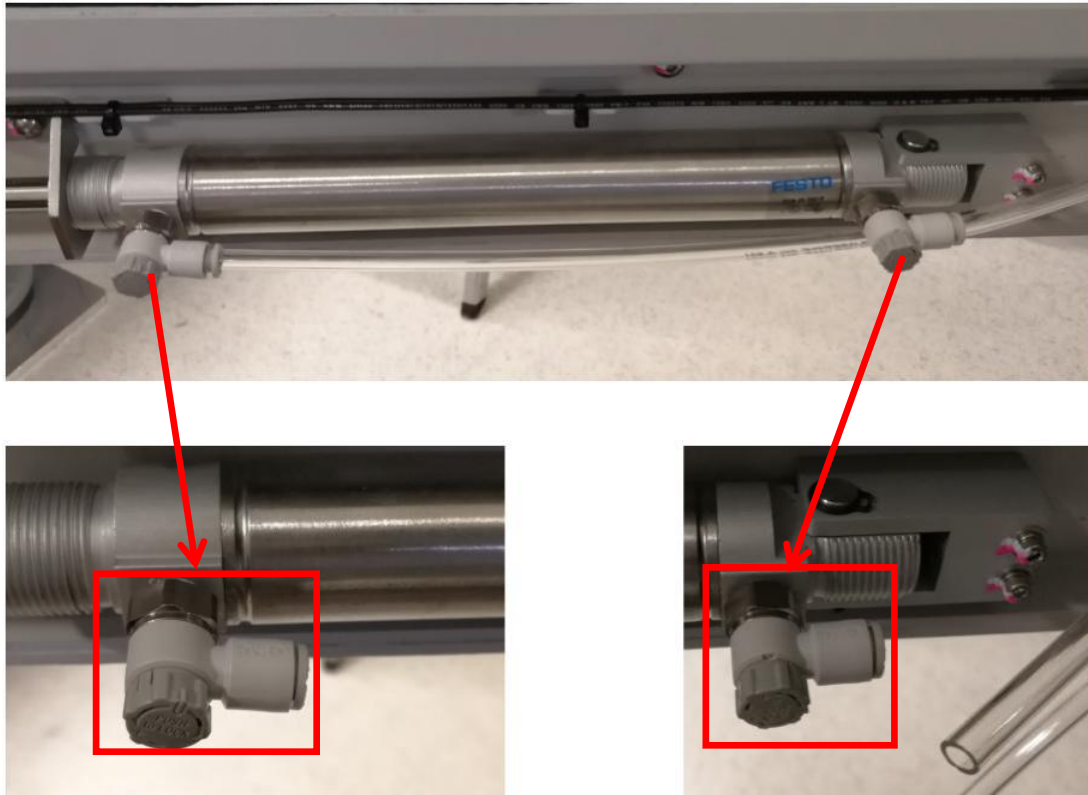


Figure 18

23. Gently slot Sava cable into dowel pin where attach with Front Extension Block as Figure 19

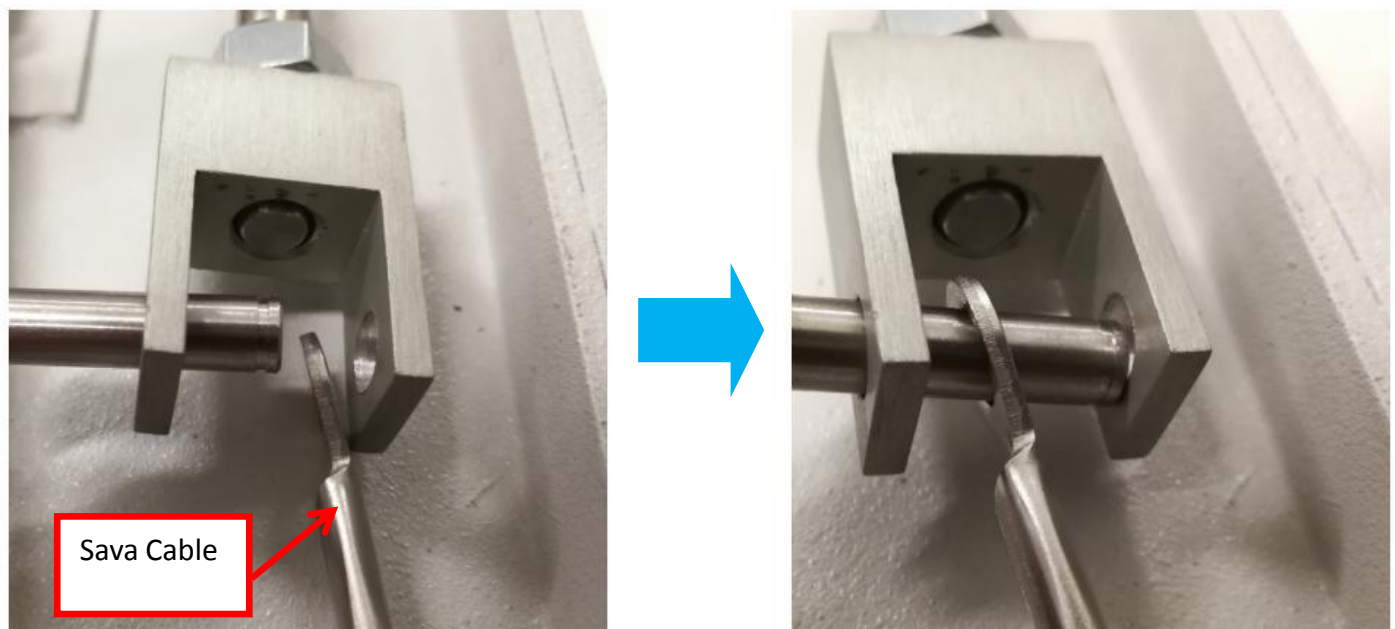


Figure 19

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

24. Push the dowel pin through Front Extension Block as below Figure 20

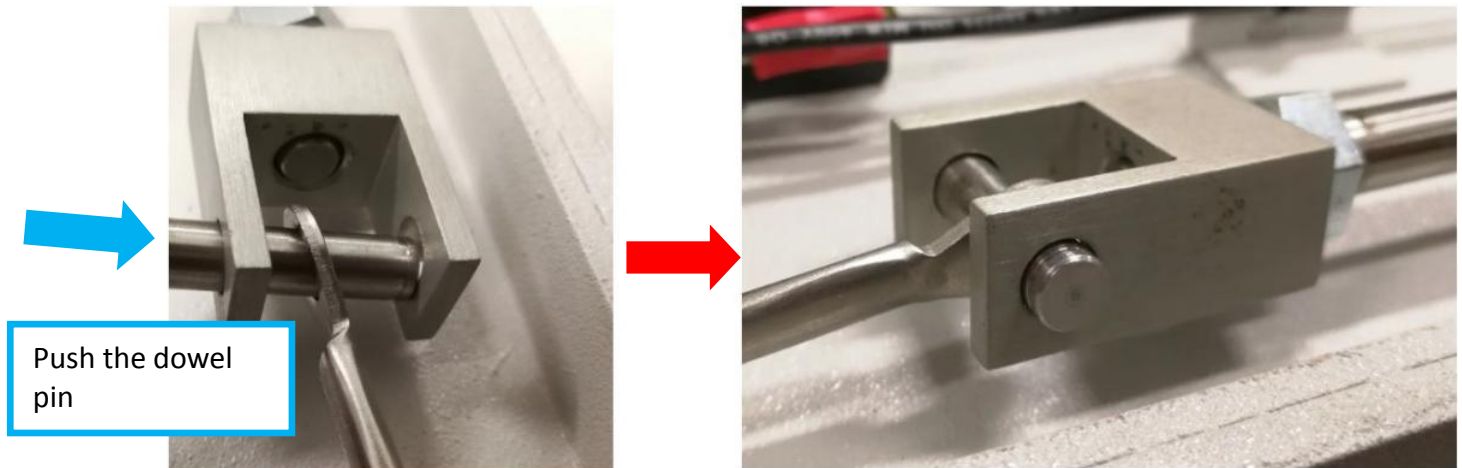


Figure 20

25. By using C-Clip Plier ,slot 2 x C-Clip at both side of dowel pin as Figure 21.

Special remarks : If C-Clip had worn out, may inquire new parts (PN, 2770-0093) for further replacement.

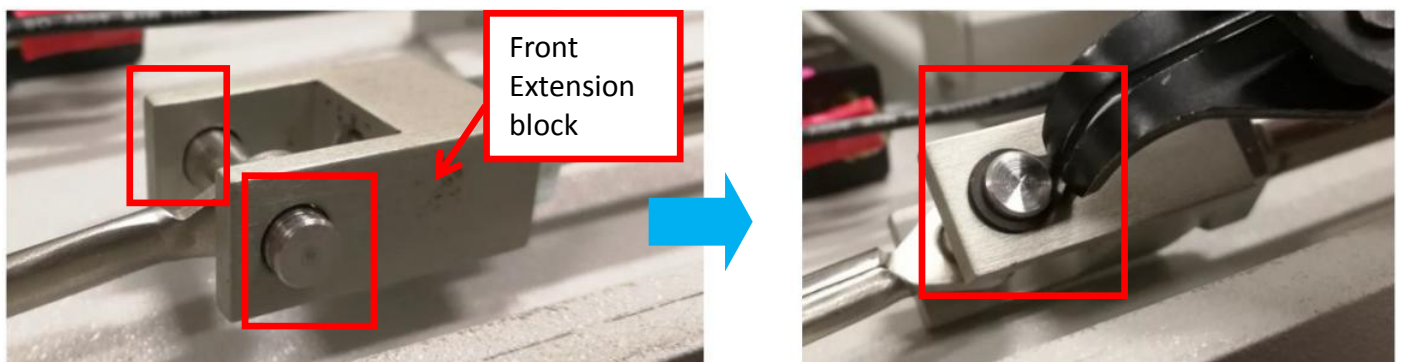


Figure 21

Special remarks : C-Clip require to slot firmly within the Dowel pin step.



Figure 22

26. Assemble Front Cylinder Holder at outer barrier cylinder & tighten 2 x screws as Figure 23.

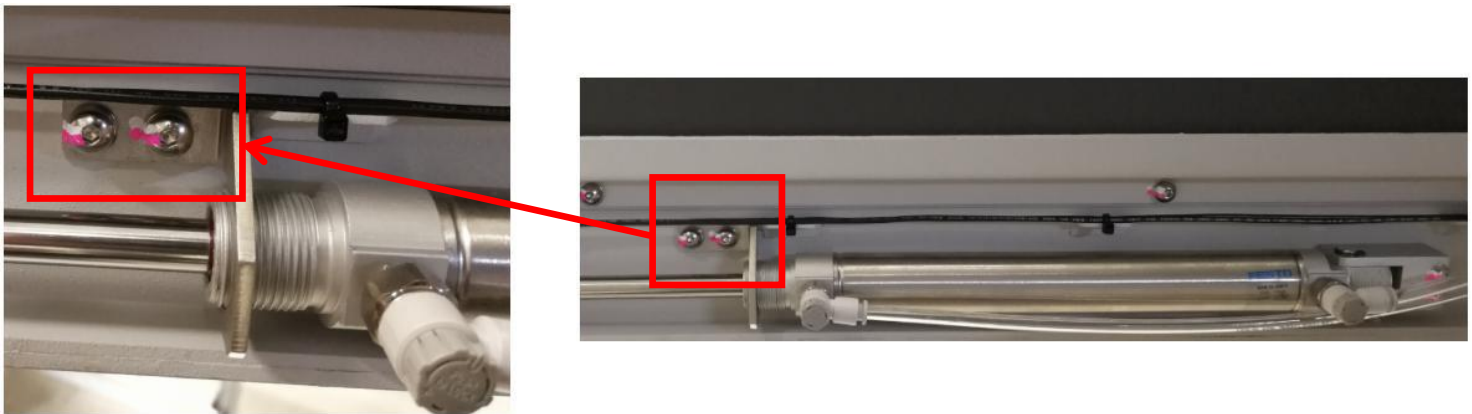


Figure 23

27. Assemble Rear Cylinder Holder at outer barrier cylinder & tighten 2 x screws as Figure 24



Figure 24

28. Plug 2 x Tubing by refer to below orientation.

Orientation	Routing Path	Figure
A1-A2	Speed Controller to Outer Barrier Valve	25
B1-B2	Speed Controller to Outer Barrier Valve	26

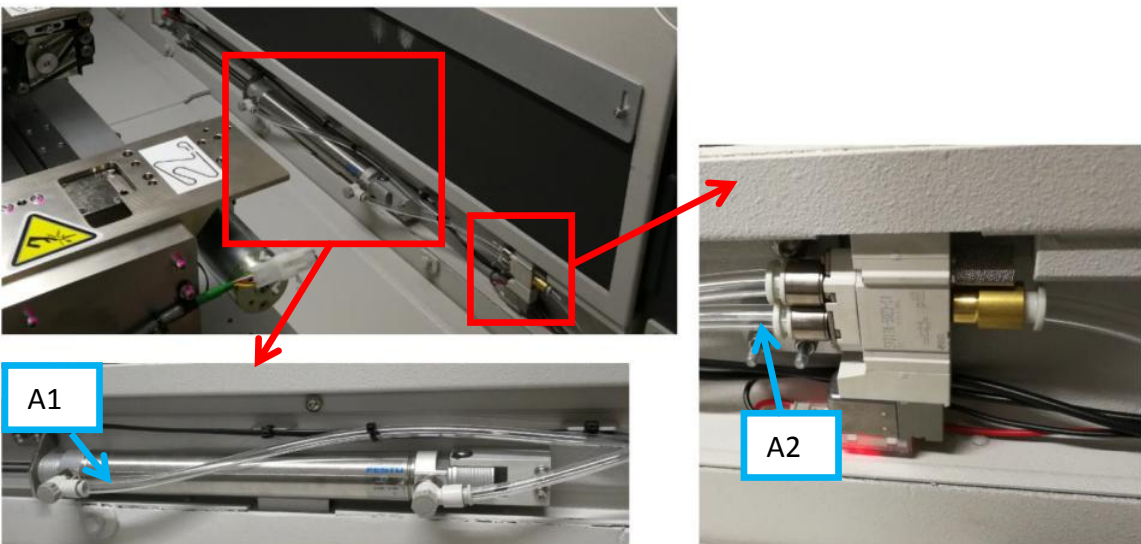


Figure 25

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

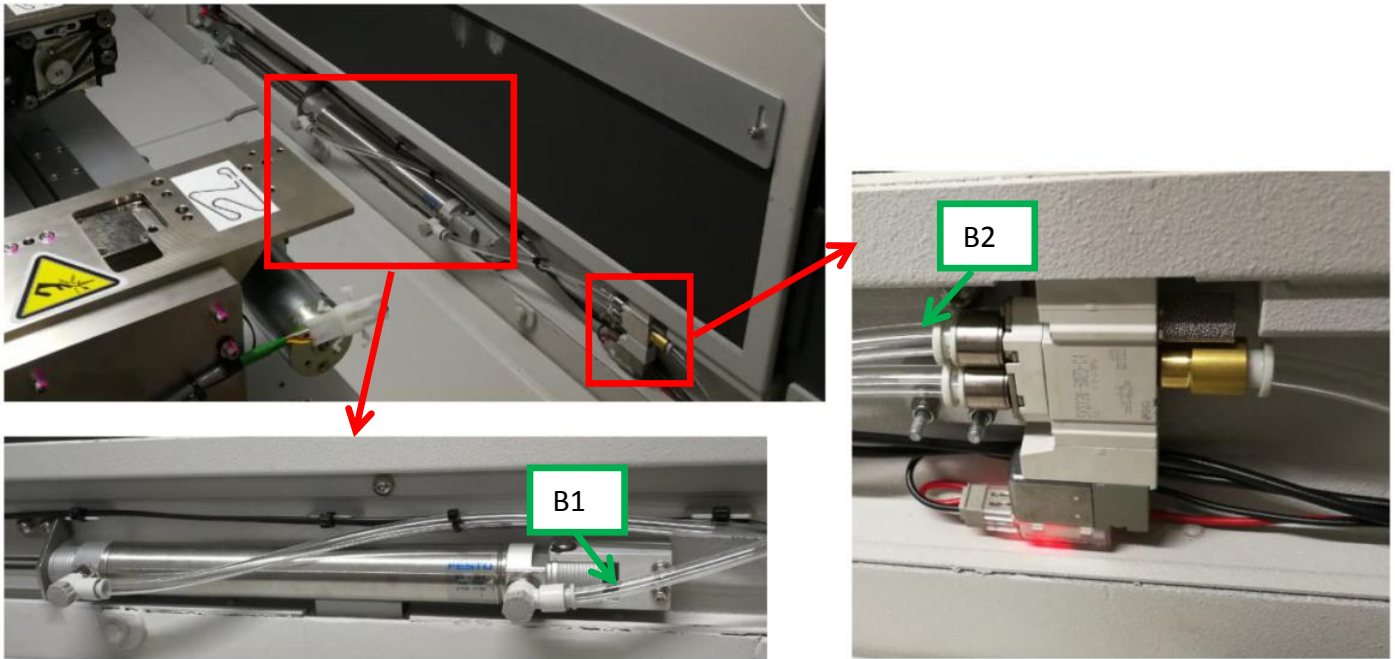


Figure 26

29. Turn On SSCA
30. Initialize at Digital IO Tab
31. Open/Close Outer Barrier at Digital IO Page.
32. Visual Check Save cable & Inner Gate assembly by refer to below criteria :
 - a) Sava cable -No friction during movement.
 - b) Sava cable-No sagging
 - c) Inner gate assembly- No gap upon barrier close/open

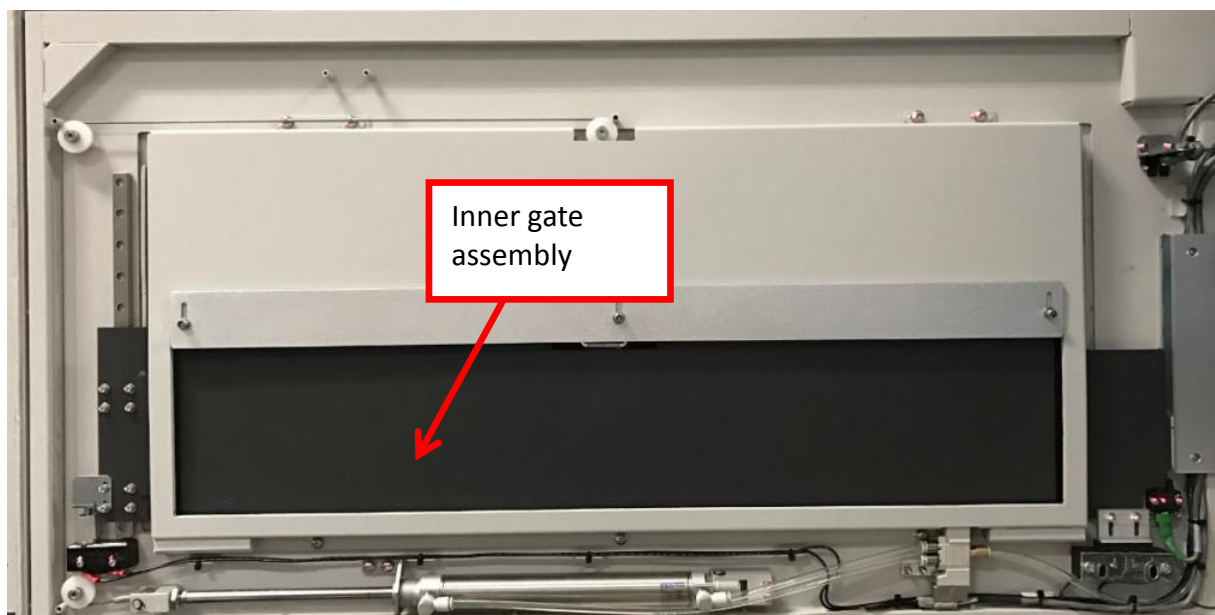


Figure 27

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 XXL Outer Barrier Cylinder Removal & Replacement Procedure	Effective Date	2 Oct 2016

- i. If gap persist, may perform minor adjustment on the Front Extension Block & Nut. May refer to below Figure 28.

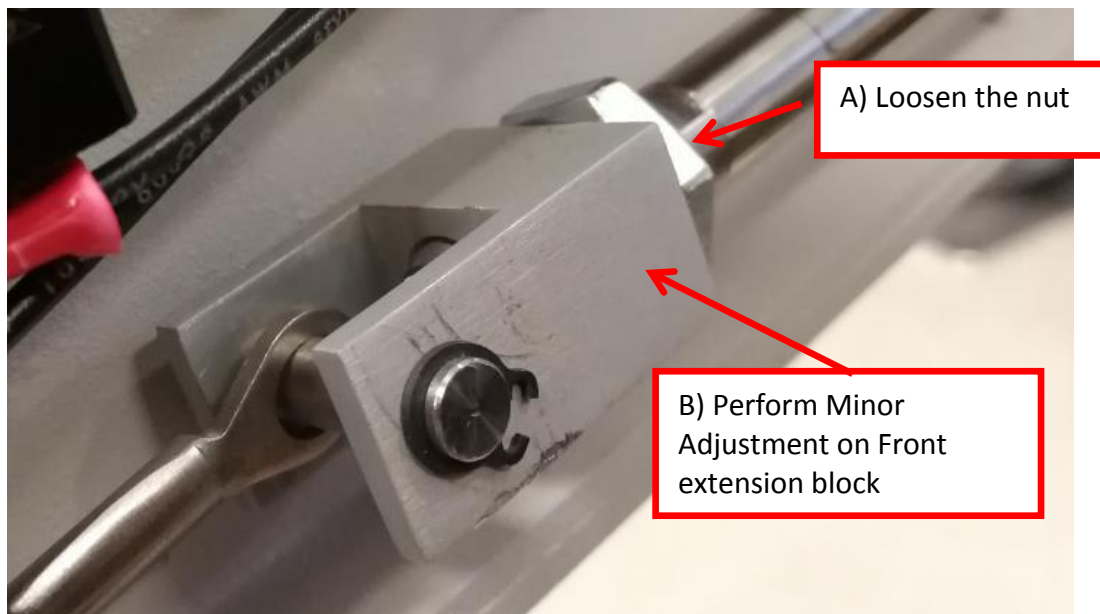


Figure 28

33. Close Outer Barrier and tighten 2 x tamper proof screws.
34. Perform X ray Survey
35. Open V810 GUI
36. Initialize at Panel handling
37. Open & Close particular Outer barrier .Record down Opening & Closing duration as below Figure 29.

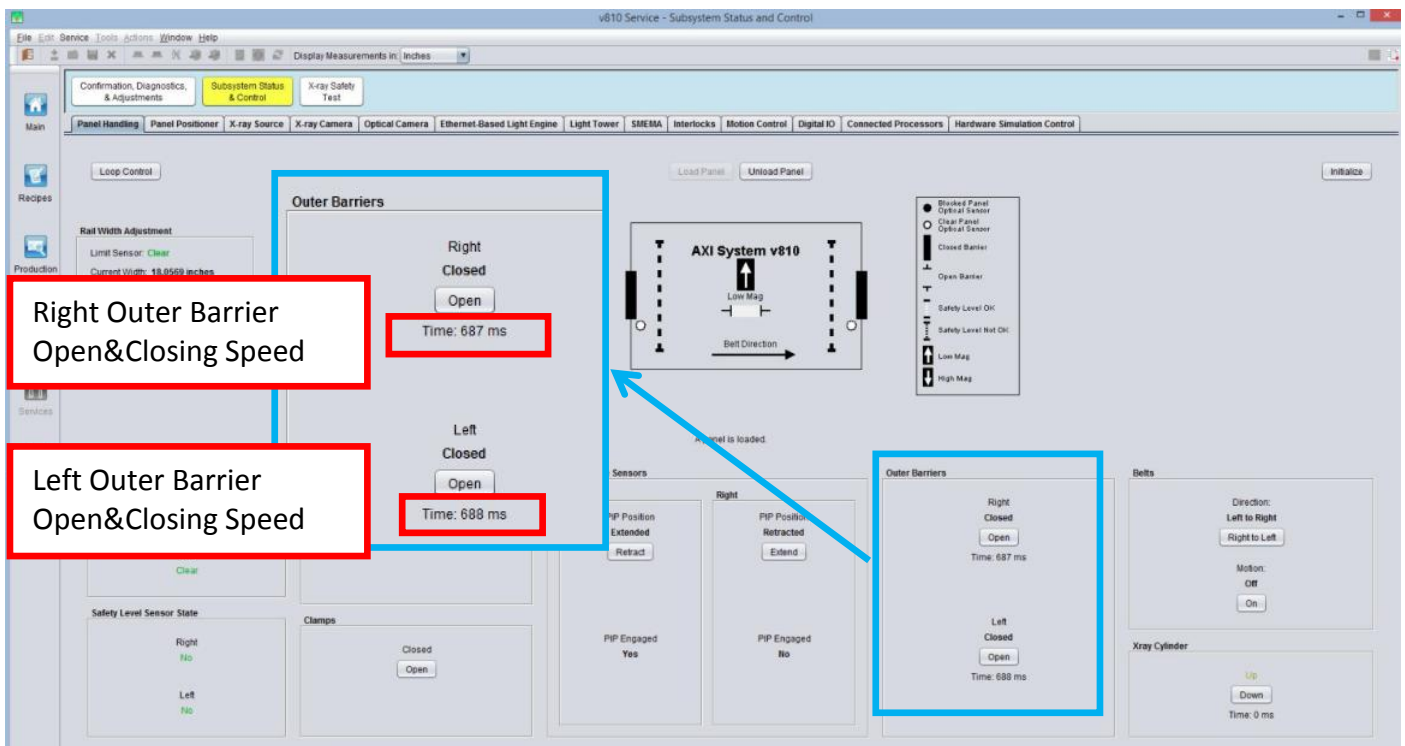


Figure 29

38. Adjust 2 X Speed Controller at Outer Barrier cylinder by refer to below table.

Outer Barrier Status	Outer Barrier Speed
Open	1200ms~1500ms
Close	1200ms~1500ms

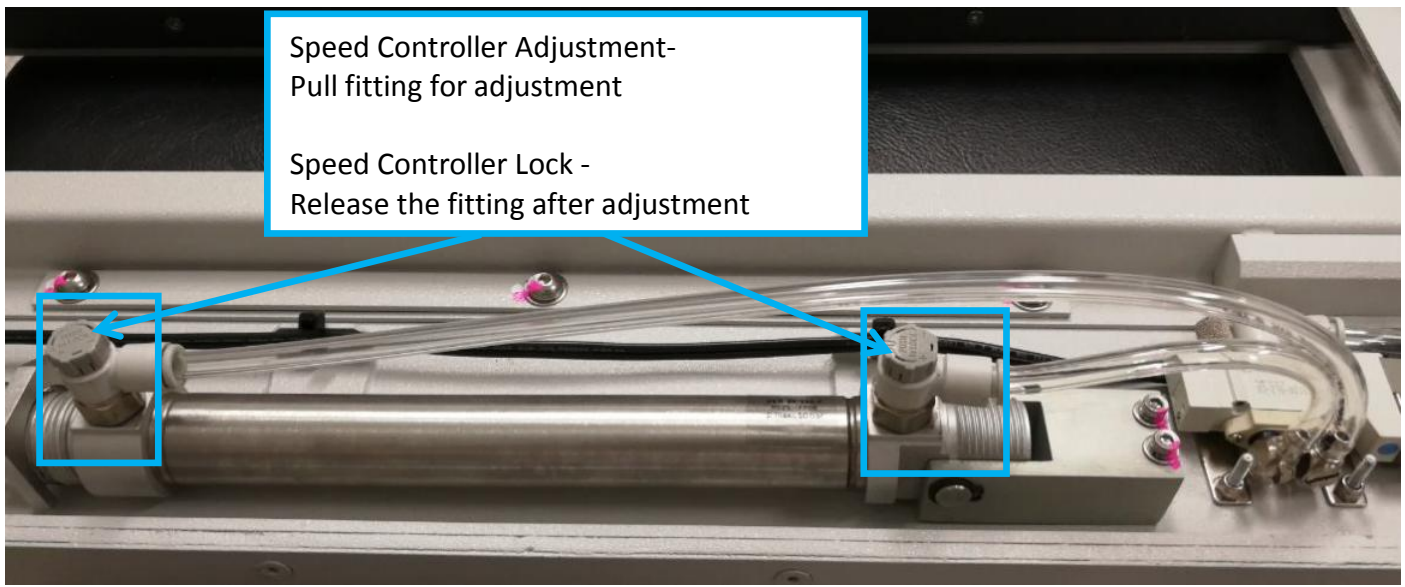


Figure 30

39. Run 1 x Loop of CD &A