

	Work Instruction	Doc. Revision	00
	AXI V810 STD Outer Barrier Valve Removal & Replacement Procedure	Effective Date	2 Oct 2016

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	2 Oct 2016	First Release	ONG KEAN SHENG

	Work Instruction	Doc. Revision	00
	AXI V810 STD Outer Barrier Valve Removal & Replacement Procedure	Effective Date	2 Oct 2016

Content

Parts removal.....	3
Parts replacement.....	4

	Work Instruction	Doc. Revision	00
	AXI V810 STD Outer Barrier Valve Removal & Replacement Procedure	Effective Date	2 Oct 2016

Parts removal

1. Close SSCA
2. Close V810 Air Pressure Regulator
3. Close X ray Source at Operator Console Panel
4. Disconnect Input cable form Outer Barrier Solenoid Valve as Figure 1.

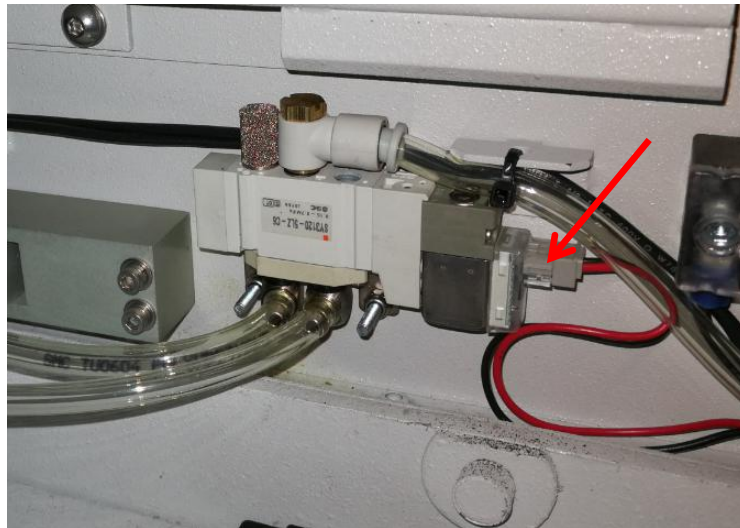


Figure 1

5. Remove 2 x Tubing from Outer Barrier Solenoid Valve. Remove Main Tubing as well.



Figure 2

	Work Instruction	Doc. Revision	00
	AXI V810 STD Outer Barrier Valve Removal & Replacement Procedure	Effective Date	2 Oct 2016

6. Remove 2 x Nut as below Figure 3

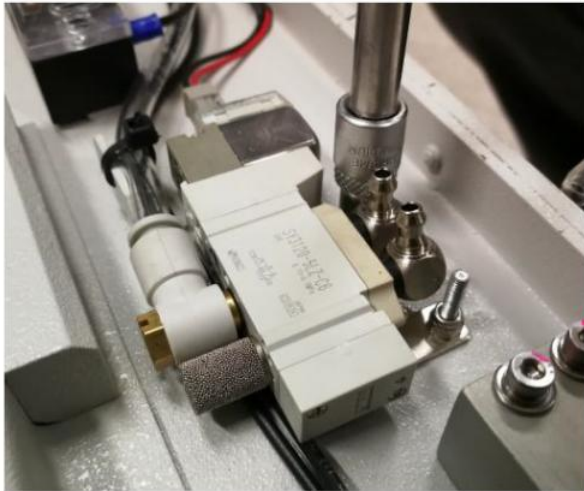


Figure 3

7. Remove entire Outer Barrier Valve.

Parts replacement

8. Assemble New Outer Barrier Solenoid Valve Kit (PN : 4XASP-A107) at outer barrier as below Figure 4. Tighten 2 x Nut.



Figure 4

	Work Instruction	Doc. Revision	00
	AXI V810 STD Outer Barrier Valve Removal & Replacement Procedure	Effective Date	2 Oct 2016

9. Connect Input cable form Outer Barrier Solenoid Valve as Figure 5.

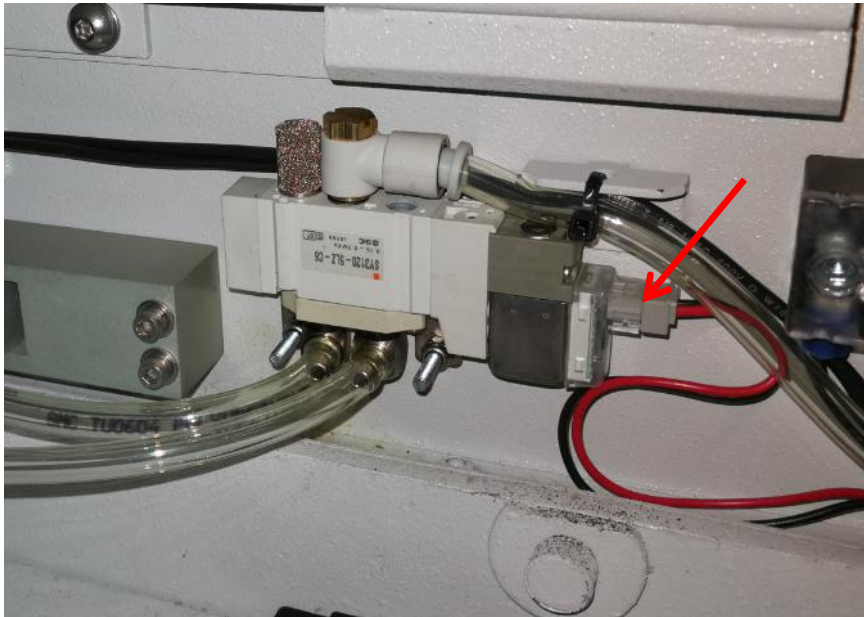


Figure 5

10. Connect Main Tubing as Figure 6.



Figure 6

11. Plug 2 x Tubing by refer to below orientation.

Orientation	Routing Path
A1-A2	Speed Controller to Outer Barrier Valve
B1-B2	Speed Controller to Outer Barrier Valve

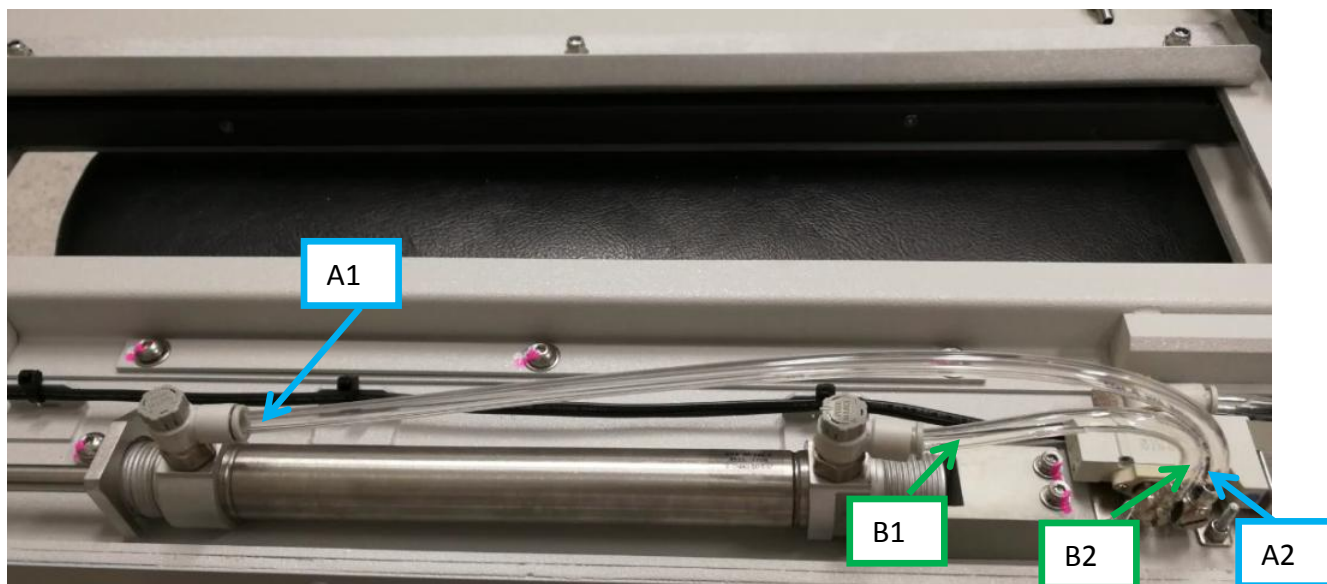


Figure 7

12. Manually move the X Axis Stage towards particular barrier. May refer to below Figure 8.

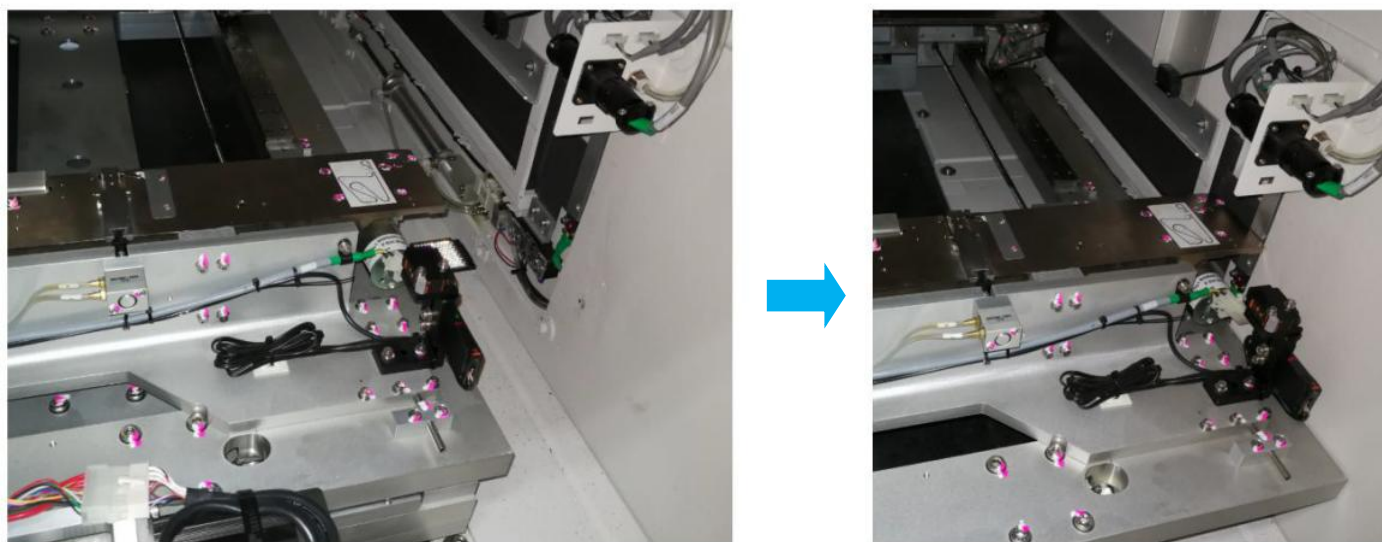


Figure 8

	Work Instruction	Doc. Revision	00
	AXI V810 STD Outer Barrier Valve Removal & Replacement Procedure	Effective Date	2 Oct 2016

13. Visual check outer barrier tubing whether contain any friction with X Axis Stage.

a) If friction persist, re-arrange tubing position.

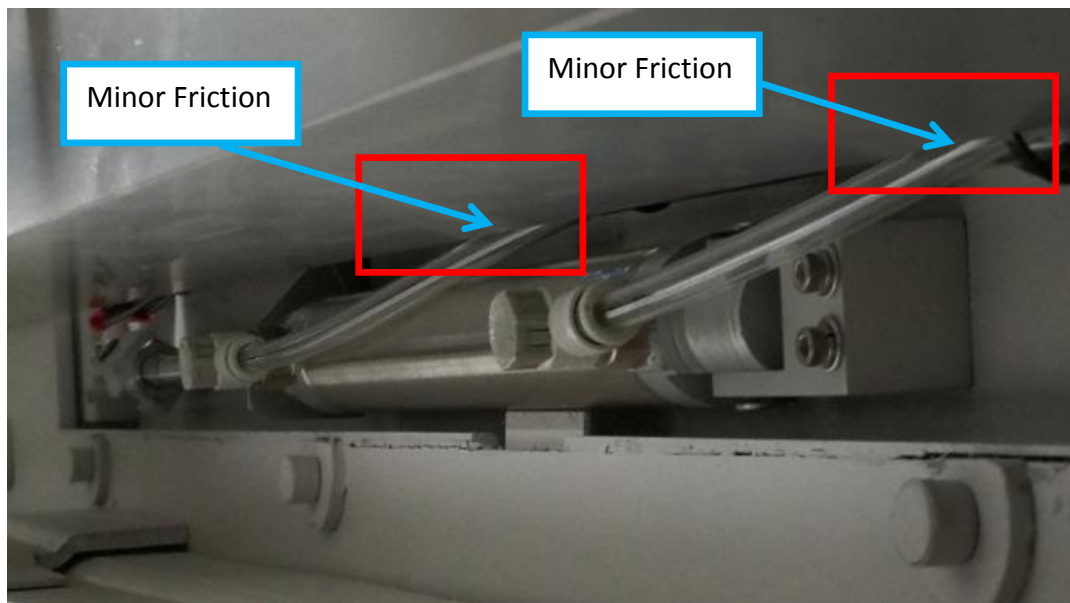


Figure 9

14. Remove all tools from XY Stage

15. Close all access door

16. Open SSCA

17. Open V810 GUI

18. Initialize at Panel handling

19. Open & Close particular Outer barrier which perform Valve Replacement .Record down Opening & Closing duration as below Figure 10.

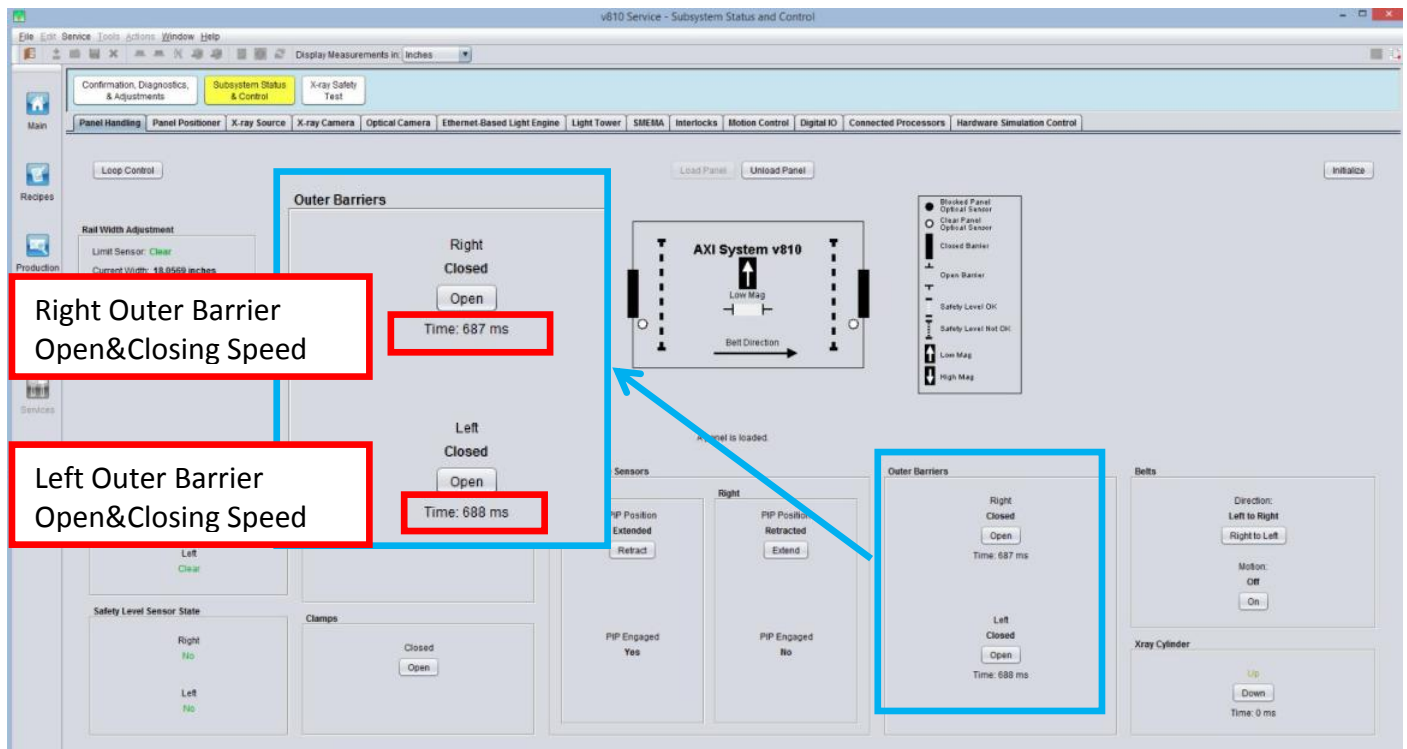


Figure 10 Outer Barrier Opening & Closing Duration

20. Adjust 2 X Speed Controller at Outer Barrier cylinder by refer to below table.

Outer Barrier Status	Outer Barrier Speed
Open	500ms~750ms
Close	500ms~750ms

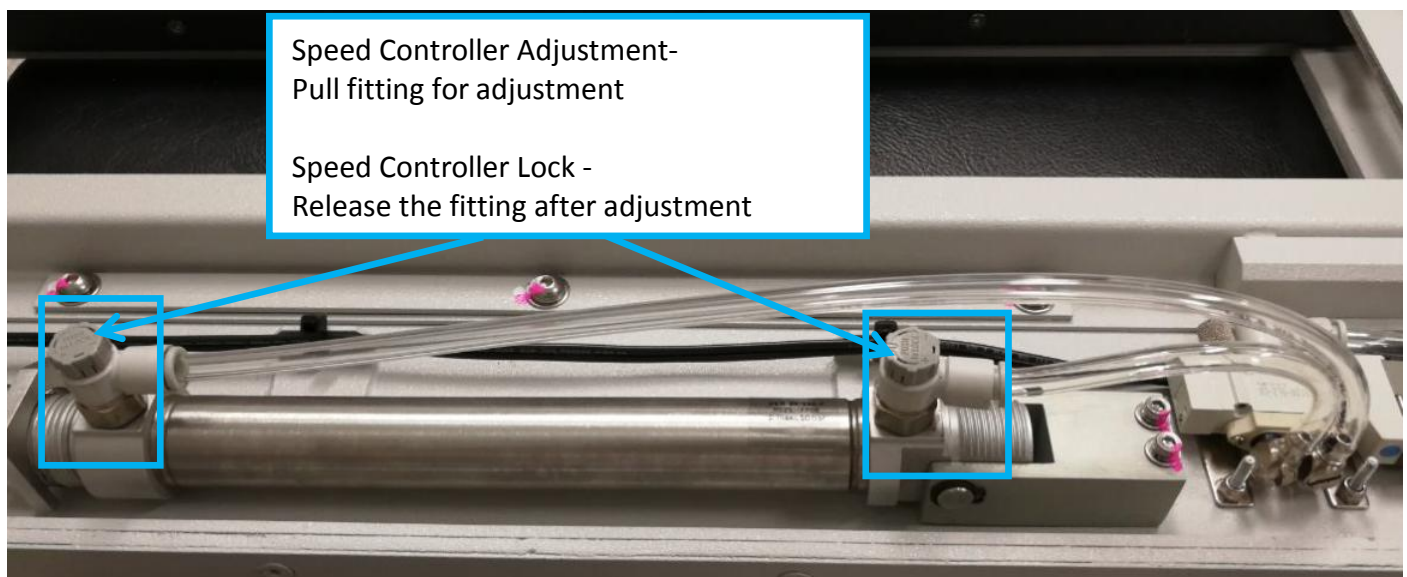


Figure 11