

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Outer Barrier Valve Removal & Replacement Procedure	Effective Date	2 Oct 2016

This procedure is applicable to below models:

V810 STD	☐	S1	☐	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	2 Oct 2016	First Release	ONG KEAN SHENG

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Outer Barrier Valve Removal & Replacement Procedure	Effective Date	2 Oct 2016

Content

Parts removal.....	3
Part replacement.....	5

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 XXL Outer Barrier Valve Removal & Replacement Procedure	Effective Date	2 Oct 2016

Parts removal

1. Close SSCA
2. Close V810 Air Pressure Regulator
3. Close X ray Source at Operator Console Panel
4. Open up particular outer barrier.
5. Remove Main Tubing & Input Cable as Figure 1.

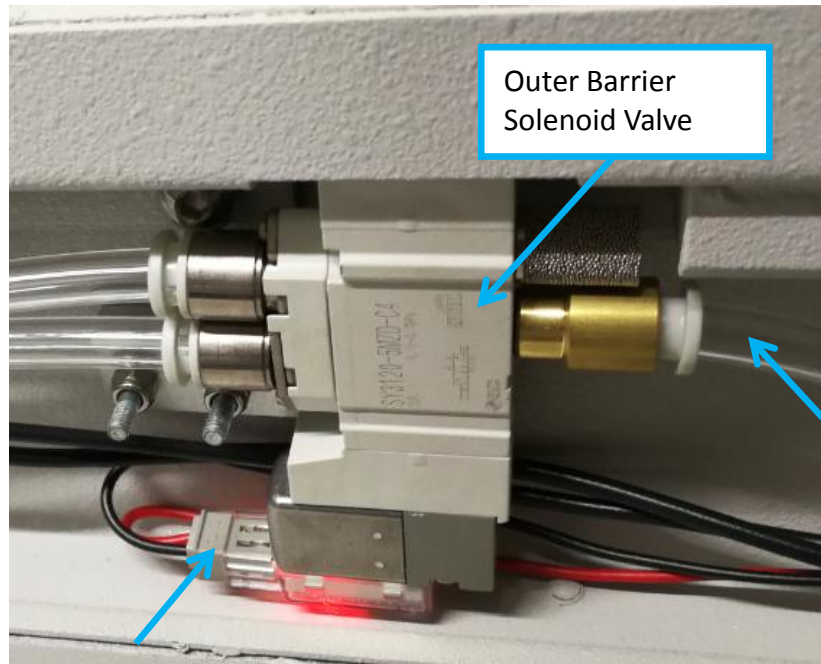


Figure 1

6. Remove 2 x Tubing from Outer Barrier Solenoid Valve. May refer to Figure 2



Figure 2

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Outer Barrier Valve Removal & Replacement Procedure	Effective Date	2 Oct 2016

7. Loosen 2 x Nut & remove entire Outer Barrier Valve assembly from Outer Barrier. May refer to Figure 3.

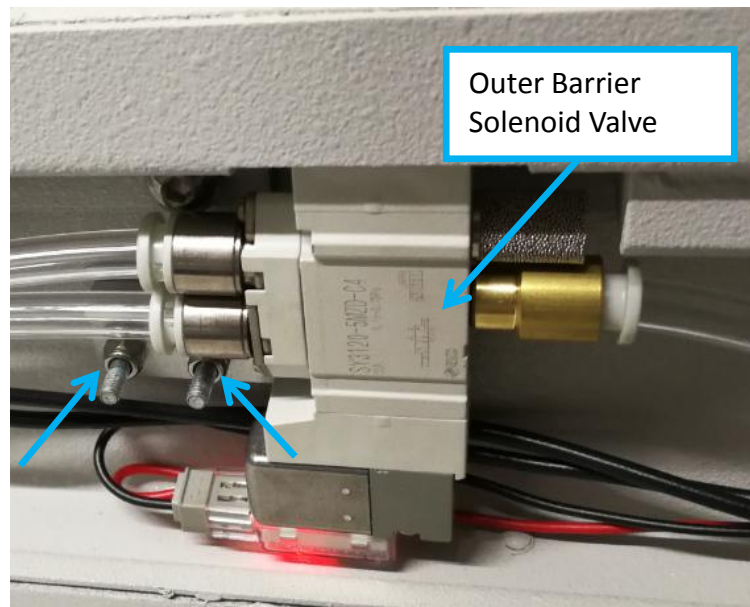


Figure 3

8. Flip the XXL Outer Barrier Solenoid Valve. Loosen 2 x Philip Screws and remove the Holding Bracket. May refer to below Figure 4.



Figure 4

9. Position Holding Bracket & 2 x Philip screws at visible location. Parts will require to re-use.

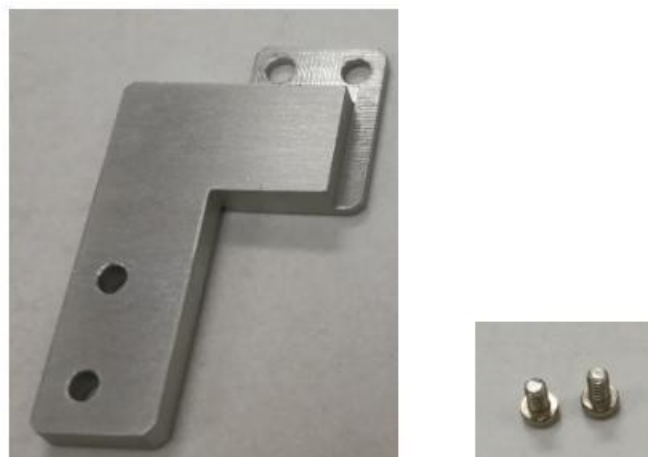


Figure 5

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Outer Barrier Valve Removal & Replacement Procedure	Effective Date	2 Oct 2016

Part replacement

10. Assemble Holding bracket by tighten 2 x Philip Screws at New S2EX Outer Barrier Solenoid Valve Kit (PN : 4XASP-A154)

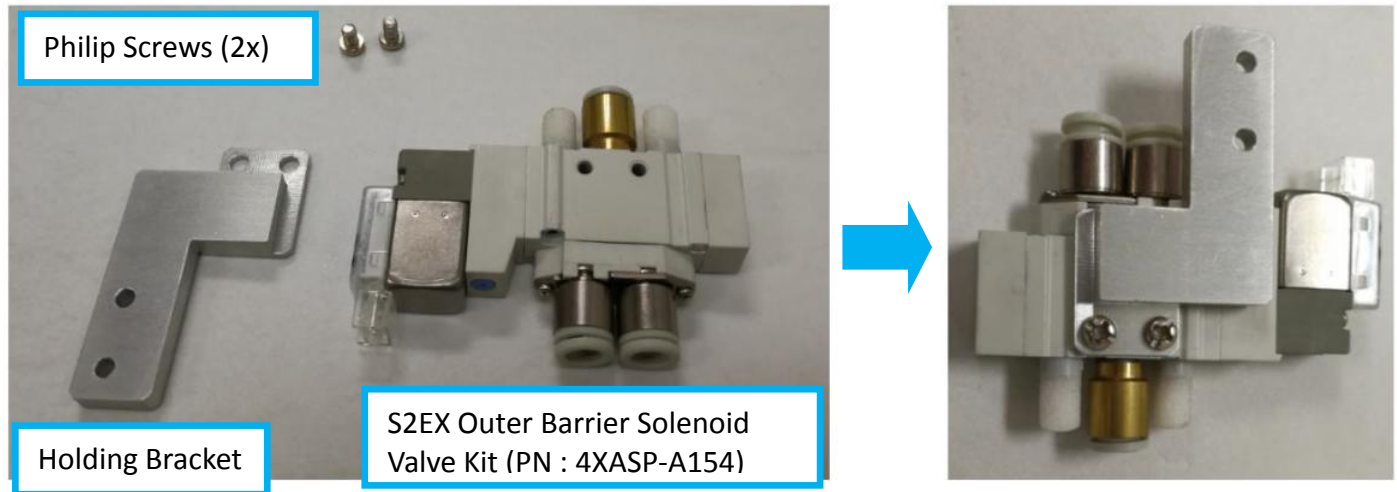


Figure 6

11. Assemble entire Outer Barrier Valve assembly at Outer Barrier. Tighten 2 x Nut. May refer to Figure 7.

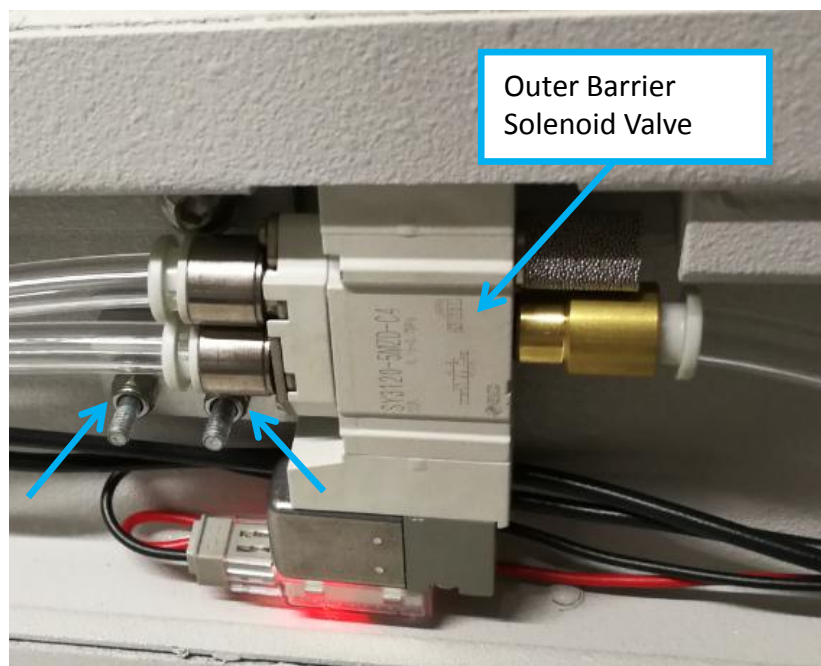


Figure 7

12. Connect Main Tubing & Input Cable as Figure 8.

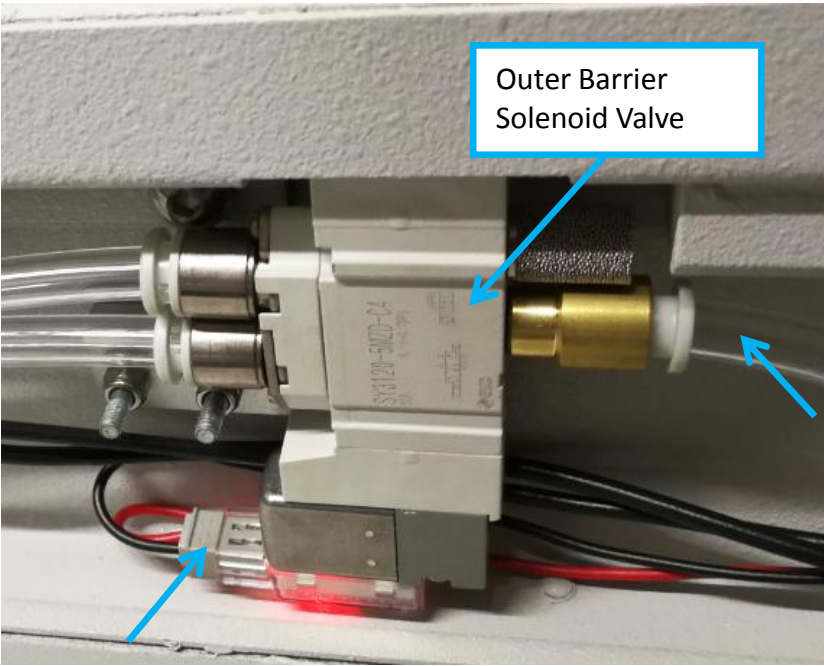


Figure 8

13. Plug 2 x Tubing by refer to below orientation.

Orientation	Routing Path	Figure
A1-A2	Speed Controller to Outer Barrier Valve	9
B1-B2	Speed Controller to Outer Barrier Valve	10

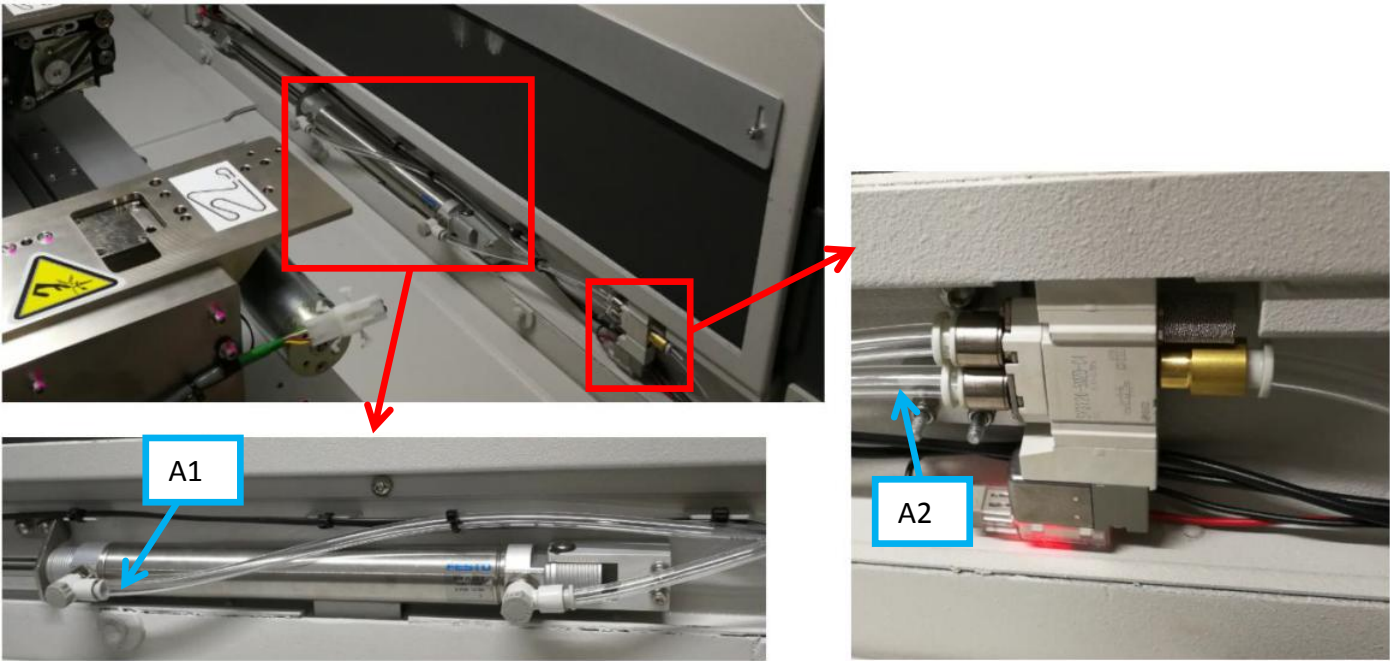


Figure 9

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Outer Barrier Valve Removal & Replacement Procedure	Effective Date	2 Oct 2016

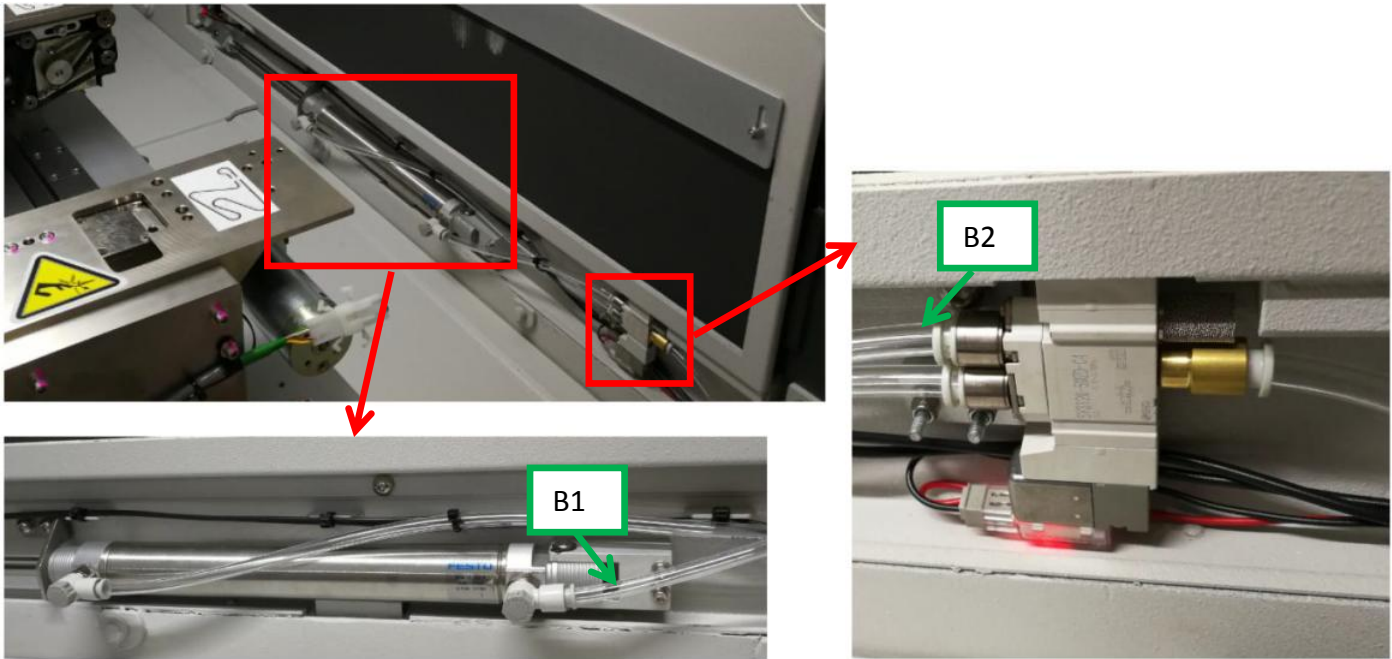


Figure 10

14. Manually move the X Axis Stage towards particular barrier.



Figure 11

ViTrox 	Work Instruction	Doc. Revision	00
	AXI V810 XXL Outer Barrier Valve Removal & Replacement Procedure	Effective Date	2 Oct 2016

15. Visual check outer barrier tubing whether contain any friction with X Axis Stage.

a) If friction persist, re-arrange tubing position

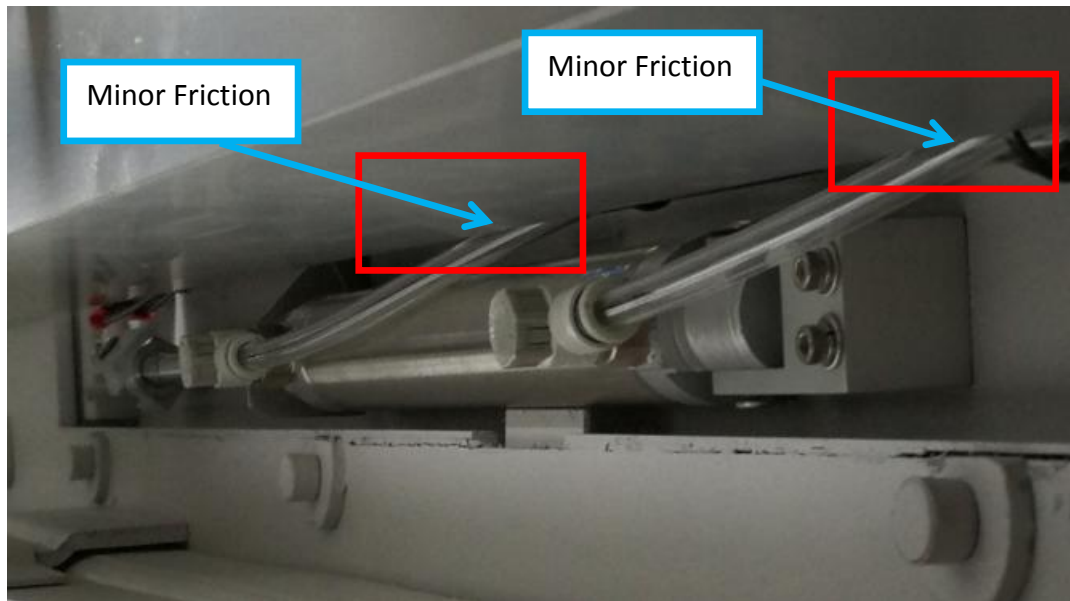


Figure 12

16. Remove all tools from XY Stage

17. Close all access door

18. Open SSCA

19. Open V810 GUI

20. Initialize at Panel handling

21. Open & Close particular Outer barrier which perform Valve Replacement. Record down Opening & Closing duration as below Figure 13.

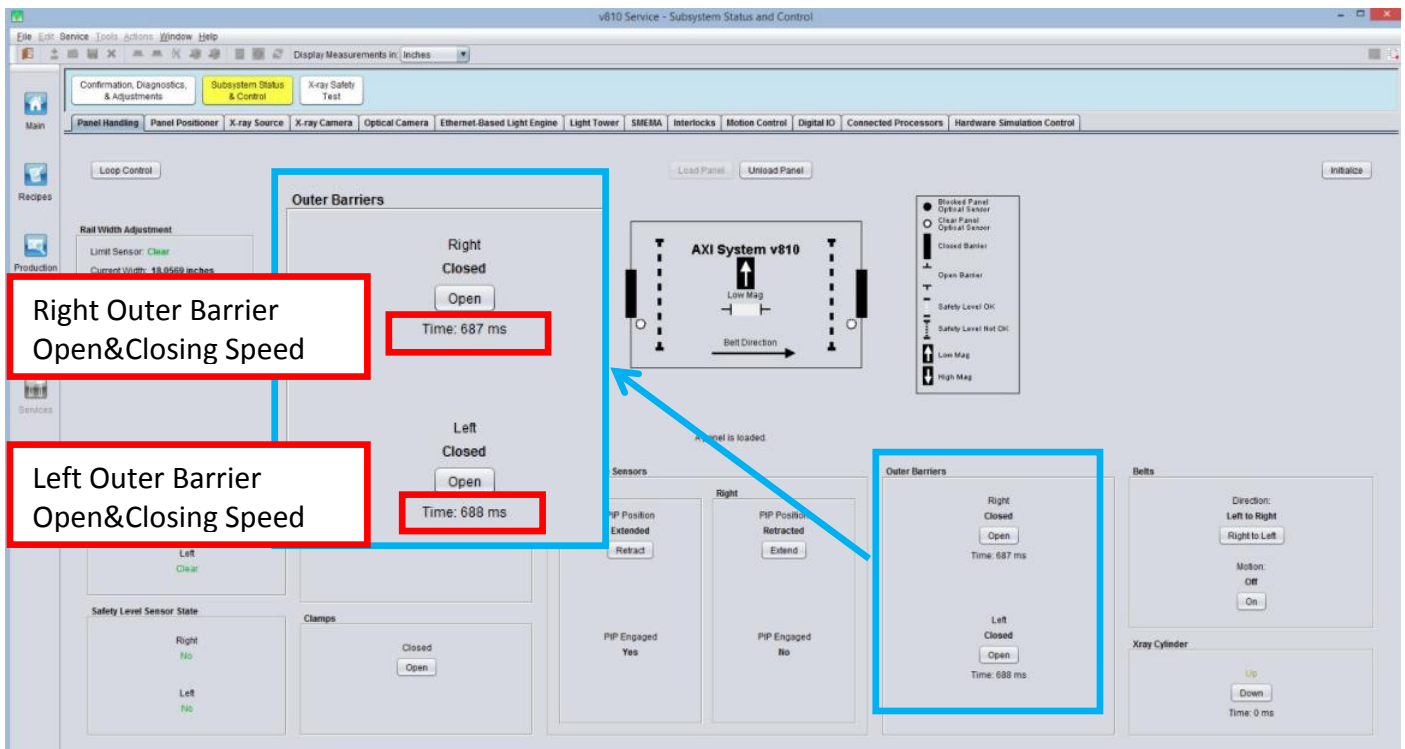


Figure 13 Outer Barrier Opening & Closing Duration

22. Adjust 2 X Speed Controller at Outer Barrier cylinder by refer below table.

Outer Barrier Status	Outer Barrier Speed
Open	1200ms~1500ms
Close	1200ms~1500ms

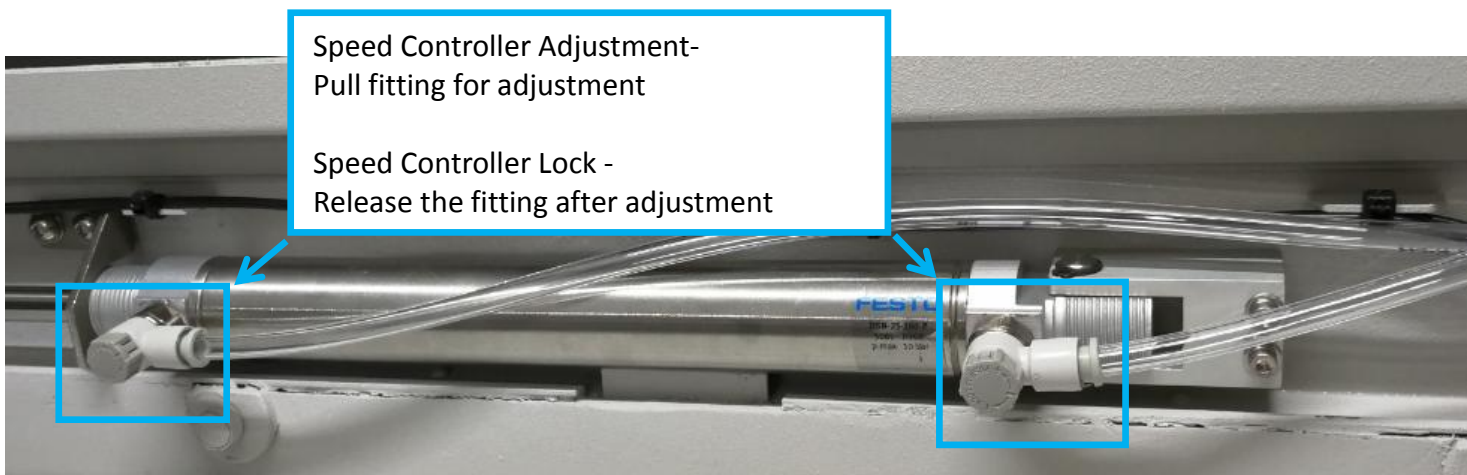


Figure 14