

	Work Instruction	Doc. Revision	01
	AXI V810 Field Stop Assembly Remove and Replace Procedure	Effective Date	2 Oct 2016

This procedure is applicable to below models:

V810 STD	☐	S1	☐	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	01 Dec 2015	First Release	CHIN CHEE YAN
01	2 Oct 2016	Template Changes & Content Update	ONG KEAN SHENG

	Work Instruction	Doc. Revision	01
	AXI V810 Field Stop Assembly Remove and Replace Procedure	Effective Date	2 Oct 2016

1. Unload any board from machine and go to Panel handling tab, click initialize. Once done, ensure AWA in home position.



Figure 1

2. Turn off X-Ray and completely shutdown machine. Close the main power source.
3. Open front access door, right and rear side door for ease of R&R process.
4. Open Left Outer Barrier with unscrew the tamper proof screws as shown for ease of R&R process.

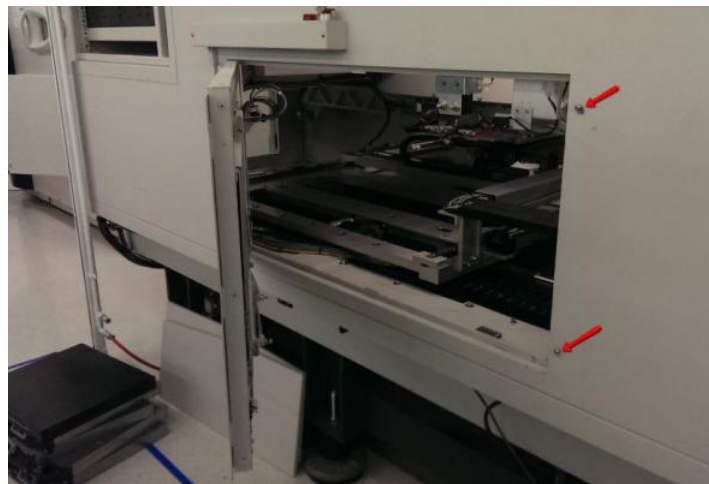


Figure 2

5. Prepare the Tool Camera (P/N, 2350-0010) as shown for ease of R&R process.



Figure 3

ViTrox	Work Instruction	Doc. Revision	01
	AXI V810 Field Stop Assembly Remove and Replace Procedure	Effective Date	2 Oct 2016

6. Unscrew the thumb nut and open the camera enclosure.



Figure 4

7. There are 2 x screws next to Camera 0 as shown. By using Tool Camera (P/N, 2350-0010), unscrew both accordingly.

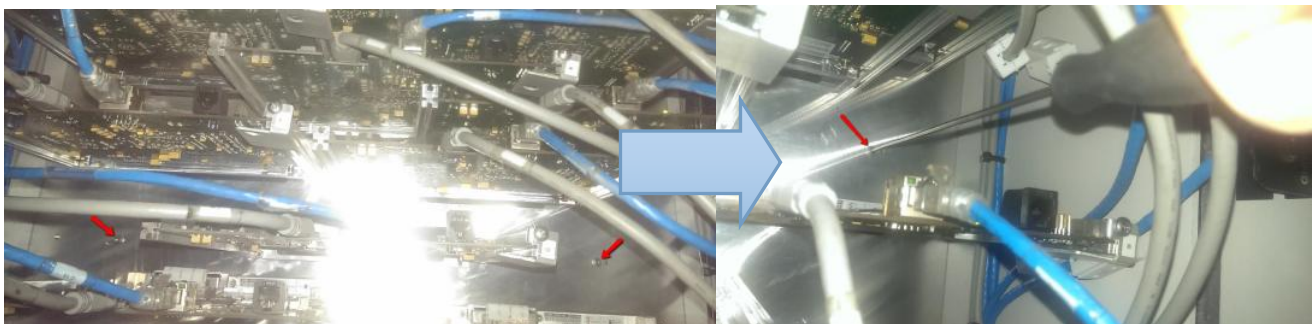


Figure 5

8. Move XY stage to desire position where ease to access.
9. Gently remove field stop assembly.

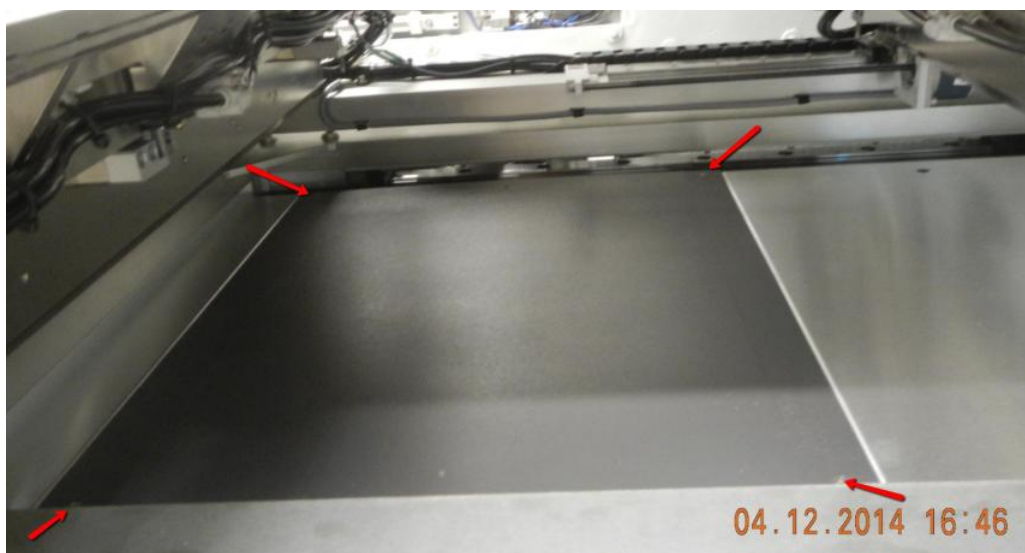


Figure 6

	Work Instruction	Doc. Revision	01
	AXI V810 Field Stop Assembly Remove and Replace Procedure	Effective Date	2 Oct 2016

10. Prepare a new Field Stop Assembly XXL (P/N, 4LAGR-A045) as shown.



Figure 7

11. Assembly new 4LAGR-A045 to machine. Ensure the dowel pin guide orientation (fix) is correct with black cover surface face to X-Ray tube.

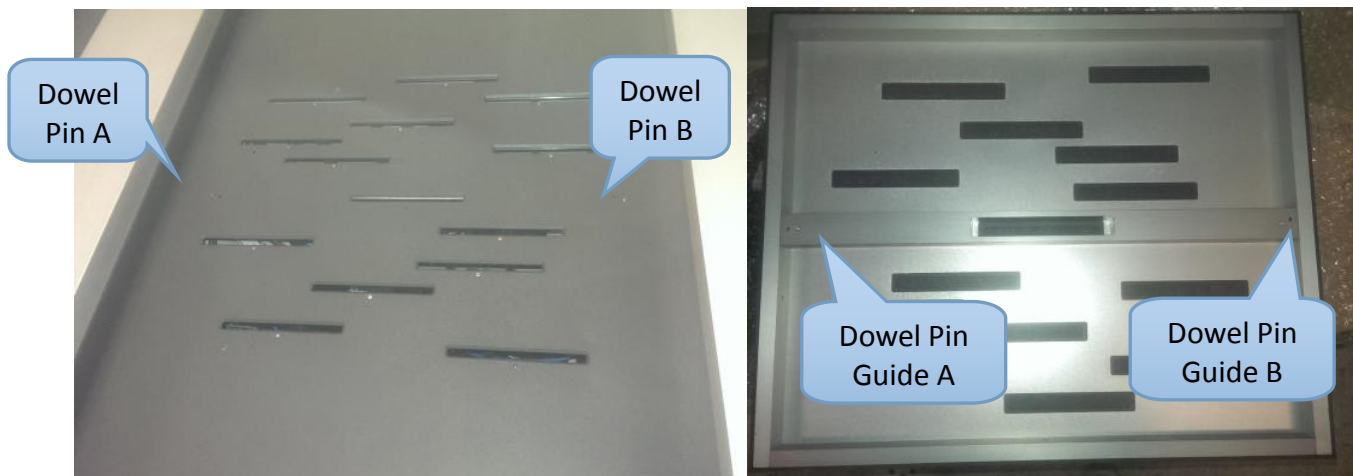


Figure 8

12. Ensure the 4LAGR-A045 is completely mounted and flat with granite surface. Then screws the 4LAGR-A045 with origin screws from step 7. Once done, close the camera enclosure.

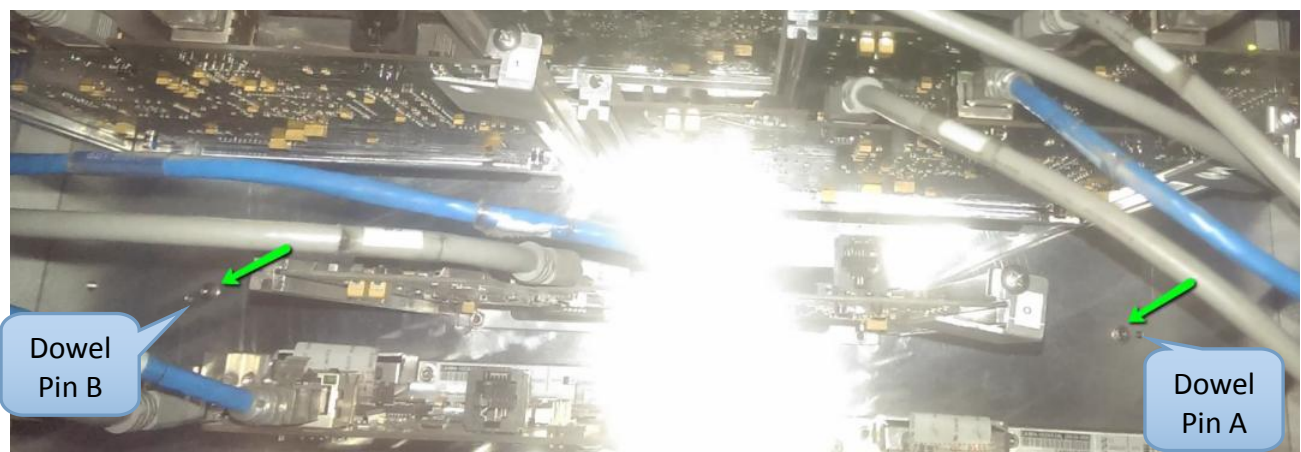


Figure 9

	Work Instruction	Doc. Revision	01
	AXI V810 Field Stop Assembly Remove and Replace Procedure	Effective Date	2 Oct 2016

13. Access from front, move the stage to machine rear side hard stop. Counter check and ensure the Shield, Board Drop (P/N, 4LAGR-053) height is even with the 4LAGR-A045.

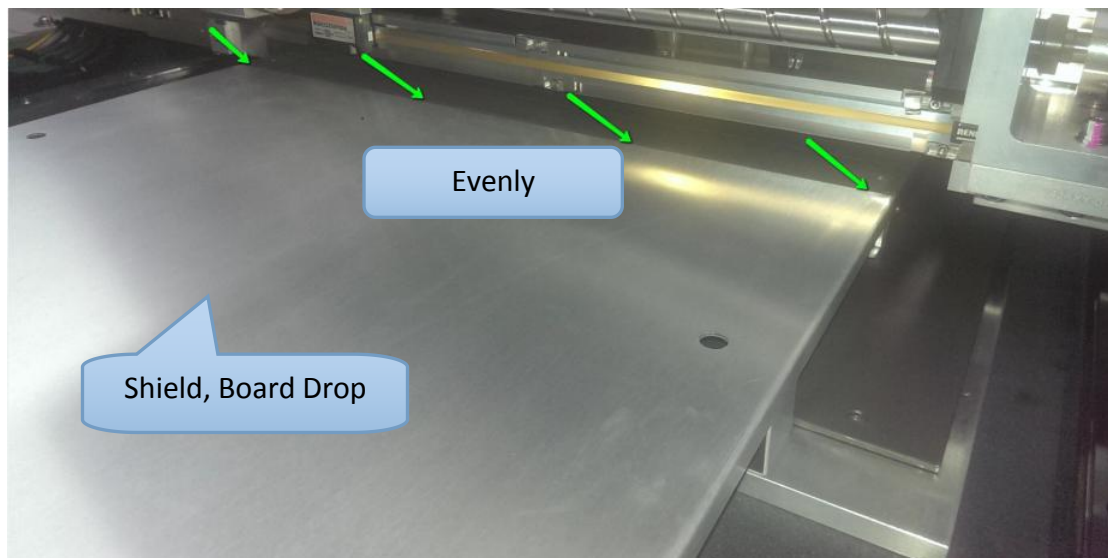


Figure 10

14. If found uneven, unscrew as shown and remove the 4LAGR-053.

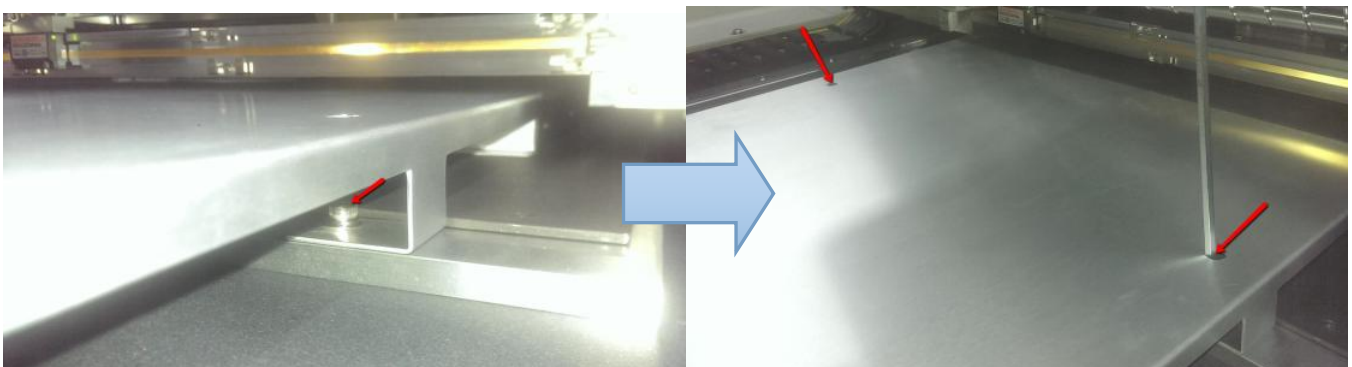


Figure 11

15. Add a washer to shim up the 4LAGR-053. Tighten the screws and visual check again.

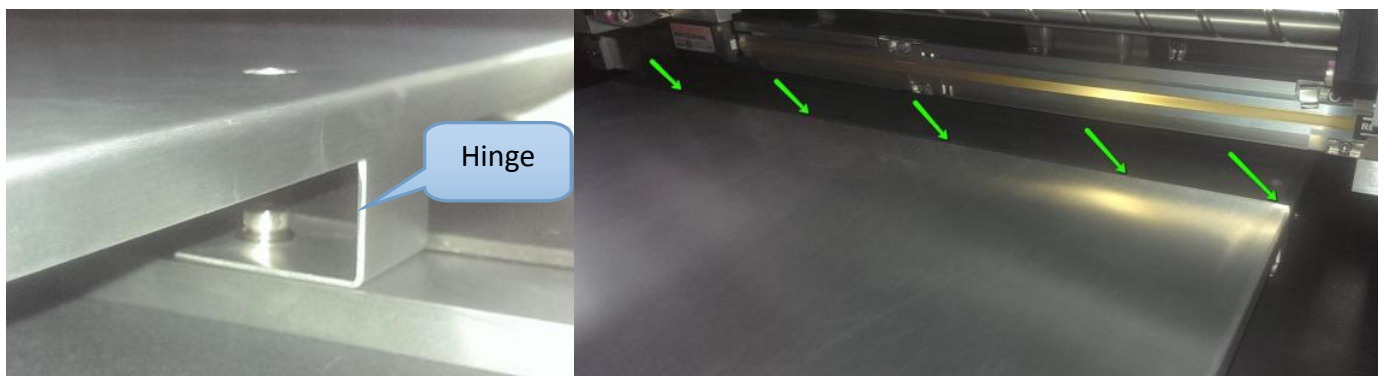


Figure 12

	Work Instruction	Doc. Revision	01
	AXI V810 Field Stop Assembly Remove and Replace Procedure	Effective Date	2 Oct 2016

16. Move XY stage to front hard stop. Access from rear side door, visual check Shield, Board Drop height. Ensure its mount evenly. If not, repeated step 14 and 15 for rear Shield, Board Drop.

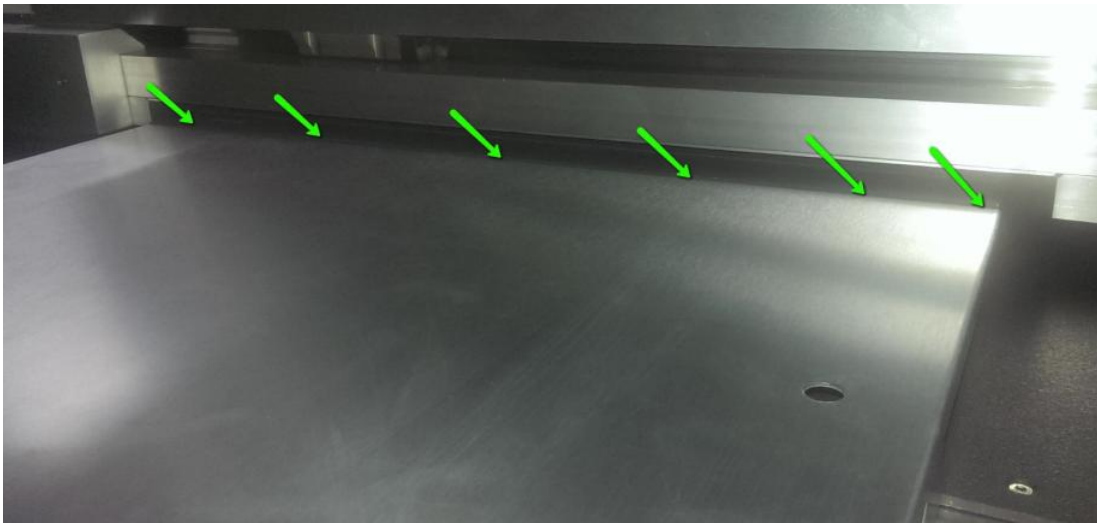


Figure 13

17. Remove all tools from machine.
 18. Close left outer barrier.
 19. Close all access doors.
 20. Start-up machine as normal. Run 3 loops CDnA.