

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0009) Replacement Procedure	Effective Date	12 Sep 2017

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	12 Sep 2017	First Release	ONG KEAN SHENG

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0009) Replacement Procedure	Effective Date	12 Sep 2017

Content

Trigger Board Power Supply Removal.....	3
Trigger Board Power Supply Replacement.....	9

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0009) Replacement Procedure	Effective Date	12 Sep 2017

Trigger Board Power Supply Removal

1. Turn Off X Ray Source
2. Power Off entire machine
3. Turn Off Trigger Board Power Switch (PDU Rear Area). Unplug the power cord as well as below
Figure 1



Figure 1

4. Unscrew and remove TOP, TRIGGER BOX (P/N, 4XACM-007).

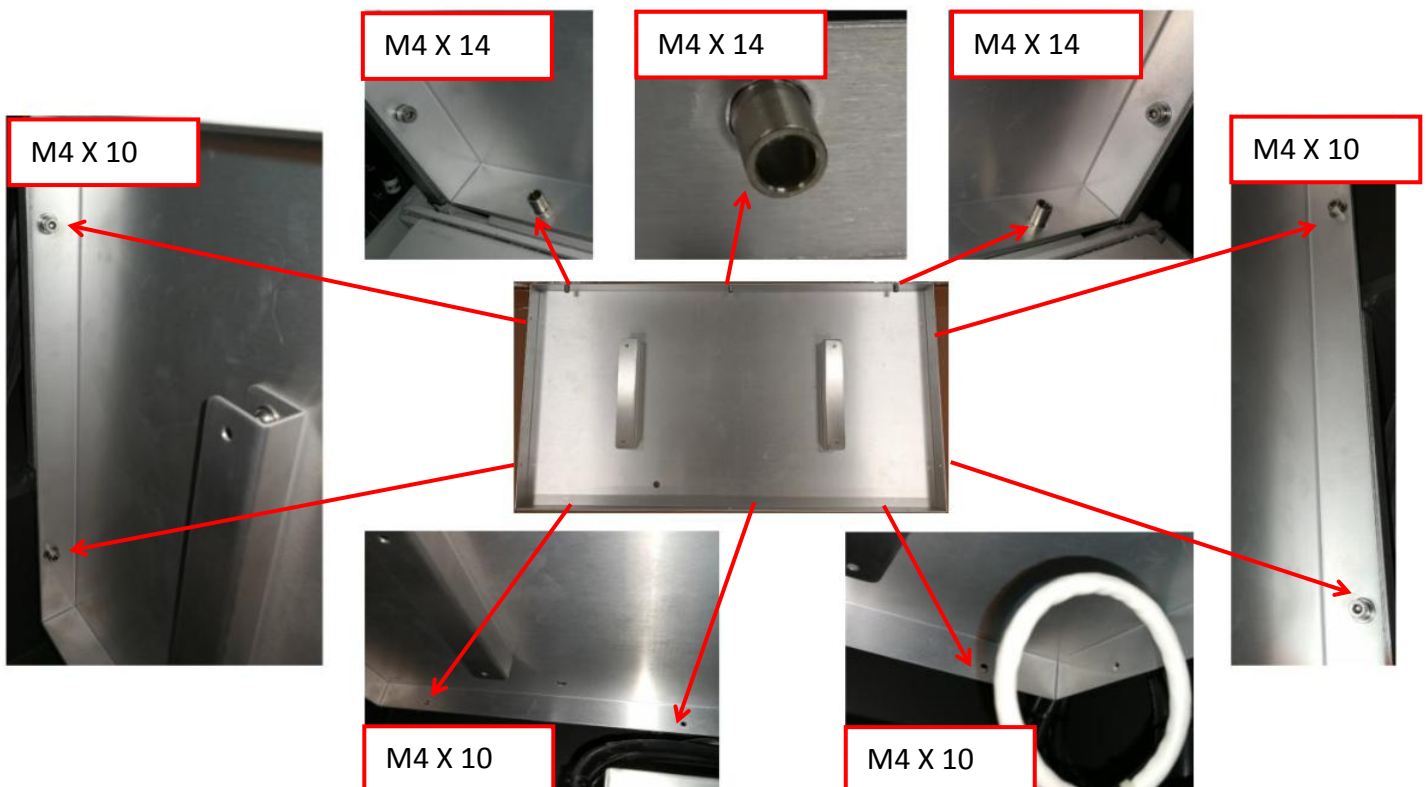


Figure 2 Trigger board Tray Cover removal

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0009) Replacement Procedure	Effective Date	12 Sep 2017

- Disconnect 14 x Fire Wires from Embedded System Support MISC Board-Trigger Board 1 Input Channel 12 Output Channels ports (P/N, 2210-0016) as Figure 3.



Figure 3 Trigger board

- Disconnect the power cable from J424v connector as Figure 4.

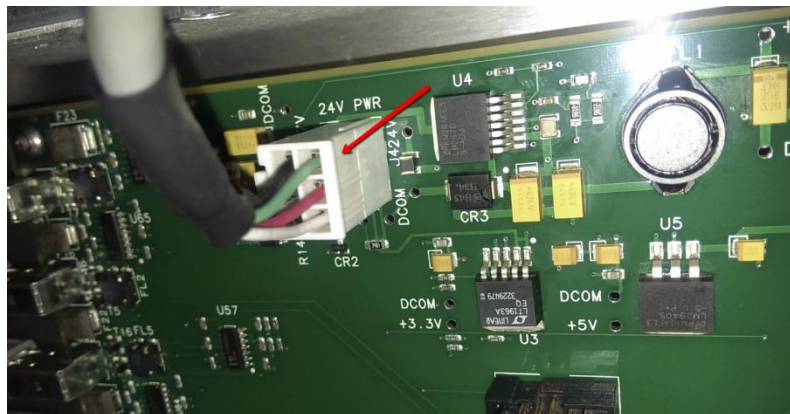


Figure 4 Trigger board power removal

- Use a short slotted screwdriver unscrew and disconnect the CABLE, TRIGGER IO, DBN 15 (P/N, 4XASC-A039) cable from Trigger Board as Figure 5.

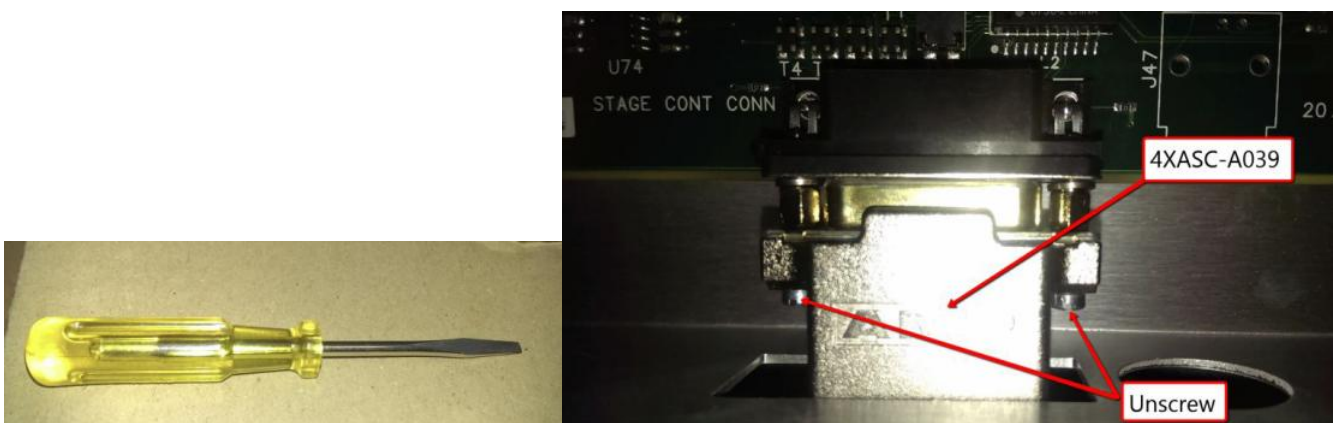


Figure 5 Connector removal

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0009) Replacement Procedure	Effective Date	12 Sep 2017

8. Remove Life, Neutral & Ground Cable From Trigger Board Power Switch as below Figure 6

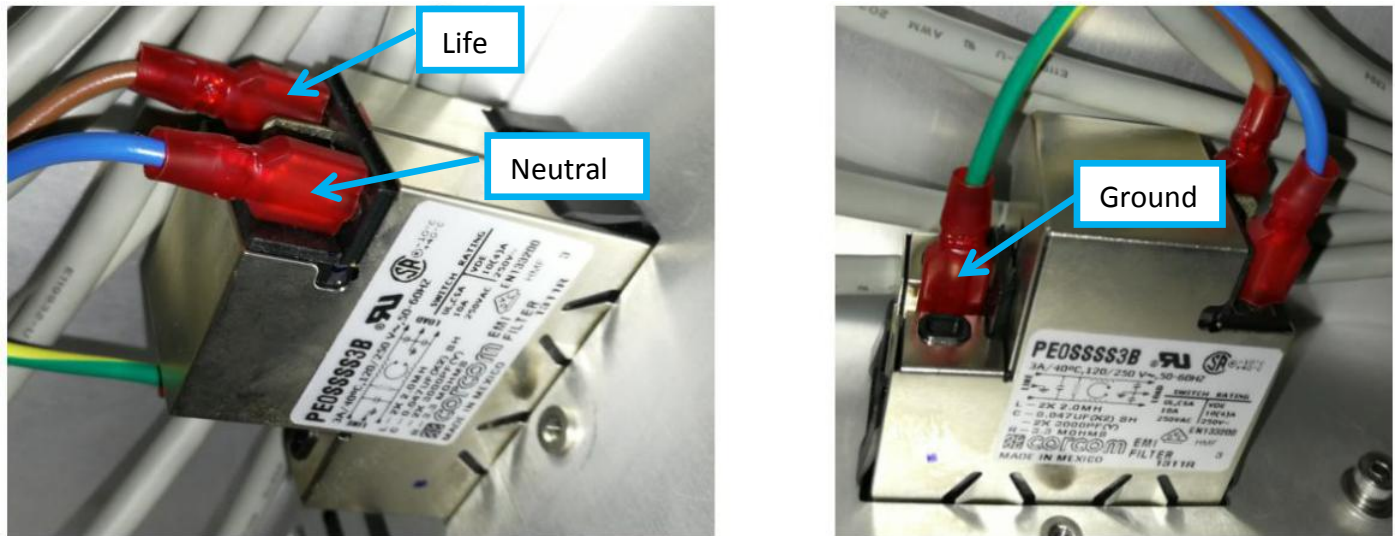


Figure 6 Power cable removal

9. Gently press on both side of Power Switch simultaneously by using Flat Head Screw Driver & remove accordingly.

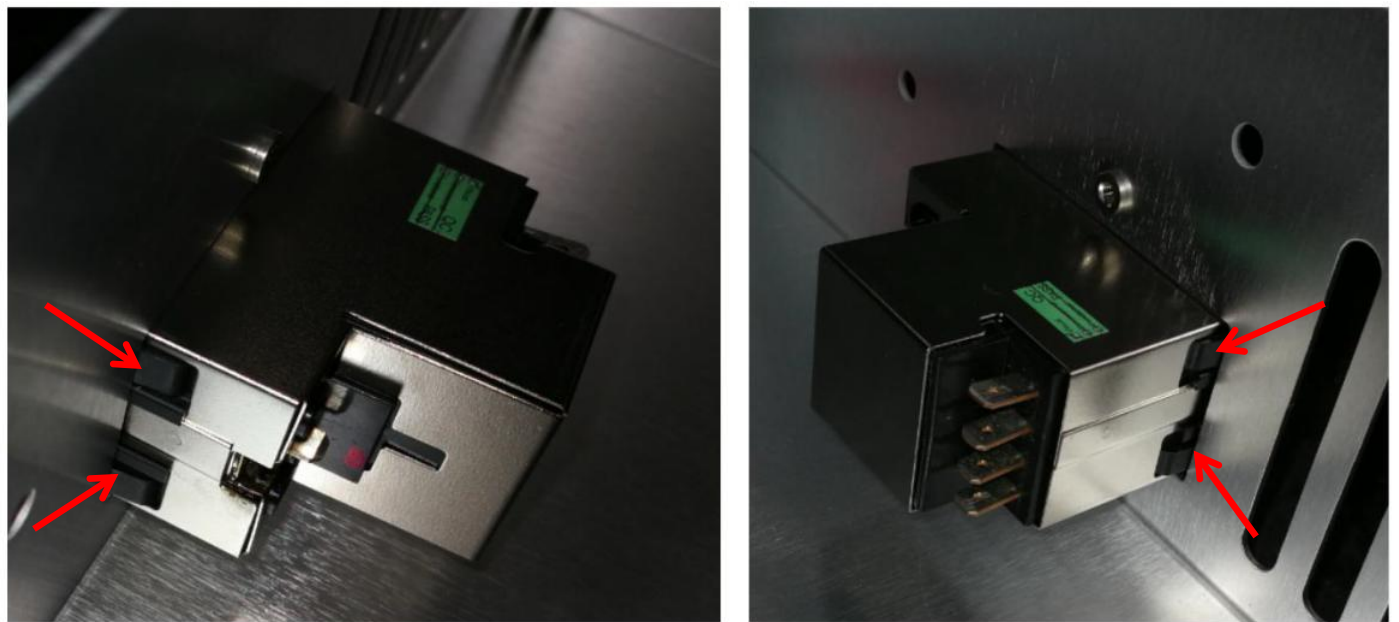


Figure 7 Power switch removal

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0009) Replacement Procedure	Effective Date	12 Sep 2017

10. Loosen 5 x screws at Trigger Board Tray as below Figure 8

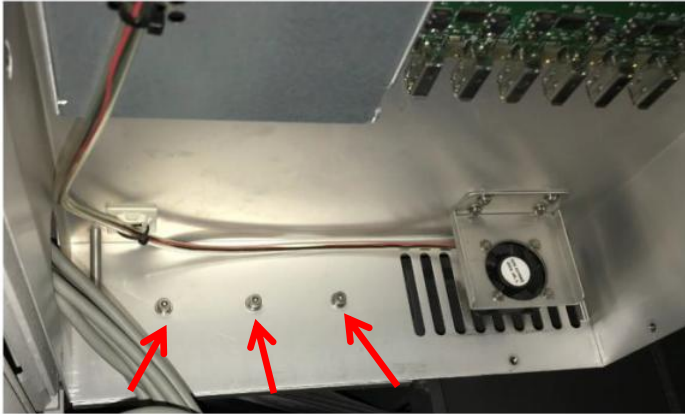


Figure 8 Trigger Board Tray removal

11. Gently remove 14 x Fire Wire through both tray opening as below Figure 9

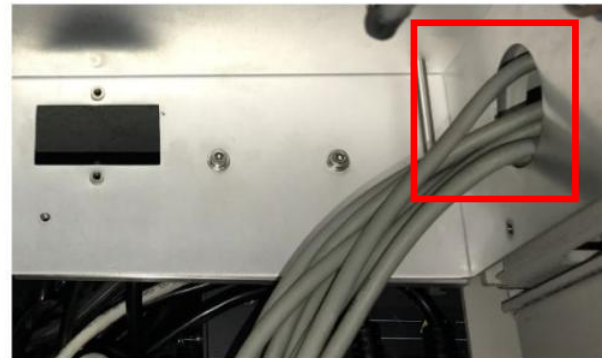
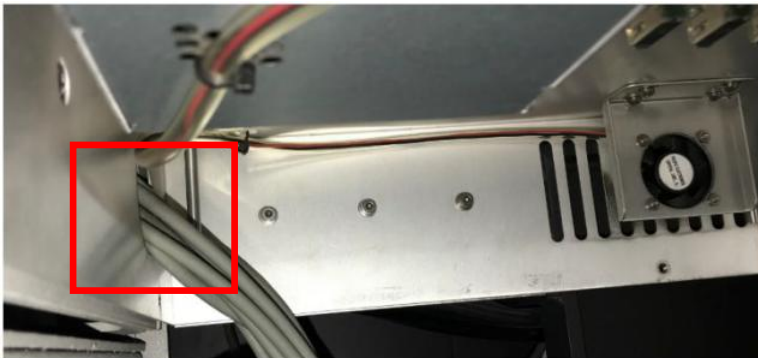


Figure 9 Fire Wire removal

12. Gently remove entire Trigger Board Tray to visible location



Figure 10 Trigger Board Tray

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0009) Replacement Procedure	Effective Date	12 Sep 2017

13. Flip the Trigger Board Tray. Loosen 4 x Screws to remove Trigger Board Power Supply as below Figure 11.

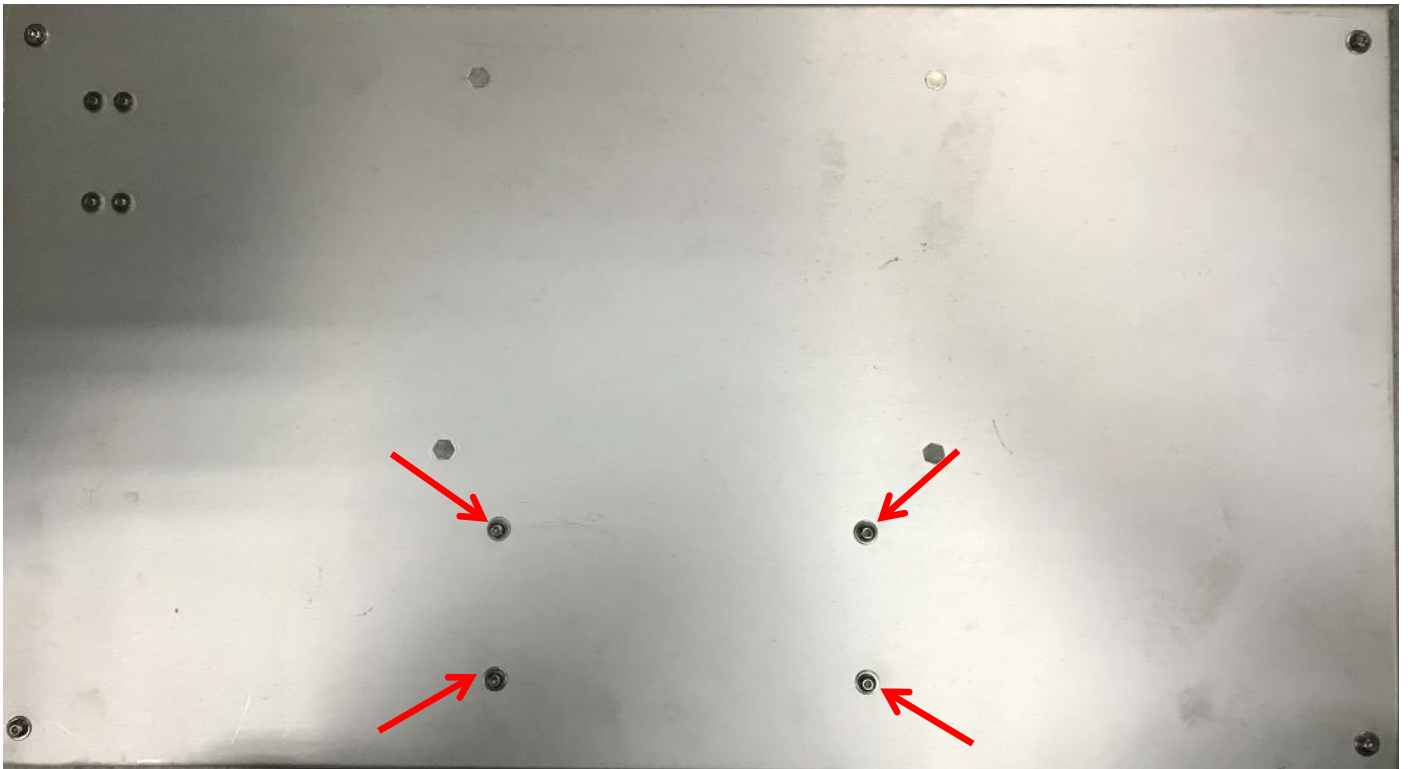


Figure 11 Trigger Board Power Supply removal

14. Remove Cable Ties at Trigger Board Power Supply Convection Casing as below Figure 12

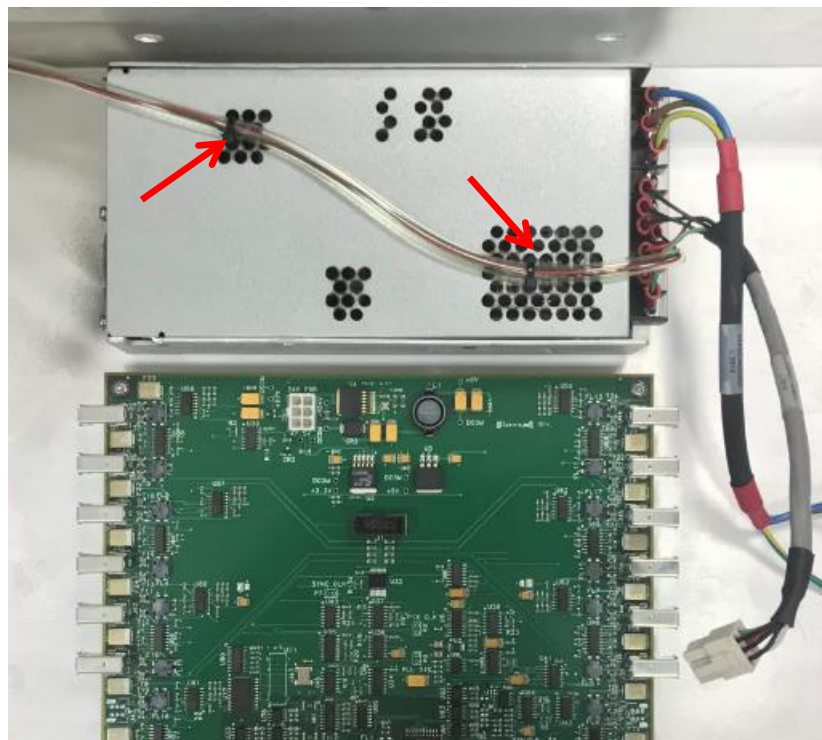


Figure 12 Cable Tie removal

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0009) Replacement Procedure	Effective Date	12 Sep 2017

15. Remove Ventilation Fan Power Cable from Trigger Board Power Supply as below Figure 13.

Remarks : May identify through Ventilation Fan Routing Or Tubing Protector.

Perform Marking upon cable removal

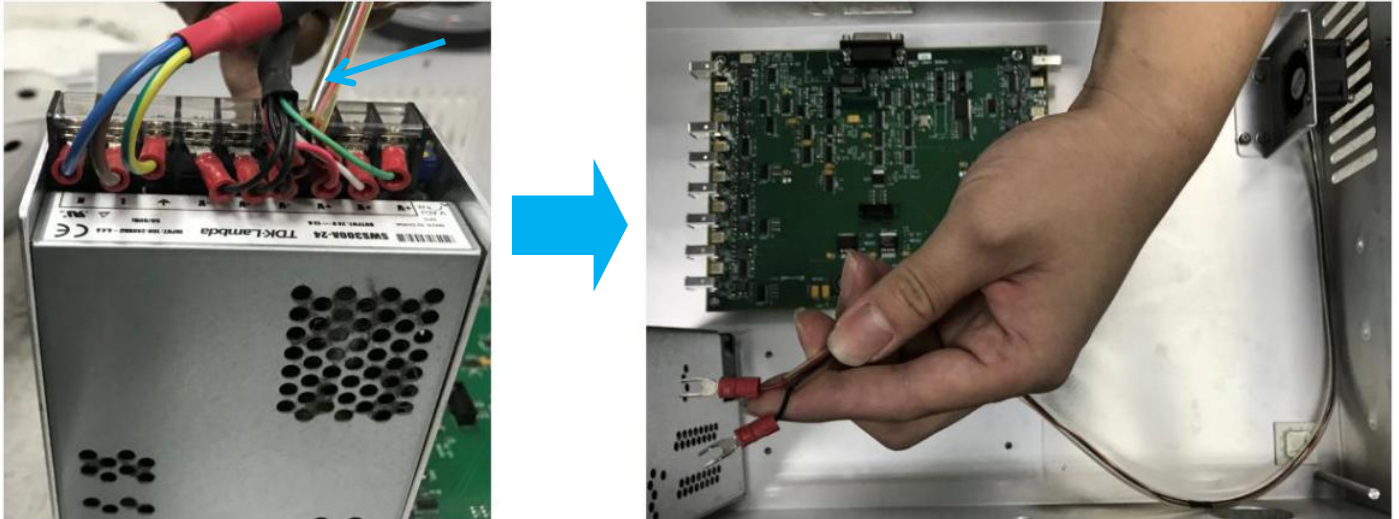


Figure 13 Ventilation Fan Power Cable Removal

16. Remove Trigger Board End Power Cable from Power Supply as below Figure 14.

Remarks : Perform Marking upon cable removal

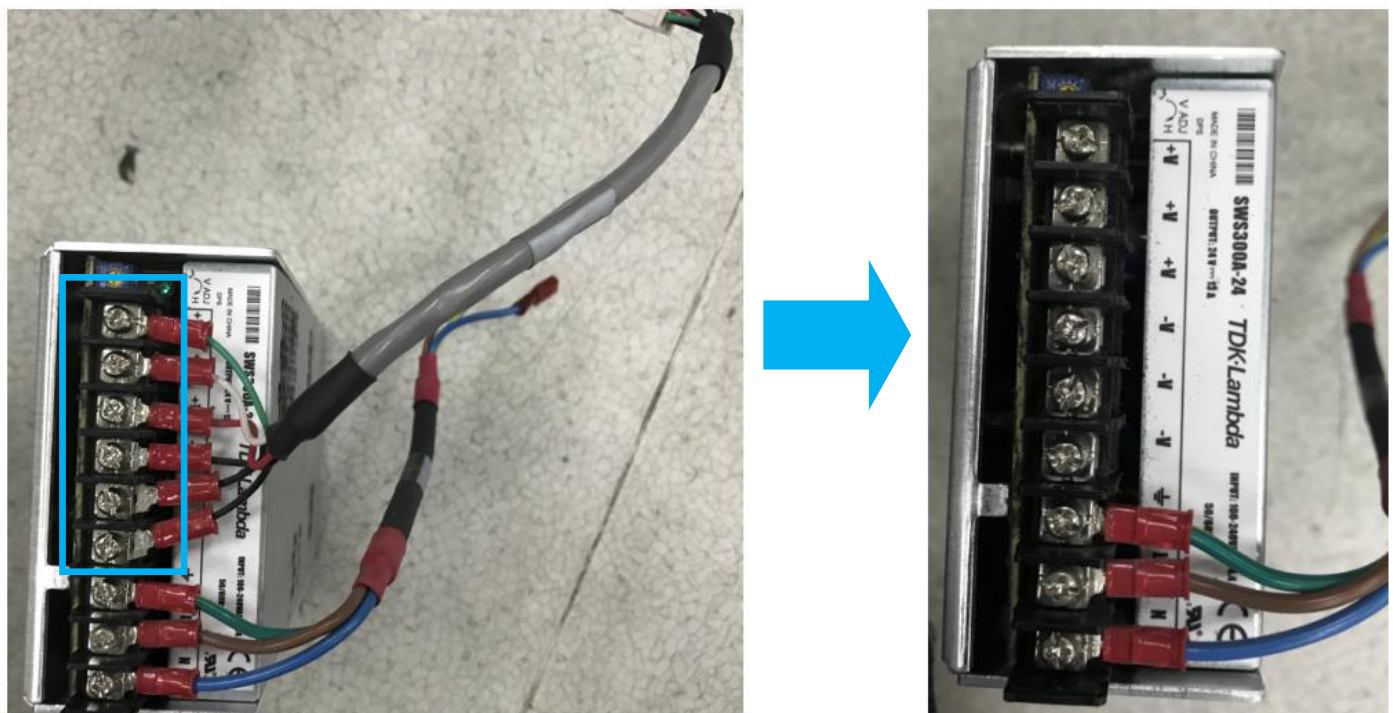


Figure 14 Trigger Board End Power Cable removal

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0009) Replacement Procedure	Effective Date	12 Sep 2017

17. Remove Power Switch Cable from Power Supply as below Figure 15

Remarks : Perform Marking upon Cable Removal



Figure 15 Power Switch Cable Removal

Trigger Board Power Supply Replacement

1. Prepare a new POWER SUPPLY, SINGLE OUTPUT, SWS300/600 (P/N, 2140-0009)



Figure 16 Trigger Board Power Supply

2. Connect Power Switch Cable to Trigger Board Power Supply by refer to below Table 1.

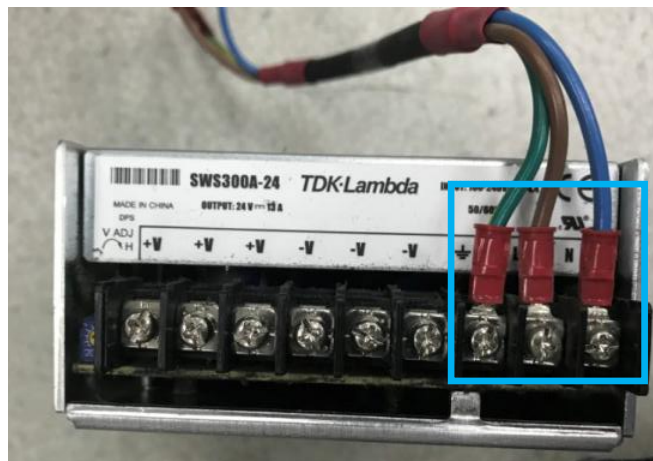


Figure 17 Power Switch Cable Connection

Power Switch Cable	Ground (Green)	Life (Brown)	Neutral (Blue)
Trigger Board Power Supply		L	N

Table 1

3. Connect Trigger Board End Power Cable to Power Supply by refer to Table 2

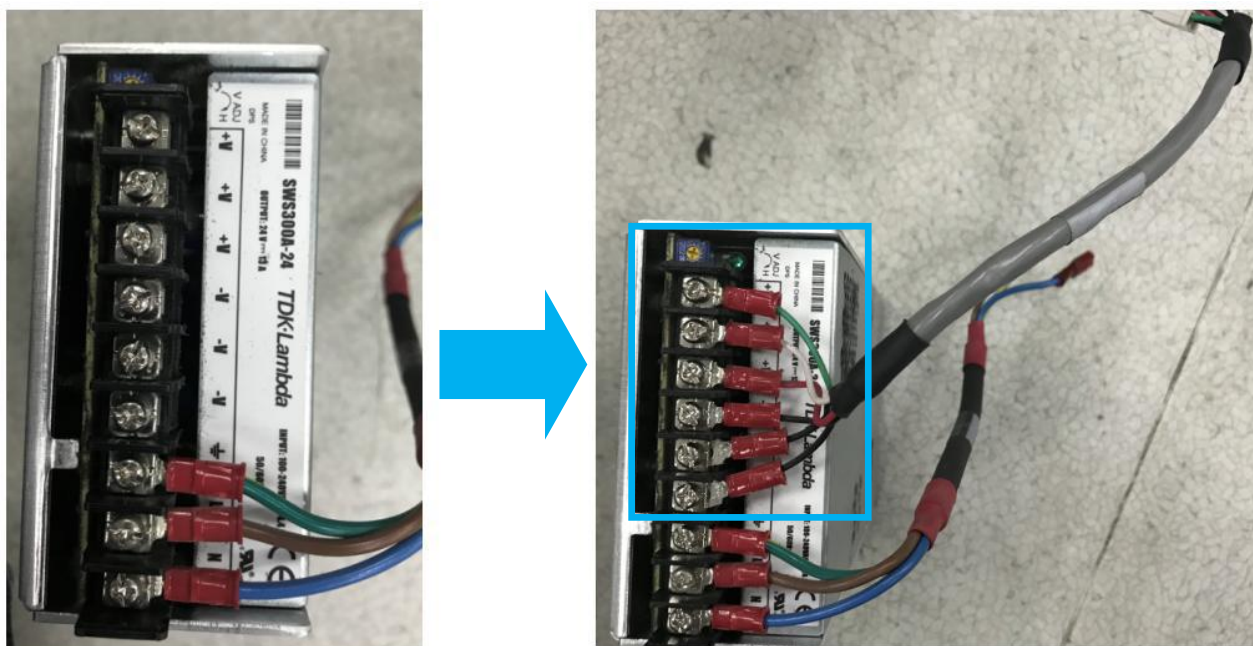


Figure 18 Trigger Board End Power Cable Connection

Trigger Board End Power Cable Colour	Black	Black	Black	Red	White	Green
Trigger Board Power Supply	-V	-V	-V	+V	+V	+V

Table 2

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0009) Replacement Procedure	Effective Date	12 Sep 2017

4. Connect Ventilation Fan Power Cable to Trigger Board Power Supply by refer to Table 3 (Red Colour Highlight)

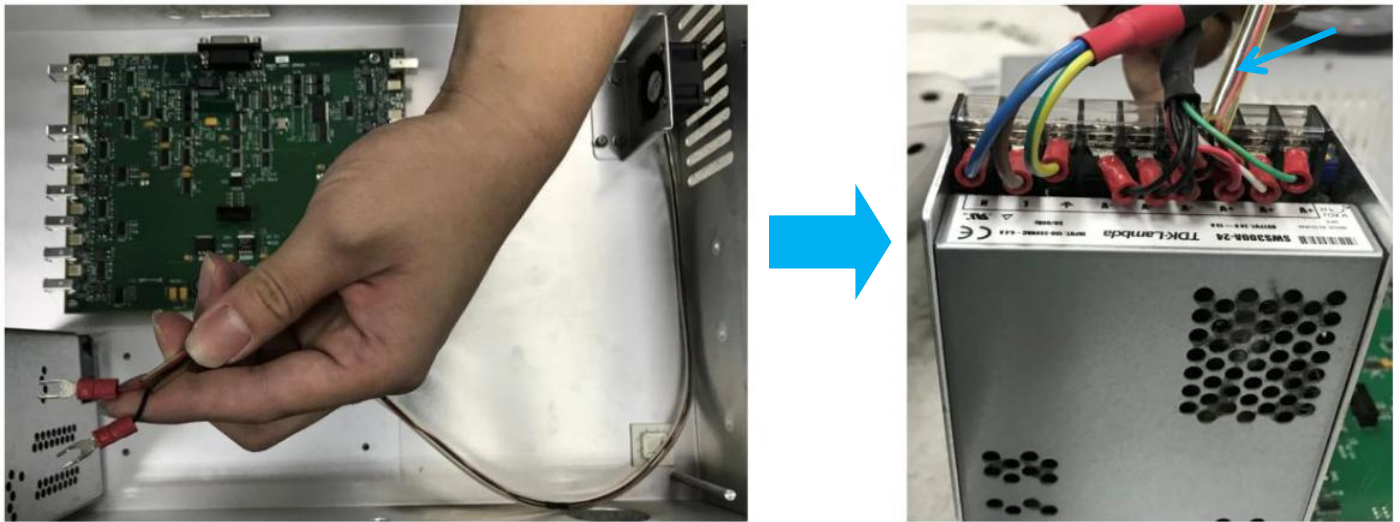


Figure 19 Ventilation Fan Power Cable Connection

Ventilation Fan Power Cable	NA	NA	Black	Red	NA	NA
Trigger Board Power Supply	-V	-V	-V	+V	+V	+V

Table 3

5. Flip the Trigger Board Tray. While attach trigger board power supply at bottom ,tighten 4 x Screws as below Figure 20

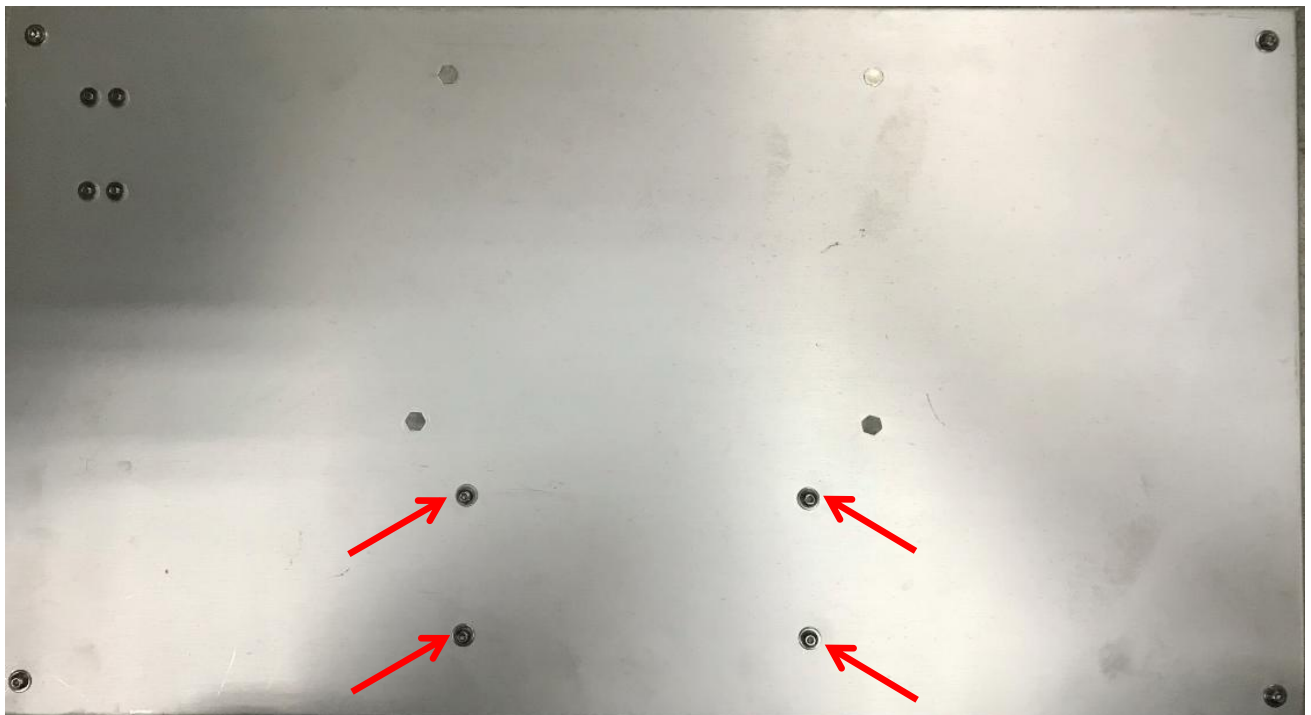


Figure 20 Trigger Board Power Assembly

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0009) Replacement Procedure	Effective Date	12 Sep 2017

6. Secure Ventilation Fan Power Cable with Cable Ties at Trigger Board Power Supply Convection Casing as below Figure 21

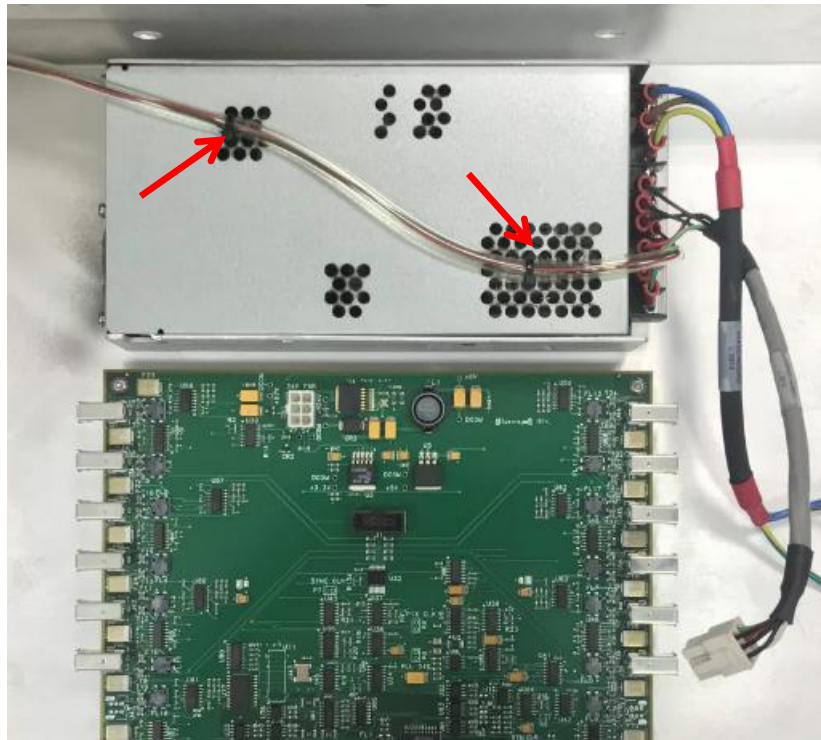


Figure 21

7. Assemble entire Trigger Board Tray to origin location. Tighten 5 x screws at Trigger Board Tray as below Figure 22

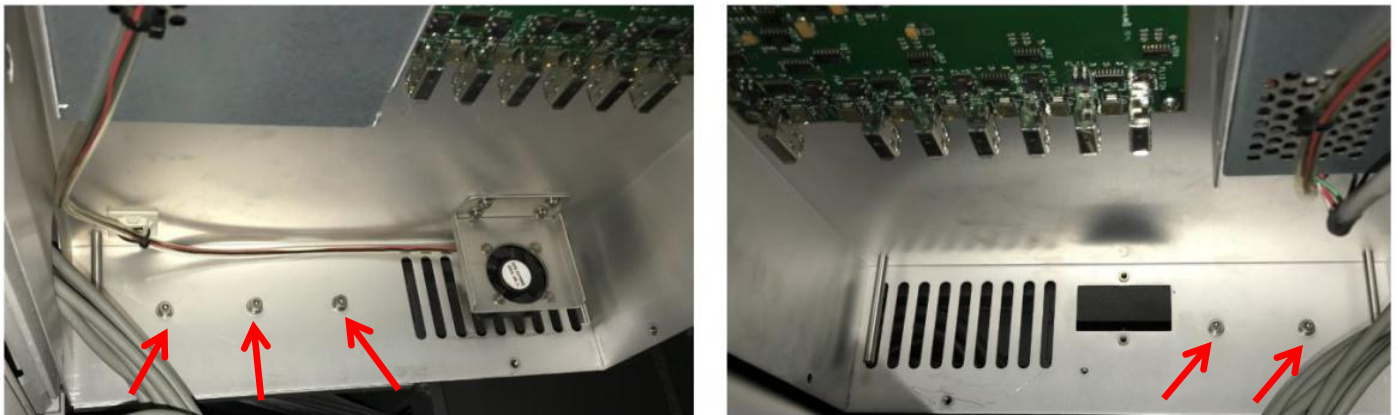


Figure 22 Trigger Board Tray assembly

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0009) Replacement Procedure	Effective Date	12 Sep 2017

18. Gently pull 14 x Fire Wire into both tray opening as below Figure 23

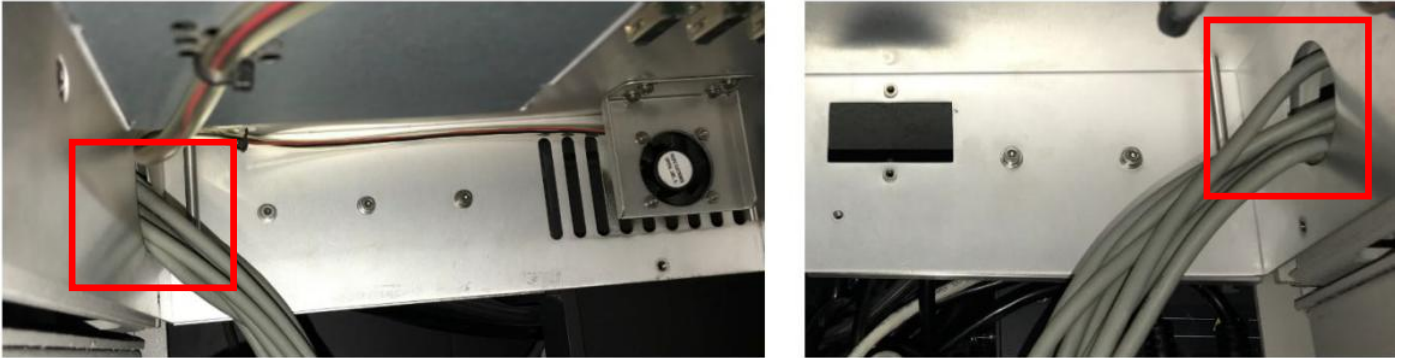


Figure 23 Retrieve 14 X Fire Wire

8. Gently connect the Power Switch by refer to below orientation to Trigger Board Tray. Connect the Power Cord as well as Figure 24

Remarks : May assemble from external



Figure 24 Power Switch assembly

9. Connect Power Switch Ground Cable into Power Switch Ground Slot as below Figure 25



Figure 25 Power Switch Ground Cable connection

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0009) Replacement Procedure	Effective Date	12 Sep 2017

10. Connect Power Switch Life & Neutral Cable into Power Switch by refer to below orientation. May refer to Figure 26

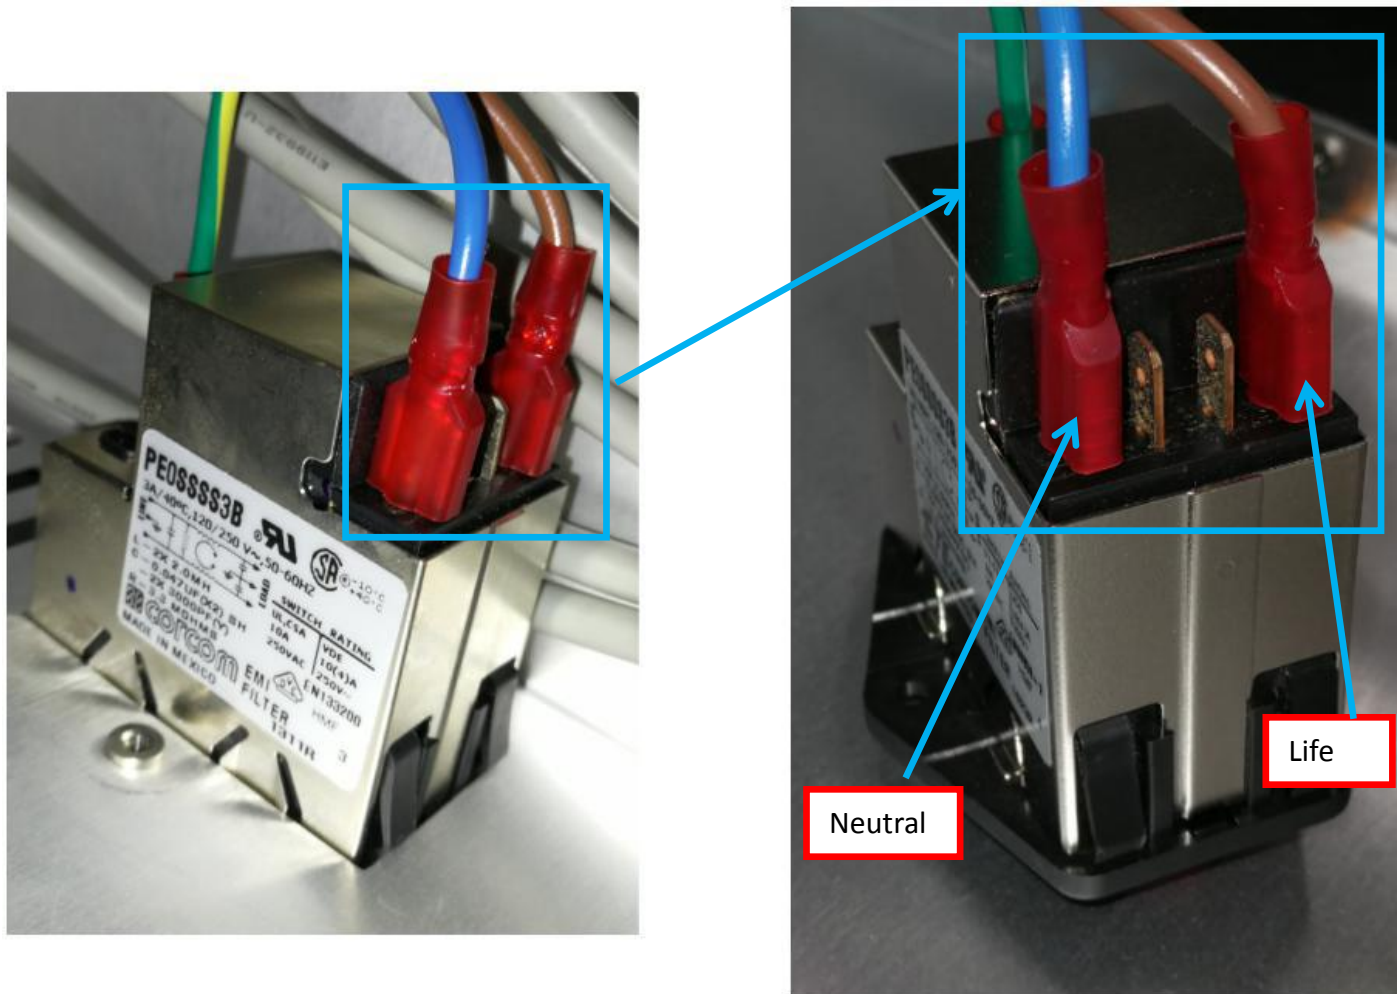


Figure 26 Power Switch Power Cable connection

11. Connect the CABLE, TRIGGER IO, DBN 15 (P/N, 4XASC-A039) cable into Trigger Board as Figure 27

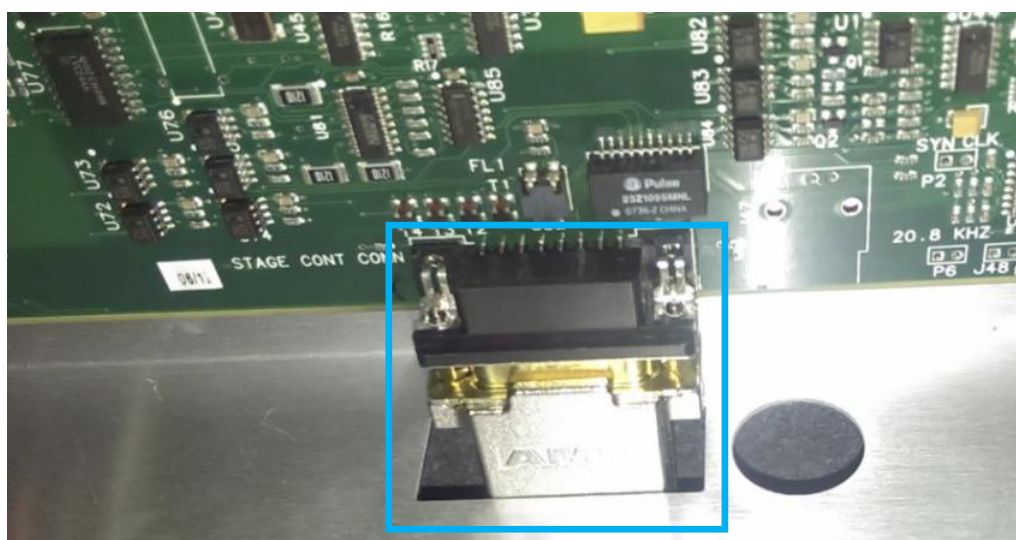


Figure 27 Trigger Board IO Cable connection

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0009) Replacement Procedure	Effective Date	12 Sep 2017

12. Connect Trigger Board Power Cable End Connector into Trigger Board (J424v Connector Slot) as
Figure 28

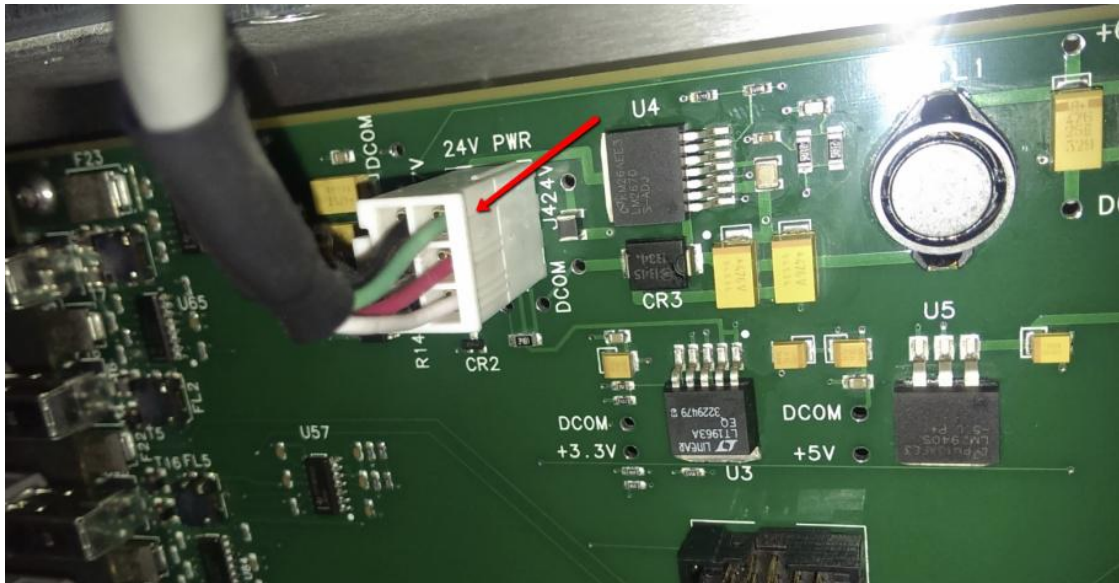


Figure 28 Trigger Board Power Connector

13. Connect 14 x Fire Wires into Trigger Board Fire Wire Port as below Figure 29

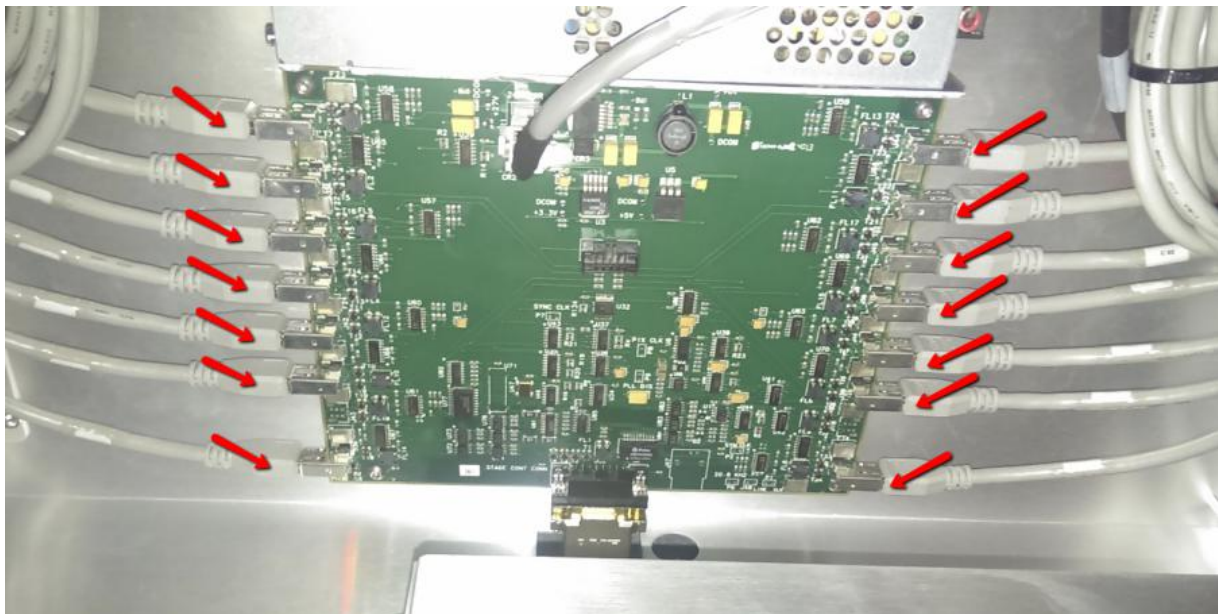


Figure 29 Fire Wire connection

	Work Instruction	Doc. Revision	00
	AXI V810 Trigger Board Power Supply (2140-0009) Replacement Procedure	Effective Date	12 Sep 2017

14. Assembly the TOP, TRIGGER BOX (P/N, 4XACM-007) back to origin position. Tighten 9 x Screws.

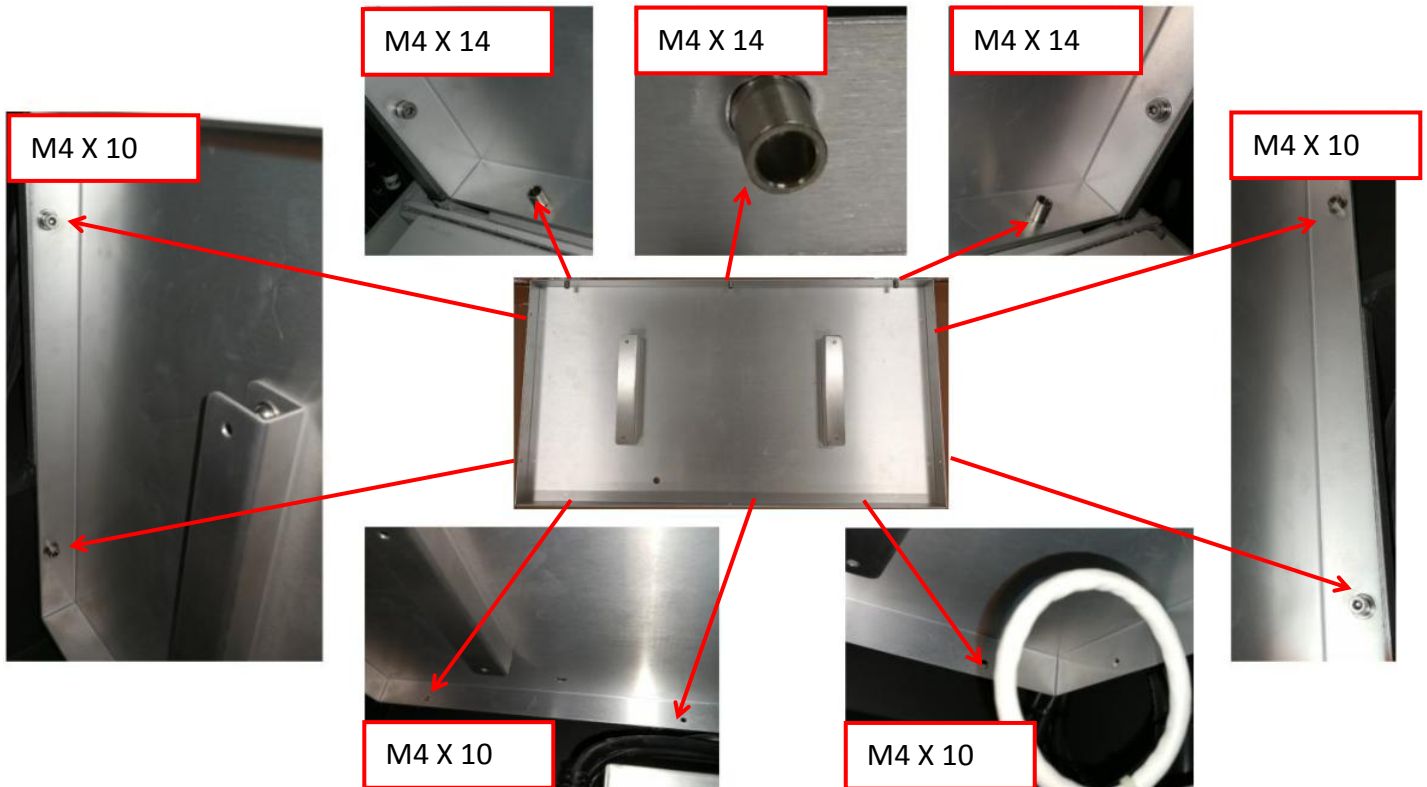


Figure 30 Trigger Board Tray Cover assembly

15. Power-up machine as usual.

16. Run 1 loop of C D & A