

	Work Instruction	Doc. Revision	00
	AXI V810 STD Relay Removal & Replacement Procedure	Effective Date	10 Mar 2016

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	10 Mar 2016	First Release	Tan Liang Kai

	Work Instruction	Doc. Revision	00
	AXI V810 STD Relay Removal & Replacement Procedure	Effective Date	10 Mar 2016

Content

Relay removal.....	3
Relay replacement.....	5

	Work Instruction	Doc. Revision	00
	AXI V810 STD Relay Removal & Replacement Procedure	Effective Date	10 Mar 2016

Relay removal

1. Close X-ray Source.Open Front Door.
2. Power off SSCA

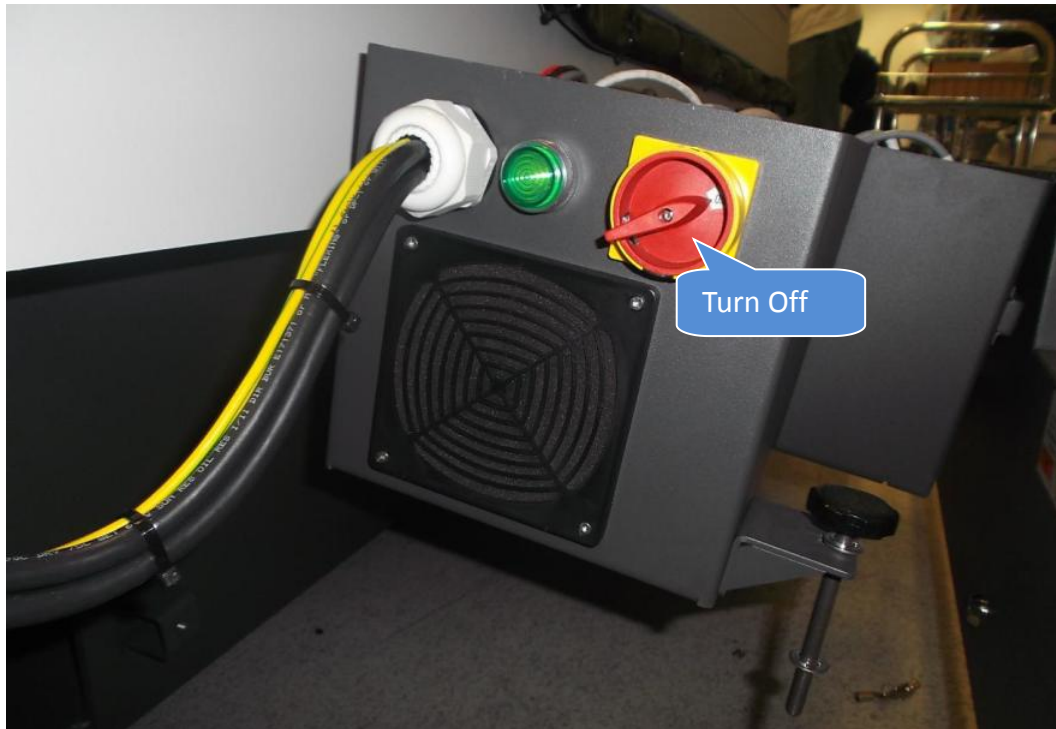


Figure 1 SSCA Power Off

3. Gently loosen Both Anchors as below Figure 2

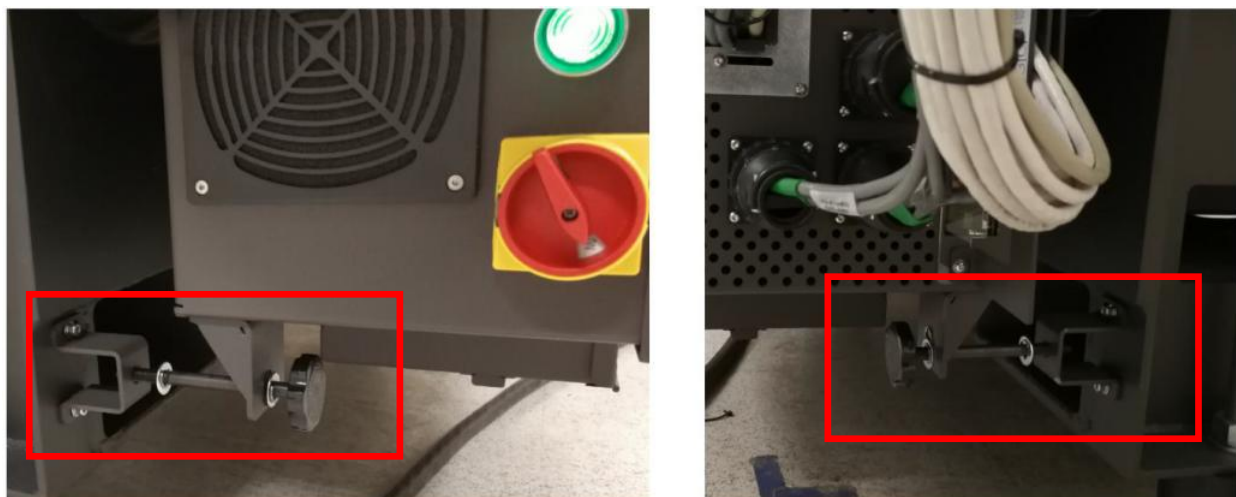


Figure 2 Anchors Release

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 STD Relay Removal & Replacement Procedure	Effective Date	10 Mar 2016

4. Extend SSCA Support Rod which locate underneath of SSCA as below Figure 4

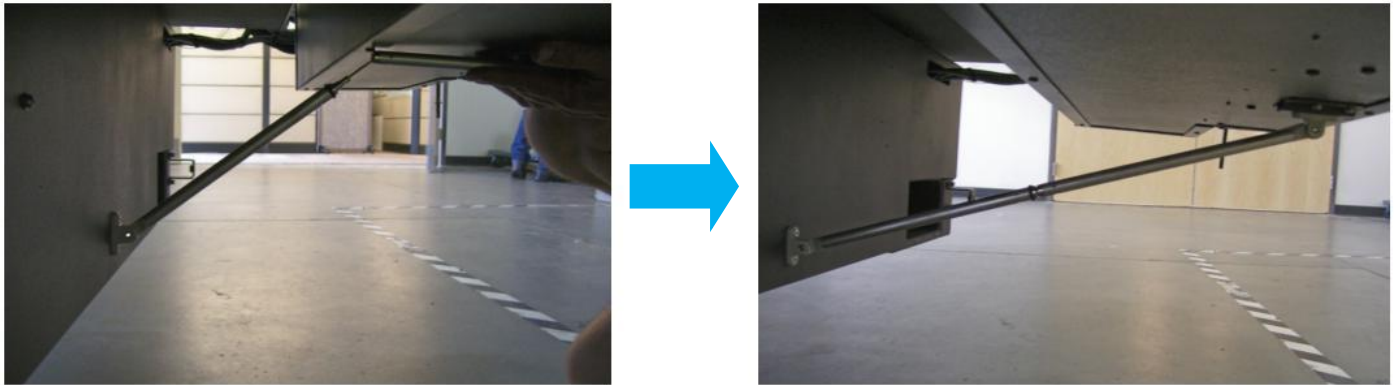


Figure 3 SSCA Support Rod Extend

5. Unlock SSCA and open up SSCA Cover
6. Unplug & remove Defective Relay as shown in Figure 4

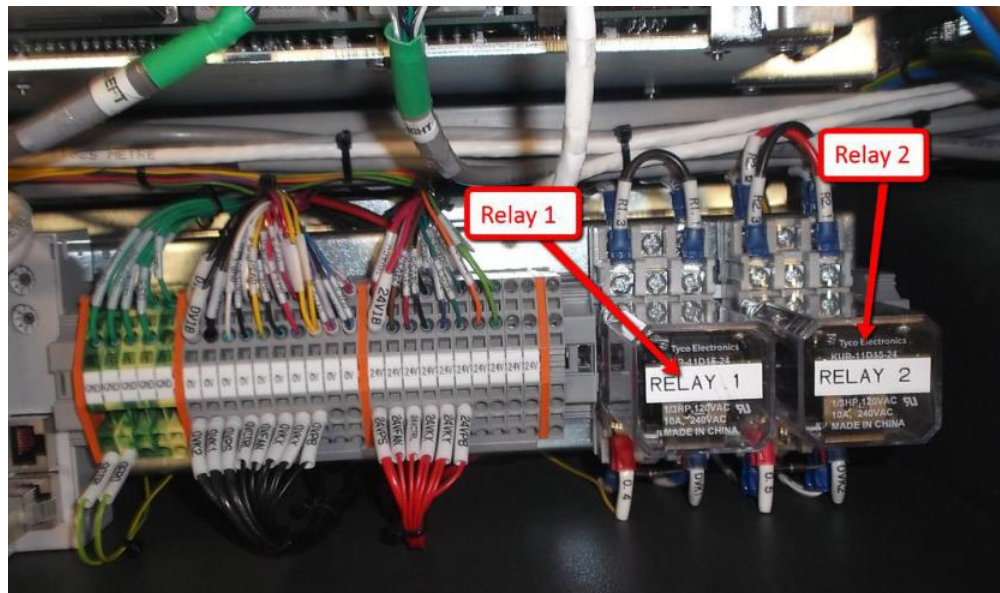


Figure 4 Relay Removal

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 STD Relay Removal & Replacement Procedure	Effective Date	10 Mar 2016

Relay replacement

- a) Relay 1 (P/N: 2292-0006): Conveyor Belt On/Off
 - b) Relay 2 (P/N: 2292-0006): Conveyor Belt Turning Direction
1. Assemble New Relay.
 2. Power on SSCA > Open V810 > Services > Subsystem Status & Control > Digital IO > Initialize

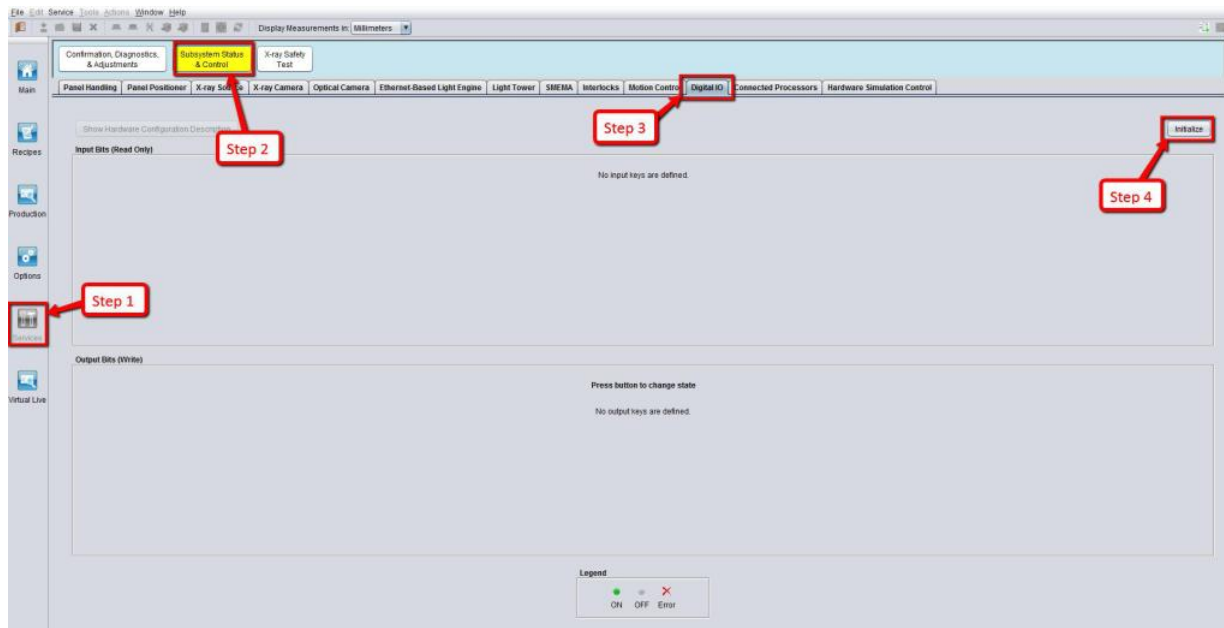


Figure 5 Digital IO

3. Open Front Access Door
4. Uncheck "Panel Clamps Closed" as shown in Figure 3. Visual Panel Clamper is under "Open" status.

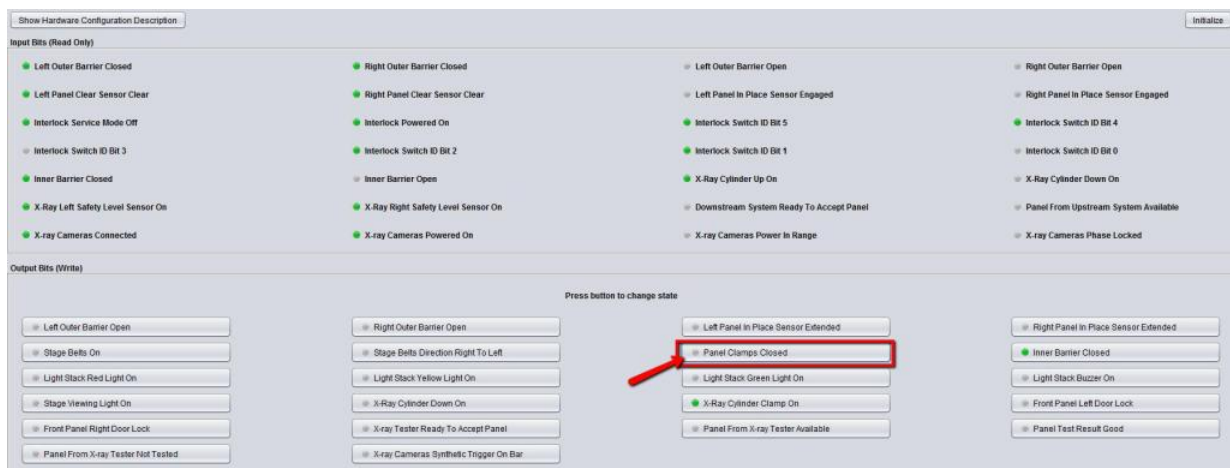


Figure 6 Clamper in "open" status

	Work Instruction	Doc. Revision	00
	AXI V810 STD Relay Removal & Replacement Procedure	Effective Date	10 Mar 2016

5. Enable “Stage Belts on” as shown in Figure 4. Visual check Belt Running Status at both rail



Figure 7 Stage Belt in “On” status

6. Enable “Stage Belts Direction Right To left” as shown in Figure 5. Visual check Belt Turning Direction.

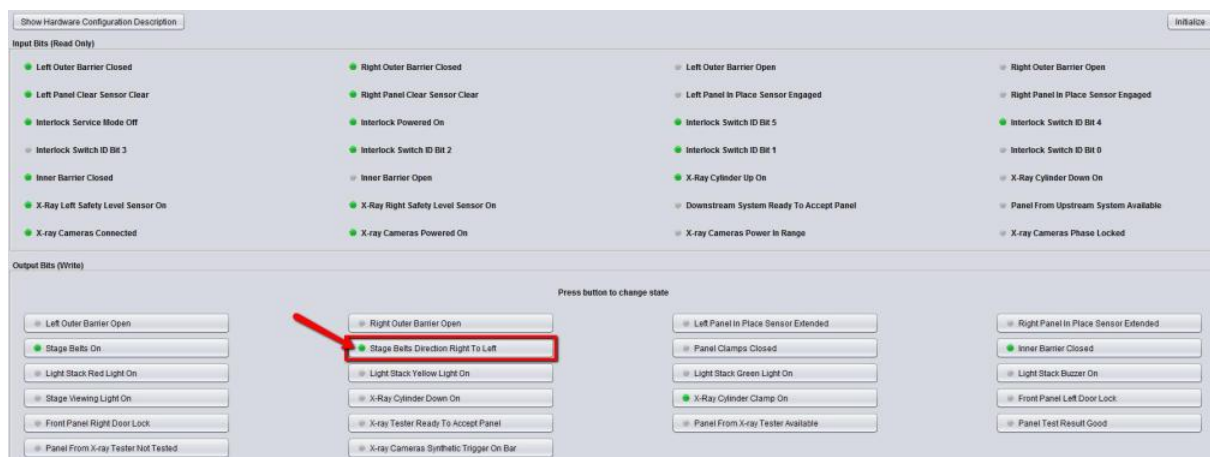


Figure 8 Belt Turning Direction (Anti-Clockwise)

7. Close Front Door > Open X-ray source > Run CD&A for 3 loops.