

	Work Instruction	Doc. Revision	00
	AXI V810 STD S1 Tube Power Supply Removal and Replacement Procedure	Effective Date	10 April 2017

This procedure is applicable to below models:

V810 STD	☒	S1	☐	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	10 April 2017	First Release	CHIN CHEE YAN

	Work Instruction AXI V810 STD S1 Tube Power Supply Removal and Replacement Procedure	Doc. Revision Effective Date	00 10 April 2017
---	--	---------------------------------	-----------------------------------

Content

Unload & Machine Power Off.....	3
Tube Power Supply Removal Procedure.....	3
Replacement Procedure.....	4
Validation Procedure.....	6

	Work Instruction	Doc. Revision	00
	AXI V810 STD S1 Tube Power Supply Removal and Replacement Procedure	Effective Date	10 April 2017

Unload & Machine Power Off

1. Unload board from machine if any.
2. Shut down machine as usual, may refer to procedure “AXI V810 Machine Shut Down Procedure”.
3. Switch “Off” SSCA and PDU.

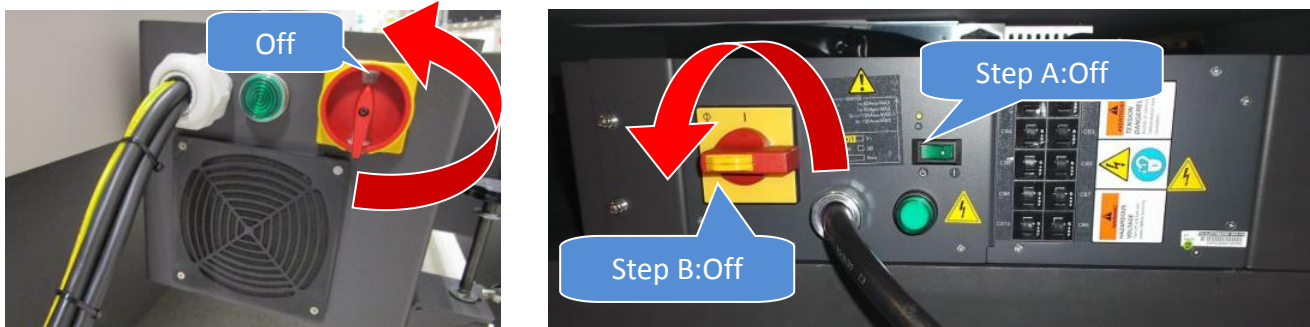


Figure 1 SSCA and PDU (Turn Off)

Tube Power Supply Removal Procedure

4. Open top server rack. Identify the power supply which locate as below Figure 2

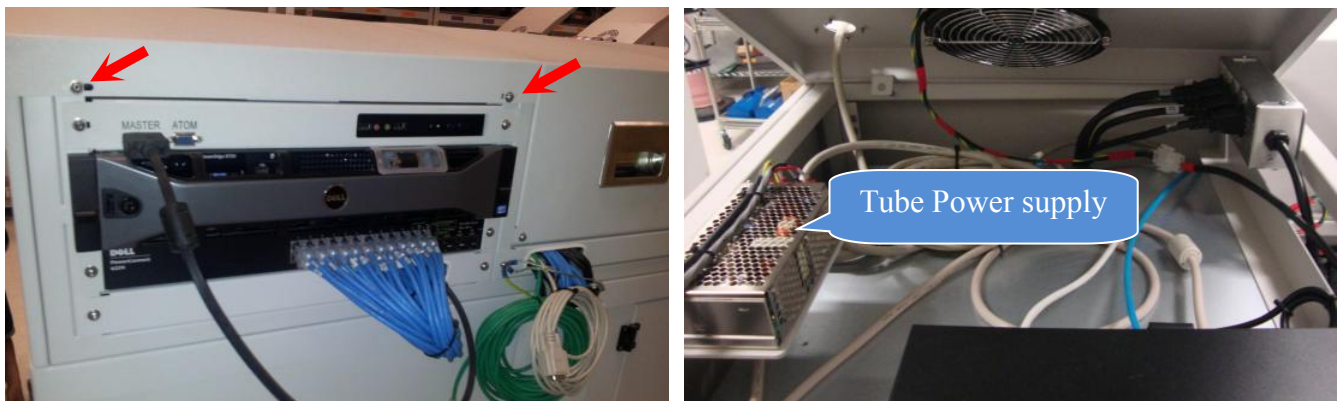


Figure 2 Tube Power Supply

5. Unscrew as shown and remove “AXI-IRP RACK SIDE COVER 1 ASSEMBLY” as below Figure 3

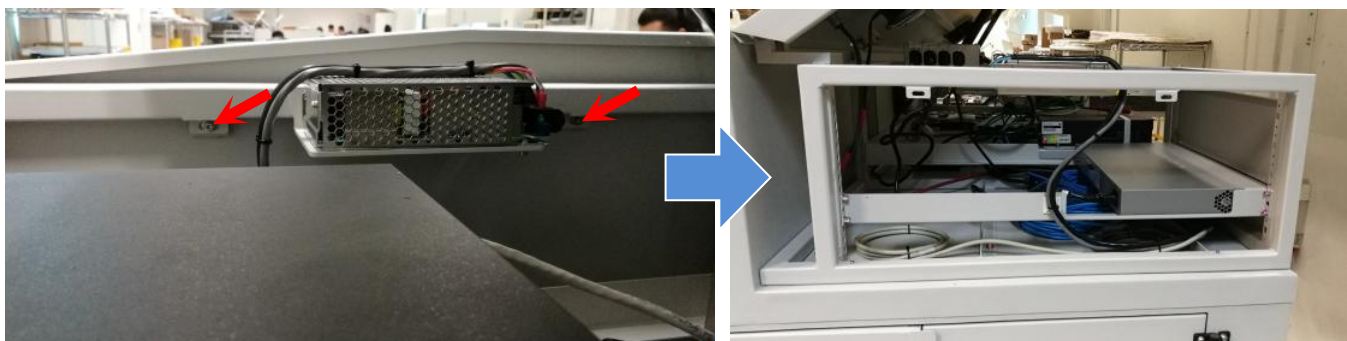


Figure 3 Remove side cover

	Work Instruction	Doc. Revision	00
	AXI V810 STD S1 Tube Power Supply Removal and Replacement Procedure	Effective Date	10 April 2017

6. Unscrew and disconnect cables as shown. Cut the cable ties and remove cables.

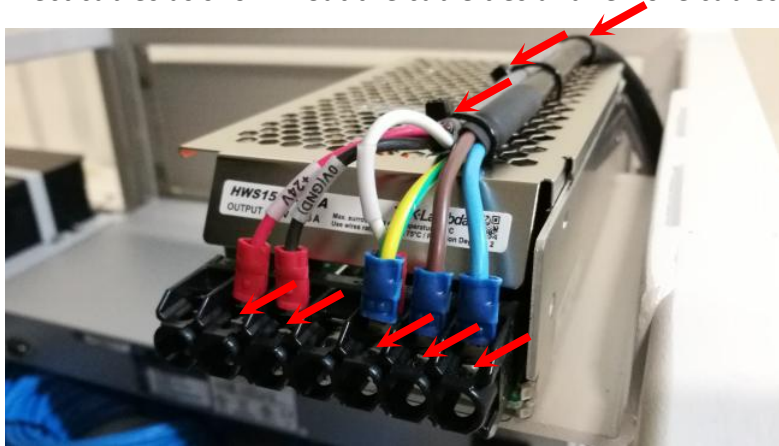


Figure 3 Disconnect wires

7. Unscrew and remove the power supply as below Figure 4



Figure 4 Power supply (Underneath)

Replacement Procedure

8. Prepare new part, POWER SUPPLY, HWS, 24VDC (P/N, 2140-0007) as shown.

Remark, Power Supply Body Marking shown "HWS150A-24/A"

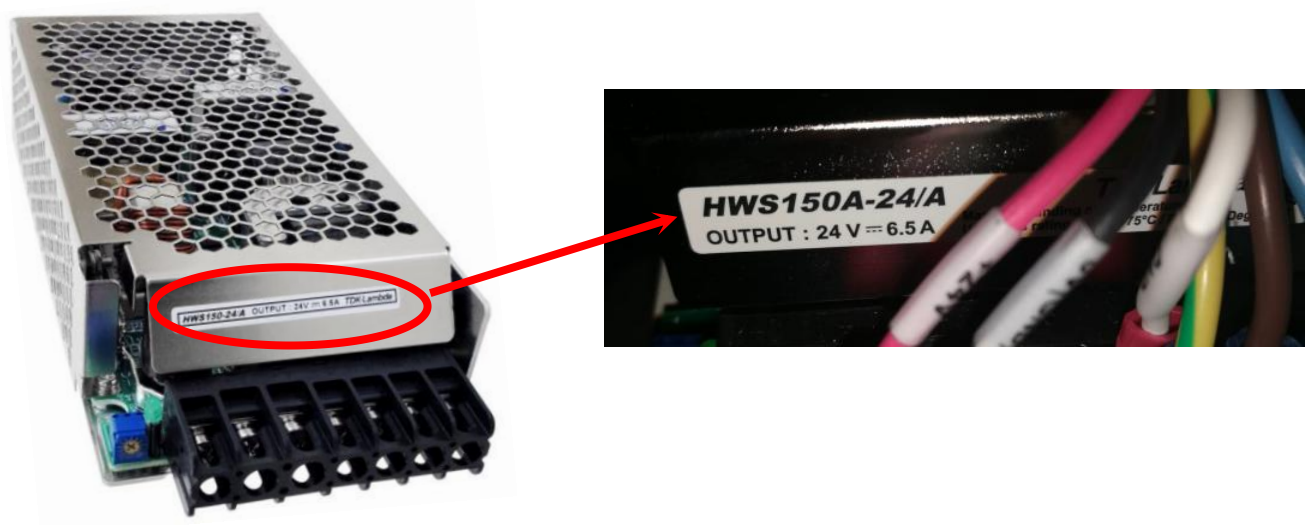


Figure 5 New power supply

9. Assemble power supply as below Figure 6.Tighten 2 x Screws.



Figure 6 Power supply Assembly

10. Connect the cable as Figure 7 by refer to Table 1. Perform minor Cable Dressing.

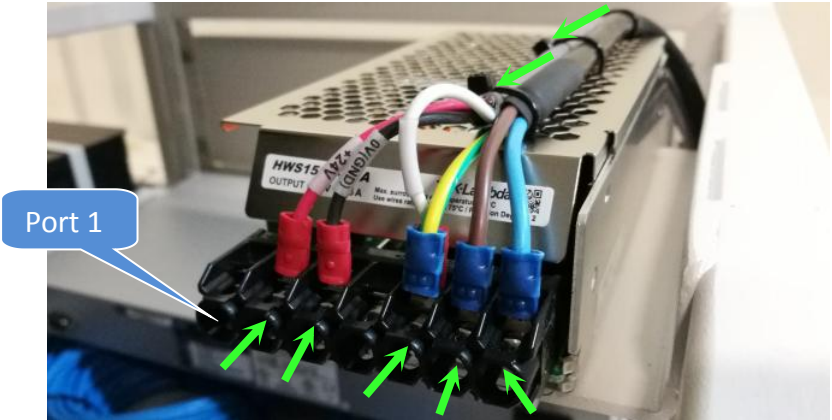


Figure 7 Wire connection

Port	1	2	3	4	5	6	7
Color Code		Red	Black		White & Green/Yellow	Brown	Blue
Marking		24vDC	0vDC		Ground	Life	Neutral

Table 1

11. Assemble the “AXI-IRP RACK SIDE COVER 1 ASSEMBLY” to origin position and tighten screws as below Figure 8



Figure 8 Side Cover Assembly

	Work Instruction	Doc. Revision	00
	AXI V810 STD S1 Tube Power Supply Removal and Replacement Procedure	Effective Date	10 April 2017

Validation Procedure

12. Prepare Multi-meter and power up machine as usual. May refer to procedure "AXI V810 Machine Start-up Procedure".
13. Use Multi-meter to probe at Pole 2 & 3 as shown. Use precision screw driver and gently adjust Potentiometer until 24vDC is indicated as below Figure 9

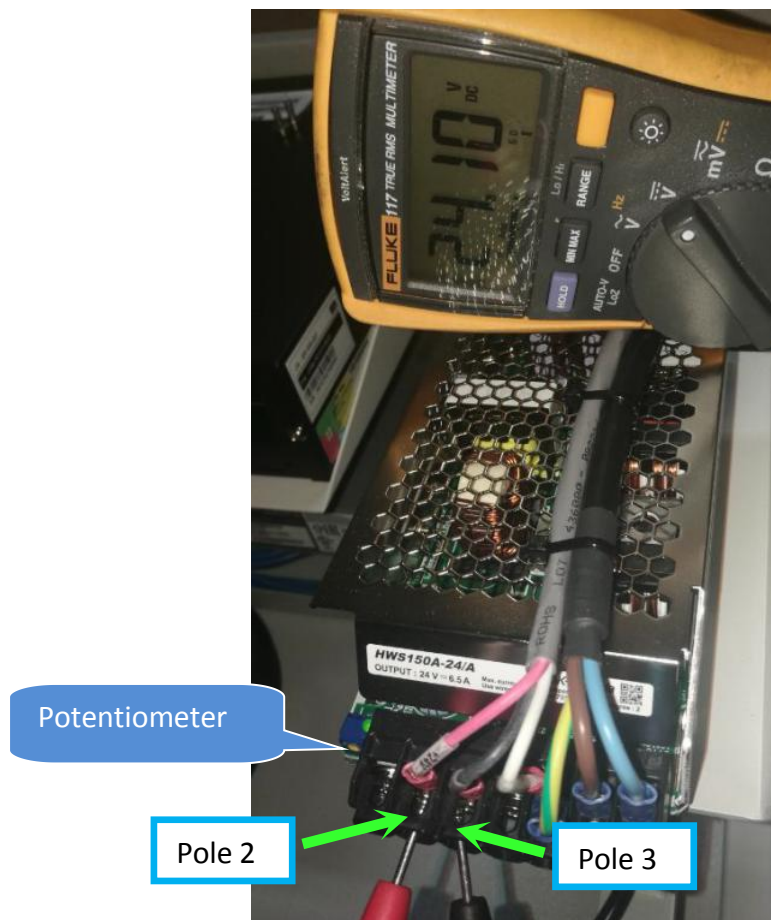


Figure 9 Power Supply Output Validation