

	Work Instruction	Doc. Revision	01
	AXI V810 PSP 2 Front & Rear Module R&R Procedure	Effective Date	2 Oct 2016

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	01 Dec 2015	First Release	ONG KEAN SHENG
01	2 Oct 2016	Template changes & Content update	ONG KEAN SHENG

	Work Instruction	Doc. Revision	01
	AXI V810 PSP 2 Front & Rear Module R&R Procedure	Effective Date	2 Oct 2016

Content

Front Module Removal Procedure	3
Front Module Replacement Procedure.....	5
Rear Module Removal Procedure.....	9
Rear Module Replacement Procedure.....	10

	Work Instruction	Doc. Revision	01
	AXI V810 PSP 2 Front & Rear Module R&R Procedure	Effective Date	2 Oct 2016

Front Module Removal Procedure

Steps:

1. Unload any board from machine and turn off X-ray source, open front access door.
2. Open the server rack and power off the POE switch main power as Figure 1.



Figure 1 POE SWITCH POWER SUPPLY

3. Disconnect the cables as illustrated at below Figure 2.

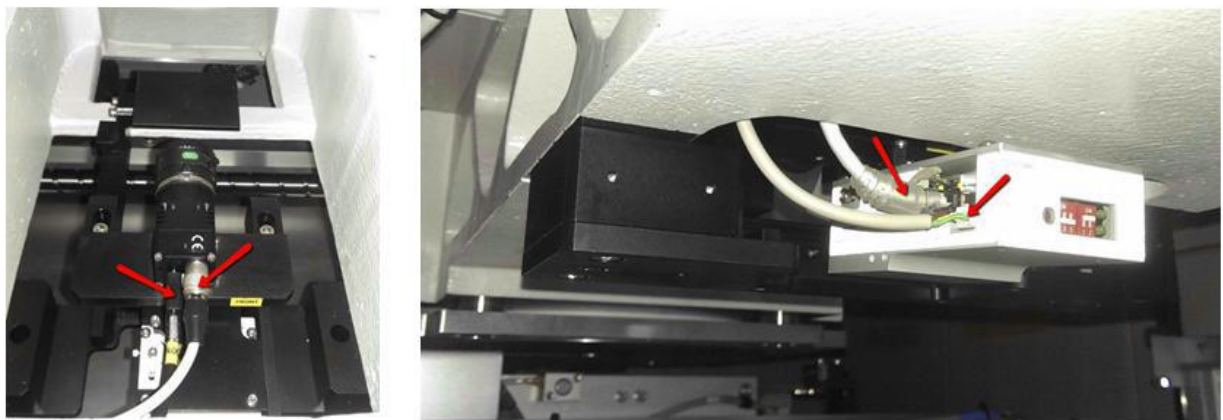


Figure 2 Cable Disconnect

4. Loosen 2x (M5 X30) screws and gently pull the mirror bracket towards front door direction. May refer to below Figure 3.

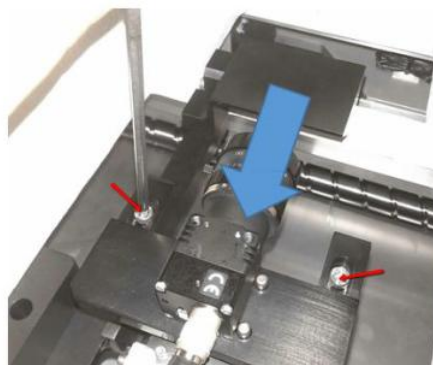


Figure 3 Mirror Bracket Retract

	Work Instruction	Doc. Revision	01
	AXI V810 PSP 2 Front & Rear Module R&R Procedure	Effective Date	2 Oct 2016

- Remove 4 x (M5X12) screws which shown at Figure 4 and remove Front PSP 2 Module from cast ion beam.

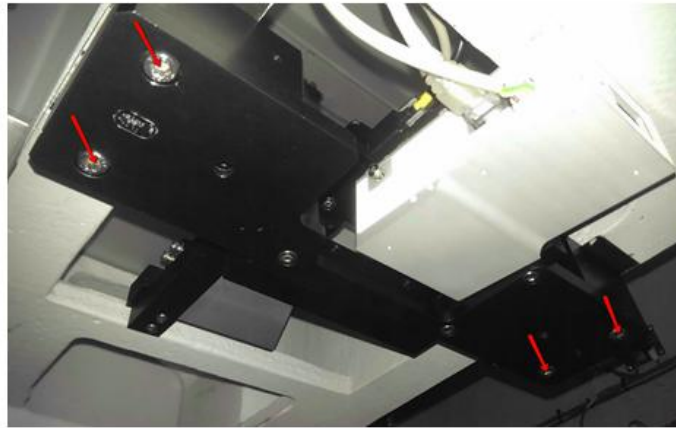


Figure 4 Module removal

Remarks: Hold on the module during removal process to avoid module slipped off issue as below Figure 5.

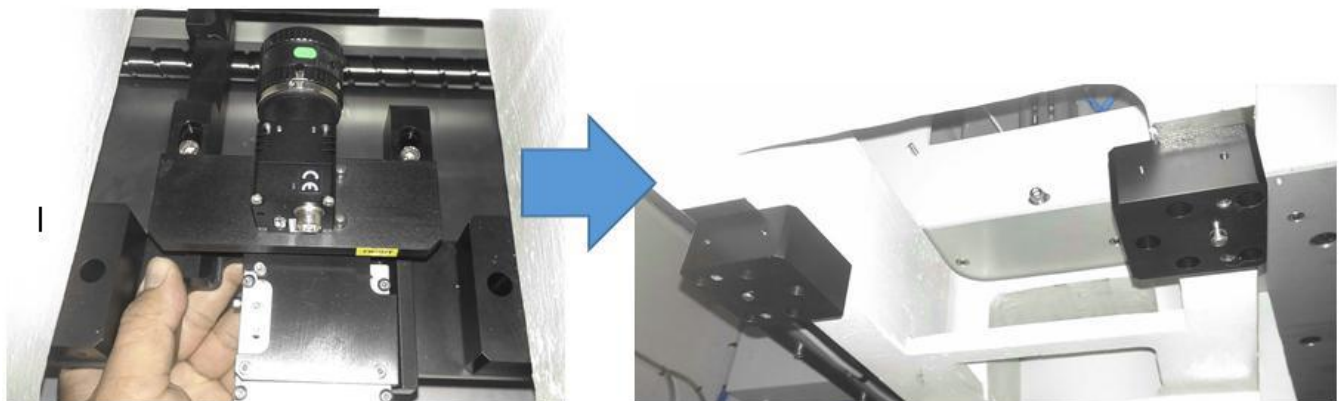


Figure 5 Module Removal (Pre-caution)

	Work Instruction	Doc. Revision	01
	AXI V810 PSP 2 Front & Rear Module R&R Procedure	Effective Date	2 Oct 2016

Front Module Replacement Procedure

Steps:

1. Counter check the Front Projector DIP Switch Setting is adjusted as below Figure 6.

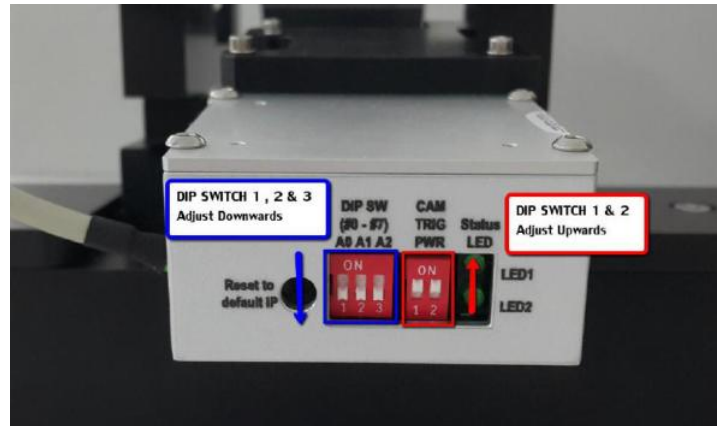


Figure 6 PSP 2 Front Projector DIP Switch DIP Switch Setting

2. Remove the camera lens cover as below Figure 7.

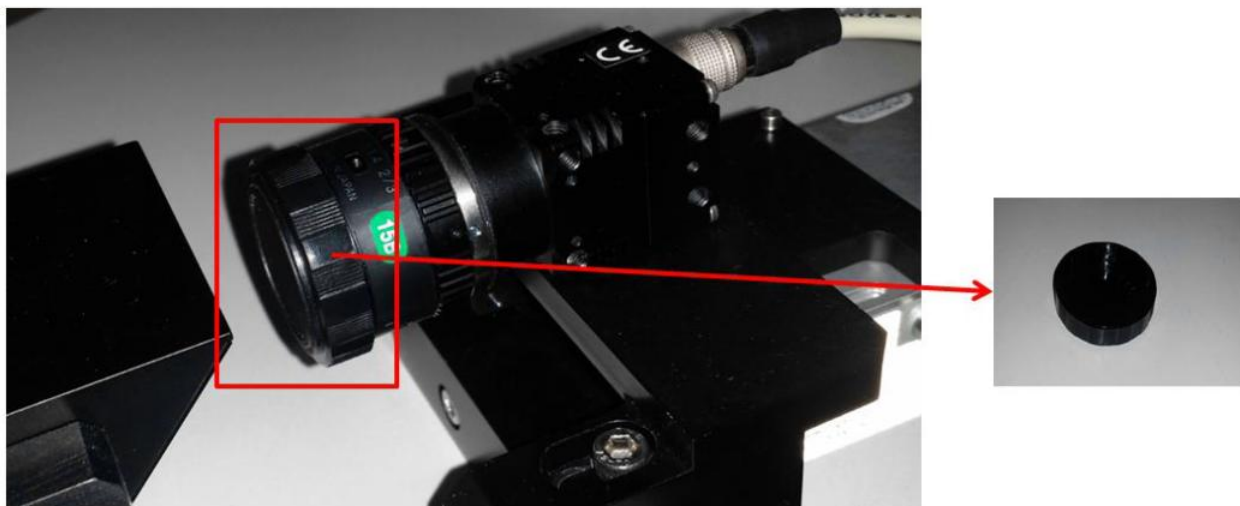


Figure 7 Camera Lens Cover

3. Remove blue adhesive protector from Mirror block as Figure 8.

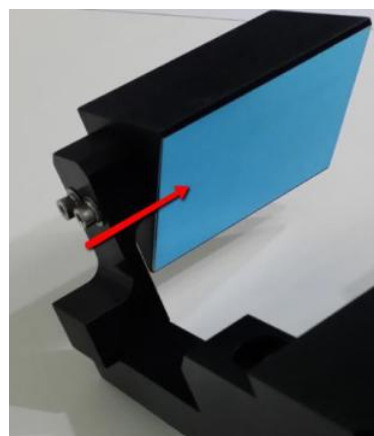


Figure 8 Blue Adhesive Protector Removal

	Work Instruction	Doc. Revision	01
	AXI V810 PSP 2 Front & Rear Module R&R Procedure	Effective Date	2 Oct 2016

4. Assemble the Front PSP 2 Module to the spacer as below Figure 8. Tighten up 4 x (M5 X 12).

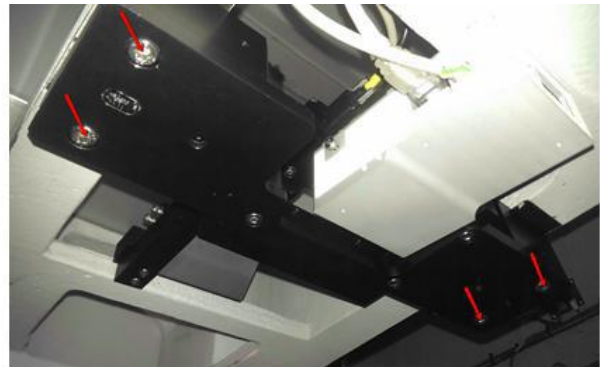


Figure 9 PSP 2 Module Replacement

Remarks: Check any gapping after module assembly as Figure 10.

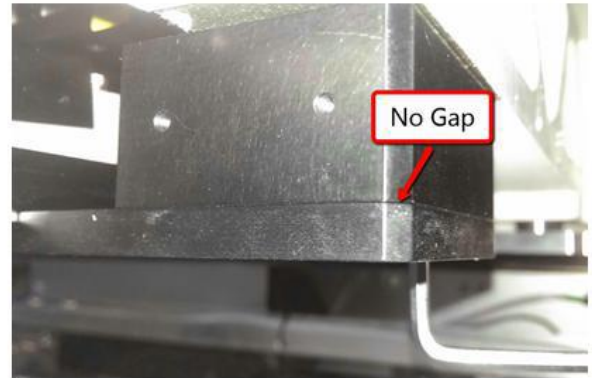
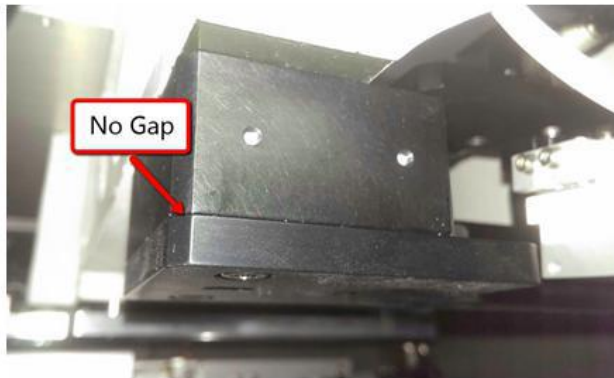


Figure 10 PSP 2 Module Assembly

5. Connect back all cable as below Figure 11.

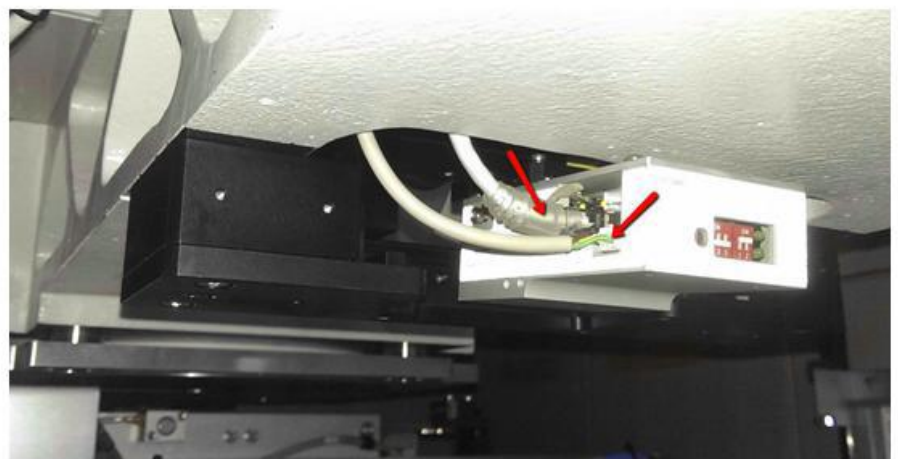
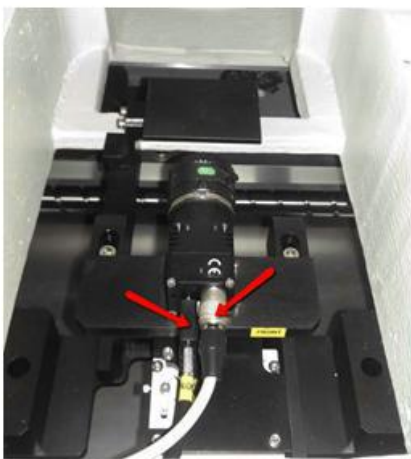


Figure 11 Cable Connection

	Work Instruction	Doc. Revision	01
	AXI V810 PSP 2 Front & Rear Module R&R Procedure	Effective Date	2 Oct 2016

6. Open the server rack and Turn on POE switch main power as Figure 12.



Figure 12 POE Switch Power

7. Perform Ping Test by key in "Ping 123.123.123.100 "at CMD. May refer to below Figure 13. Check any return value.

```

Command Prompt

C:\Users\yew-chun.wong>ping 123.123.123.100

Pinging 123.123.123.100 with 32 bytes of data:
Reply from 123.123.123.100: bytes=32 time<1ms TTL=128
Reply from 123.123.123.100: bytes=32 time<1ms TTL=128
Reply from 123.123.123.100: bytes=32 time<1ms TTL=128
Reply from 123.123.123.100: bytes=32 time<1ms TTL=128

Ping statistics for 123.123.123.100:
    Packet: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

```

Figure 13 Front Projector IP

	Work Instruction	Doc. Revision	01
	AXI V810 PSP 2 Front & Rear Module R&R Procedure	Effective Date	2 Oct 2016

8. Open V810 GUI and Click Initialize at Optical camera tab as below Figure 14.

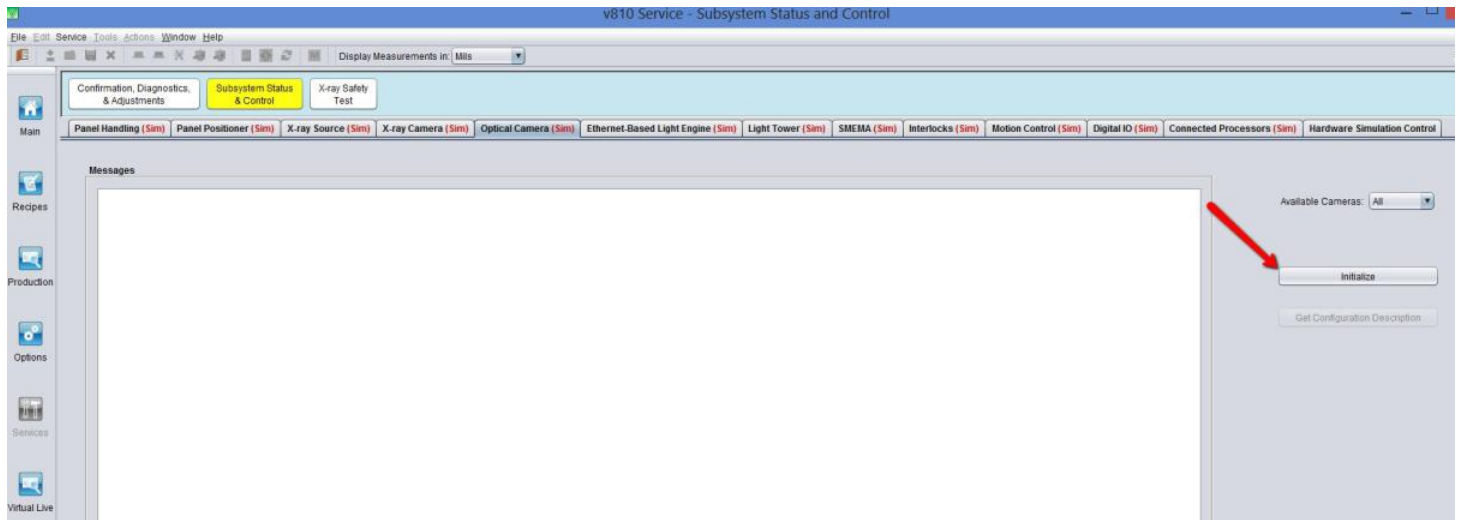


Figure 14 Optical Camera

9. Click Initialize at Ethernet-Based Light Engine as below Figure 15.

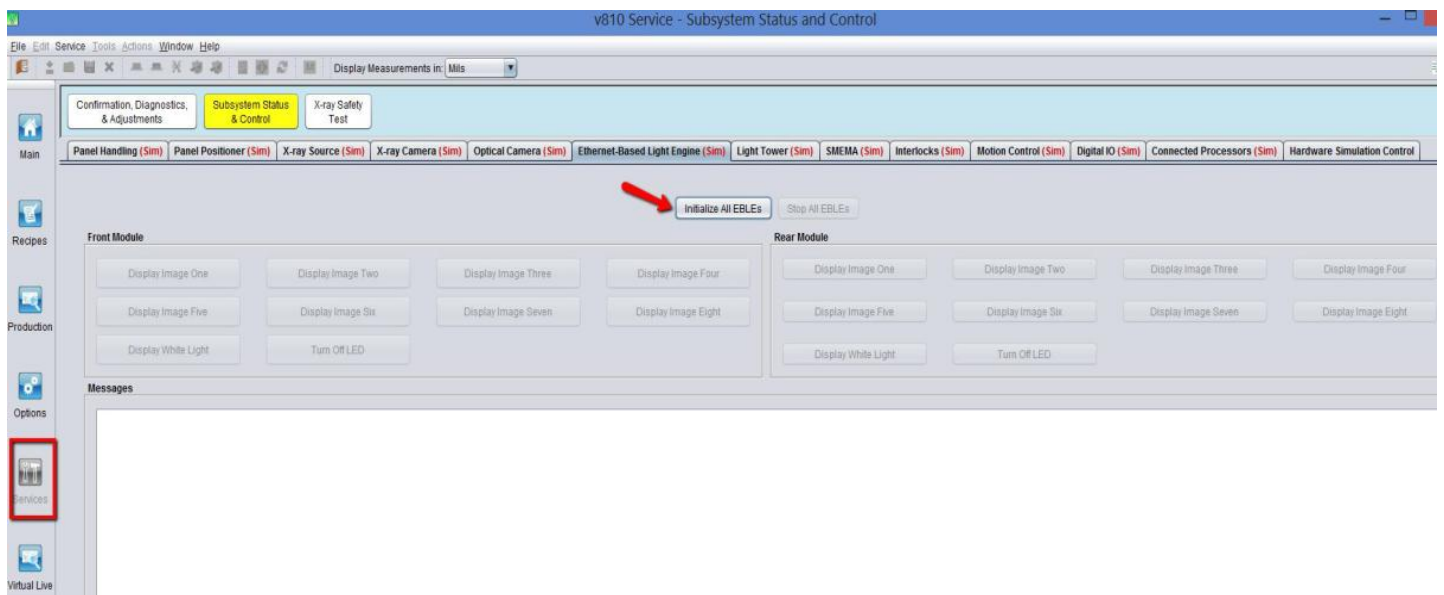


Figure 15 EBLE GUI

	Work Instruction	Doc. Revision	01
	AXI V810 PSP 2 Front & Rear Module R&R Procedure	Effective Date	2 Oct 2016

Rear Module Removal Procedure

Steps:

1. Unload any board from machine and turn off X ray Source.
2. Open all door access (Front, Side & Rear)
3. Open the server rack and power off the POE switch main power as Figure 16.



Figure 16 POE SWITCH POWER SUPPLY

4. Remove 4 x (M5 X12) screws which shown at Figure 17 and remove Rear PSP 2 Module from cast ion beam.



Figure 17 Module Removal

Remarks: Hold on the module during removal process to avoid module slipped off issue.

	Work Instruction	Doc. Revision	01
	AXI V810 PSP 2 Front & Rear Module R&R Procedure	Effective Date	2 Oct 2016

- Remove all cable as Illustrated at below Figure 18.

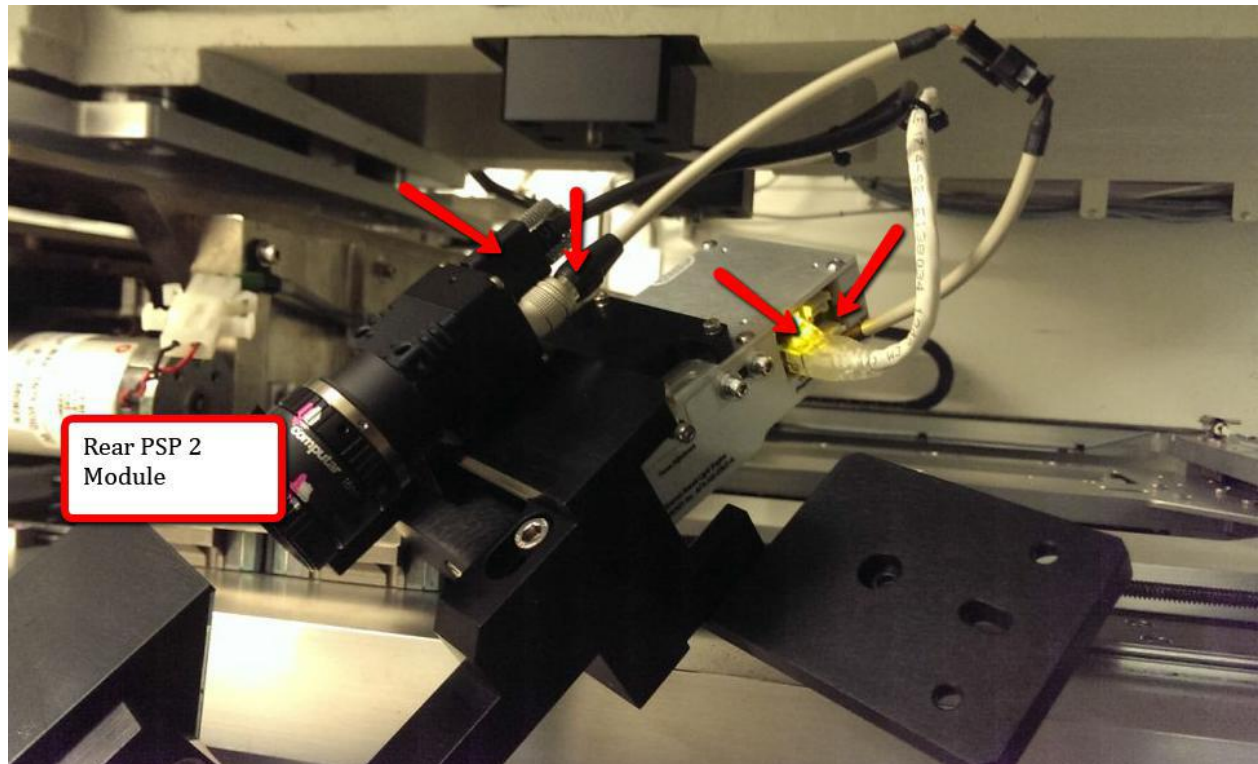


Figure 18 Cable Disconnection

Rear Module Replacement Procedure

Steps:

- Counter check the Rear Projector DIP Switch Setting is adjusted as below Figure 19.

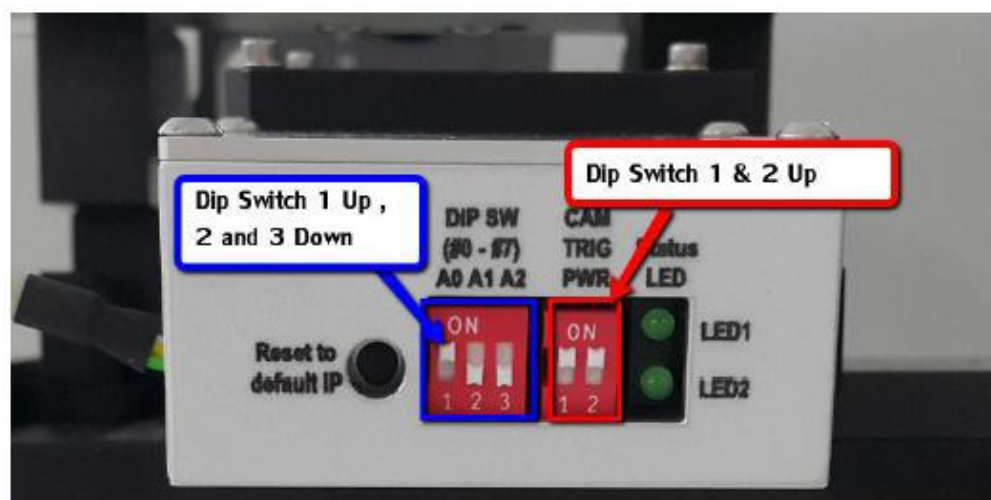


Figure 19 PSP 2 Rear Projector DIP Switch DIP Switch Setting

	Work Instruction	Doc. Revision	01
	AXI V810 PSP 2 Front & Rear Module R&R Procedure	Effective Date	2 Oct 2016

- Remove the camera Lens Cover as Figure 20.

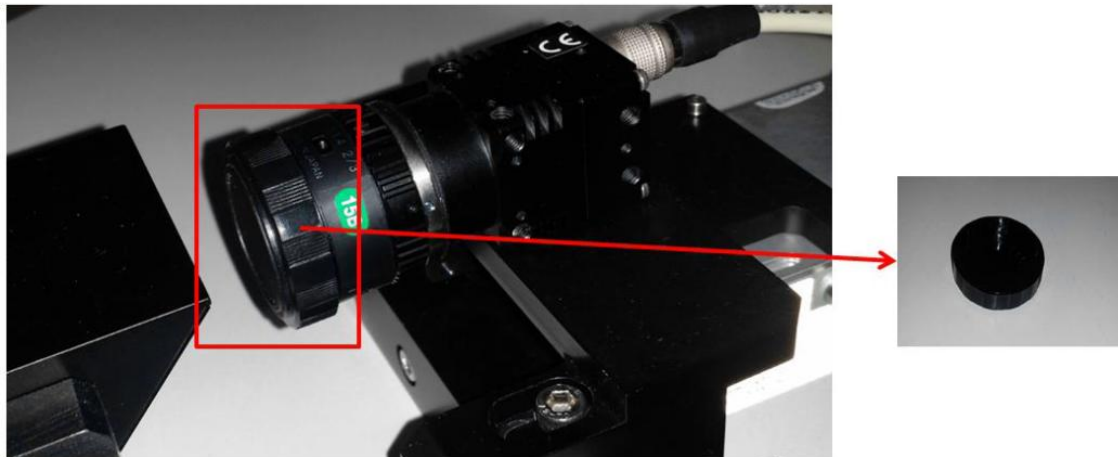


Figure 20 Camera Lens Cover Removal

- Remove blue adhesive protector from Mirror block as Figure 21.

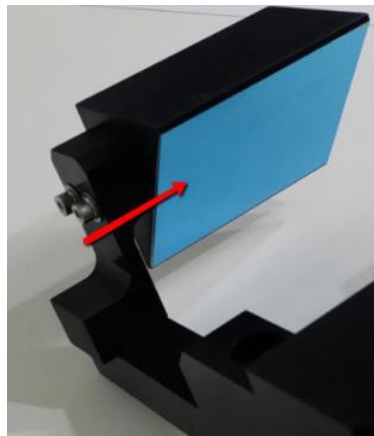


Figure 21 Blue Adhesive Protector Removal

- Connect all cable assembly at the rear projector module as below Figure 22.

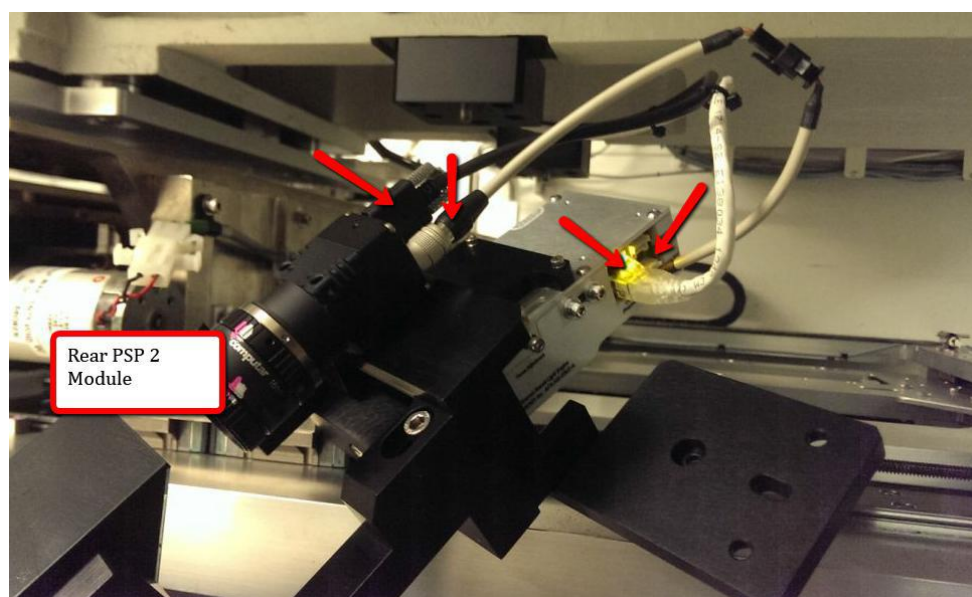


Figure 22 Cable Connection

	Work Instruction	Doc. Revision	01
	AXI V810 PSP 2 Front & Rear Module R&R Procedure	Effective Date	2 Oct 2016

5. Assemble the Rear PSP 2 Module to the spacer as below Figure 23. Tighten up 4 x (M5 x 12) screws.



Figure 23 PSP 2 Module Replacement

Remarks: Check any gaping after module assembly as below Figure 24.



Figure 24 PSP 2 Module Assembly


6. Properly manage cable (Cat 5 cable, Camera USB Cable & Triggering cable) length by refer to below criteria :
- **No obstacle at between of Optical camera and Mirror**
 - **No Sagging**
7. Open the server rack and Turn on POE switches main power. May refer to below Figure 25.



Figure 25 POE SWITCH POWER SUPPLY

ViTrox	Work Instruction	Doc. Revision	01
	AXI V810 PSP 2 Front & Rear Module R&R Procedure	Effective Date	2 Oct 2016

8. Perform Ping Test by key in “Ping 123.123.123.101 “at CMD. May refer to below Figure 26.Check any return value.

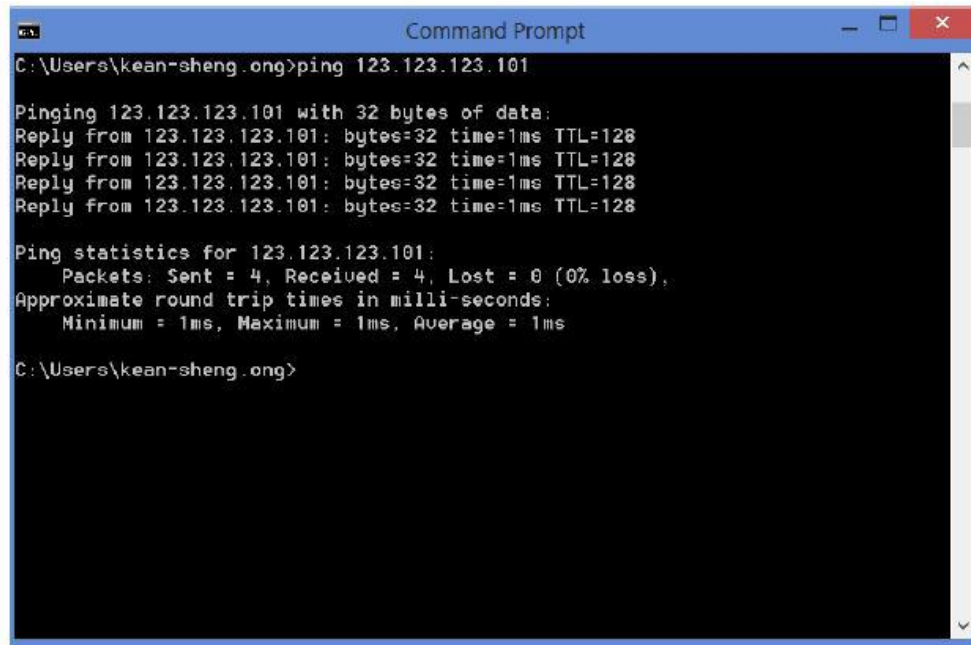

```

C:\Users\kean-sheng.ong>ping 123.123.123.101

Pinging 123.123.123.101 with 32 bytes of data:
Reply from 123.123.123.101: bytes=32 time=1ms TTL=128
Reply from 123.123.123.101: bytes=32 time=1ms TTL=128
Reply from 123.123.123.101: bytes=32 time=1ms TTL=128
Reply from 123.123.123.101: bytes=32 time=1ms TTL=128

Ping statistics for 123.123.123.101:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 1ms, Maximum = 1ms, Average = 1ms

C:\Users\kean-sheng.ong>

```

Figure 26 Rear Projector IP

9. Open V810 GUI and Click Initialize at Optical camera tab as below Figure 27.

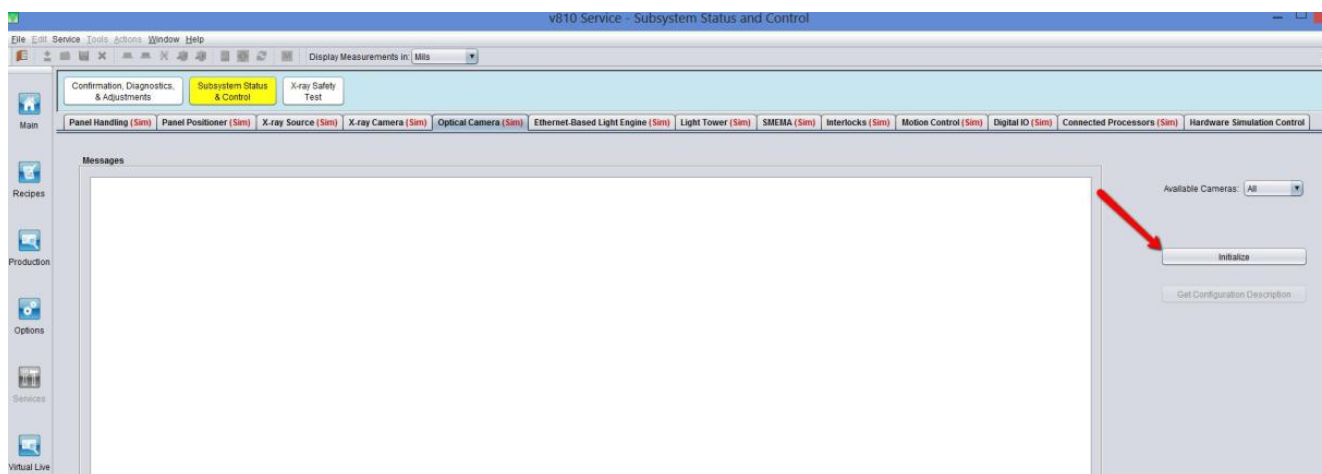


Figure 27 Optical Camera Intialize

	Work Instruction	Doc. Revision	01
	AXI V810 PSP 2 Front & Rear Module R&R Procedure	Effective Date	2 Oct 2016

10. Click Initialize at Ethernet-Based Light Engine as below Figure 28.

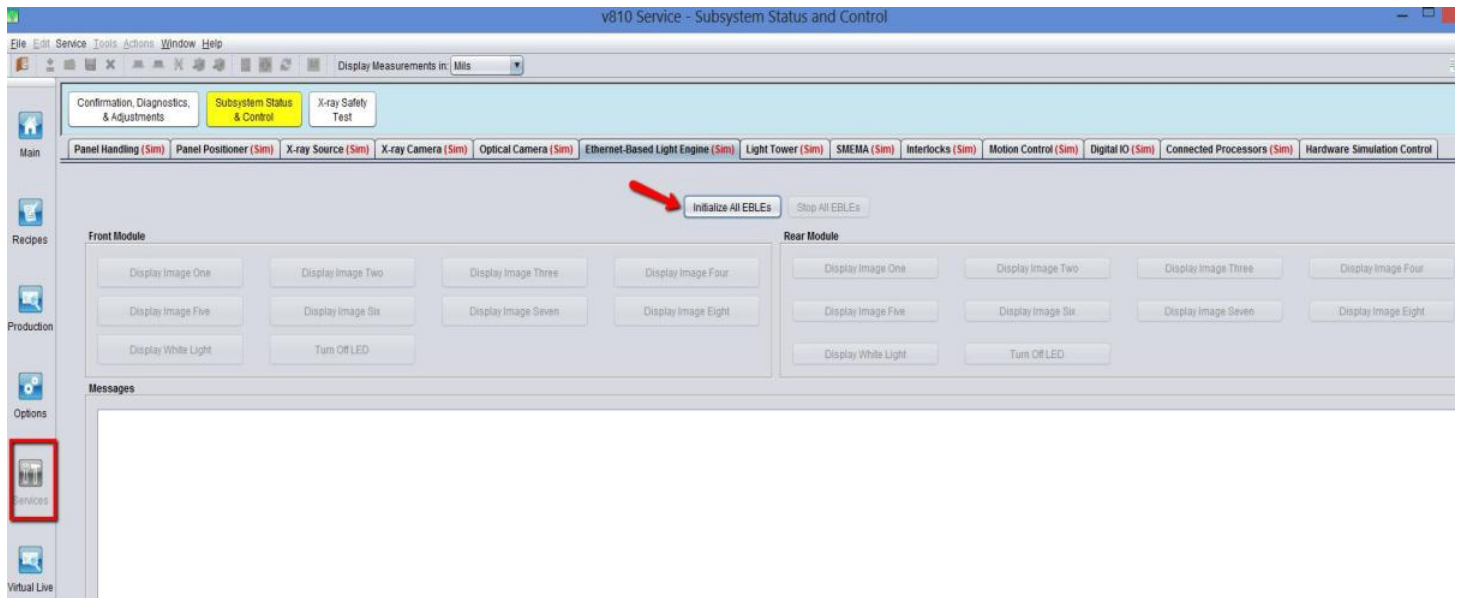


Figure 28 EBLE GUI