

	Work Instruction	Doc. Revision	01
	AXI V810i ART Server Kit On-Field Setup Procedure (machine purchase option)	Effective Date	17 Oct 2023

This procedure is applicable to below models:

Machine Model	Server Option		
	S1	S2	S3
V810 / V810i STD		√	√
V810 / V810i XXL		√	√
V810 / V810i S2EX		√	√
V810 / V810i XLT		√	√
V810 / V810i XLTM		√	√

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	02 Oct 2020	First Release	Chin Chee Yan
01	17 Oct 2023	Remove teaming	Clement Chong

	Work Instruction	Doc. Revision	01
	AXI V810i ART Server Kit On-Field Setup Procedure (machine purchase option)	Effective Date	17 Oct 2023

Content

ART SERVER RACK SITE PREPARATION 3

Floor Plan3

V810 STD S23

V810 XXL / XLT4

V810 S2EX4

3DCT SERVER RACK ON FIELD SET UP5

	Work Instruction AXI V810i ART Server Kit On-Field Setup Procedure (machine purchase option)	Doc. Revision	01
		Effective Date	17 Oct 2023

ART SERVER RACK SITE PREPARATION

Floor Plan

ART Server Rack Overall Dimension - 600mm (width) x 800mm (length) x 600mm (height).

Recommended Server Rack Placement - Left Side of V810 Equipment

May refer to below floor where cater for all model requirement :

V810 STD S2

V810 STD S2 require a minimum area of 3.5 by 3.7 meters (9 by 12 feet) as below floor plan.

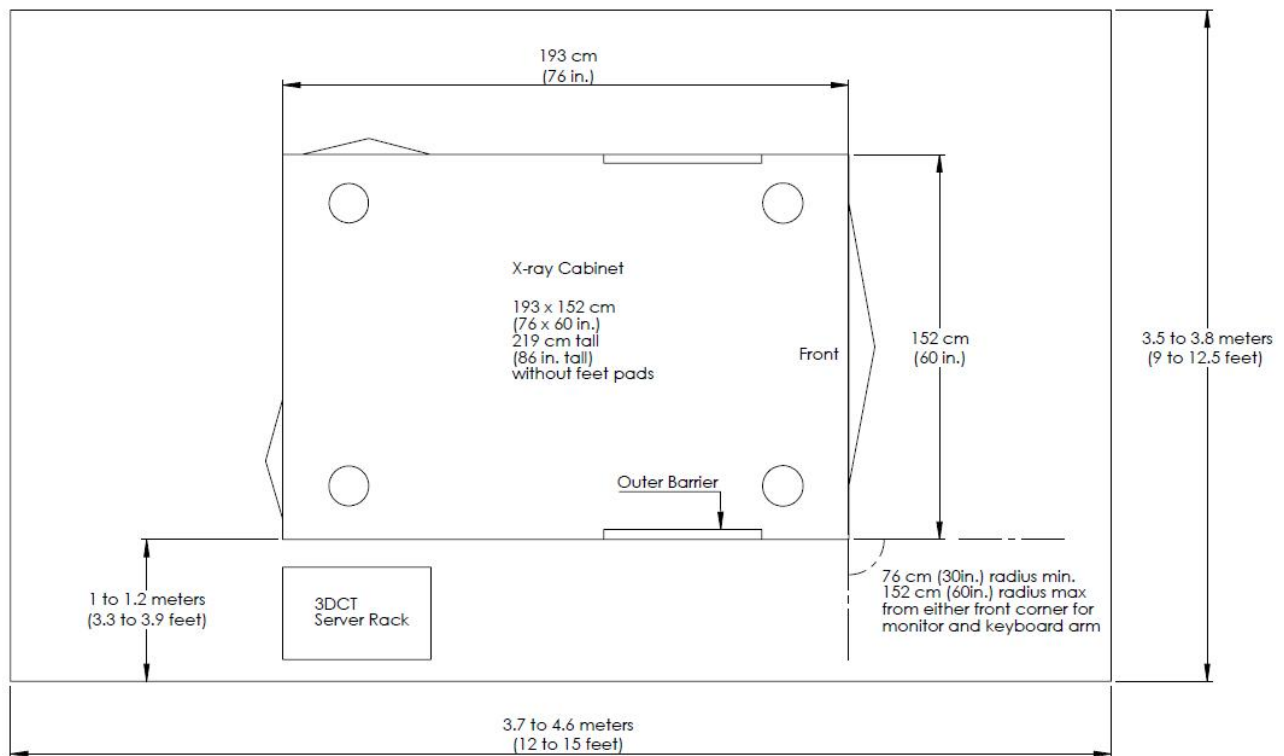


Figure 1: ART Server floor plan for V810 Std S2 System

	Work Instruction AXI V810i ART Server Kit On-Field Setup Procedure (machine purchase option)	Doc. Revision	01
		Effective Date	17 Oct 2023

V810 XXL / XLT

V810 XXL S2/XLT require a minimum area of 4.2 by 4.8 meters (13.8 by 15.7 feet) as below floor plan.

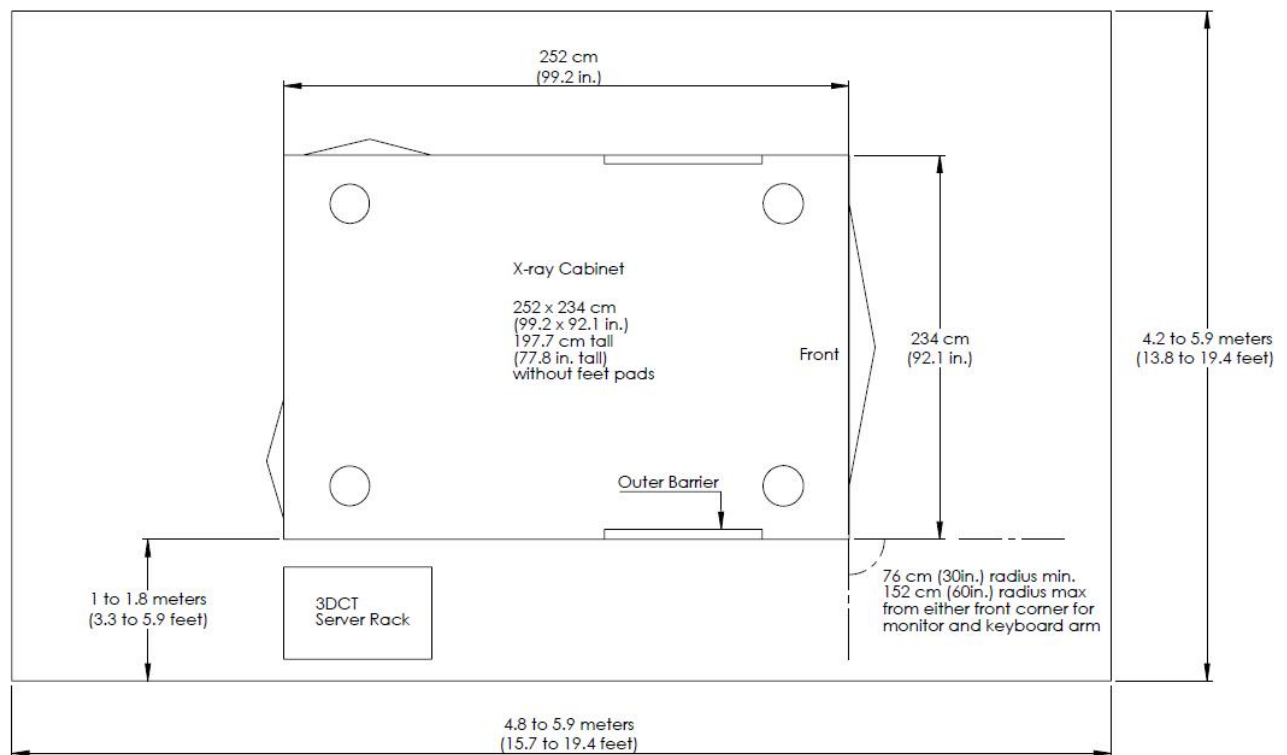


Figure 2: ART Server floor plan for V810 XXL S2/XLT System

V810 S2EX

V810 S2EX require a minimum area of 3.6 by 4.4 meters (11.8 by 14.4 feet) as below floor plan.

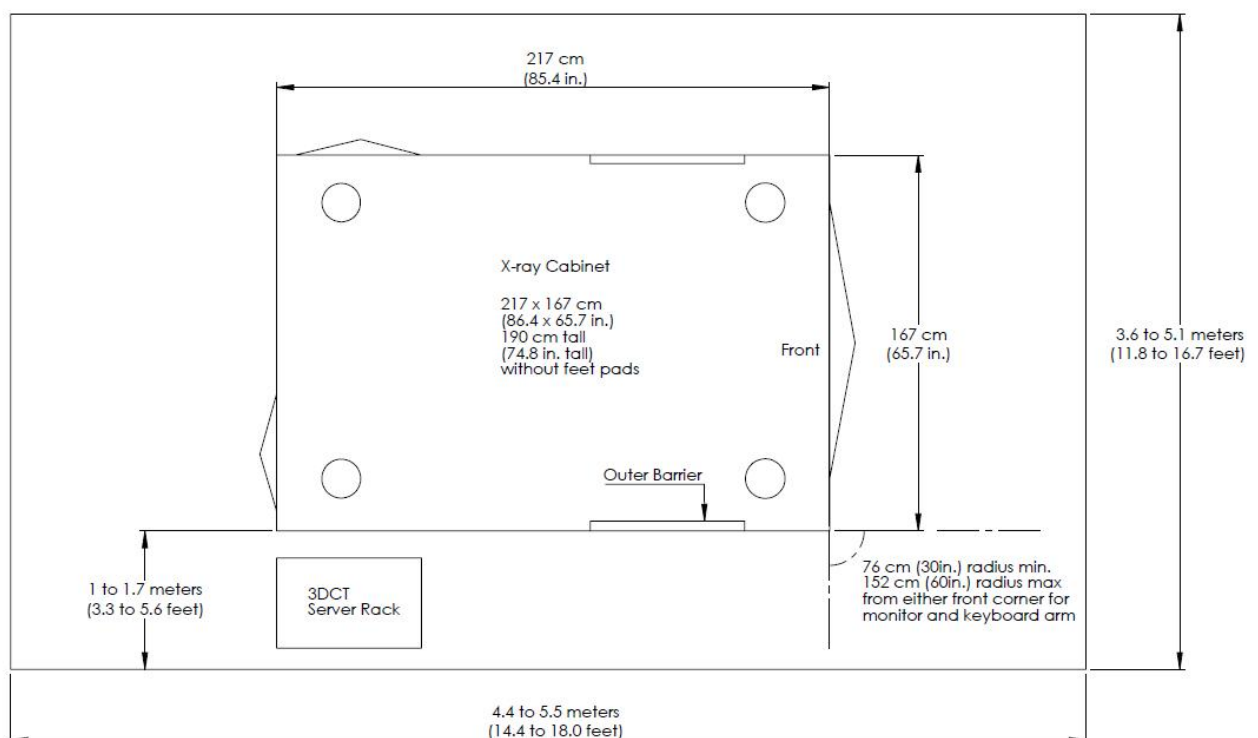


Figure 3: ART Server floor plan for V810 S2EX System

	Work Instruction AXI V810i ART Server Kit On-Field Setup Procedure (machine purchase option)	Doc. Revision	01
		Effective Date	17 Oct 2023

3DCT SERVER RACK ON FIELD SET UP

1. Place 3DCT Server Rack at left rear side of V810 Equipment as below.



Figure 4: ART Server

2. Open Server Rack Rear Access Door. Connect the LAN cable from server to ART small switch.

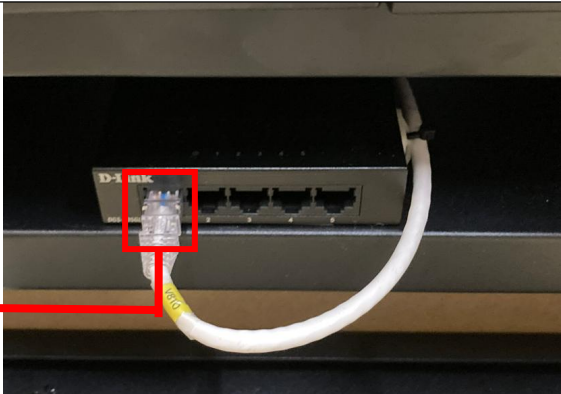
From 3DCT server	To ART small Switch
	

Table 1

3. Connect the LAN cable from server to Cisco Switch.

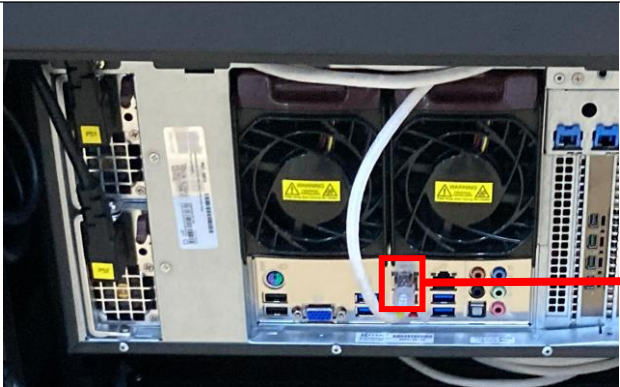
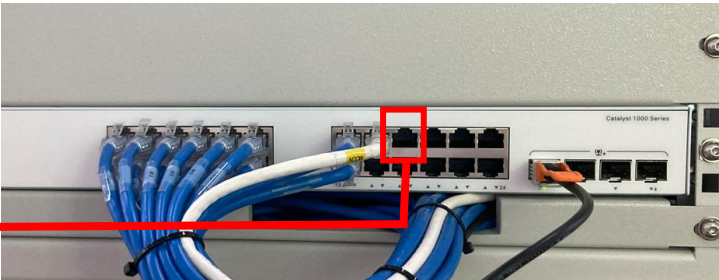
From 3DCT server	To Cisco Switch
	

Table 2

	Work Instruction AXI V810i ART Server Kit On-Field Setup Procedure (machine purchase option)	Doc. Revision	01
		Effective Date	17 Oct 2023

4. Plug the Power Cable to the empty port of right side outlet box of server rack

From 3DCT	To Power Outlet Box
	

Table 3

5. Connect the Green LAN Cable to ART small switch.

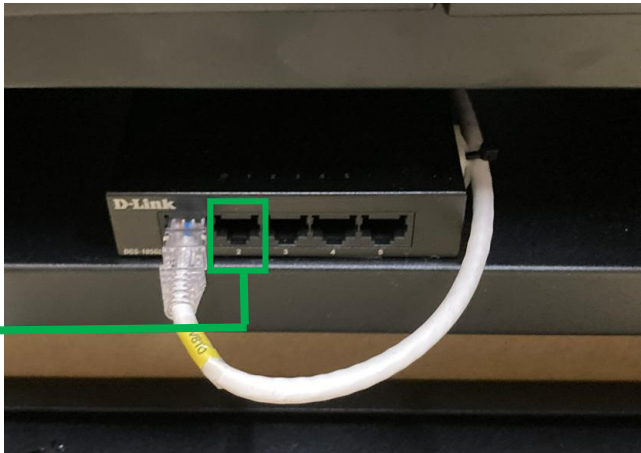
From V810 machine	To ART small switch
	

Table 4

6. Connect the ART small switch to facility network.

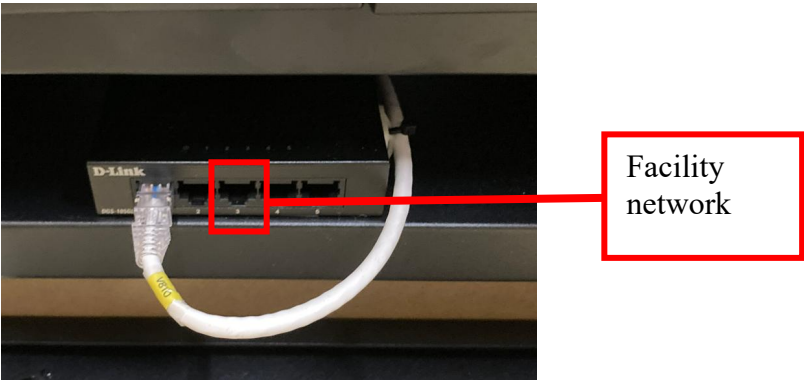


Figure 4

	Work Instruction AXI V810i ART Server Kit On-Field Setup Procedure (machine purchase option)	Doc. Revision	01
		Effective Date	17 Oct 2023

Wiring Diagram

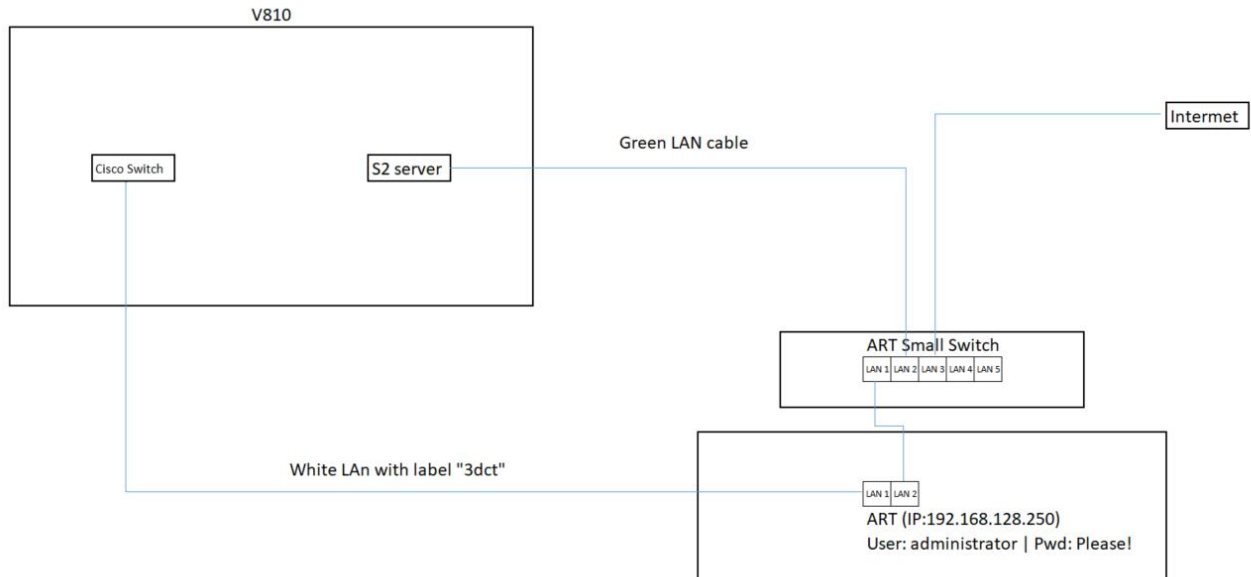


Figure 5