

	Work Instruction	Doc. Revision	01
	AXI V810 Hard Disk (HDD) Removal and Replacement Procedure	Effective Date	12 Oct 2016

This procedure is applicable to below models:

V810 STD	☐	S1	☒	S2
V810 XXL	☐	S1	☒	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	11 OCT 2016	First Release	TAN LIANG KAI (KOBÉ)
01	12 Oct 2016	Template Changes & Content Update	ONG KEAN SHENG

ViTrox	Work Instruction	Doc. Revision	01
	AXI V810 Hard Disk (HDD) Removal and Replacement Procedure	Effective Date	12 Oct 2016

1. Shut down server accordingly.
2. Unlock and open the front cover of the Supermicro Server as shown in picture below:



Figure 1 Supermicro server

3. Push down to unlock the hard disk casing as shown in picture below:

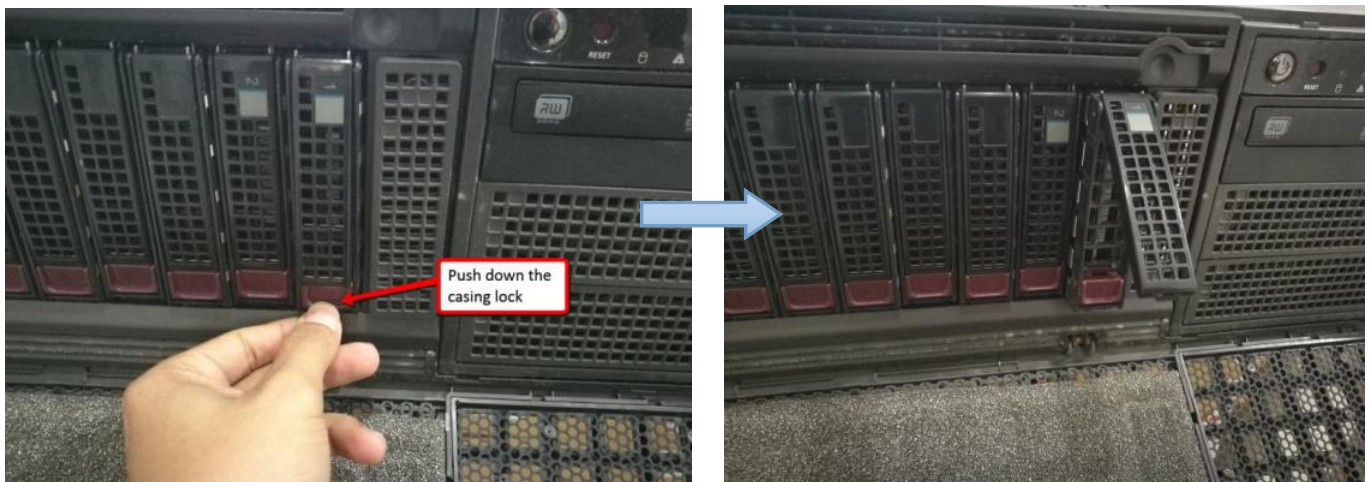


Figure 2 Hard disk

	Work Instruction	Doc. Revision	01
	AXI V810 Hard Disk (HDD) Removal and Replacement Procedure	Effective Date	12 Oct 2016

4. Pull out the hard disk driver as shown in picture below:



Figure 3 Hard disk

5. Unscrew the screw at 4 sides of the HDD as shown in picture below:

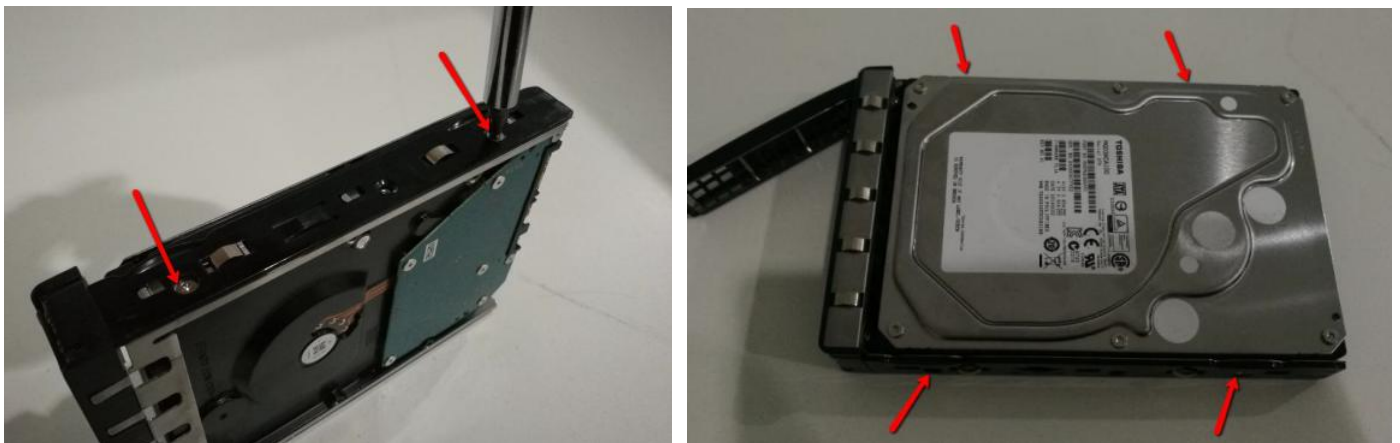


Figure 4 Hard disk

6. Remove the hard disk from the casing as shown in picture below:

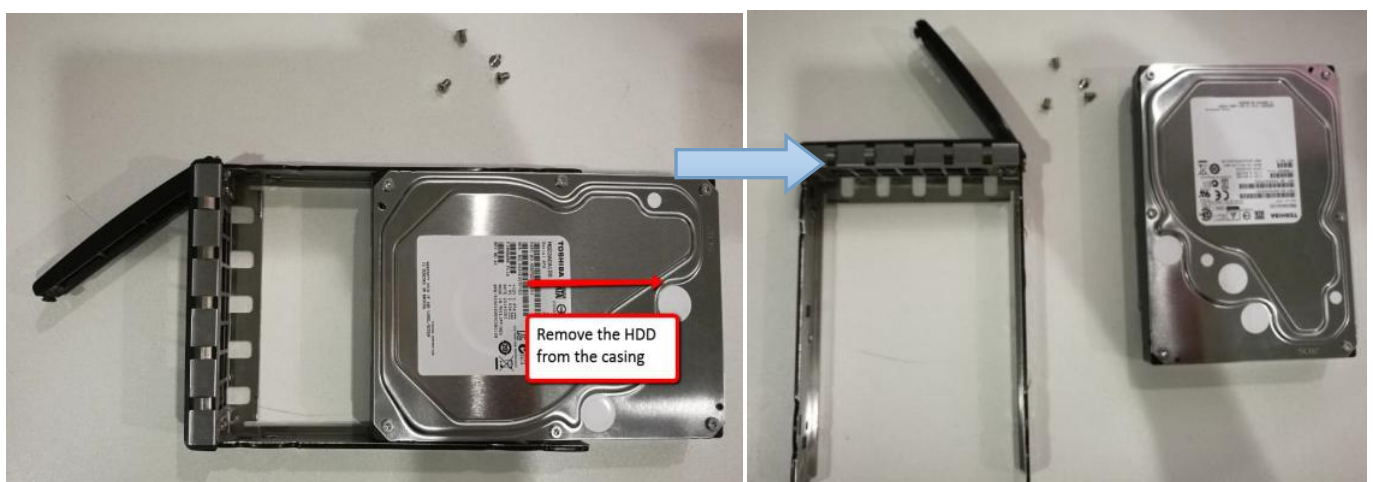


Figure 5 Hard disk

	Work Instruction	Doc. Revision	01
	AXI V810 Hard Disk (HDD) Removal and Replacement Procedure	Effective Date	12 Oct 2016

7. Replace new hard disk into the casing according to the orientation as shown in picture below:



Figure 6 Hard disk

8. Screw back the screws at 4 sides of the hard disk casing as picture below:



Figure 7 Hard disk

9. Plug back the hard disk into the Supermicro as shown in picture below:

* The right side of the HDD is labeled with manufacture sticker.



Figure 8 Hard disk

ViTrox	Work Instruction	Doc. Revision	01
	AXI V810 Hard Disk (HDD) Removal and Replacement Procedure	Effective Date	12 Oct 2016

10. Close and lock back the Supermicro front cover.
11. Push the power button to turn on the Supermicro.



Figure 9 Supermicro server