

|                                                                                  |                                     |                |            |
|----------------------------------------------------------------------------------|-------------------------------------|----------------|------------|
|  | Work Instruction                    | Doc. Revision  | 00         |
|                                                                                  | AXI V810 Machine Start Up Procedure | Effective Date | 1 May 2017 |

This procedure is applicable to below models:

|           |                                     |    |                                     |    |
|-----------|-------------------------------------|----|-------------------------------------|----|
| V810 STD  | <input checked="" type="checkbox"/> | S1 | <input checked="" type="checkbox"/> | S2 |
| V810 XXL  | <input checked="" type="checkbox"/> | S1 | <input checked="" type="checkbox"/> | S2 |
| V810 S2EX | <input checked="" type="checkbox"/> |    |                                     |    |
| V810 Mini | <input type="checkbox"/>            |    |                                     |    |

#### REVISION HISTORY

| Rev | Effective Date | Description   | Doc Originator |
|-----|----------------|---------------|----------------|
| 00  | 1 May 2017     | First Release | Tan Liang Kai  |
|     |                |               |                |
|     |                |               |                |

|                                                                                  |                                            |                |                   |
|----------------------------------------------------------------------------------|--------------------------------------------|----------------|-------------------|
|  | Work Instruction                           | Doc. Revision  | <b>00</b>         |
|                                                                                  | <b>AXI V810 Machine Start Up Procedure</b> | Effective Date | <b>1 May 2017</b> |

## Content

|                       |   |
|-----------------------|---|
| Machine Start Up..... | 3 |
| Server Start Up.....  | 3 |

|                                                                                  |                                     |                |            |
|----------------------------------------------------------------------------------|-------------------------------------|----------------|------------|
|  | Work Instruction                    | Doc. Revision  | 00         |
|                                                                                  | AXI V810 Machine Start Up Procedure | Effective Date | 1 May 2017 |

## Machine Start Up

### Server Start Up

1. Turn on main power supply & air supply to machine.
2. Adjust Air Pressure Regulator into 80~85 PSI as Figure 1

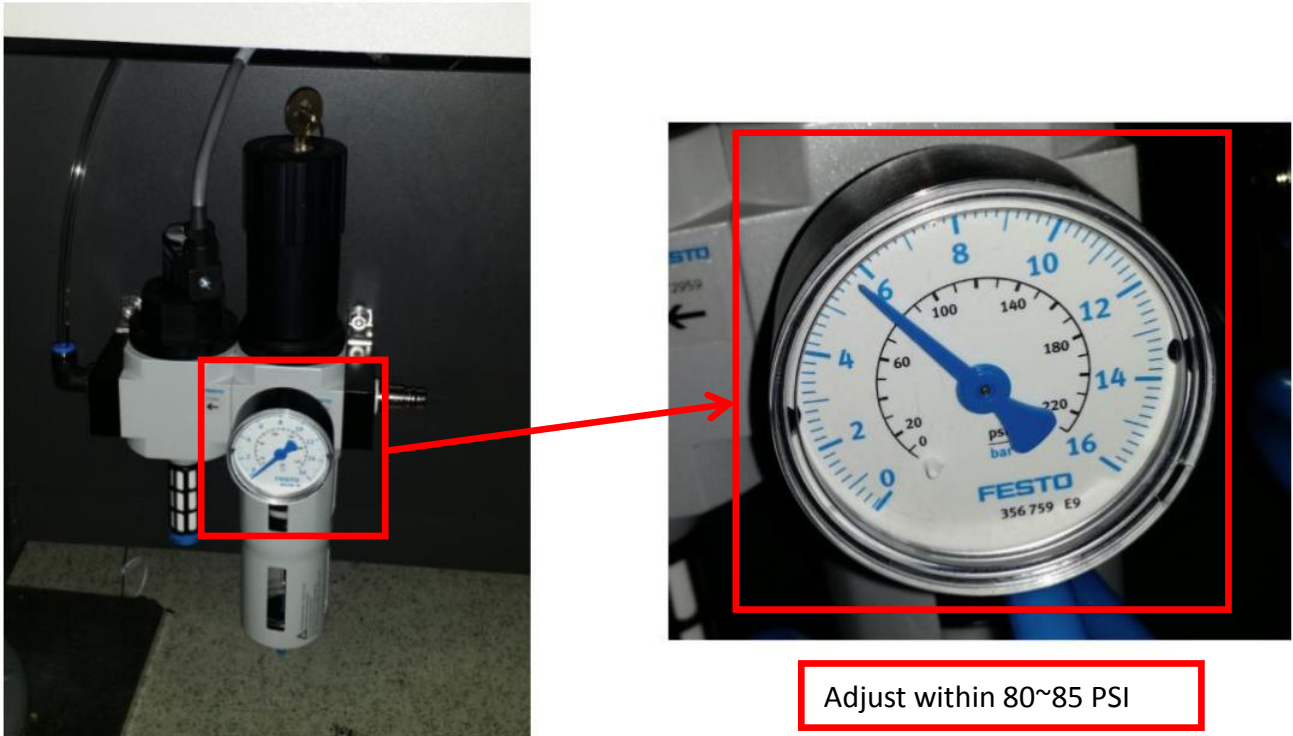


Figure 1

3. Switch on “Main Incoming Power (A)” >> “Safety Power Switch (B)” >> Press Green Button (C) as Figure 2

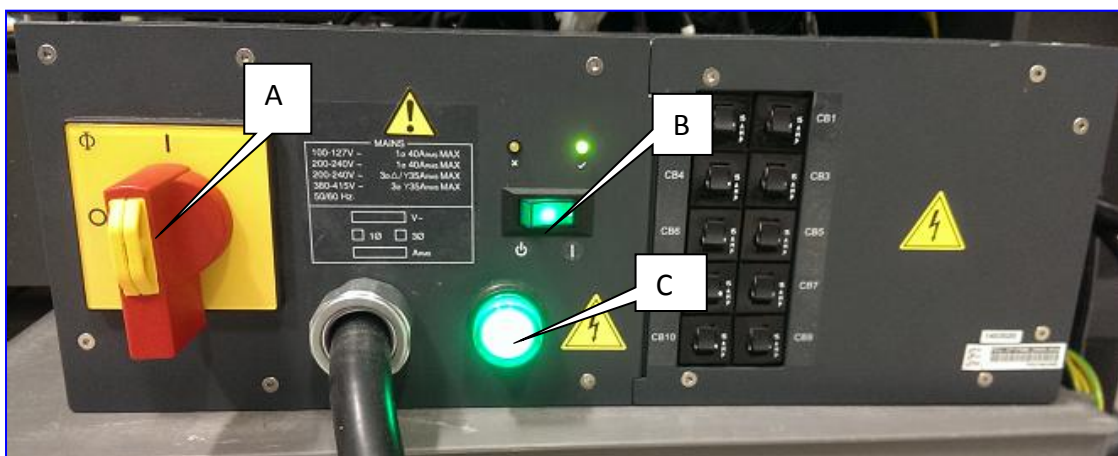
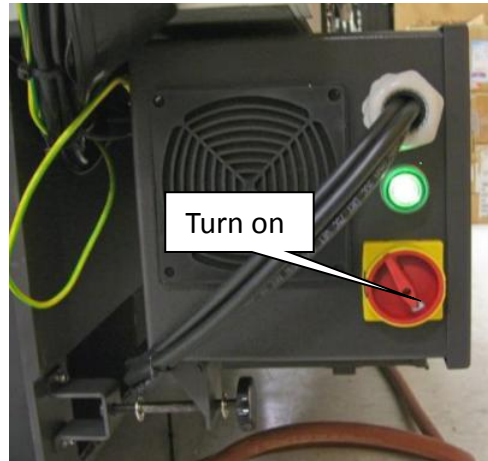


Figure 2 PDU start up

|                                                                                  |                                            |                |                   |
|----------------------------------------------------------------------------------|--------------------------------------------|----------------|-------------------|
|  | Work Instruction                           | Doc. Revision  | <b>00</b>         |
|                                                                                  | <b>AXI V810 Machine Start Up Procedure</b> | Effective Date | <b>1 May 2017</b> |

4. Turn on SSCA power as shown in Figure 3



*Figure 3 SSCA start up*

5. Turn on Atom PC power as shown Figure 4



*Figure 4 Atom PC power on*

6. Perform Server Start up by refer to V810 Series

a) Series 1 :

- i. Master Controller Server



*Figure 5*

|                                                                                  |                                     |                |            |
|----------------------------------------------------------------------------------|-------------------------------------|----------------|------------|
|  | Work Instruction                    | Doc. Revision  | 00         |
|                                                                                  | AXI V810 Machine Start Up Procedure | Effective Date | 1 May 2017 |

ii. IRP Servers



Figure 6

b) Series 2 :

i. Supermicro Server



Figure 7 Supermicro server power on

7. Close all access door



|                                                                                  |                                     |                |            |
|----------------------------------------------------------------------------------|-------------------------------------|----------------|------------|
|  | Work Instruction                    | Doc. Revision  | 00         |
|                                                                                  | AXI V810 Machine Start Up Procedure | Effective Date | 1 May 2017 |

8. Open X ray Source at Operator Console Panel as below Figure 8

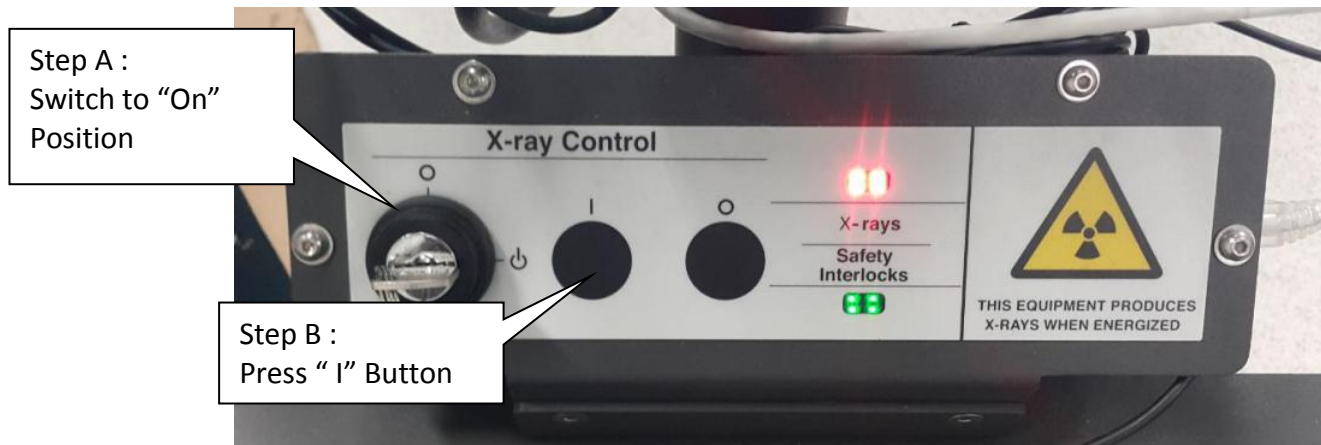


Figure 8

9. Open Cmd & Ping following IP address:

|                        |                 |
|------------------------|-----------------|
| Camera                 | 192.168.128.1   |
|                        | 192.168.128.2   |
|                        | 192.168.128.3   |
|                        | 192.168.128.4   |
|                        | 192.168.128.5   |
|                        | 192.168.128.6   |
|                        | 192.168.128.7   |
|                        | 192.168.128.8   |
|                        | 192.168.128.9   |
|                        | 192.168.128.10  |
|                        | 192.168.128.11  |
|                        | 192.168.128.12  |
|                        | 192.168.128.13  |
|                        | 192.168.128.14  |
| Atom PC                | 192.168.128.70  |
| Cisco Gigabit          | 192.168.128.122 |
| Main Server            | 192.168.128.60  |
| PSP 2 (New IP Address) | 123.123.123.100 |
|                        | 123.123.123.101 |
|                        | 123.123.123.200 |

10. Open V810 GUI & run CD&A for 3 loops.