

	Work Instruction	Doc. Revision	01
	AXI V810 R210 Power Supply Removal and Replacement Procedure	Effective Date	12 Jan 2017

This procedure is applicable to below models:

V810 STD	☒	S1	☐	S2
V810 XXL	☒	S1	☐	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	16 Feb 2016	First Release	CHIN CHEE YAN
01	12 Jan 2017	Template Changes & Content Update	ONG KEAN SHENG

	Work Instruction	Doc. Revision	01
	AXI V810 R210 Power Supply Removal and Replacement Procedure	Effective Date	12 Jan 2017

Content

Removal Procedure.....	3
Replacement Procedure.....	7

	Work Instruction	Doc. Revision	01
	AXI V810 R210 Power Supply Removal and Replacement Procedure	Effective Date	12 Jan 2017

Removal Procedure

1. Turn off X-ray and completely shut down and power off machine.
2. Unscrew (2 x Button Head Cap Screw M4 x 12) and move AXI-IRP Server Rack Top Cover (P/N, 4XARC-A049) slightly toward to machine top cabinet for ease of access.



Figure 1 Top Cover removal

3. As manufacture layout, IRP Server kit (P/N, 4XASP-A117) will slot with flow as shown may refer to the label at each IRP front panel also. Disconnect the entire power core from defective IRP as shown.



Figure 2 IRP Server

4. Press the cover and unscrew (2 Button Head Cap Screw M5 x 12) the 4XASP-A117 as shown and completely remove the defective unit our from server rack.



Figure 3 IRP Server

	Work Instruction	Doc. Revision	01
	AXI V810 R210 Power Supply Removal and Replacement Procedure	Effective Date	12 Jan 2017

- Used a Phillips screwdriver unlock the IRP top cover and remove the cover with press the lock and push toward to back panel as shown.

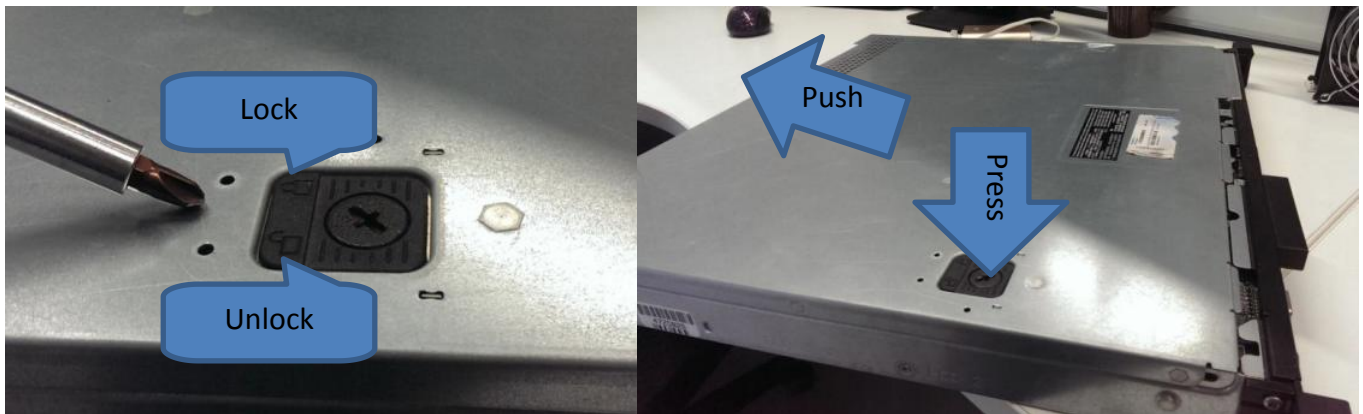


Figure 4 IRP Server

- IRP internal layout shown as below. Remove the CPU cover.

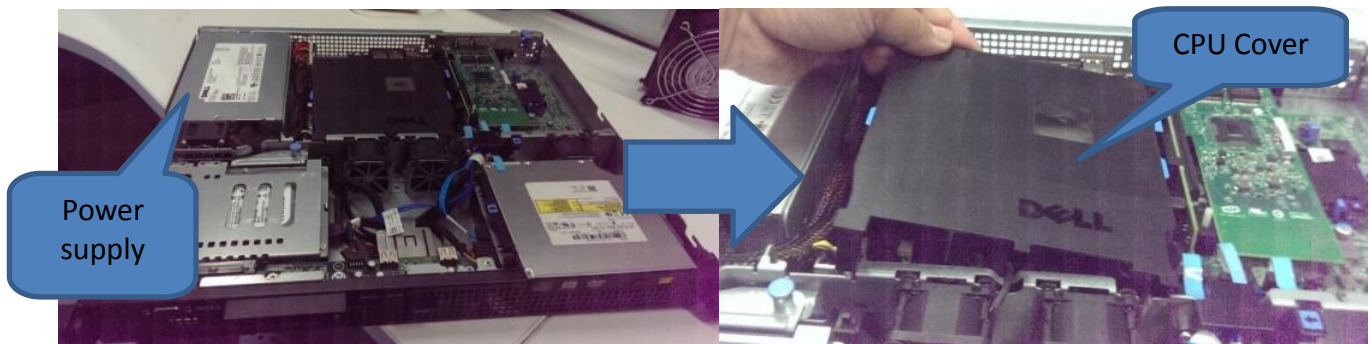


Figure 5 CPU cover removal

- Pull the HDD case locker and push the case to right and move the HDD 1 as shown where mainly ease of access.

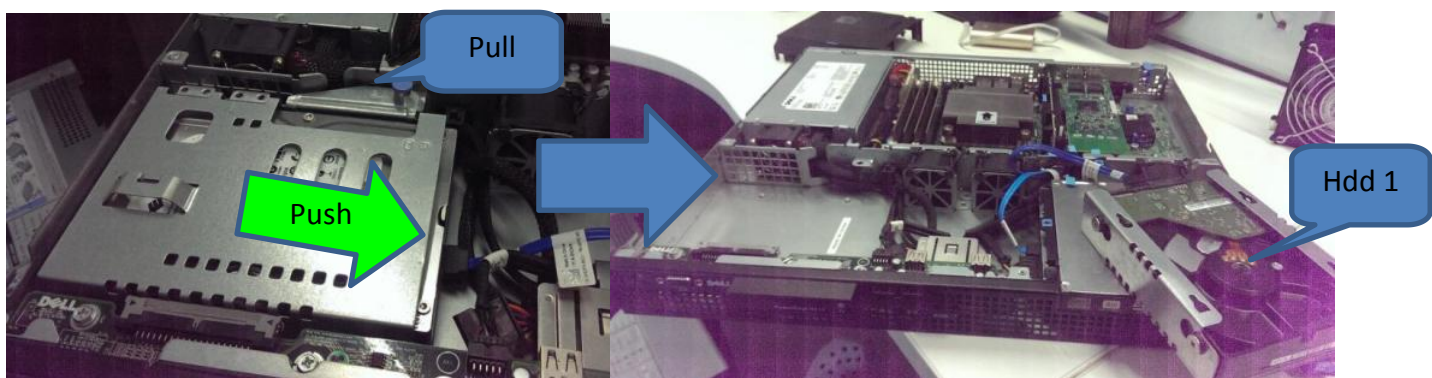


Figure 6 HDD 1

	Work Instruction	Doc. Revision	01
	AXI V810 R210 Power Supply Removal and Replacement Procedure	Effective Date	12 Jan 2017

8. Remove the mother board connectors (24 pins connector & 4 pins connector) as shown.

Press the lock and pull

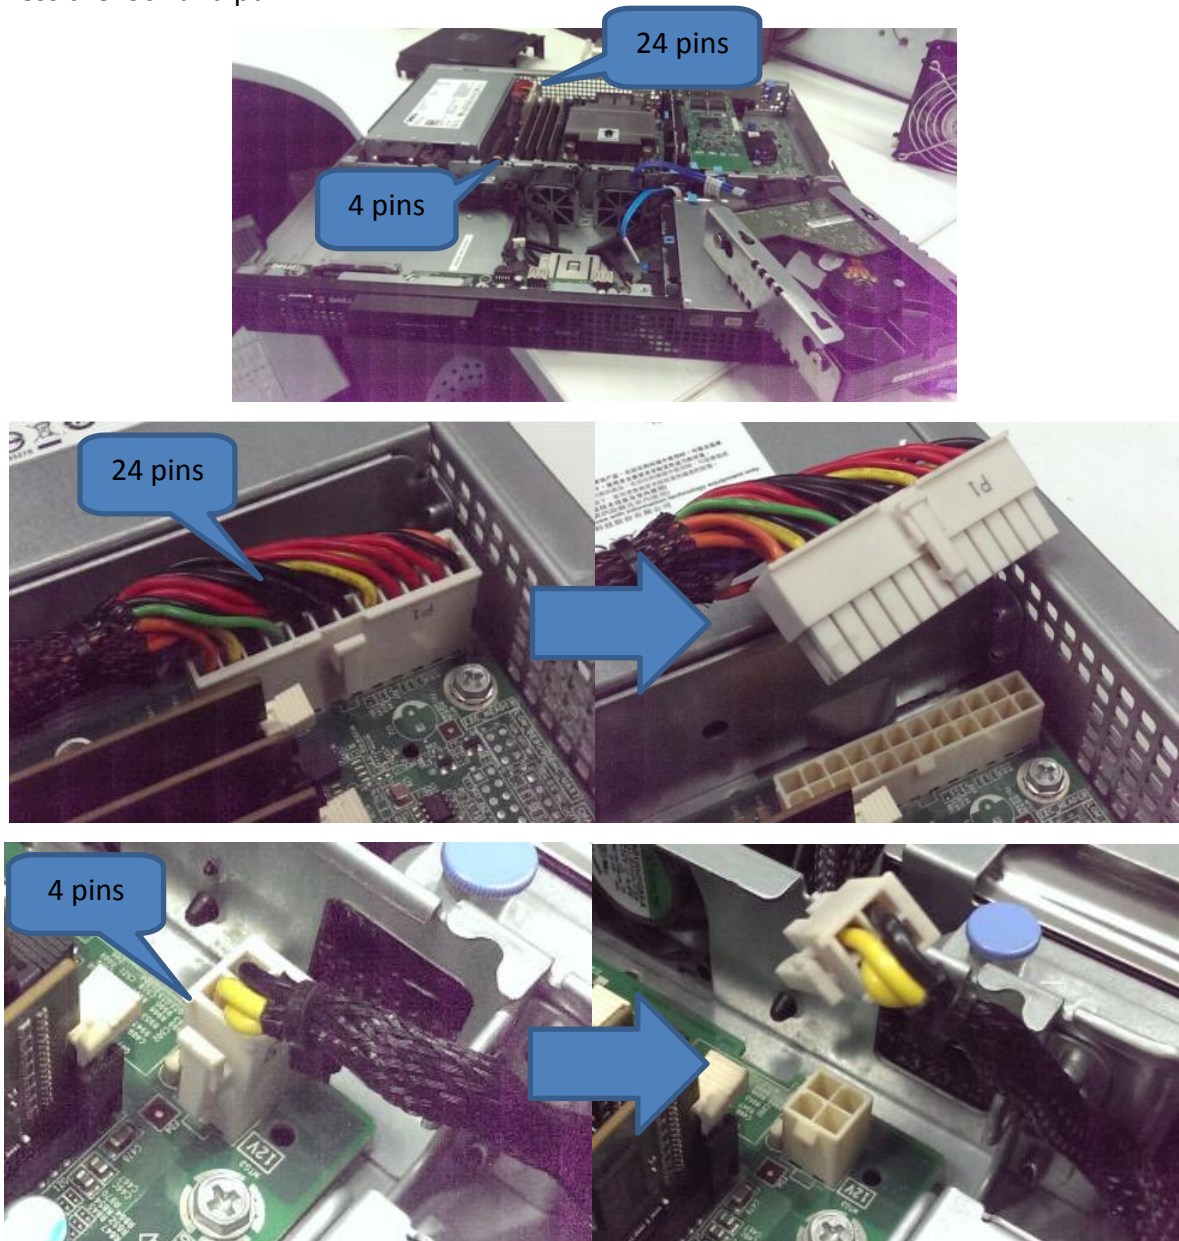


Figure 7 Connector removal

9. Unlock the cable lock as shown.

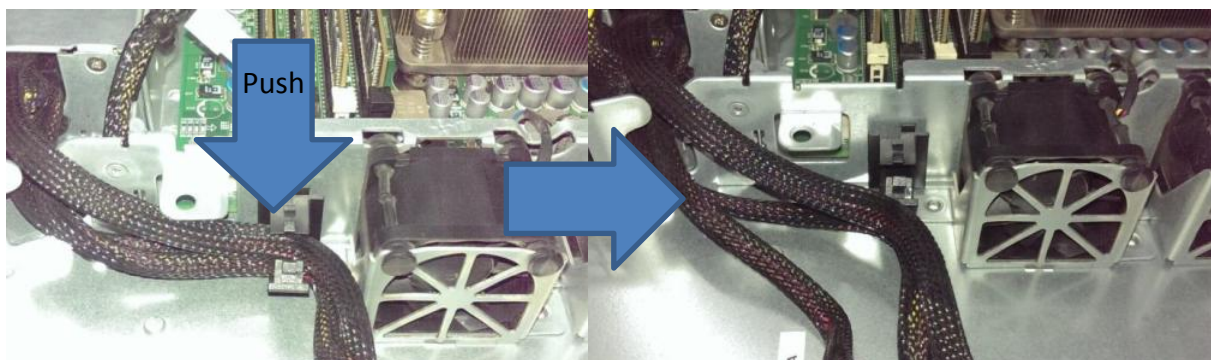


Figure 8 Cable unlock

	Work Instruction	Doc. Revision	01
	AXI V810 R210 Power Supply Removal and Replacement Procedure	Effective Date	12 Jan 2017

10. Disconnect the SATA power cable from 2 Hdd drive as shown.

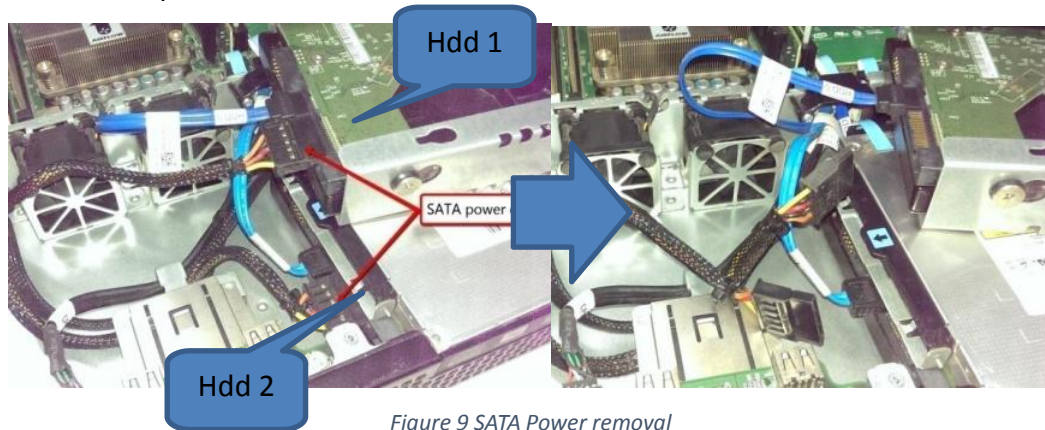


Figure 9 SATA Power removal

11. Remove the cables from hook as shown.

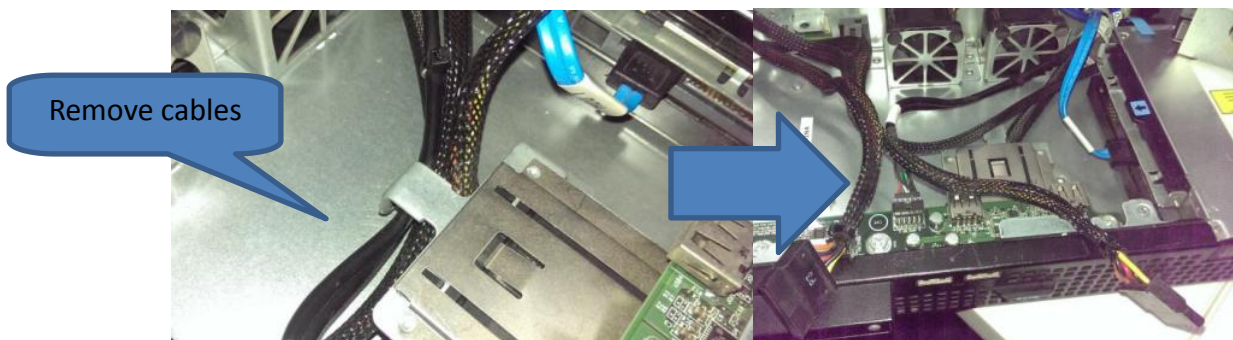


Figure 10 Cable removal

12. Disconnect the power cable from DVD-Rom drive as shown.

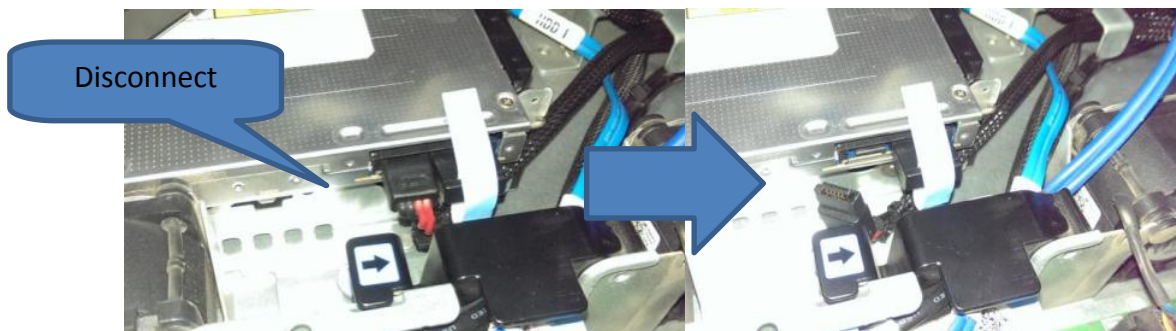


Figure 11 Power cable (DVD-Rom)

13. Route the cables as shown for easier remove process.



Figure 12 Wiring management

	Work Instruction	Doc. Revision	01
	AXI V810 R210 Power Supply Removal and Replacement Procedure	Effective Date	12 Jan 2017

14. Used a Phillips screwdriver unscrew as shown and completely remove defective power supply.



Figure 13 Power Supply removal

Replacement Procedure

15. Prepare new Compatible R210/R210II - Power Supply (Model; L250E-S0) (P/N, 2140-0029).



Figure 14 New power supply

16. Assemble the 2140-0029 and tighten the screw .Ensure the cables is not clamped during assembly.

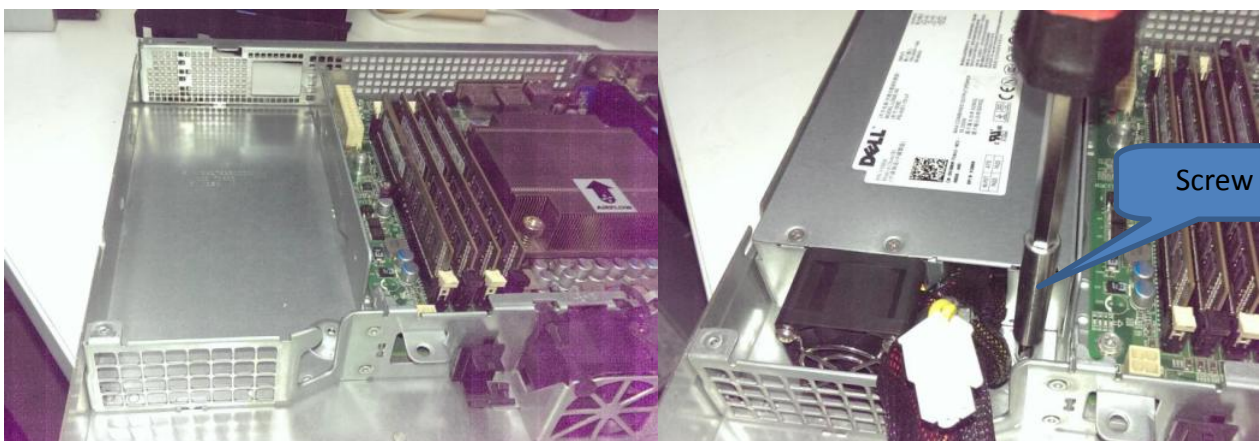


Figure 15 Power supply assembly

	Work Instruction	Doc. Revision	01
	AXI V810 R210 Power Supply Removal and Replacement Procedure	Effective Date	12 Jan 2017

17. Route cables nicely and lock the cable hook as shown.

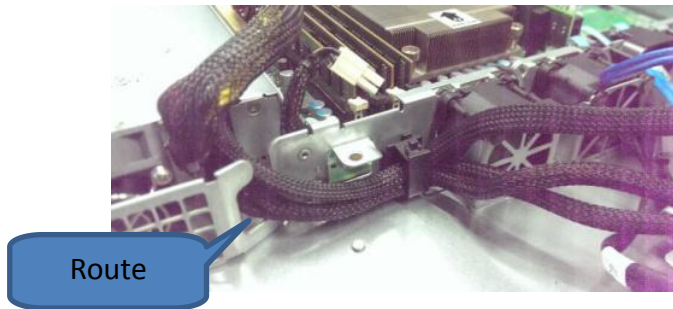


Figure 16 Cable Routing

18. Route and lock the longer HDD and DVD-ROM power cables as shown.

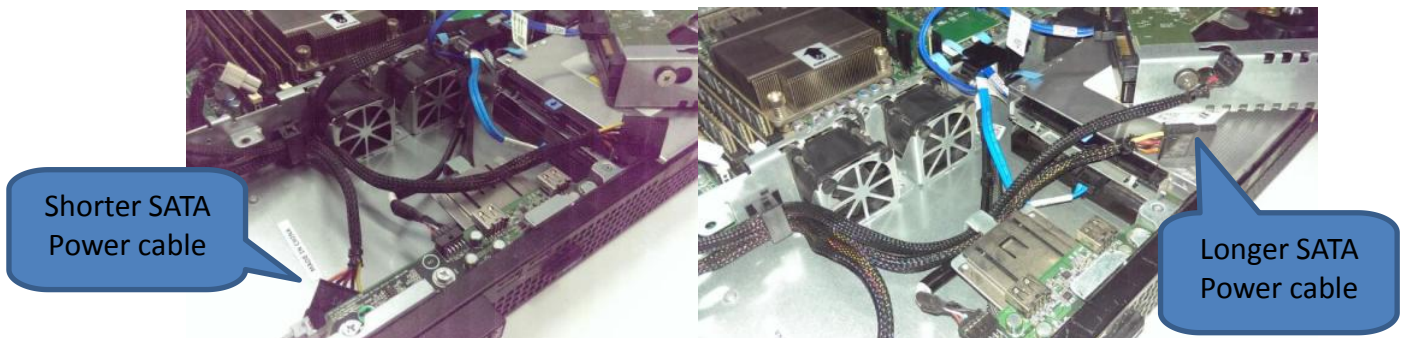


Figure 17 HDD cable

19. Route DVD-ROM power cable underneath the SATA cable as shown and connect it. # Aware on the cable orientation.

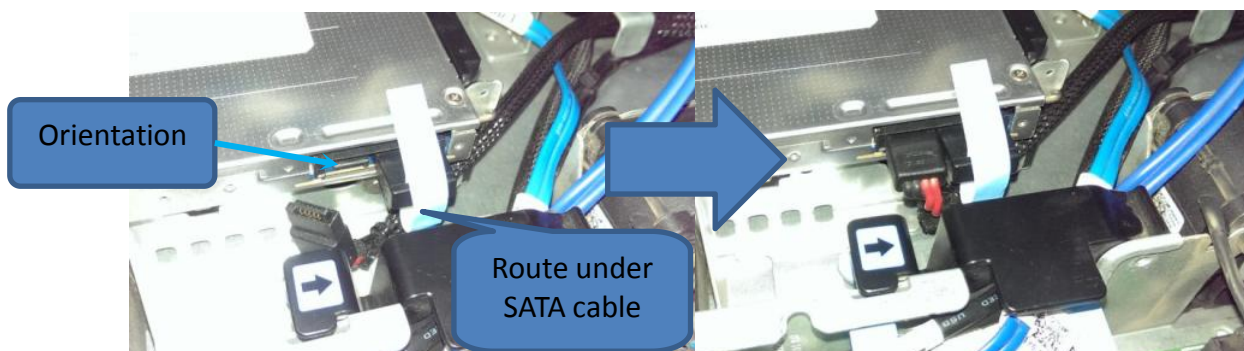


Figure 18 DVD power cable

20. Connect the longer HDD SATA power cable to Hdd 2 as shown # Aware on the cable orientation.

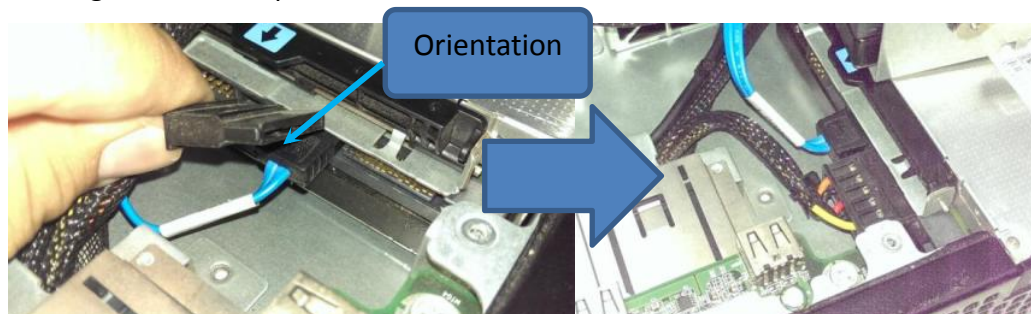


Figure 19 HDD Sata power cable

ViTrox	Work Instruction	Doc. Revision	01
	AXI V810 R210 Power Supply Removal and Replacement Procedure	Effective Date	12 Jan 2017

21. Connect the shorter HDD SATA power cable to Hdd 1 as shown # Aware on the cable orientation.



Figure 20 HDD Sata power cable

22. Assemble the HDD 1 case back to the origin position, ensure it's hooked.



Figure 21 HDD casing assembly

23. Route the HDD 1 SATA cable as shown.



Figure 22 HDD 1 Sata cable

	Work Instruction	Doc. Revision	01
	AXI V810 R210 Power Supply Removal and Replacement Procedure	Effective Date	12 Jan 2017

24. Connect the connectors (24 pins connector & 4 pins connector) to mother board as shown and ensure it lock properly.

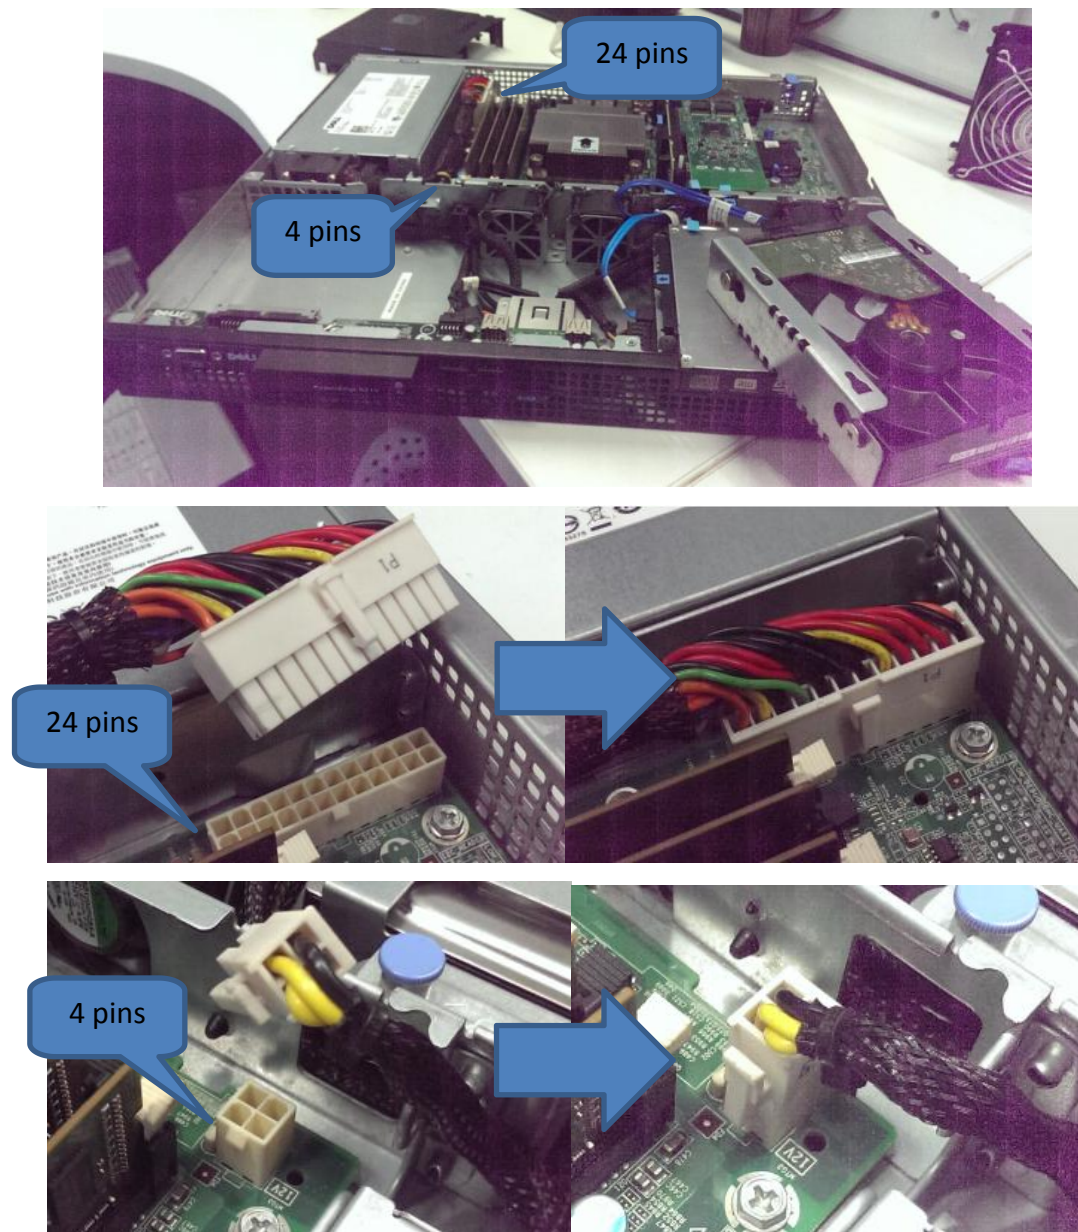


Figure 23 Connector assembly

25. Route the main cable nicely as shown.

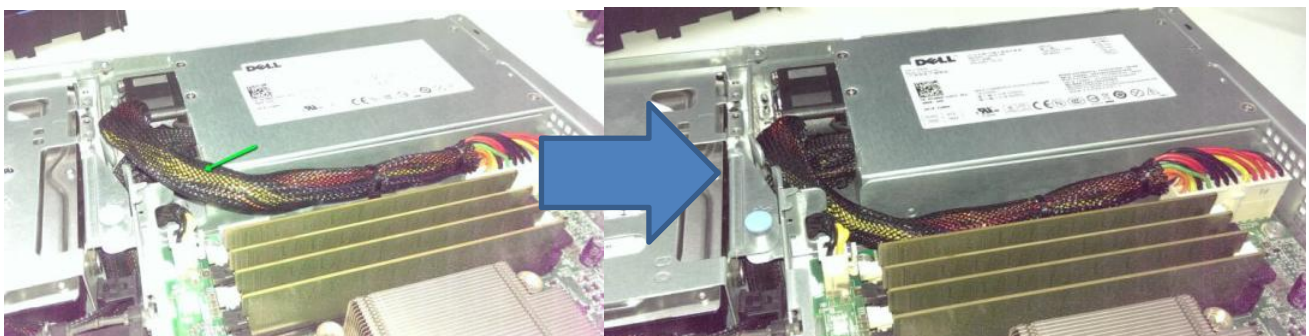


Figure 24 Main cable routing

	Work Instruction	Doc. Revision	01
	AXI V810 R210 Power Supply Removal and Replacement Procedure	Effective Date	12 Jan 2017

26. Place the CPU cover back to origin position as shown.
27. Ensure all connector is seat firmly.
28. Close the IRP top cover.
29. Assembly the 4XASP-A117 back to server rack and screw the hook with 2 Button Head Cap Screw (M5 x 12)
30. Connect the LAN cable and power core back to back panel. # LAN cable no orientation needed. May refer to table below for IRP LAN cable connection. Each LAN had label.

IRP	LAN cable label
IRP 0	192.168.128.240
	192.168.128.241
IRP 1	192.168.128.242
	192.168.128.243
IRP 2	192.168.128.244
	192.168.128.245
IRP 3	192.168.128.246
	192.168.128.247

Table 1

31. Close the 4XARC-A049 and screw.
32. Start-up machine as usual.

ViTrox	Work Instruction	Doc. Revision	01
	AXI V810 R210 Power Supply Removal and Replacement Procedure	Effective Date	12 Jan 2017

33. At the V810 GUI, go to Connected Processor, click Stop all IRPs and Restart all IRPs as Figure 25.

Services → Subsystem Status & Control → Connected Processor → Stop RMS → Restart RMS → Stop all IRPs → Restart all IRPs.

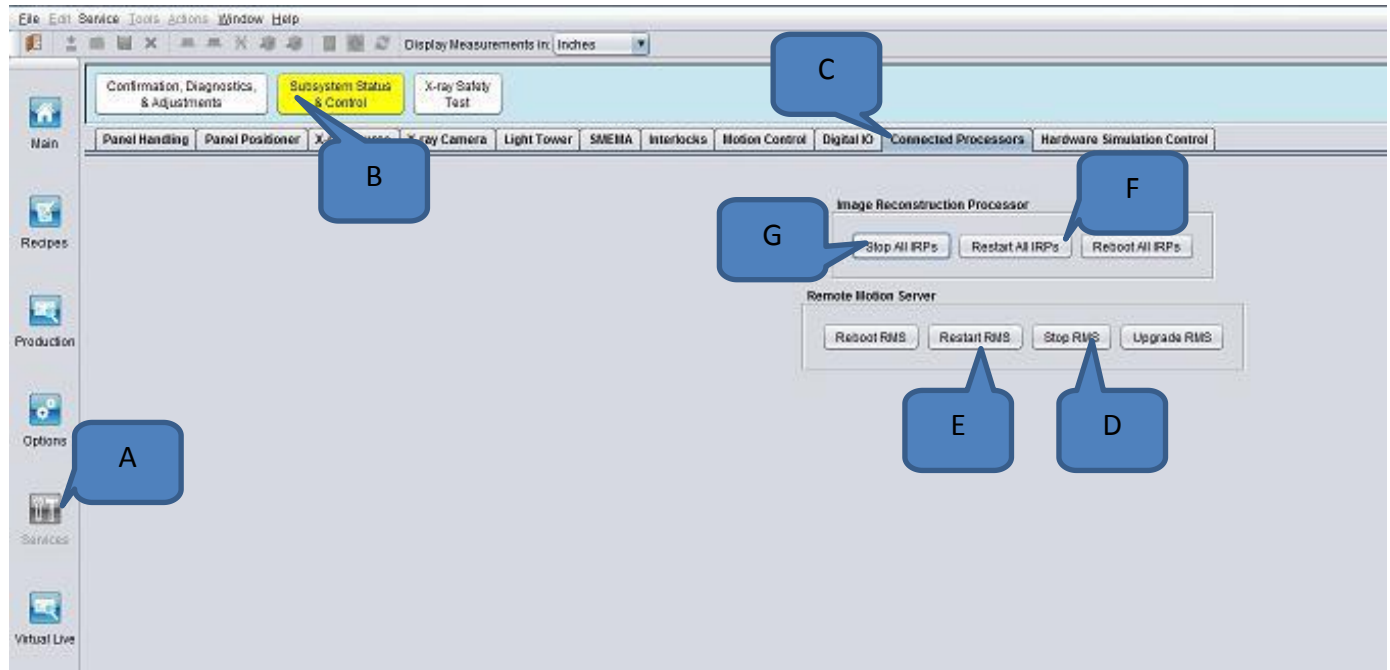


Figure 25

34. Start-up V810 GUI as normal.