

	Work Instruction	Doc. Revision	01
	AXI V810 S2EX Z Motor Manual Home Procedure	Effective Date	2 Oct 2016

This procedure is applicable to below models:

V810 STD	☐	S1	☐	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	02 Sept 2015	First Release	CHIN CHEE YAN
01	2 Oct 2016	Template Changes & Content Update	ONG KEAN SHENG

	Work Instruction	Doc. Revision	01
	AXI V810 S2EX Z Motor Manual Home Procedure	Effective Date	2 Oct 2016

Content

Z Motor Manual Home Steps:.....	3
---------------------------------	---

	Work Instruction	Doc. Revision	01
	AXI V810 S2EX Z Motor Manual Home Procedure	Effective Date	2 Oct 2016

Z Motor Manual Home Steps:

1. Turn off the air inlet at main regulator valve. Set to 0 PSI.

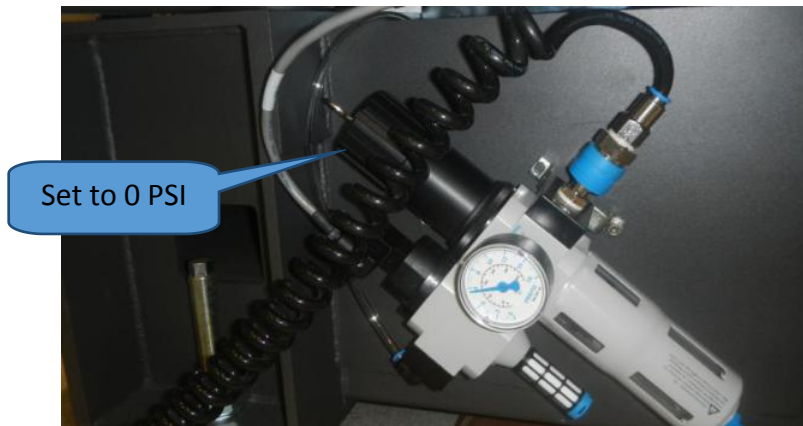


Figure 1

2. Open the front access door and manually pull the Inner Barrier Shutter Plate to fully open position.



Figure 2

	Work Instruction	Doc. Revision	01
	AXI V810 S2EX Z Motor Manual Home Procedure	Effective Date	2 Oct 2016

- Open the Rear SSCA top cover, at DIO block, unplug the wire S1-7 (Refer to wire label) as shown.
Use test pen probe the square hole in front of cable.

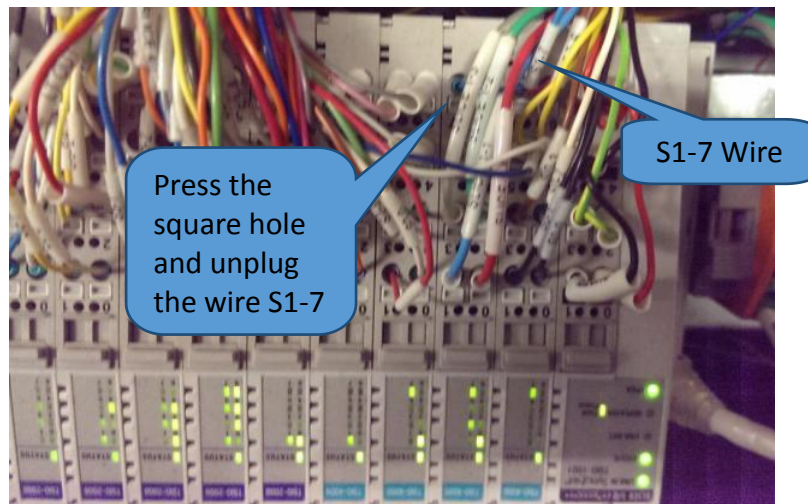


Figure 3

- Remote desktop to RMS with IP, **192.168.128.70**, Password, **Please!**



Figure 4

- Launch the Clear Path (MPS) software with double click the icon at desktop. Motor status should show as "Disable"

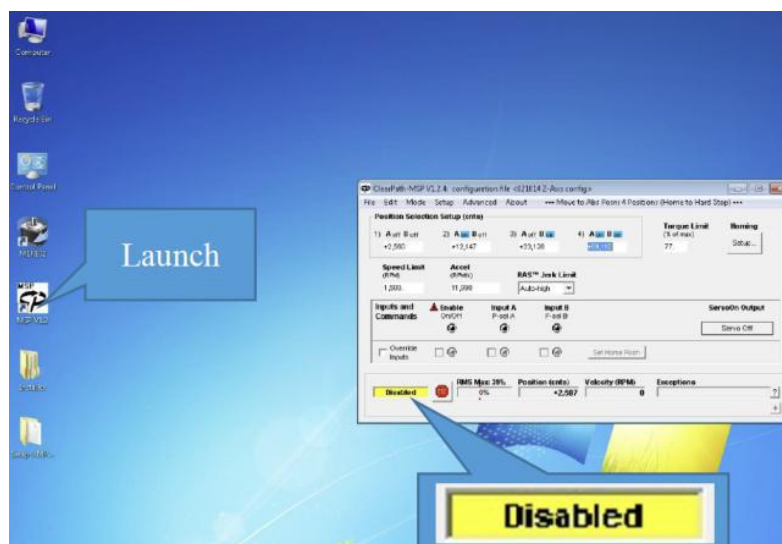


Figure 5

	Work Instruction	Doc. Revision	01
	AXI V810 S2EX Z Motor Manual Home Procedure	Effective Date	2 Oct 2016

- Check the “Override Input” the follow with “Enable On/Off”. Once done, motor status will change to “SW Enable”.

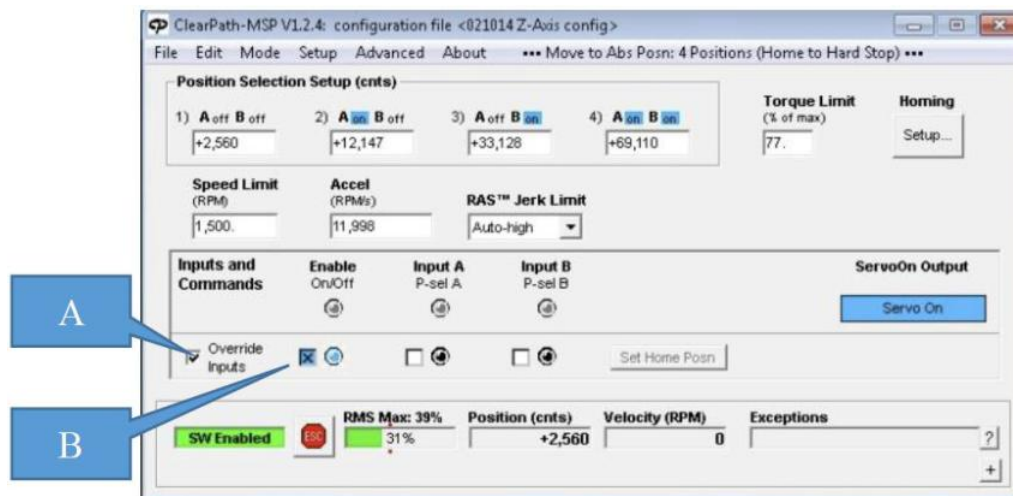


Figure 6

- Physical check at tube position, the tube should be similar to image below.



Figure 7

- Connect the S1-7 wire back to origin position at DIO Block.

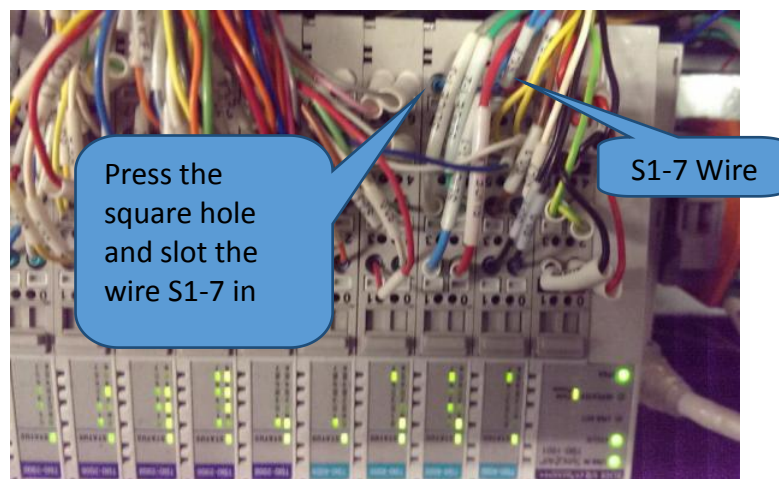


Figure 8

	Work Instruction	Doc. Revision	01
	AXI V810 S2EX Z Motor Manual Home Procedure	Effective Date	2 Oct 2016

9. Back to RMS and close the Clear Path (MSP) SW.
10. Set the air pressure back to 80 PSI.
11. Back to V810 GUI, go to “Connected Processor” tab, and click Stop, Upgrade, and Restart RMS as shown.

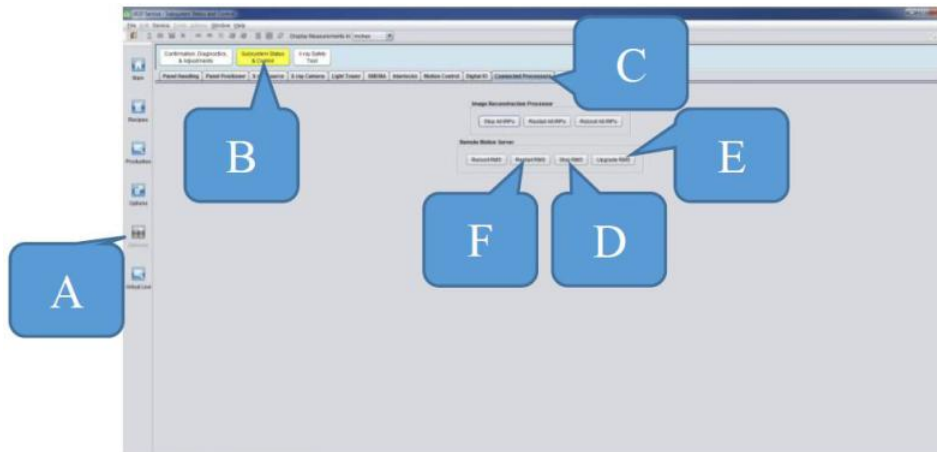


Figure 9

12. Go to DIO tab, click initialize. Once done, ensure tube is at safe load position. Check the Input Bits “Z Axis At Ready Safe Position On” is green.

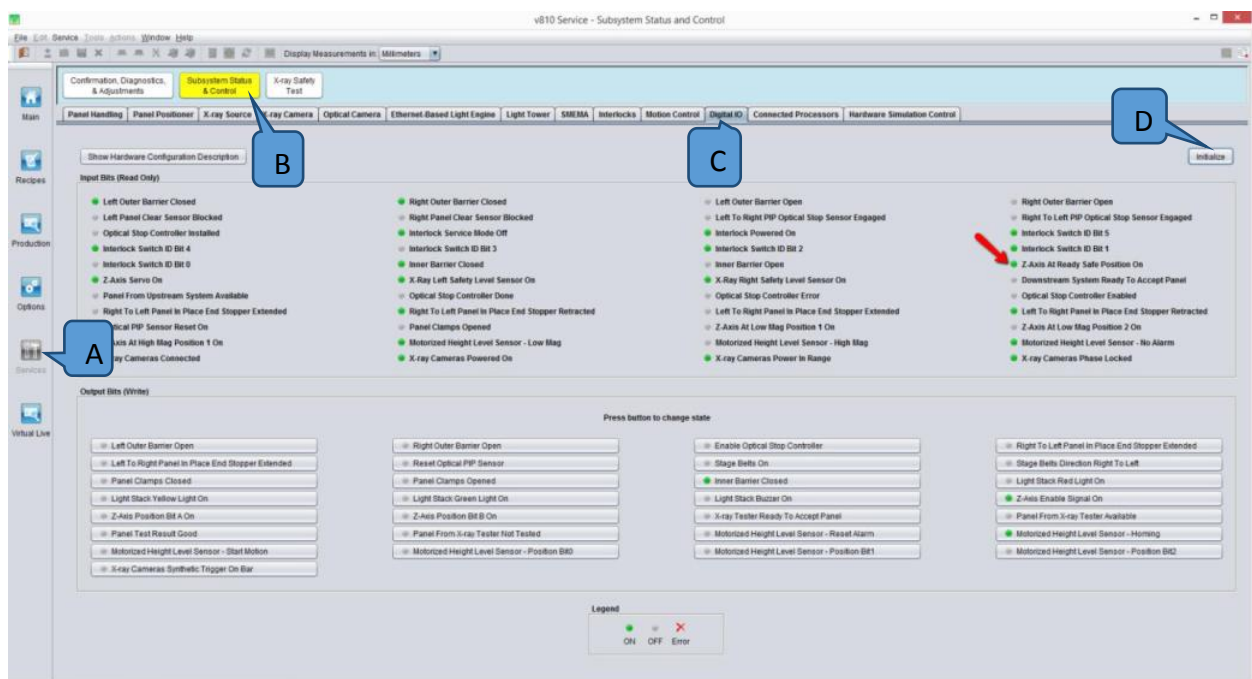


Figure 10

13. Start-up machine as usual once complete initialize DIO without error.