

	Work Instruction	Doc. Revision	00
	AXI V810 STD Right Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	13 April 2017

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	13 April 2017	First Release	Chin Chee Yan

	Work Instruction	Doc. Revision	00
	AXI V810 STD Right Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	13 April 2017

Content

Removal Procedure.....	3
Replacement Procedure.....	5
Sensor Amplifier Configuration.....	7

	Work Instruction	Doc. Revision	00
	AXI V810 STD Right Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	13 April 2017

Removal Procedure

1. Unload board from machine if any.
2. Go to X ray source tab and toggle “Turn off X-Ray”.Power off Operator Console Panel

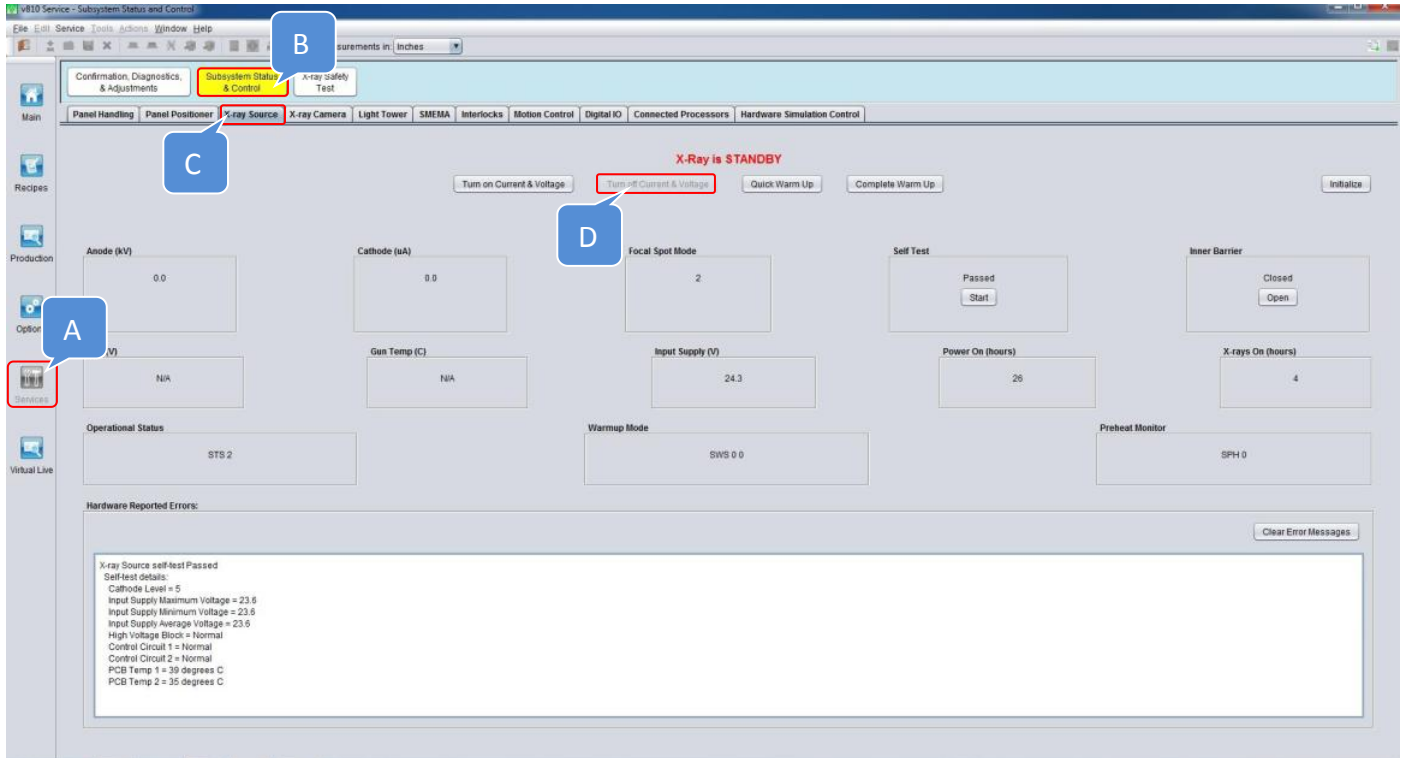


Figure 1 X Ray Source Shutdown

3. Open front access door and pull XY stage towards front access door direction
4. Open amplifier cover and remove the Laser Sensor Head Connector as below Figure 2

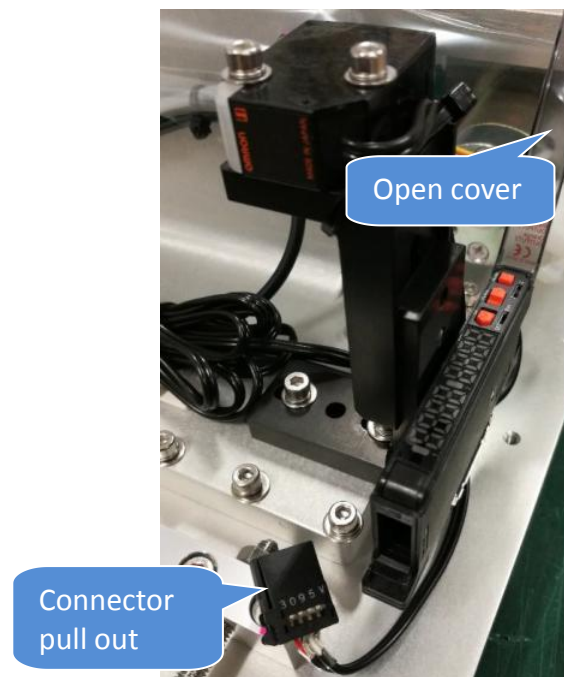


Figure 2 Laser Sensor Head Connector Removal

	Work Instruction	Doc. Revision	00
	AXI V810 STD Right Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	13 April 2017

5. Remove amplifier from bracket as below Figure 3



Figure 3 Sensor Amplifier Removal

6. Disconnect the connector with label "Right Outer barrier Filter Sensor"

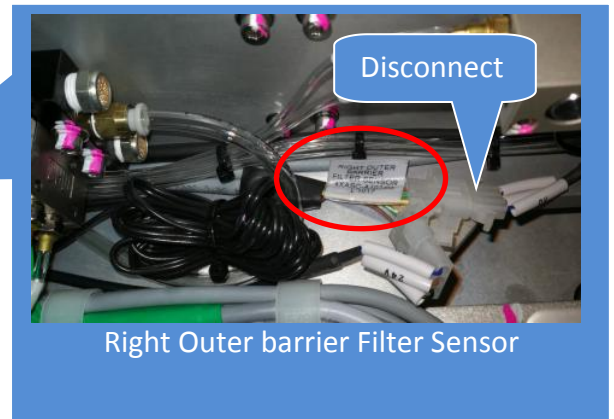


Figure 4 Sensor Amplifier End Connector Removal

7. Trace the amplifier cable along below route & remove entire sensor amplifier from system. Remove necessary cable tie as well

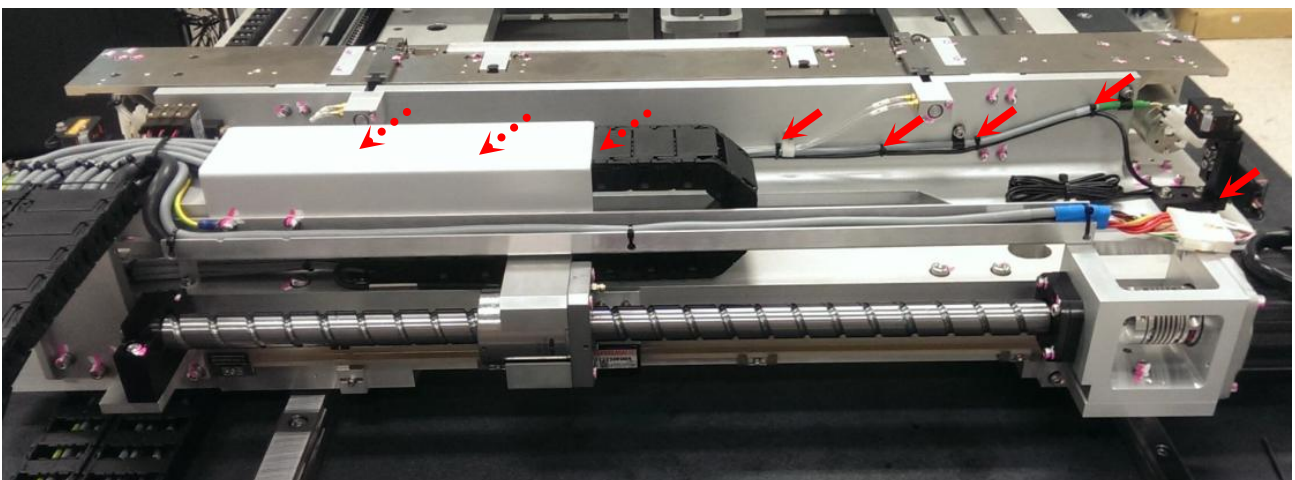


Figure 5 Sensor Amplifier & Cable Removal

	Work Instruction	Doc. Revision	00
	AXI V810 STD Right Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	13 April 2017

Replacement Procedure

8. Prepare part, AMPLIFIER, 2M, 12-24VDC (P/N, 2284-0089) as shown.



Figure 6 Sensor Amplifier

9. Assemble Sensor Amplifier to bracket as shown.

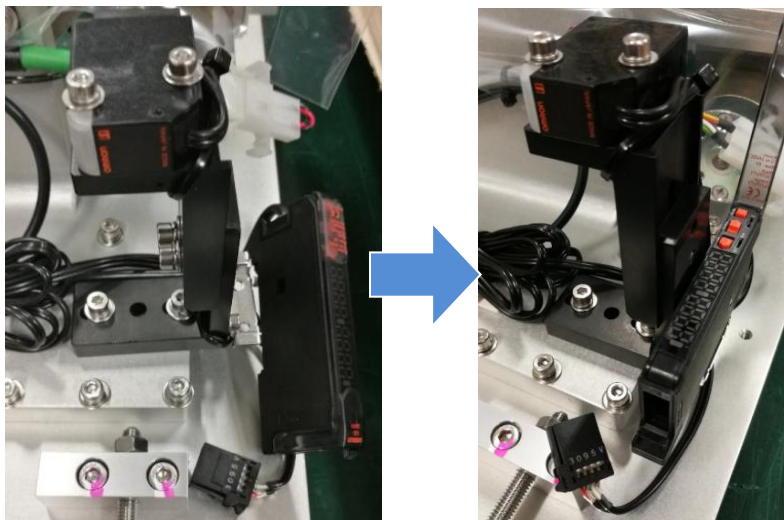


Figure 7 Sensor Amplifier Assembly

10. Open Sensor Amplifier Bracket, connect Laser Sensor Head Connector by refer to Guide Pin Orientation
Close the bracket

Caution on cable snapping upon bracket closing

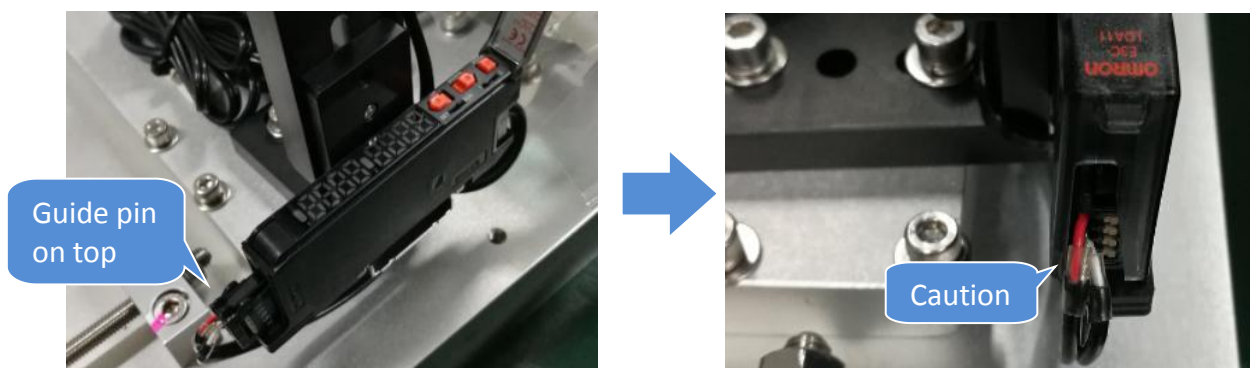


Figure 8 Laser Sensor Head Connector Connect

	Work Instruction	Doc. Revision	00
	AXI V810 STD Right Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	13 April 2017

11. Route the Sensor Amplifier Cable as shown. Secure with necessary cable tie

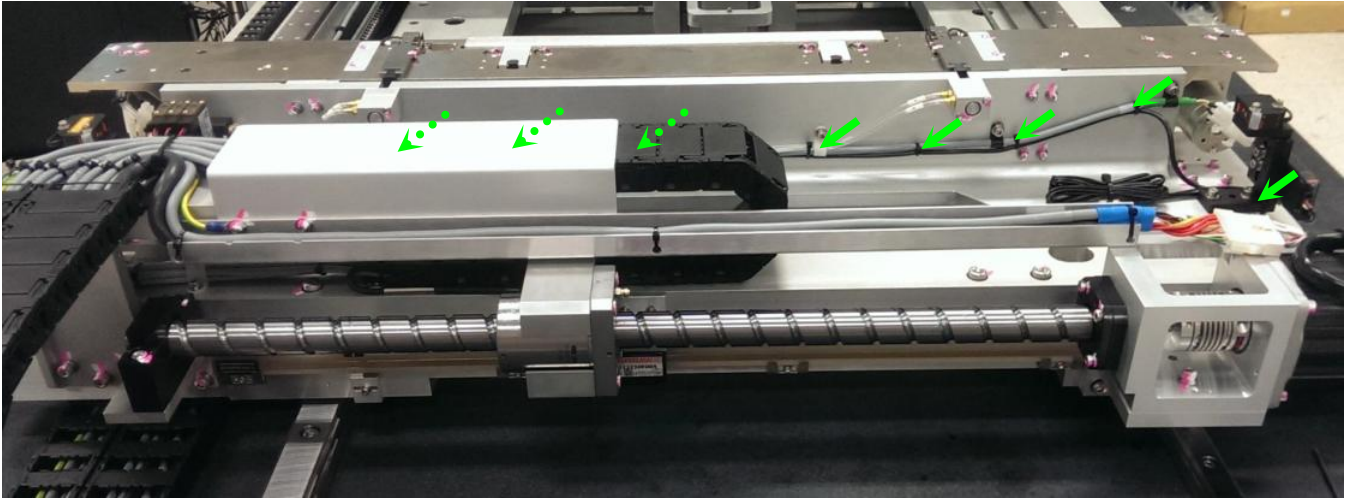


Figure 9 Cable Routing

12. Connect Sensor Amplifier End Connector to Cable where label with “Right Outer Barrier Filter Sensor” as Figure 10

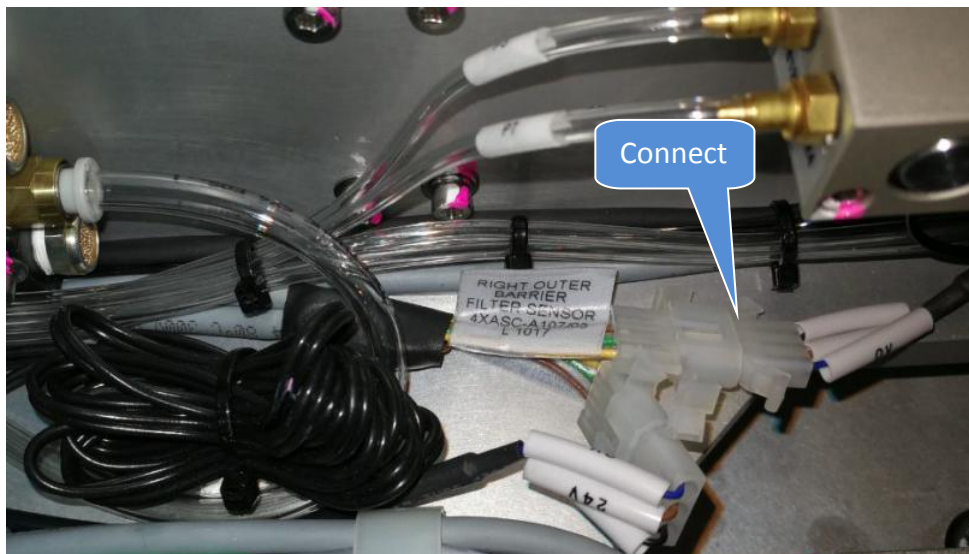


Figure 10 Sensor Amplifier Cable Connection

13. Remove all tools from machine,.close all the access door.

Sensor Amplifier Configuration

14. At V810 GUI, go to “Option” → “Production Option” → “General”, ensure the “flow direction” selected “Right to Left”.

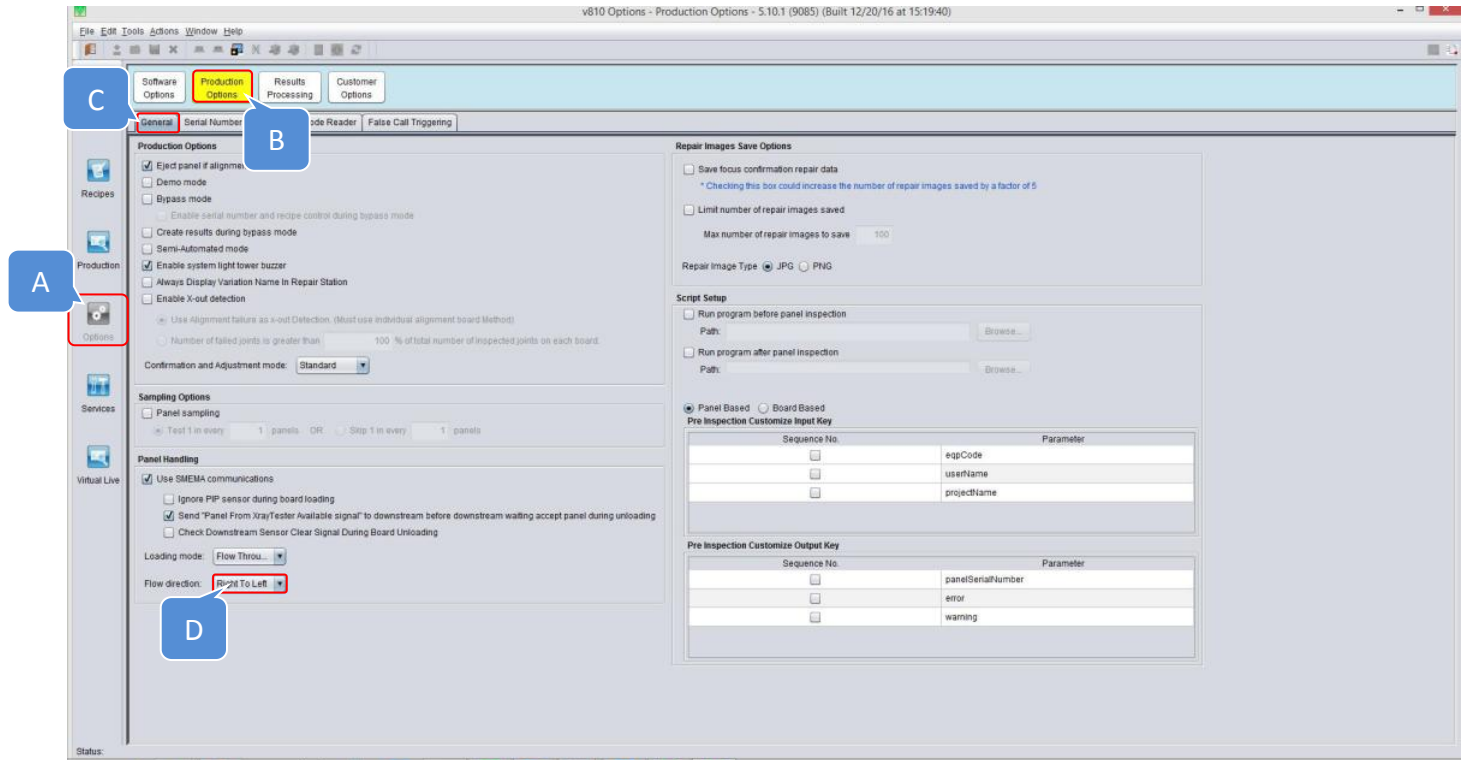


Figure 11 Right to Left loading direction.

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 STD Right Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	13 April 2017

15. Go to “Services” → “Subsystem Status & Control” → “Panel Handling” → “Display Measurement” → “Initialize” → “Load Panel (18 inches x 18 inches)” → “OK” → “Cancel”.

Once click “Ok”, XY stage will move to loading position. Once Right outer barrier door open, click “Cancel”.

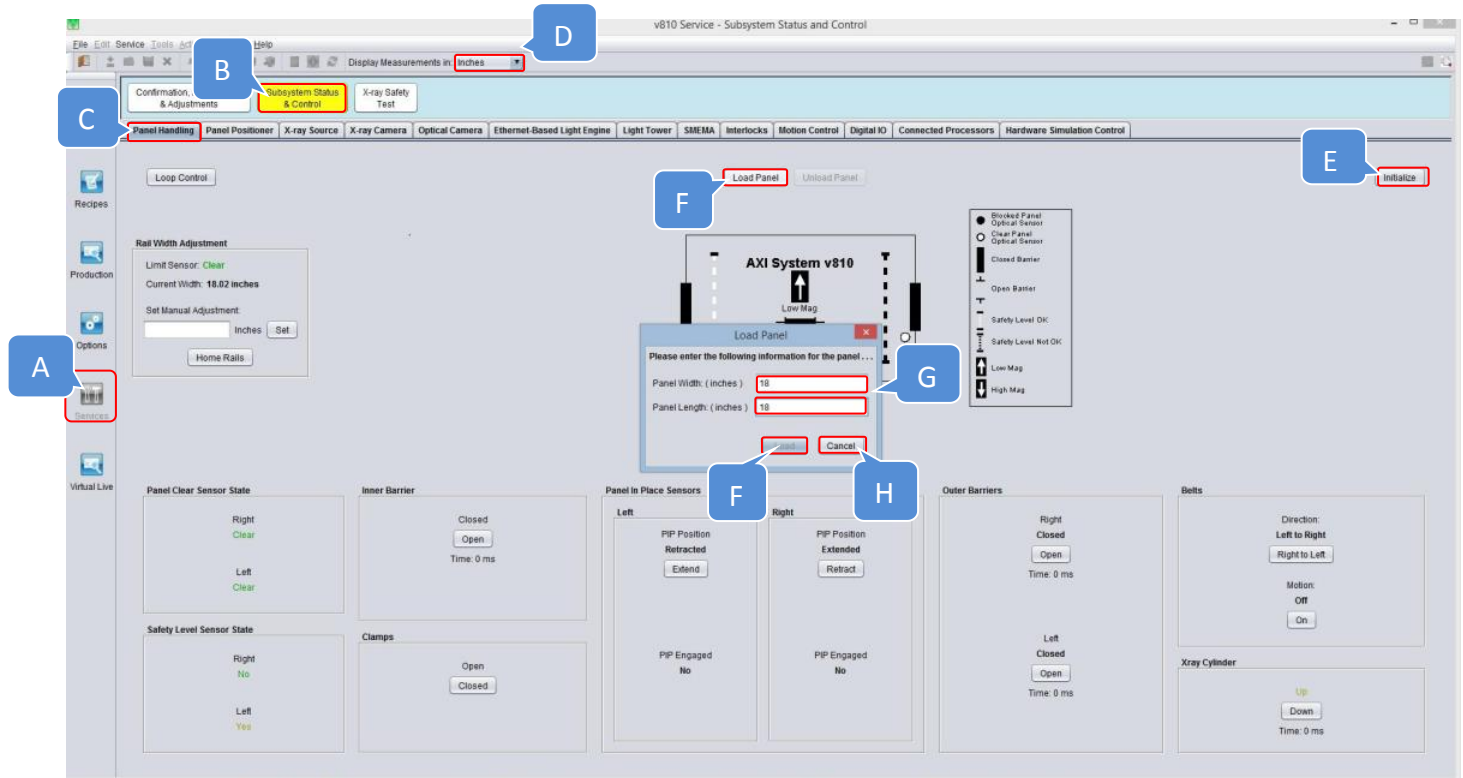


Figure 12 XY Stage (Right To Left Loading Direction)

16. Turn off X-ray sources. Open front door and XY stage will stop at Right Loading Area.

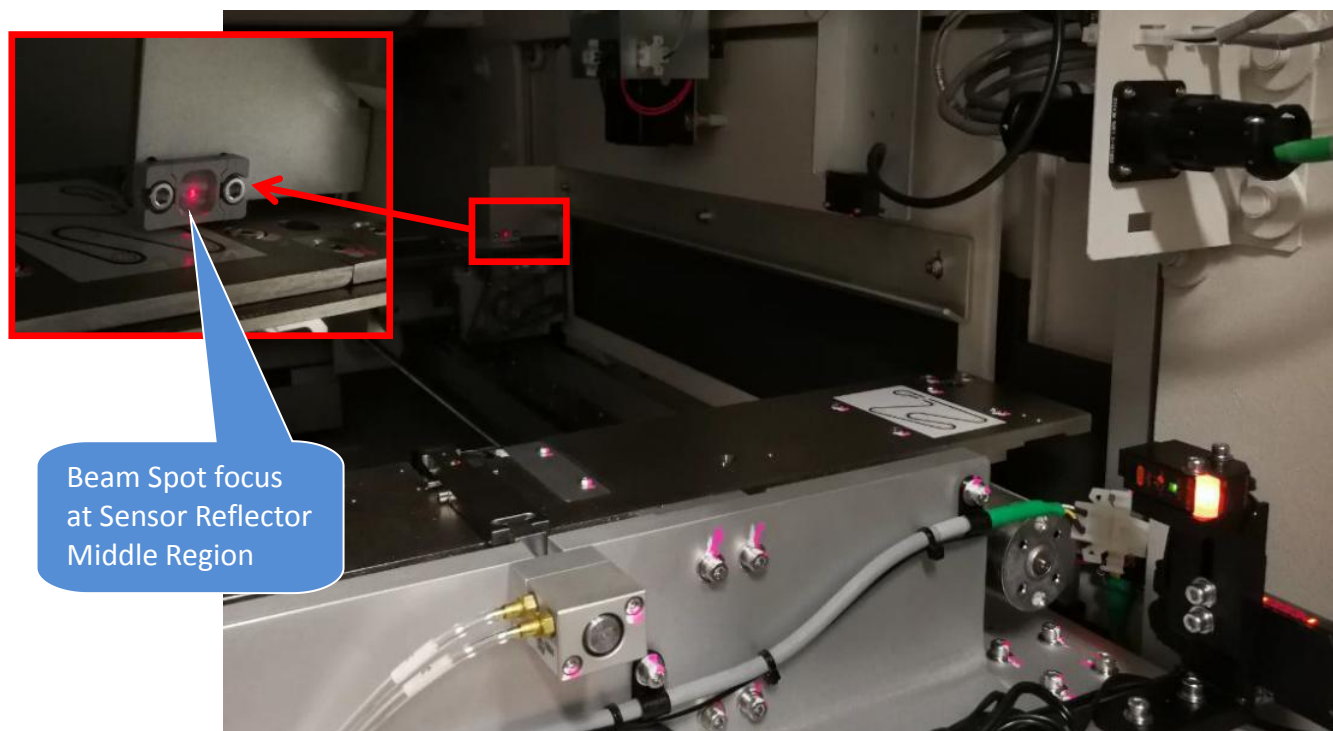


Figure 13 Right Loading Area

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 STD Right Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	13 April 2017

17. Remain XY stage at loading position. Open Sensor Amplifier Top Cover, Functional Button and Display Panel will illustrate as below Figure 12

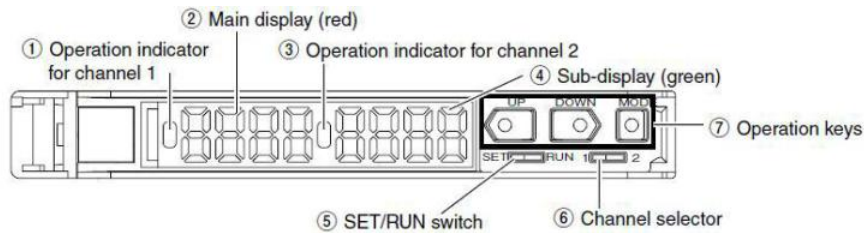


Figure 14 Sensor Amplifier Display Panel

18. Select “RUN” for the “SET/RUN switch”. and Channel 1. Hold “MODE” key more than 5 seconds. Release the “MODE” button when Progress Bar indicate
Special Remark :

- **Beam Spot require within Reflector Middle Region**
- **Non obstacle present within Beam Spot Detection Range while perform Power Tune**

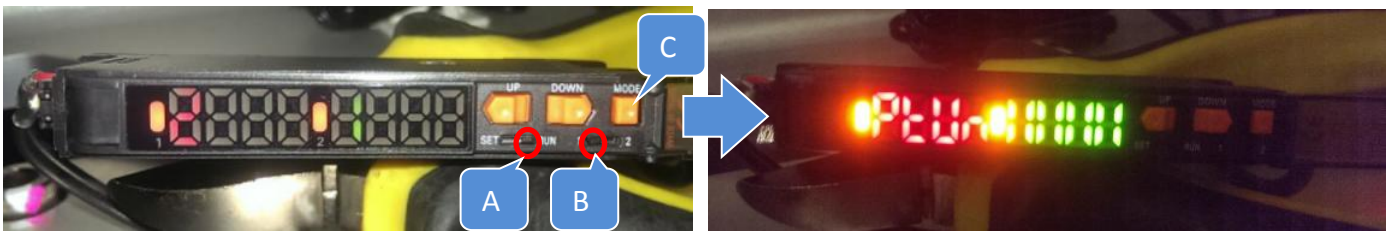


Figure 15 Power tune

19. After power tune the sensor, the intensity reading should around 2000. Press the “UP/ DOWN” button and set the Green LED threshold value by deduct 200 from 2000 Intensity



Figure 16 Threshold Setting

	Work Instruction	Doc. Revision	00
	AXI V810 STD Right Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	13 April 2017

20. Select "SET" for "SET/RUN switch", press "MODE" button to enter operation mode. In operation mode press "UP/DOWN" button to select Light-On (Lon).

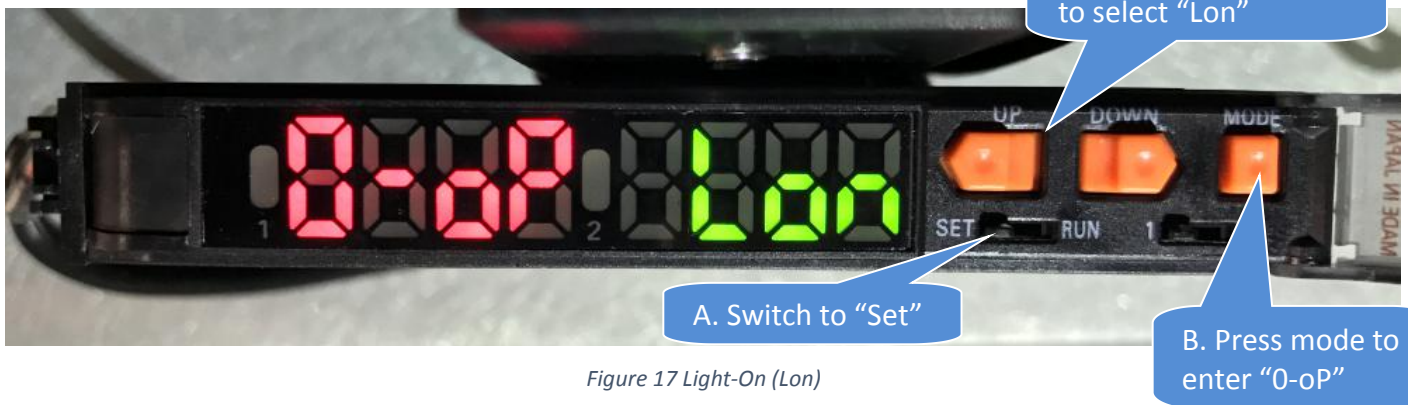


Figure 17 Light-On (Lon)

21. Press "MODE" button again to select Detection Method. Select "Standard (Std)".

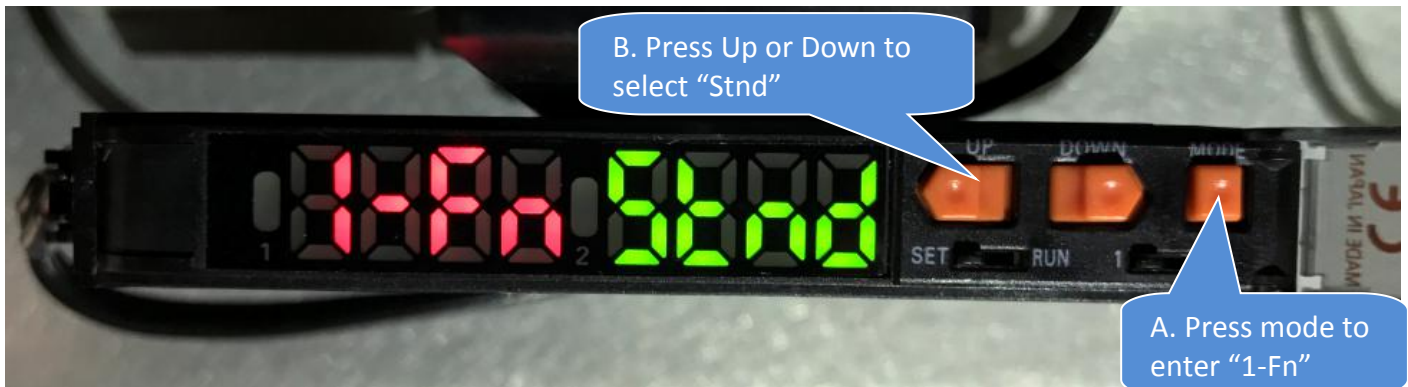


Figure 18 Standard (Std)

22. Press "MODE" button again to enter timer setting. Press "UP/DOWN" to select On-Delay Timer (on-d).

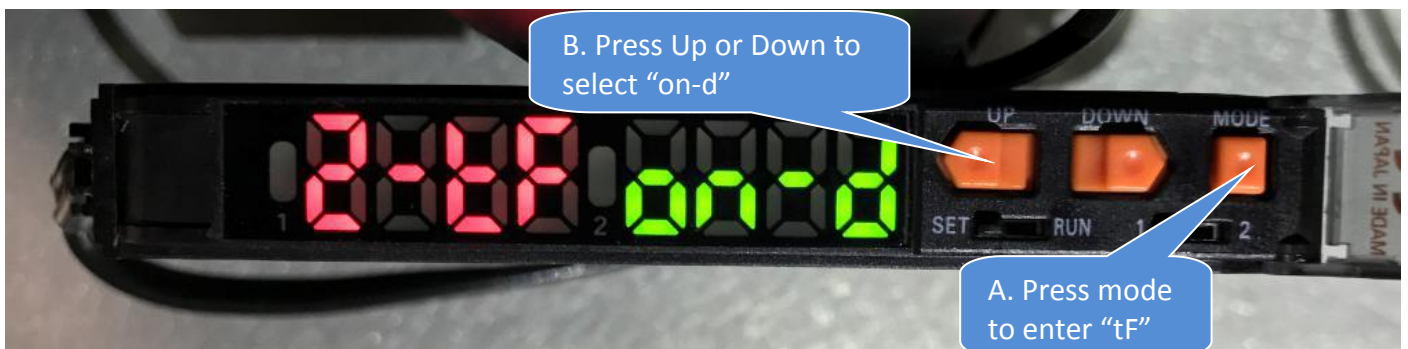


Figure 19 On-Delay Timer (on-d)

23. Press "MODE" button again to enter timer time setting. Press "DOWN" button until reach count 5000.

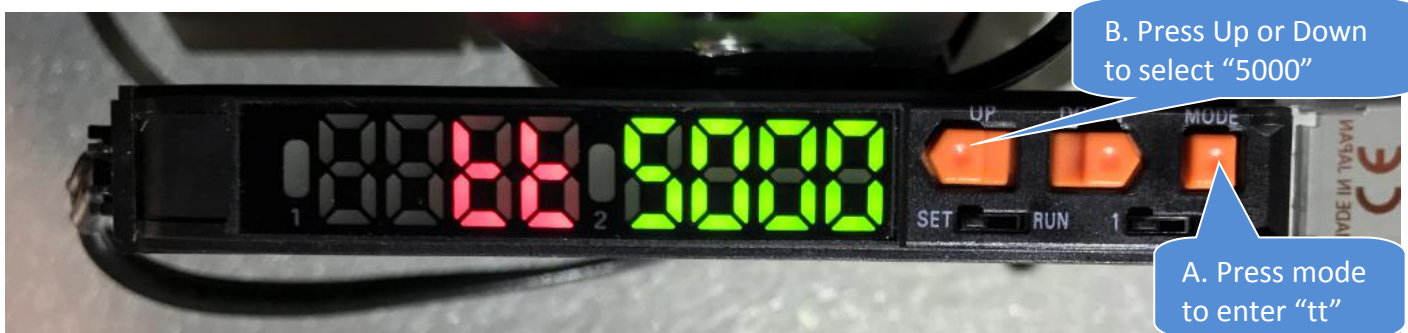


Figure 20 5000 Delay Timer

	Work Instruction	Doc. Revision	00
	AXI V810 STD Right Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	13 April 2017

24. Press “MODE” button again to enter twin output setting, press “UP/ DOWN” button, select “2oUT” for output for each channel.

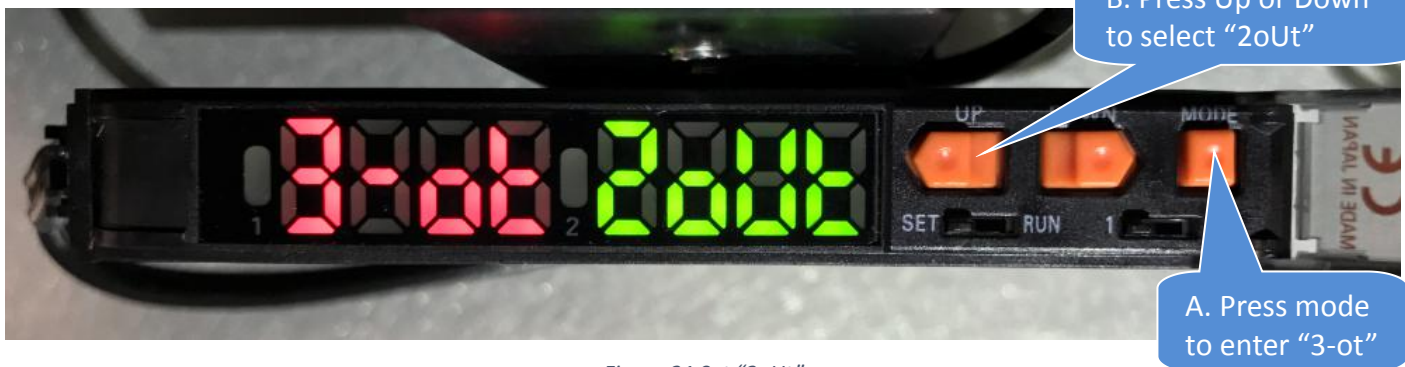


Figure 21 Set “2oUt”

25. Press “MODE” button again and ignore the other setting until the display back to the teaching interface as below Figure 22

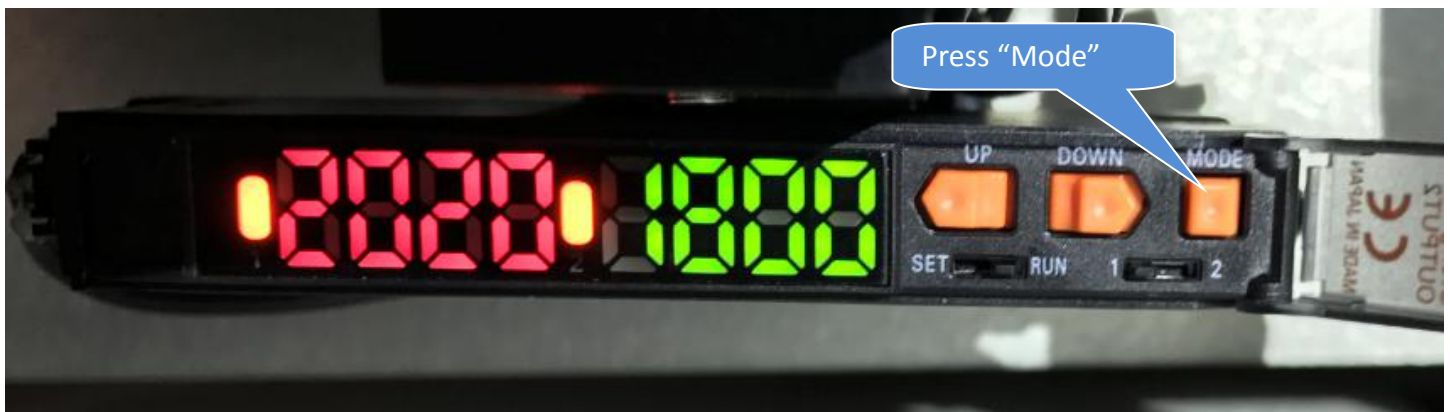


Figure 22 Teaching Interface

26. Turn the “SET/RUN switch” back to “RUN” position.

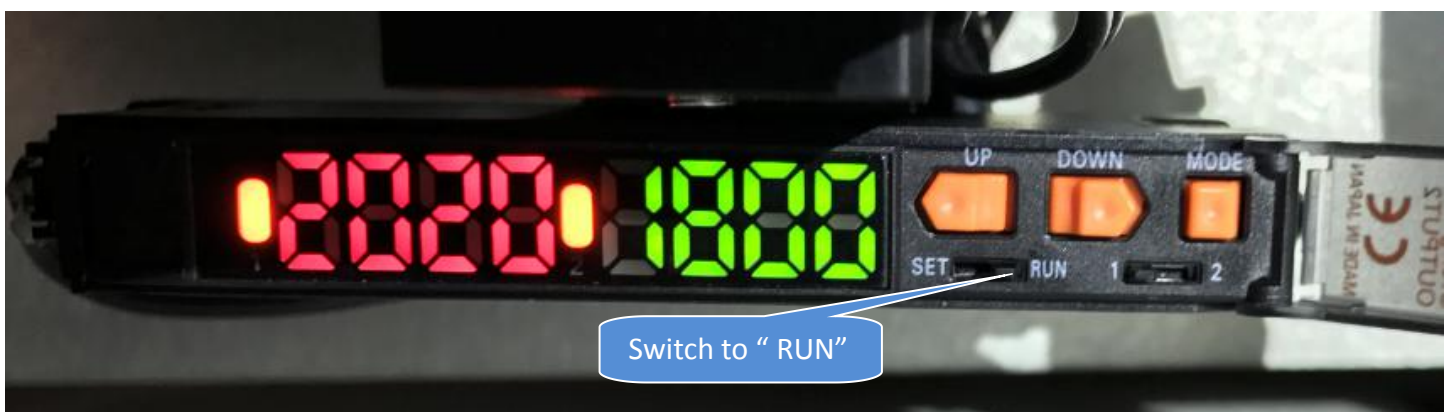


Figure 23 "RUN" Mode

	Work Instruction	Doc. Revision	00
	AXI V810 STD Right Filter Sensor Amplifier Removal & Replacement Procedure	Effective Date	13 April 2017

27. Select “RUN” for the “SET/RUN switch”. and Channel 1. Hold “MODE” key more than 5 seconds.

Release the “MODE” button when Progress Bar indicate

Special Remark :

- **Beam Spot require within Reflector Middle Region**
- **Non obstacle present within Beam Spot Detection Range while perform Power Tune**

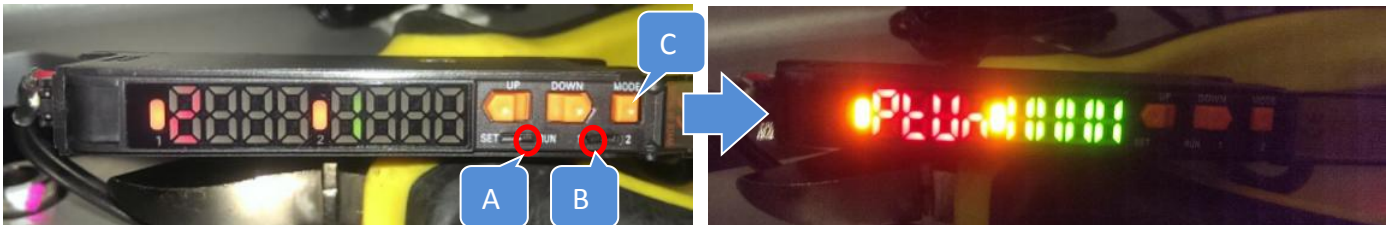


Figure 24 Power tune

28. Perform Filter Height Sensor Adjustment by refer to “ AXI V810 STD Filter Height Sensor Adjustment Procedure”