

	Work Instruction	Doc. Revision	01
	AXI V810 STD VM Z Hard Stop Holder Remove and Replace Procedure (HMag)	Effective Date	2 Oct 2016

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	10 Jun 2015	First Release	CHIN CHEE YAN
01	2 Oct 2016	Template Changes & Content update	ONG KEAN SHENG

ViTrox	Work Instruction	Doc. Revision	01
	AXI V810 STD VM Z Hard Stop Holder Remove and Replace Procedure (HMag)	Effective Date	2 Oct 2016

Unload board (if have) from machine.

1. Go to Panel Handling tab and Initialize. Ensure AWA is in Home Position (AWA with max opening) after done Initialize, Inner barrier in "Open" position and tube at "UP" position. (#Standard Machine, AWA home width 18 inch)

Services → Subsystem Status & Control → Digital I/O → Initialize → Inner Barrier "Open" → Tube "Up"

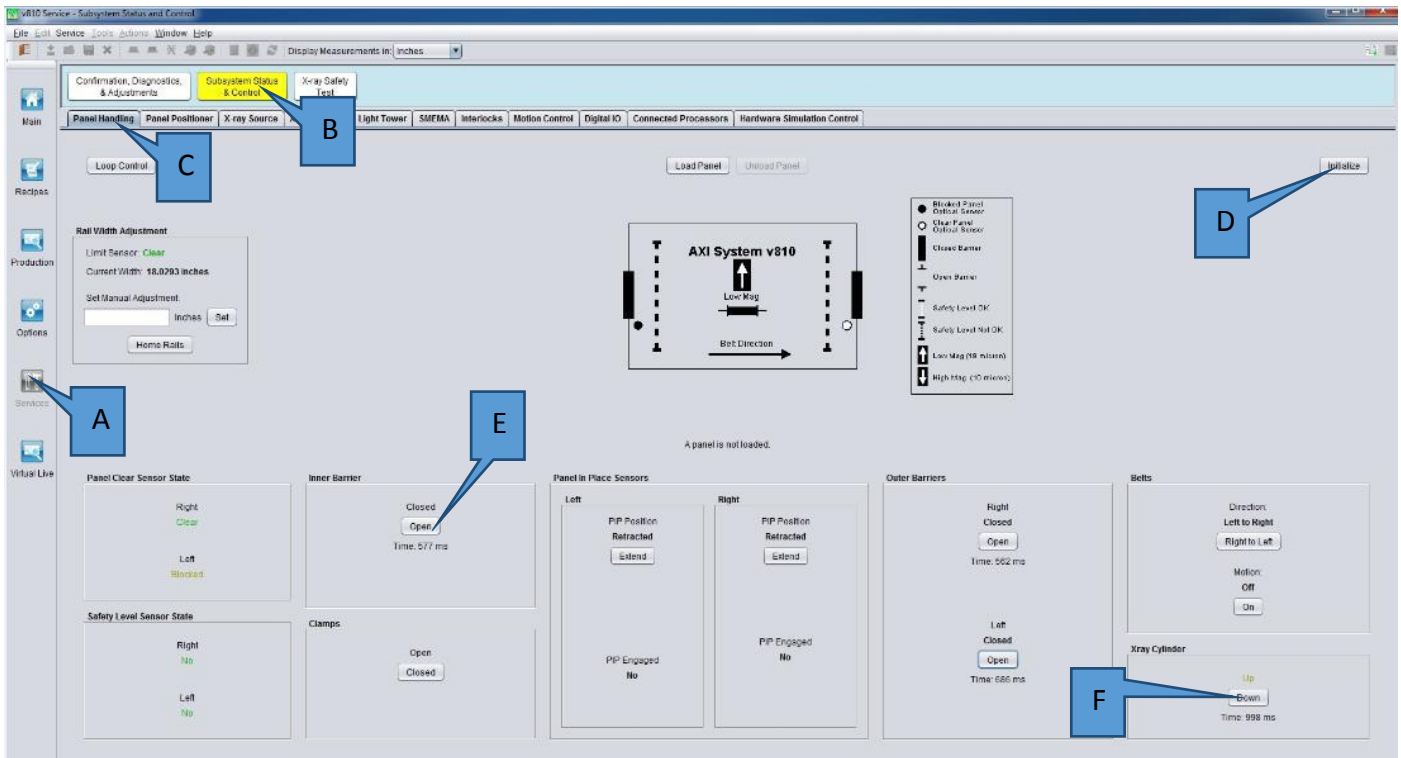


Figure 1 Panel handling

2. Turn off X-Ray Source and open the front door and remove the U-Shield Front Cover with loosen 4 x M5 nuts as shown.

Left is High Mag hard stop and Right is Low Mag hard stop.

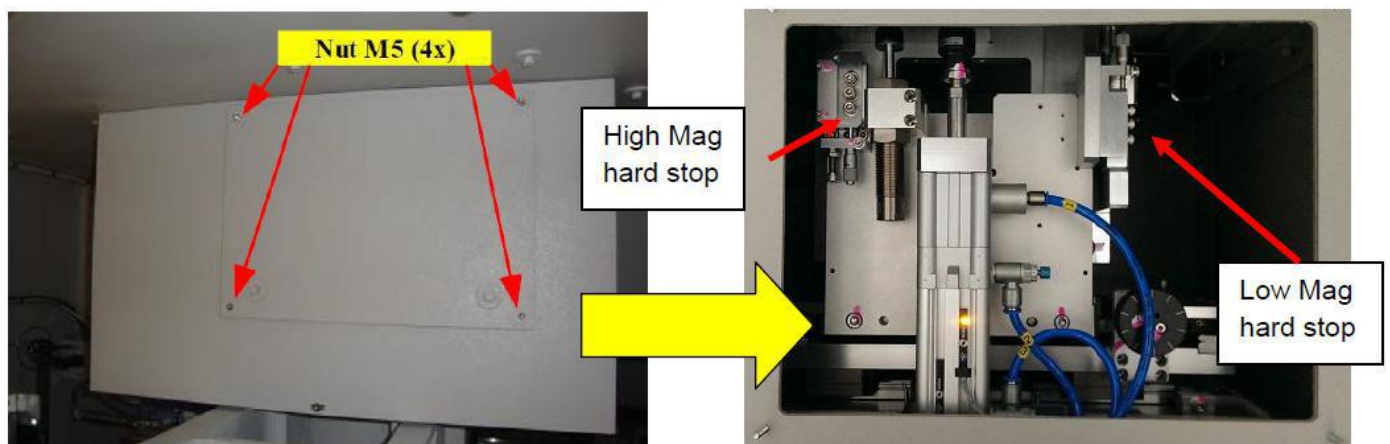


Figure 2 U-Shield Front Cover

	Work Instruction	Doc. Revision	01
	AXI V810 STD VM Z Hard Stop Holder Remove and Replace Procedure (HMag)	Effective Date	2 Oct 2016

- Loosen the 3 x M3 screws and push the block toward to top and tighten the screws back to avoid the block drop.

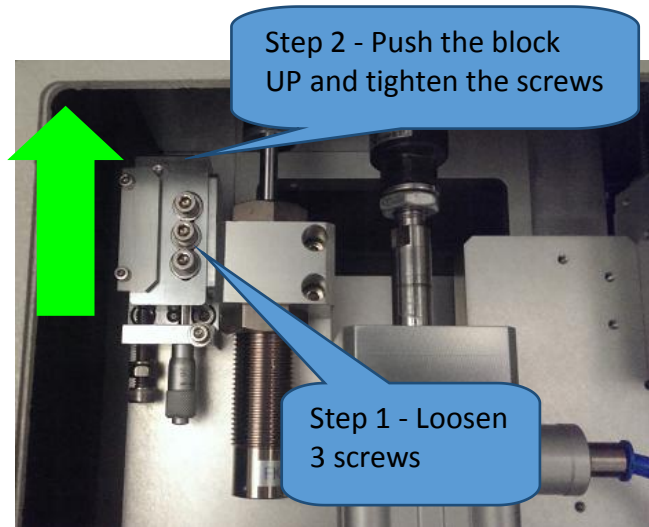


Figure 3 High mag hard stop

- Remove the 2 x M3 screws and remove the Z height module from system. Loosen the M5 x 25 if need.

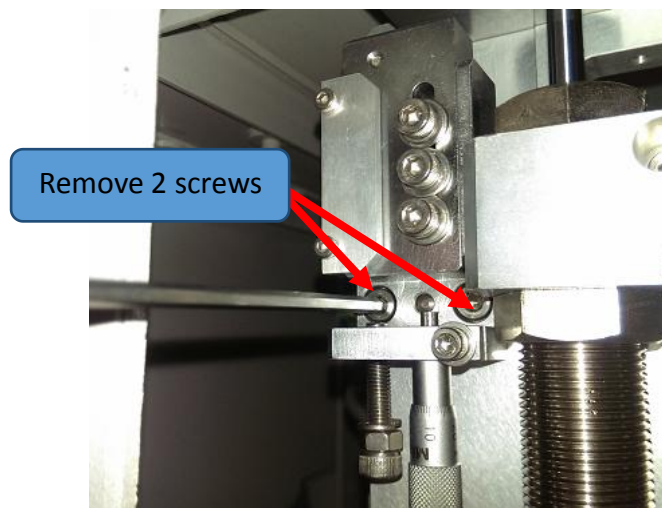


Figure 4 High mag hard stop

- Remove all screws (M3 x 3, M2.5 x 2) and remove the Cover Hard Stop (4XAHW-085) and 11um Z Hard Stop Block (4XAHW-084).

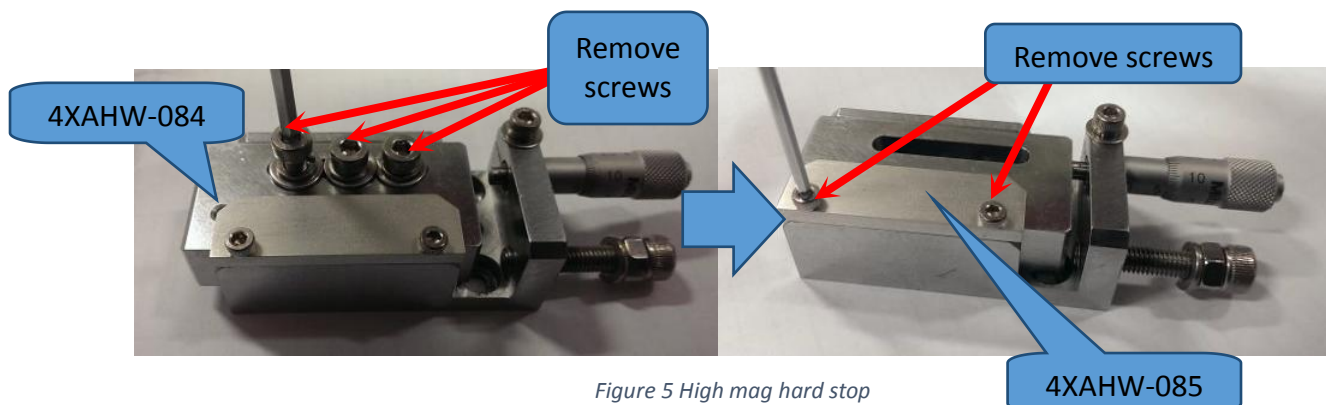


Figure 5 High mag hard stop

	Work Instruction	Doc. Revision	01
	AXI V810 STD VM Z Hard Stop Holder Remove and Replace Procedure (HMag)	Effective Date	2 Oct 2016

6. Unscrew as shown and remove Z Hard Stop Block.

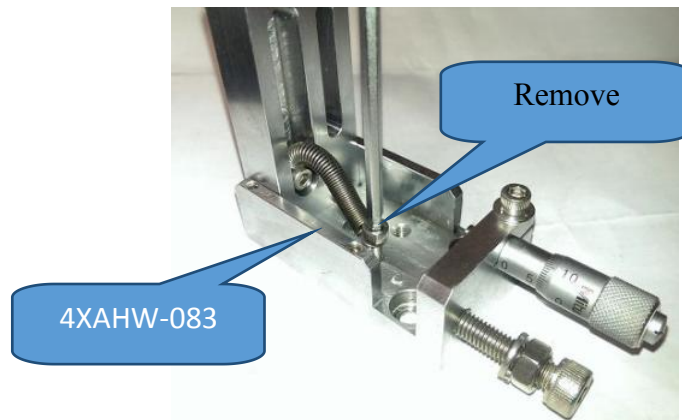


Figure 6 High mag hard stop

7. Unscrew (M3 x 12) and transfer the support screw (M5 x 25) and Micro Meter Head (1710-174) to new Z Hard Stop Holder (P/N, 4XAHW-083). Tighten the M3 x 12 with spring washer and flat washer; ensure the micro meter is well grip at the Black Ring.

Caution on the M5 Spring Washer and Nut orientation.

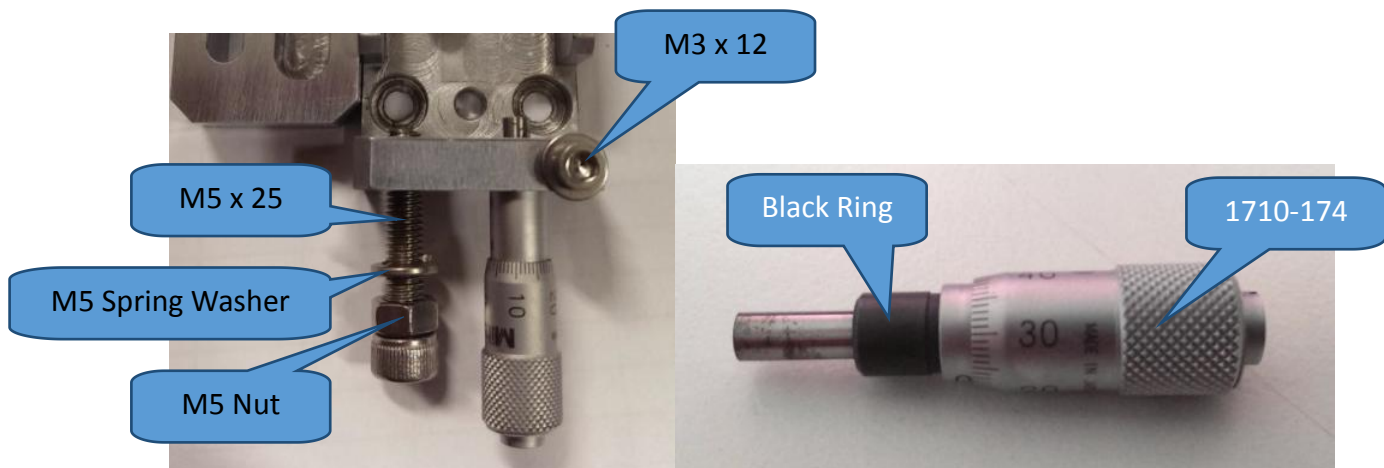


Figure 7 Micrometer

8. Assembly Z HARD STOP SPRING (4XAHW-086) at new Hard Stop Block Holder.

Caution on the screw orientation.

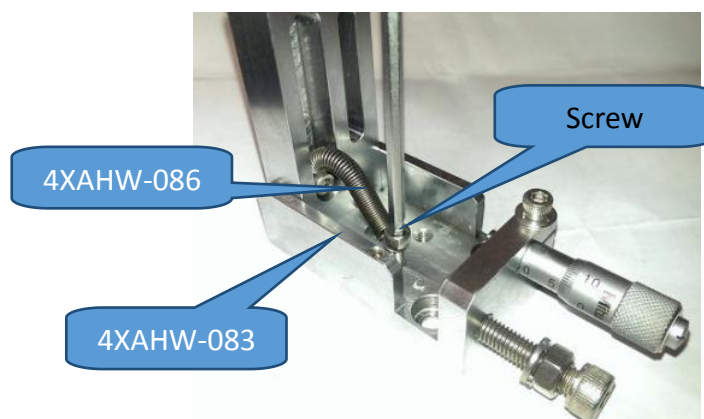


Figure 8 Spring removal

	Work Instruction	Doc. Revision	01
	AXI V810 STD VM Z Hard Stop Holder Remove and Replace Procedure (HMag)	Effective Date	2 Oct 2016

9. Flip the Hard Stop Module; ensure the screw is flat with surface and NO protrusion.

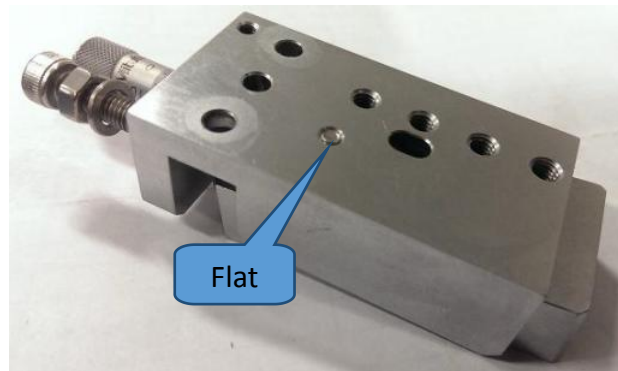


Figure 9 High mag hard stop

10. Manually play the block, push to max and ensure it could be retracting smoothly.

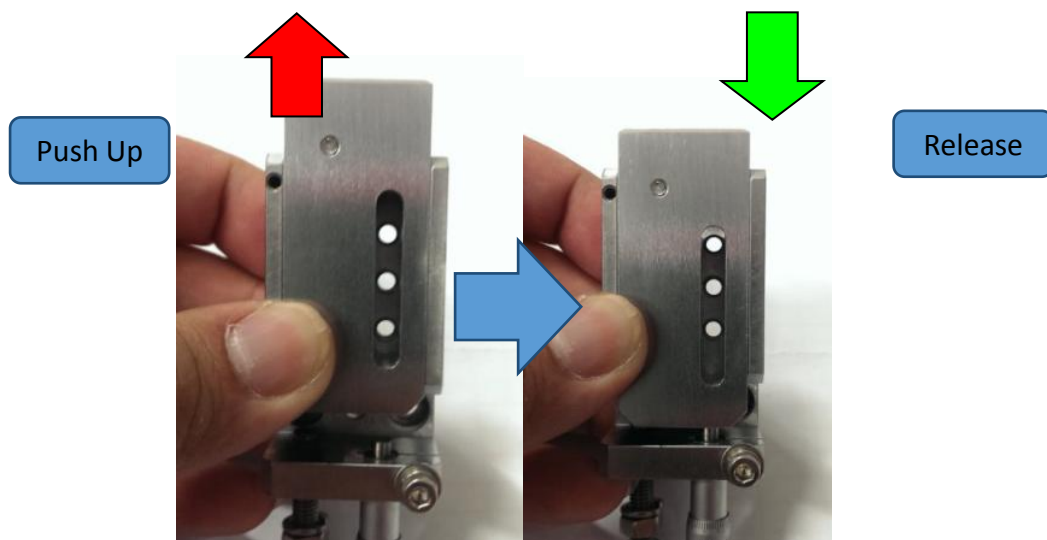


Figure 10 High mag hard stop

11. If found the movement is not smooth, need slightly bent the Z HARD STOP HOLDER (4XAHW-083).

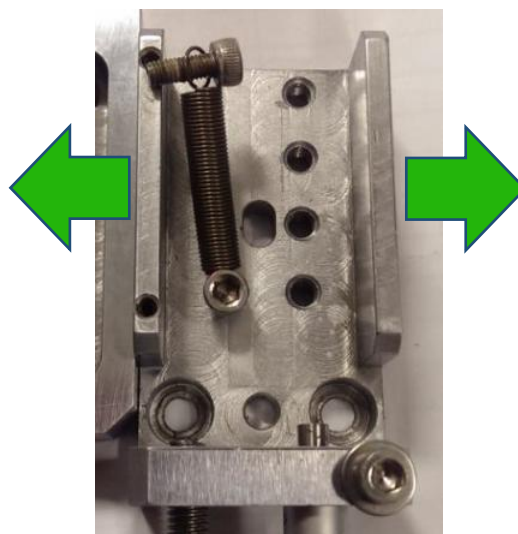


Figure 11 High mag hard stop

	Work Instruction	Doc. Revision	01
	AXI V810 STD VM Z Hard Stop Holder Remove and Replace Procedure (HMag)	Effective Date	2 Oct 2016

12. Assembles the Z HARD STOP COVER (4XAHW-085) and tighten the screws (M2.5 x 2). Ensure the edge is flat and the stack faces to Z Hard Stop Block.

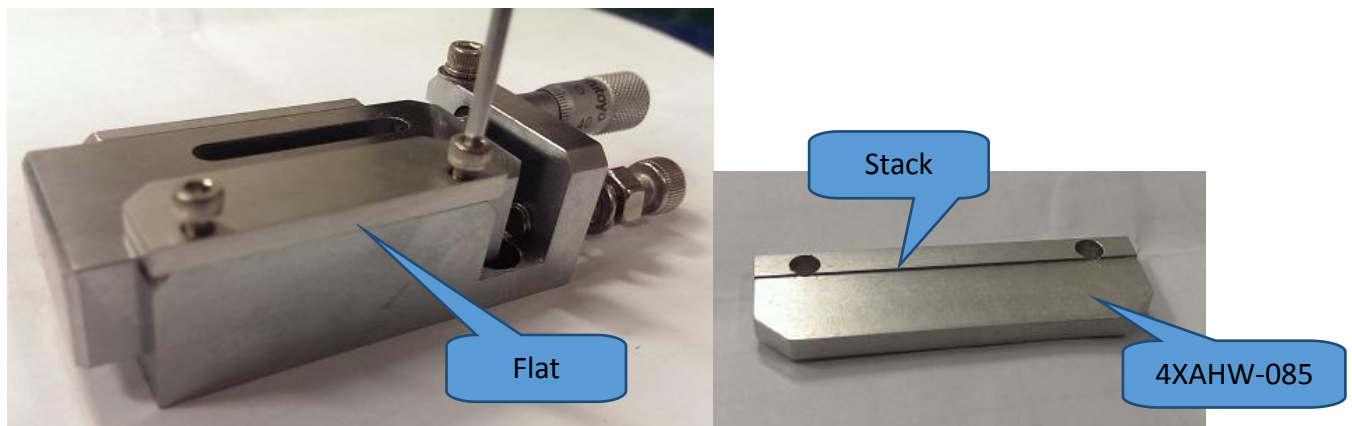


Figure 12 High mag hard stop

13. Assembly back the M3 x 3 screws as shown. Verify the retraction as Step 11.



Figure 13 High mag hard stop

14. Assembles the Z Hard Stop Module back to machine and tighten the screw. Ensure the module is allocated correctly with the dowel pin. Then position the Micro Meter until the screw dot near to edge as image show and tighten the M3 x 3.

Ease of H.Mag Magnification adjustment during CD&A test.

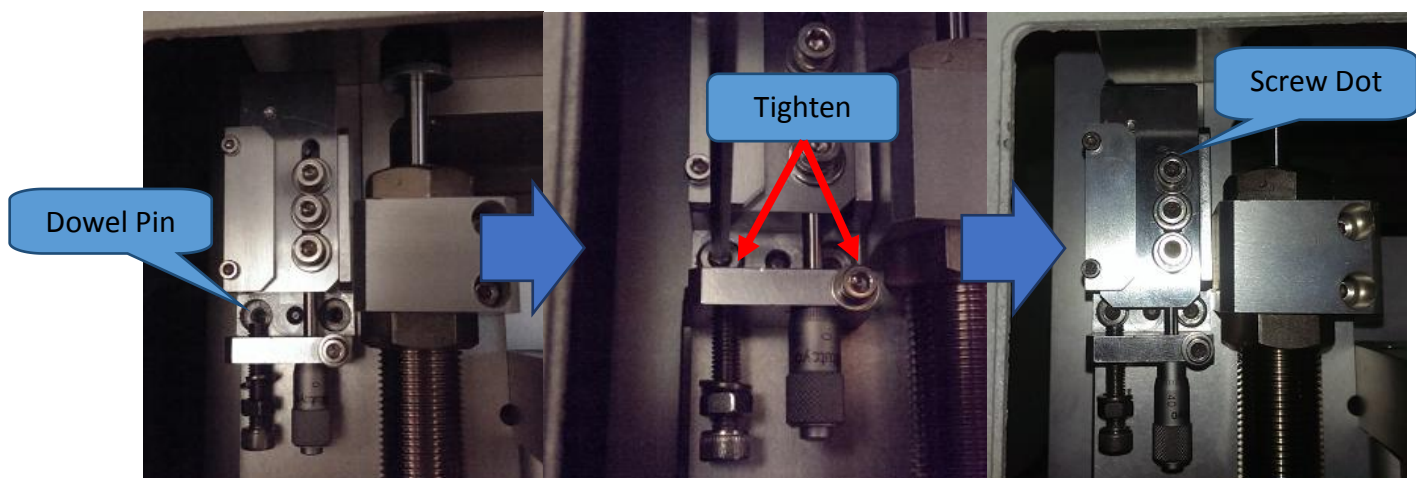


Figure 14 High mag hard stop

15. Once done, close all access doors and may refer to "AXI V810 STD VM (19um and 11um) Tube Height Adjustment Procedure REV 01"