

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Left Filter Height Sensor Removal & Replacement Procedure	Effective Date	30 June 2017

This procedure is applicable to below models:

V810 STD	☐	S1	☐	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	30 June 2017	First Release	Chin Chee Yan

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Left Filter Height Sensor Removal & Replacement Procedure	Effective Date	30 June 2017

Content

Removal Procedure.....	3
Replacement Procedure.....	5

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Left Filter Height Sensor Removal & Replacement Procedure	Effective Date	30 June 2017

Removal Procedure.

1. Unload board from machine if any
2. Go to X ray source tab and toggle “turn off X-Ray”.Power off at Operator Console Panel

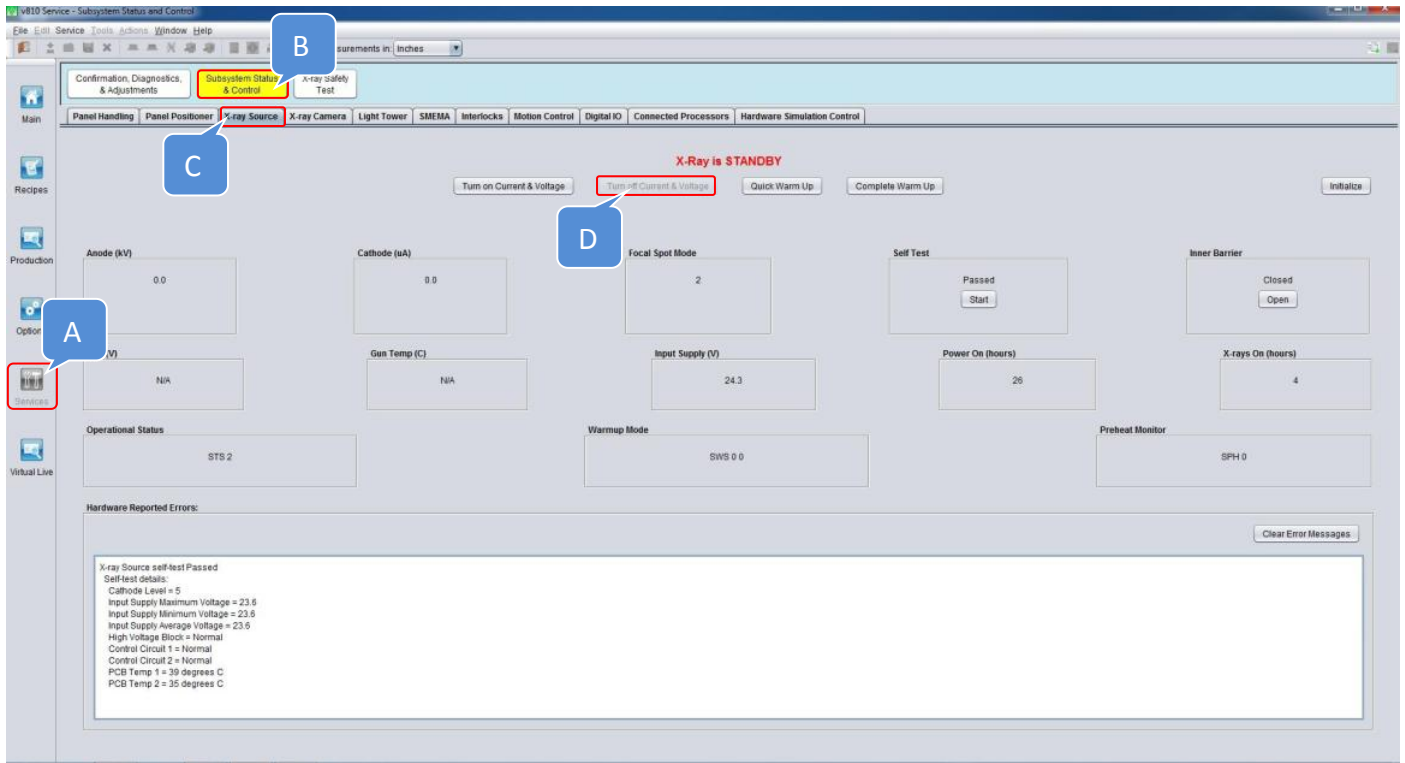


Figure 1 X ray Source Shutdown

3. Unscrew as shown and remove Filter Sensor Cover (P/N, 4LASS-270)



Figure 2 Filter Height Sensor Cover Removal

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Left Filter Height Sensor Removal & Replacement Procedure	Effective Date	30 June 2017

4. Open Sensor Amplifier top cover, unlock and disconnect Sensor Head End Connector as shown.

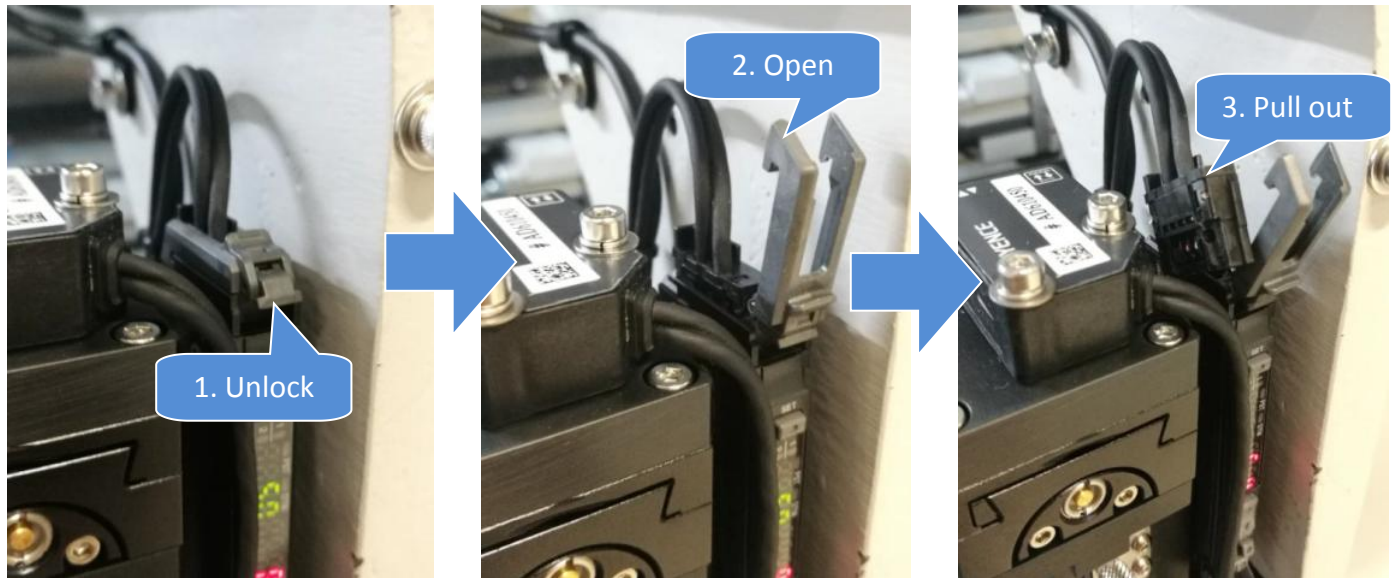


Figure 3 Sensor Head End Connector Removal

5. Unscrew the Sensor Head as shown.

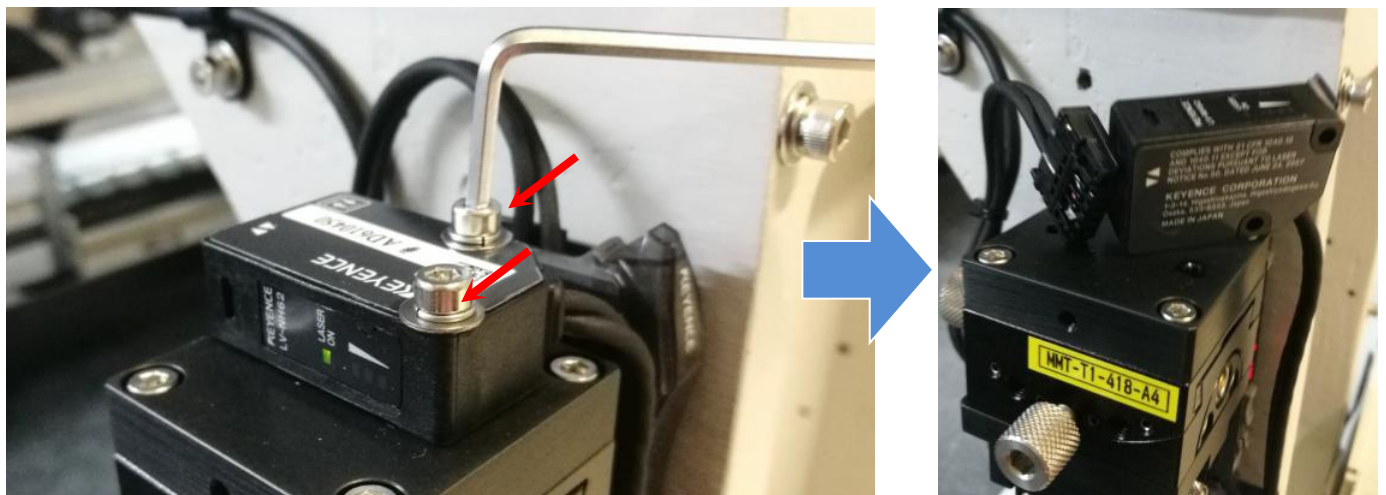


Figure 4 Sensor Head Removal

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Left Filter Height Sensor Removal & Replacement Procedure	Effective Date	30 June 2017

6. Remove cable tie as shown and completely remove sensor from system.

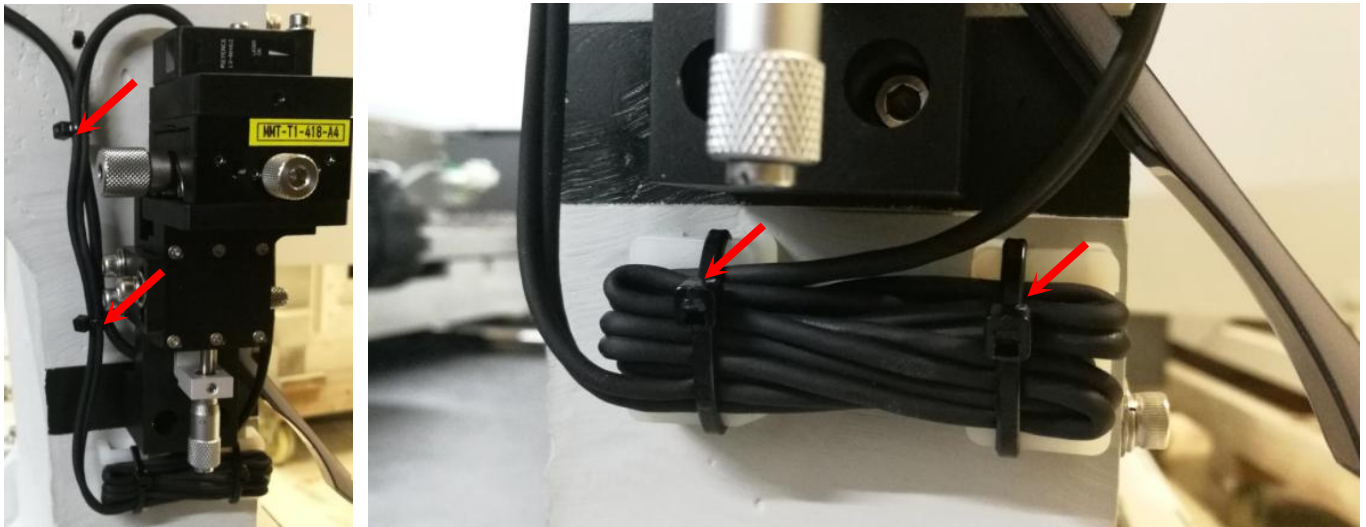


Figure 5 Filter Height Sensor Cable Removal

Replacement Procedure

7. Prepare new part, Sensor, Head, Laser Photoelectric (P/N, 2284-0063) as shown.



Figure 6 Filter Height Sensor Head

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Left Filter Height Sensor Removal & Replacement Procedure	Effective Date	30 June 2017

8. Assemble New Filter Height Sensor Head by refer to below orientation.Tighten 2 x Screws



Figure 7 Filter Height Sensor Head Assembly

9. Connect Sensor Head End Connector to Sensor Amplifier by refer to below sequence

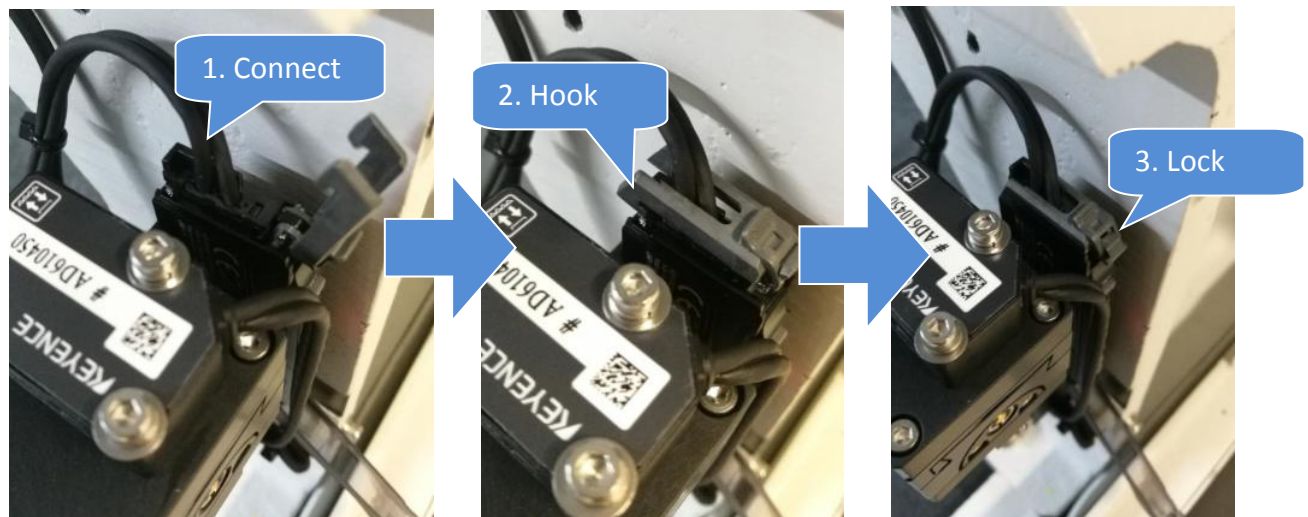


Figure 8 Sensor Head End Connector

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Left Filter Height Sensor Removal & Replacement Procedure	Effective Date	30 June 2017

10. Secure cable with cable tie as shown. Close the amplifier top cover

Remarks : Sufficient buffer for cable route & do not block Sensor Head Lens

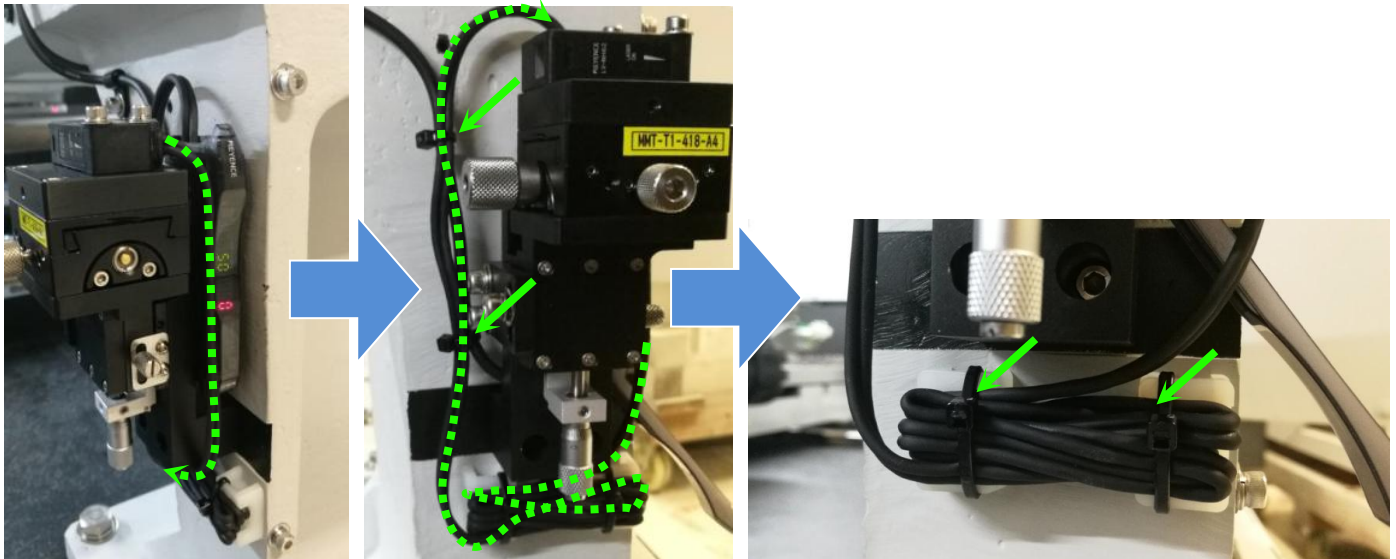


Figure 9 Cable Routing

11. Power Cycle SSCA to refresh Sensor Amplifier reading.



Figure 10 SSCA Power Cycle

	Work Instruction	Doc. Revision	00
	AXI V810 XXL Left Filter Height Sensor Removal & Replacement Procedure	Effective Date	30 June 2017

12. Re-position New Right Sensor and align Beam Spot to be focus at Sensor Reflector Middle Region

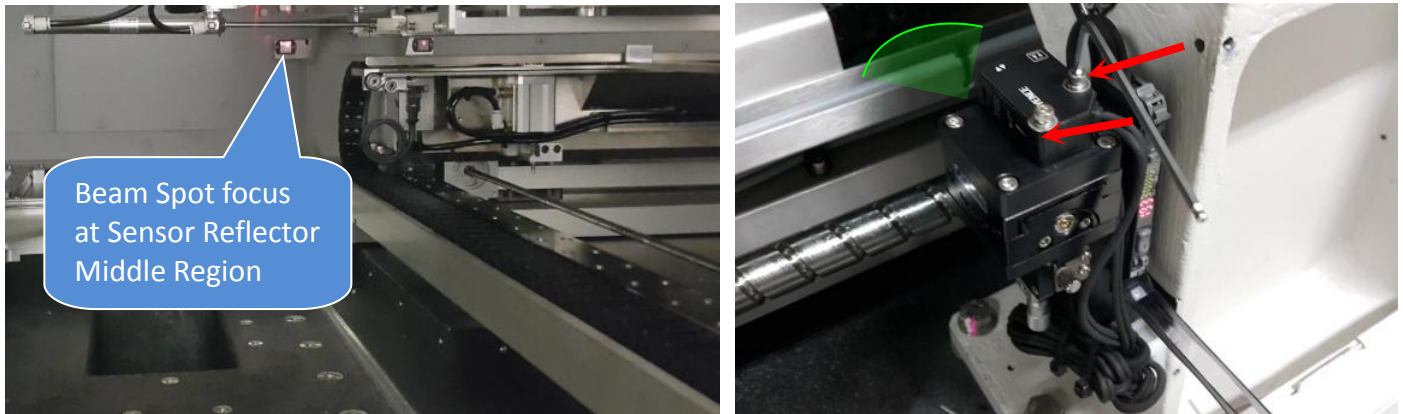


Figure 11 Beam Spot (Sensor Reflector Middle Region)

13. Assemble Filter Height Sensor Cover to Origin position. Remove tools from machine & close all access door.



Figure 12 Filter Height Sensor Cover Assembly

14. Perform XXL Filter Height Sensor Adjustment by refer to "AXI V810 XXL Filter Height Sensor Adjustment Procedure"