

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX OPTICAL PIP Board Stop Replacement Procedure	Effective Date	30 May 2016

This procedure is applicable to below models:

V810 STD	☐	S1	☐	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☒	Optical	☐	Mechanical
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	30 May 2016	First Release	Tan Liang Kai

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX OPTICAL PIP Board Stop Replacement Procedure	Effective Date	30 May 2016

Content

Stop, PC Board Removal.....	3
Stop, PC Board Replacement.....	4

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX OPTICAL PIP Board Stop Replacement Procedure	Effective Date	30 May 2016

** This procedure is applicable for left & right Stop, PC Board

Stop, PC Board Removal

1. Verify that there is no panel in the system.
2. Extend particular Stop, PC Board at Digital IO tab.
3. Turn off X-ray Source. Open Front Access Doors.
4. Remove 1 x 8-32 thread (Inches type) PIP Shoulder Screw from Stop, PC Board as shown in Figure 1.

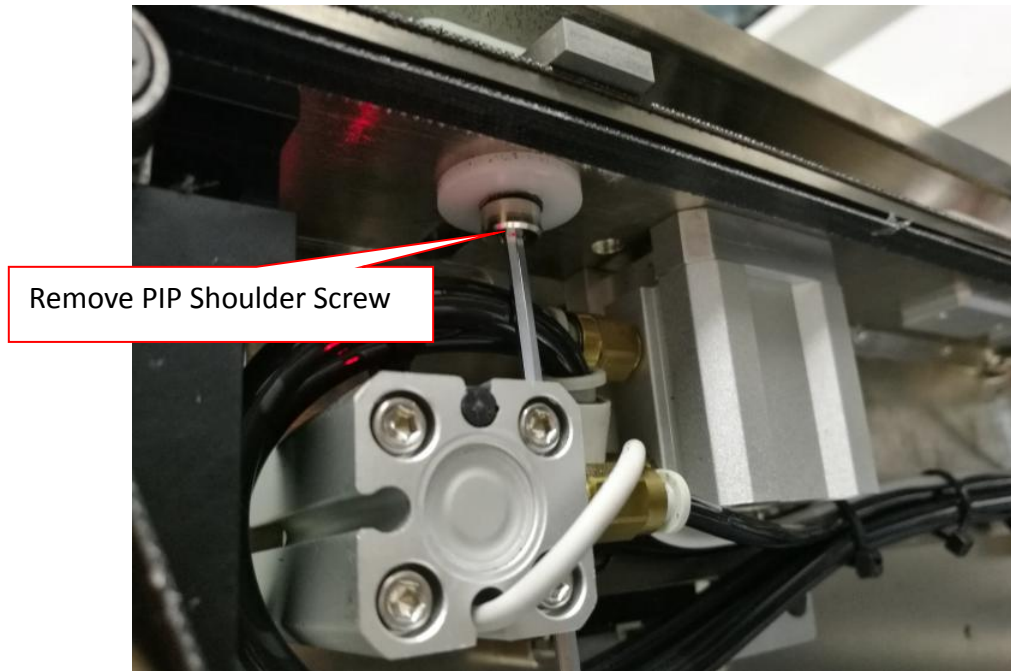


Figure 1 PIP Shoulder Screw removal

5. Gently position PIP Shoulder Screw, Curved Washer & Spacer at visible area.

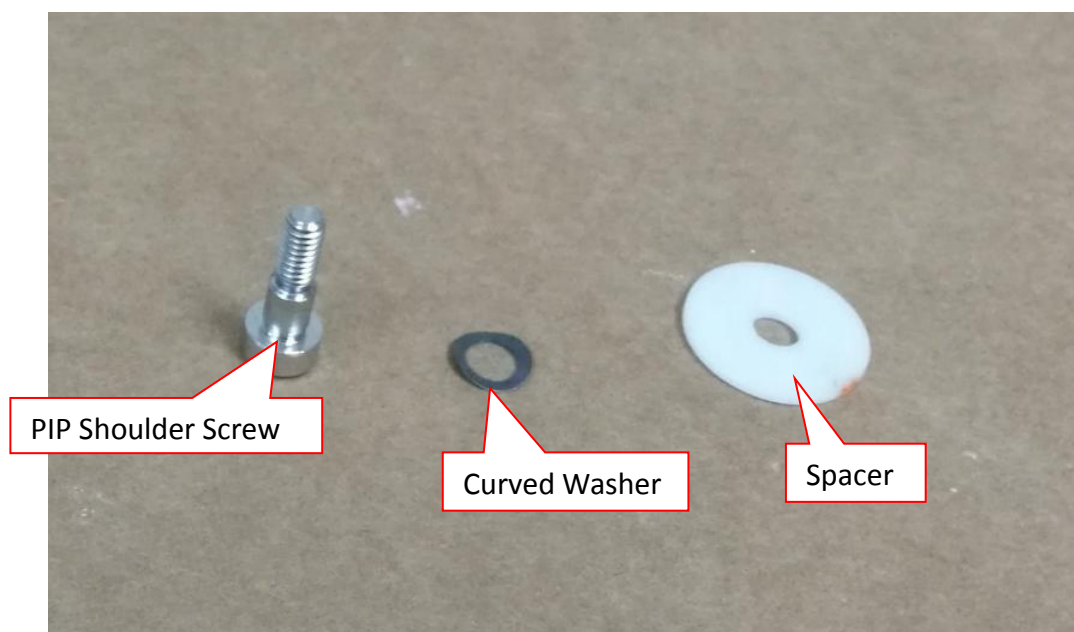


Figure 2

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX OPTICAL PIP Board Stop Replacement Procedure	Effective Date	30 May 2016

6. Gently remove Stop, PC Board as shown in Figure 3.

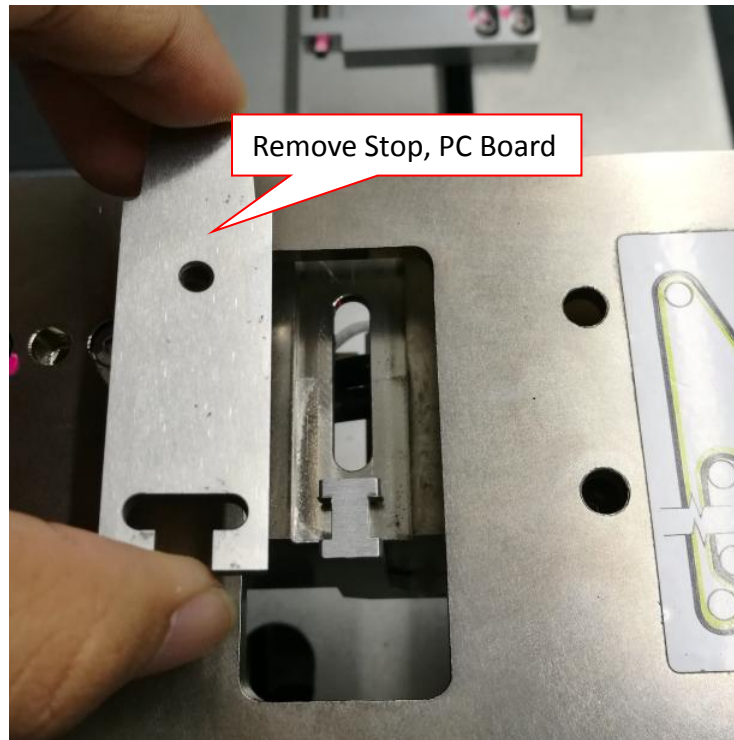


Figure 3 Stop, PC Board removal

Stop, PC Board Replacement

1. Prepare new Stop, PC Board, Curved Washer & Spacer by refer to below Part ID.
 - a) S2EX Stop, PC Board (P/N: 4JAXY-039) , Qty : 1pcs
 - b) Curved Washer (P/N: 2720-0021), Qty : 1pcs
 - c) Spacer (P/N: 4LAXY-129), Qty: 1pcs
2. Gently assemble new Stop, PC Board at Cylinder-Nose by refer to below orientation (Figure 4)

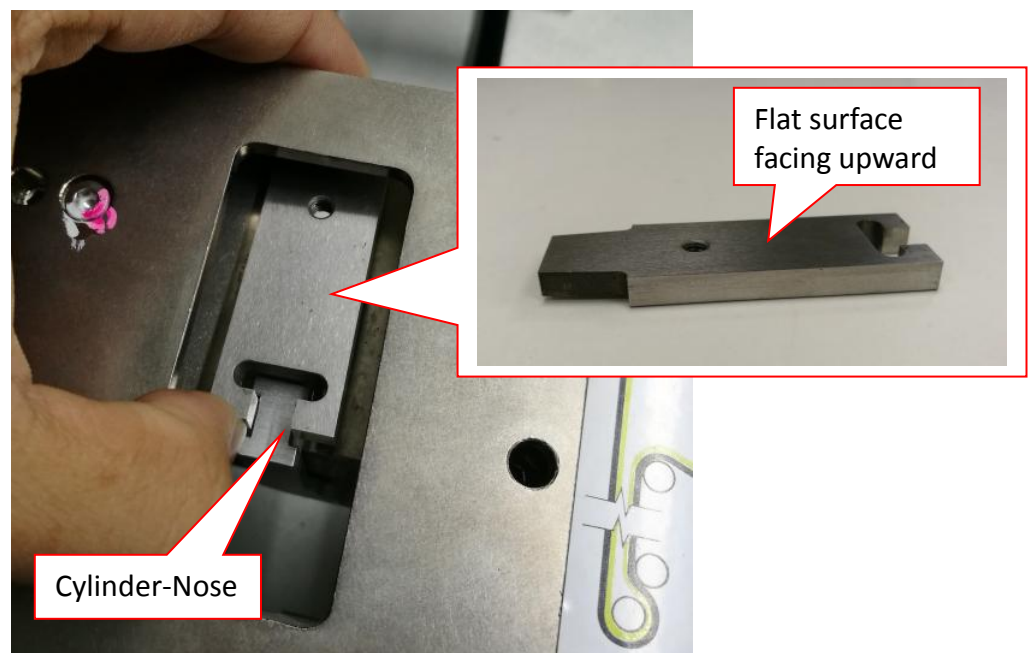


Figure 4 Stop, PC Board

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX OPTICAL PIP Board Stop Replacement Procedure	Effective Date	30 May 2016

3. Arrange below fastening kit by refer below sequence. May refer to Figure 5.

a) PIP Shoulder Screw > Curved Washer > Spacer

Remark: Replace necessary Curved Washer & Spacer if worn out upon part replacement

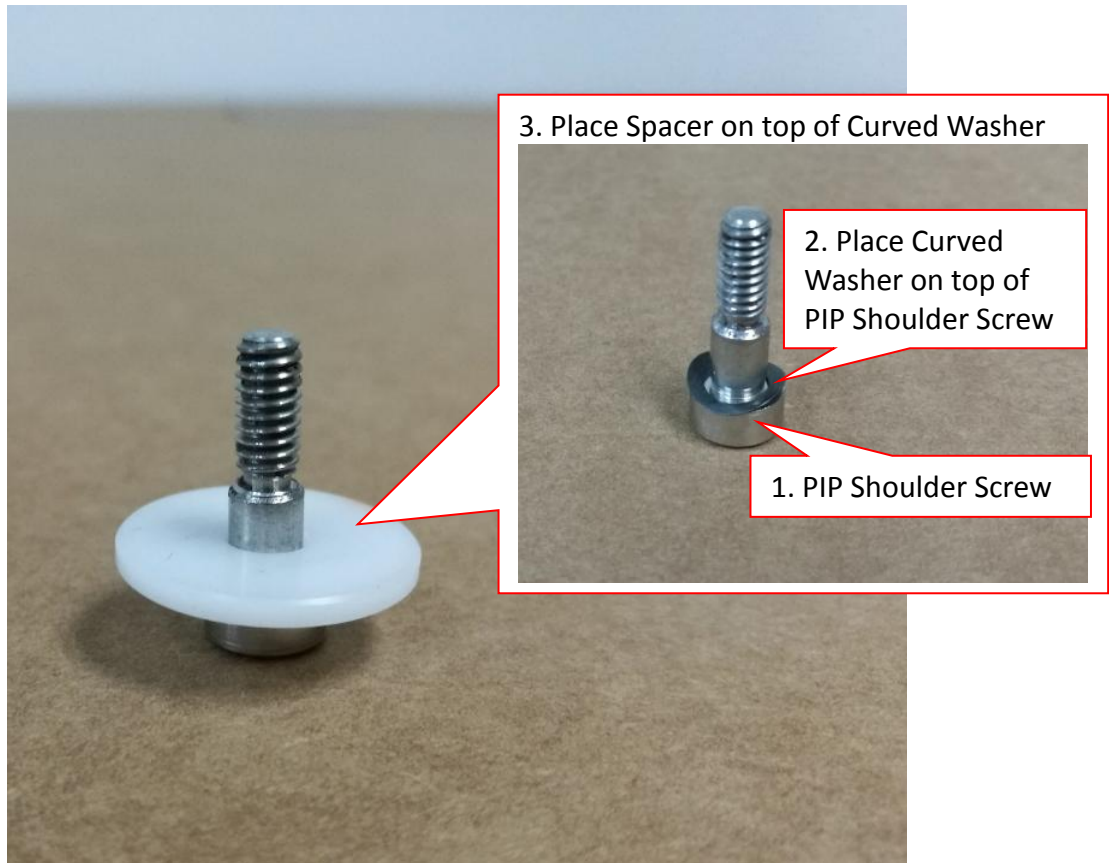


Figure 5 PIP Shoulder Screw Assembly

4. Assemble all fastening (PIP Shoulder Screw, Curved Washer & Spacer) into PIP Board Stop as Figure 6. Tighten Shoulder Screws.

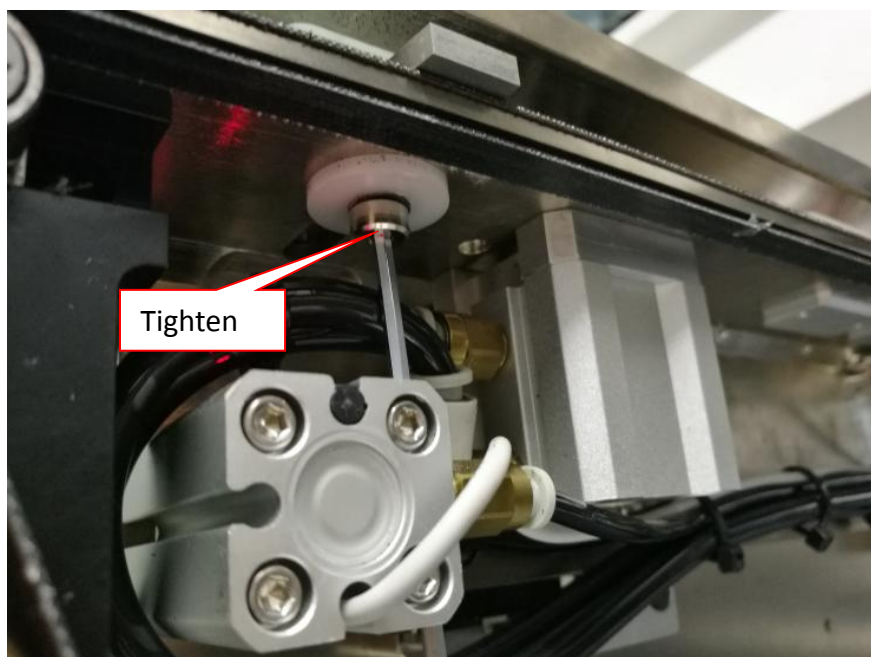


Figure 6 Stop, PC Board assembly

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX OPTICAL PIP Board Stop Replacement Procedure	Effective Date	30 May 2016

5. Go to Services > Subsystem Status & Control > Digital IO > Click “Initialize” as shown in Figure 7.

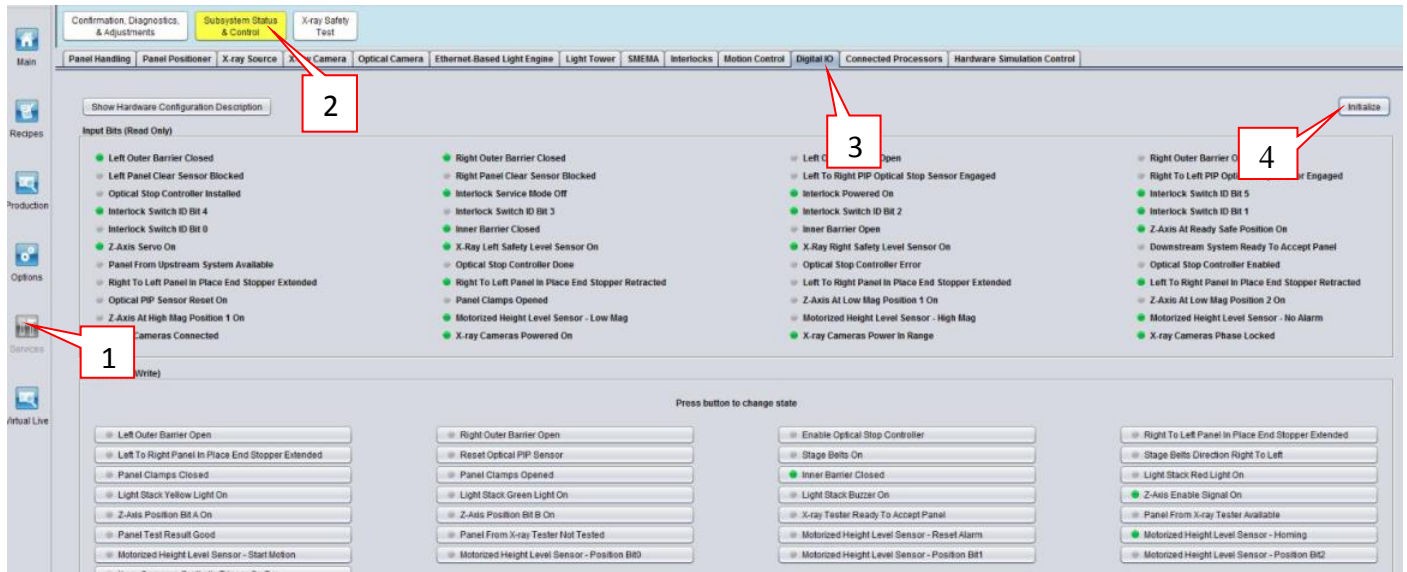


Figure 7 Digital IO

6. Manually toggle extend & retract PIP End Stopper as shown in Figure 8. Visual check PIP End Stopper where require to re-act accordingly as command toggle.

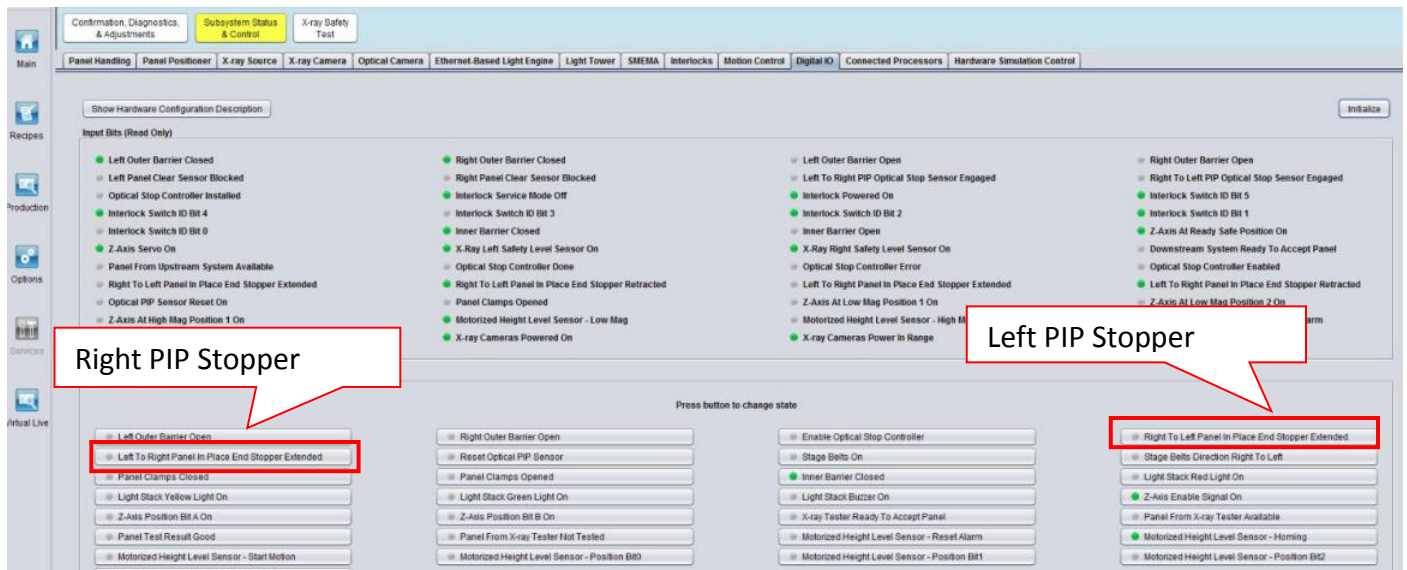


Figure 8 Digital IO

7. Close Front Access Door. Open X-ray Source.
8. Run one loop of CD&A.