

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Y-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

This procedure is applicable to below models:

V810 STD	☐	S1	☐	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	25 Jan 2017	First Release	TAN LIANG KAI

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Y-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

Content

A. Y-Axis Glass Scale.....	3
I. Y-Axis glass scale removal.....	3
II. Y-Axis Glass Scale Replacement.....	5

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Y-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

A. Y-Axis Glass Scale

I. Y-Axis glass scale removal

S2EX machine Y-Axis glass scale assembly Part ID: 4XASP-A145

1. Turn off x-ray source and open front access door.
2. Remove spring clamps on encoder cover plate as shown in Figure 1.



Figure 1 Y-Axis glass scale

3. Unscrew screws as shown in Figure 2. Gentle remove y-axis cover plate and encoder cover plate from machine.

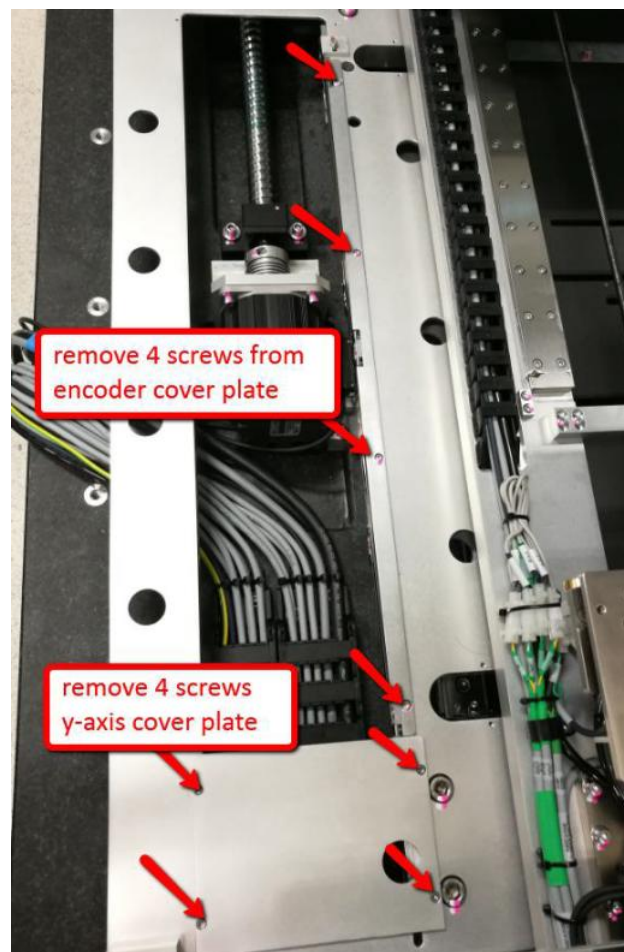


Figure 2 Screws removal

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Y-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

4. Remove spring clamps, home sensor and limit sensor as shown in Figure 3.

Remark: Perform minor marking on current limit sensor & home sensor for ease of adjustment

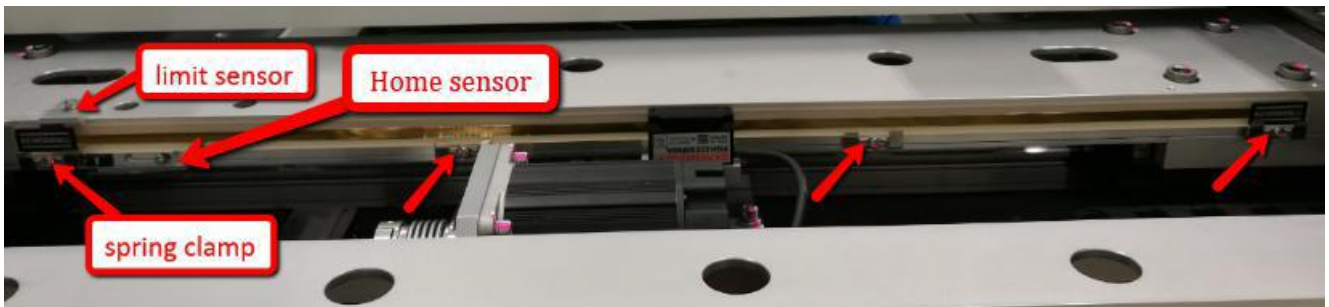


Figure 3 Glass scale

5. Gently remove Y-Axis encoder as shown in Figure 4 and allocate at visible position.

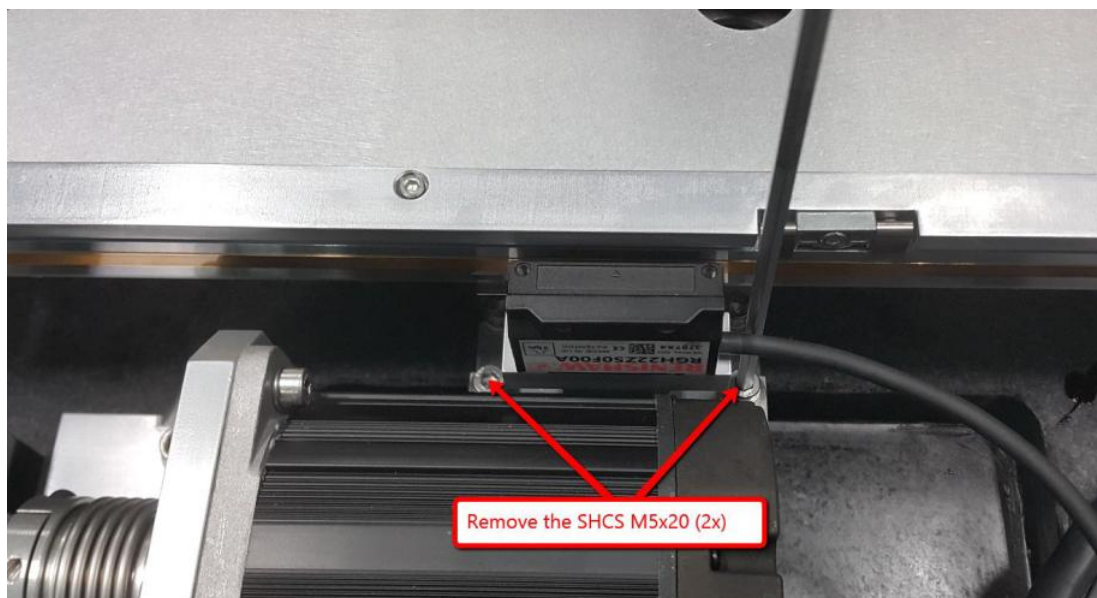


Figure 4 Y-Axis Encoder

6. Cut RTV glue which secure glass scale.

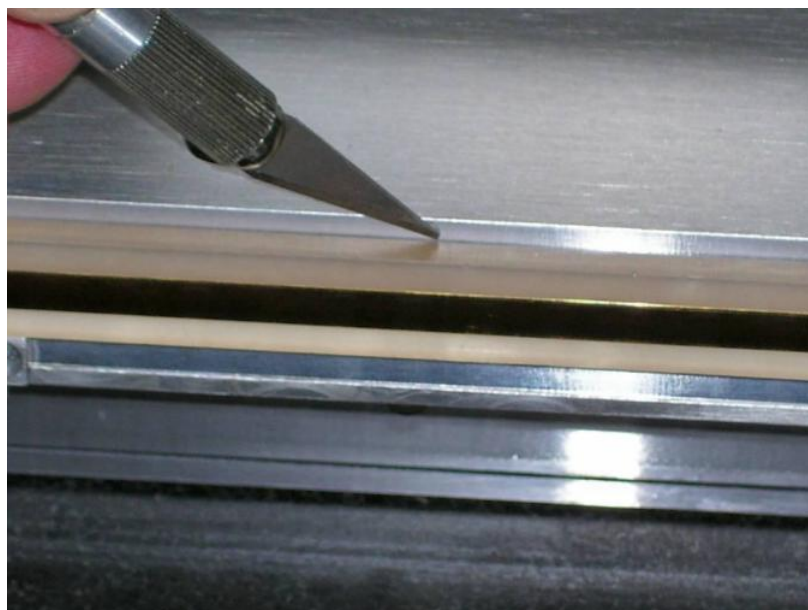


Figure 5 RTV glue removal

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Y-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

- Gentle slide out Y-Axis glass scale toward up direction as shown in Figure 6.



Figure 6 Glass scale removal

II. Y-Axis Glass Scale Replacement

- Gentle assemble new Y-Axis glass scale as shown in Figure 7.

Remark: Caution on glass scale orientation.

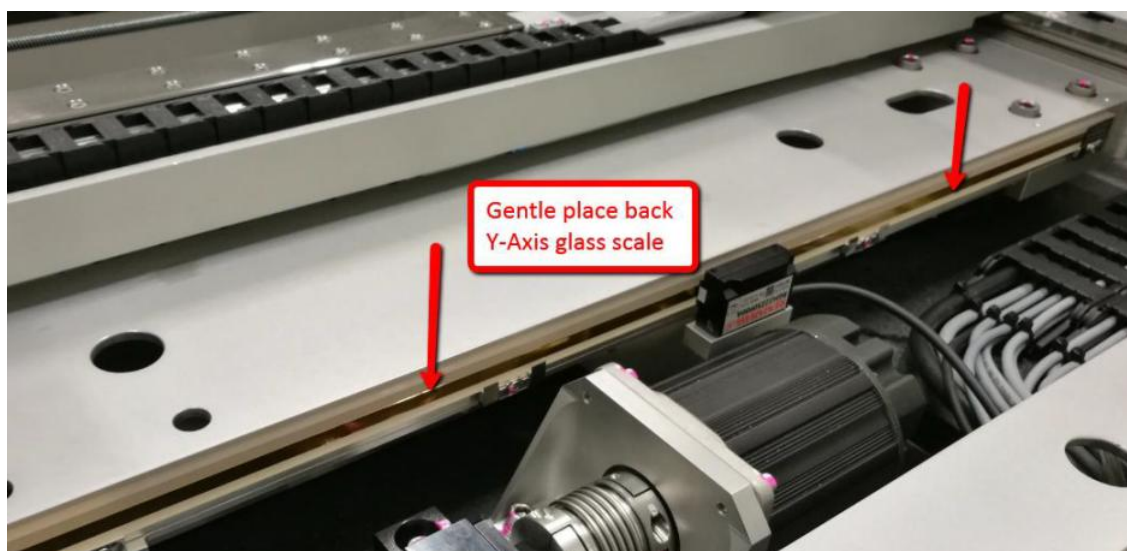


Figure 7 Glass scale replacement

- Position glass scale lining up at termination tag of the glass scale with spring clamp.



Figure 8 Glass scale lining up (Reference only)

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Y-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

3. Assemble limit sensor and home sensor by refer to origin location (By refer to Step 4). Tighten all screws which secure spring clamp as shown in Figure 9.

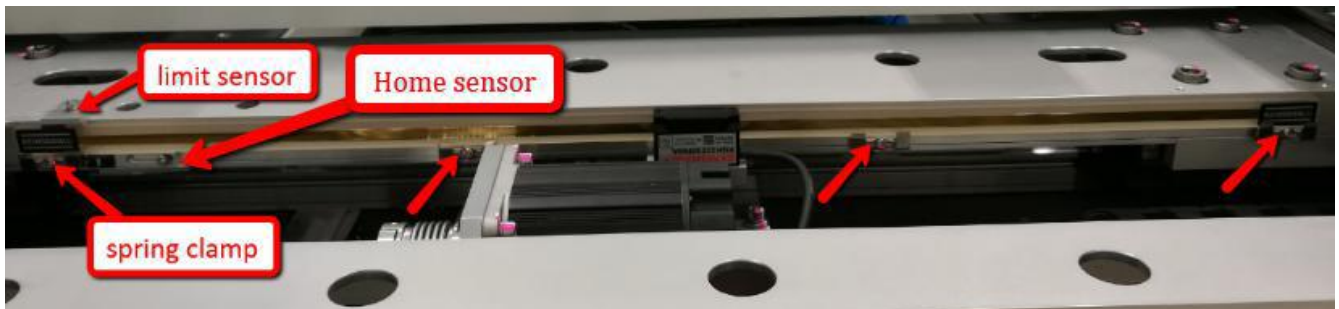


Figure 9 Glass scale replacement

4. Assemble Y-Axis encoder as shown in Figure 10.

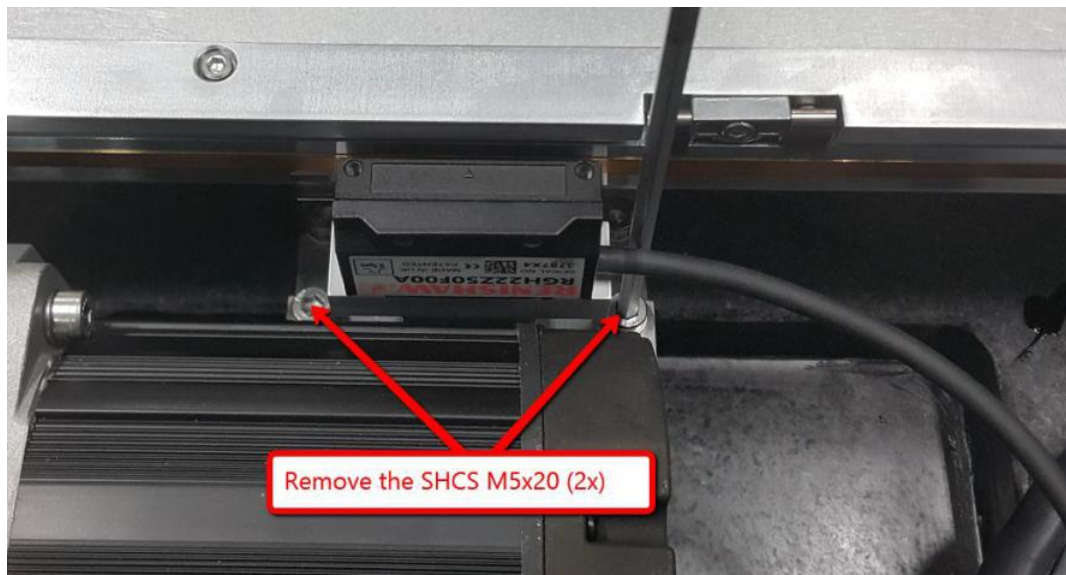


Figure 10 Y-Axis encoder

5. Assemble Y-Axis cover plate and encoder cover plate as shown in Figure 11.

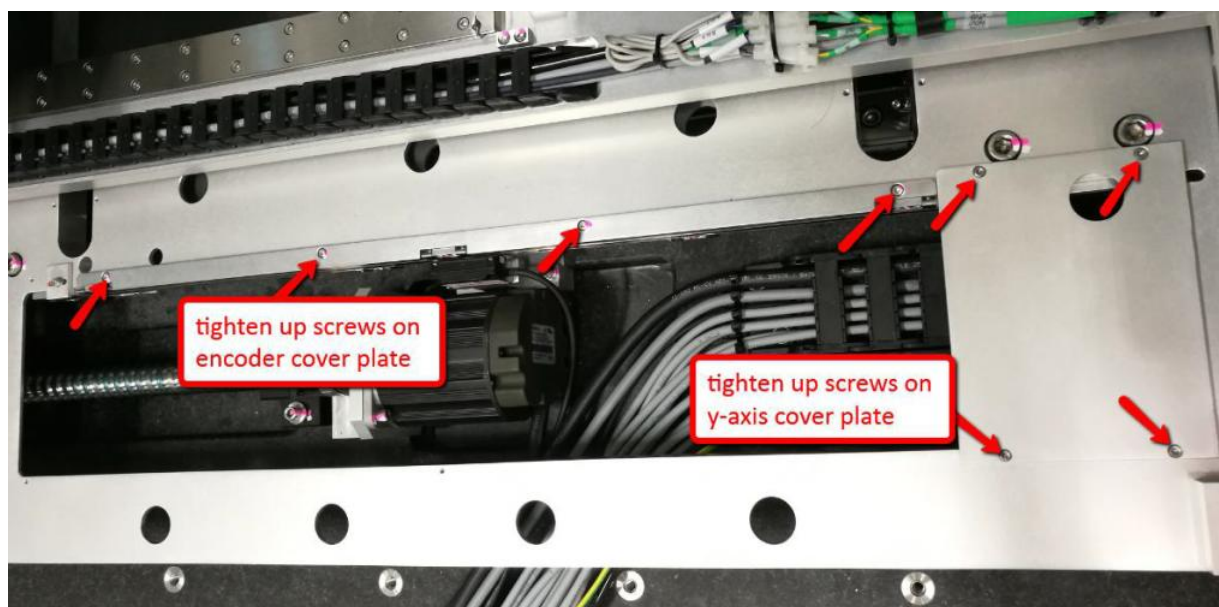


Figure 11 Cover plate assembly

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Y-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

6. Tighten all screws which secure spring clamps on encoder cover plate as shown in Figure 12.

Remark: Make sure all spring clamps are well-positioned and do not contain any friction with encoder while moving the Y-Axis stage.

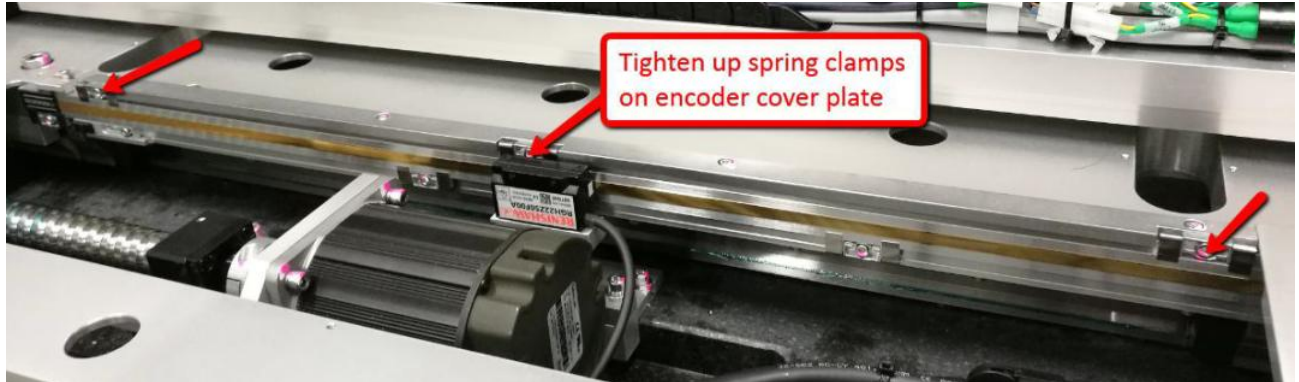


Figure 12 Cover plate assembly

7. Move Y-Axis stage to minimum hard stop (front side) and maximum hard stop (rear side). Visual check Y-Axis encoder which require green light illuminated along the way as shown in Figure 13. If adjustment require, May refer to “AXI V810 Y-Axis Read Head Encoder Replacement Procedure”.

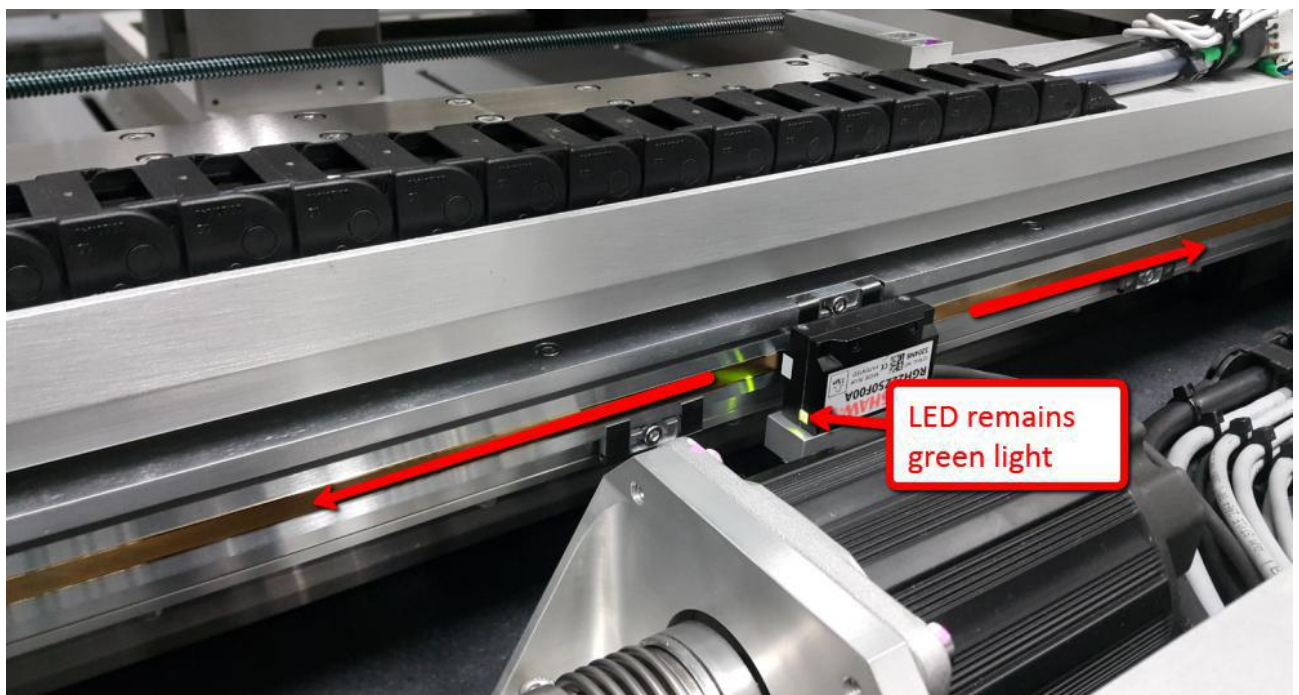


Figure 13 Y-Axis encoder checking

8. Close front access door.

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Y-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

9. Open V810 > Services > Subsystem Status & Control > Panel Positioner > Initialize

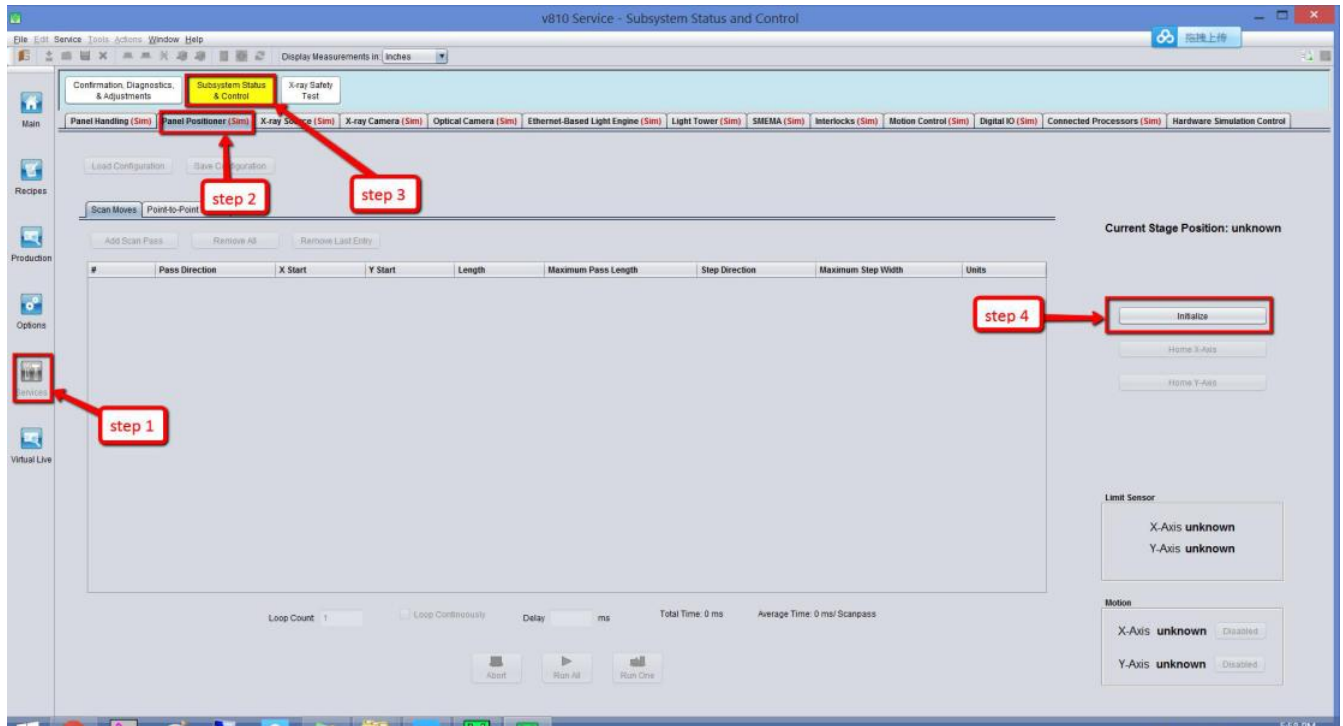


Figure 14 Initialize Panel Positioner

10. Open front access door.

11. Disable Y-Axis motion and pull Y-Axis stage & perform below checking.

- a) DO not move XY Stage and may check Limit sensor status at Panel Positioner where must stated as “Clear” during home position

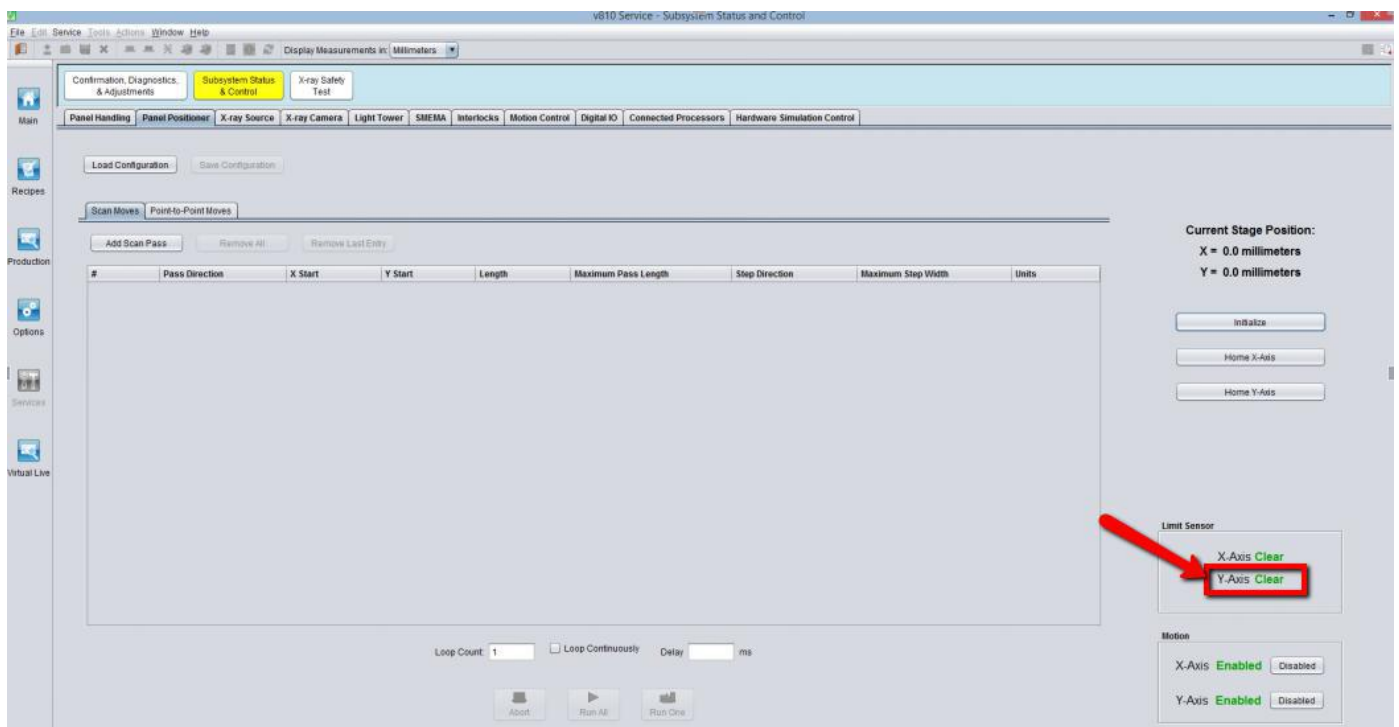


Figure 15 Y axis Limit Sensor (CLEAR)

	Work Instruction	Doc. Revision	00
	AXI V810 S2EX Y-Axis Glass Scale Replacement Procedure	Effective Date	25 Jan 2017

- b) Move Y axis stage towards minimum hard stop (Front side) & check Limit sensor where must stated as “Blocked”.

Remarks: If result is not meet Step 11a ~ 11b requirement, may refer to “AXI V810 Y-Axis Limit Sensor Adjustment Procedure” for further adjustment.

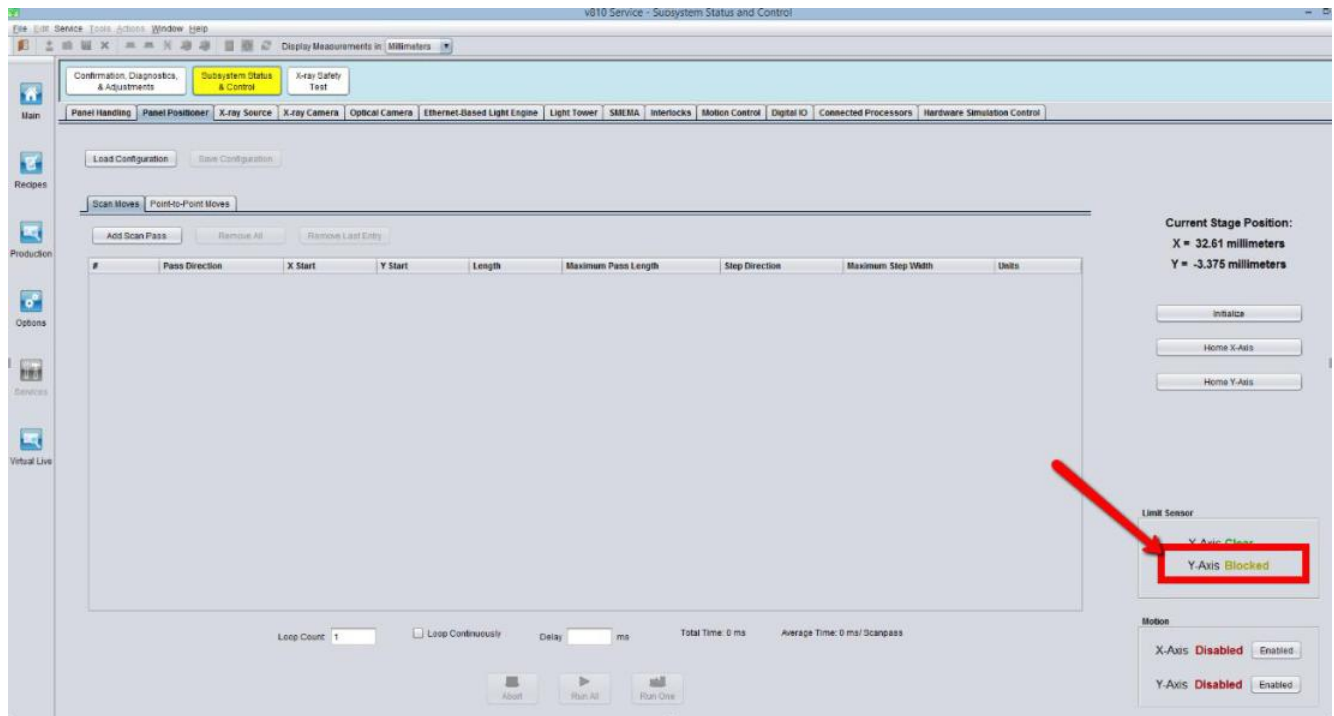


Figure 16 X axis Limit Sensor (BLOCKED)

- c) Move Y axis stage towards minimum hard stop(Front side).
d) Check the value for the Y-axis in current stage position must within 3.00mm ~ 3.30 mm.

Remark: If result is not meet to Step 11c ~ 11d requirement, may refer to “AXI V810 Y-Axis Home Sensor Adjustment Procedure” for further adjustment.



Figure 17 Y axis (Current Stage Position)

12. Run 3 loops of long scan and 1 loop of CD &A.