

	Work Instruction	Doc. Revision	00
	AXI V810 STD Adj Rail AWA Conveyor Belt Removal and Replacement Procedure	Effective Date	15 May 2016

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	15 May 2016	First Release	Chin Chee Yan

	Work Instruction	Doc. Revision	00
	AXI V810 STD Adj Rail AWA Conveyor Belt Removal and Replacement Procedure	Effective Date	15 May 2016

Content

Removal Procedure.....	3
Replacement Procedure.....	4
Belt Alignment Verification.....	7

	Work Instruction	Doc. Revision	00
	AXI V810 STD Adj Rail AWA Conveyor Belt Removal and Replacement Procedure	Effective Date	15 May 2016

Removal Procedure

1. Unload board from machine if any.
2. Go to X ray source tab and toggle “Turn off X-Ray” .Power off at Operator Console Panel

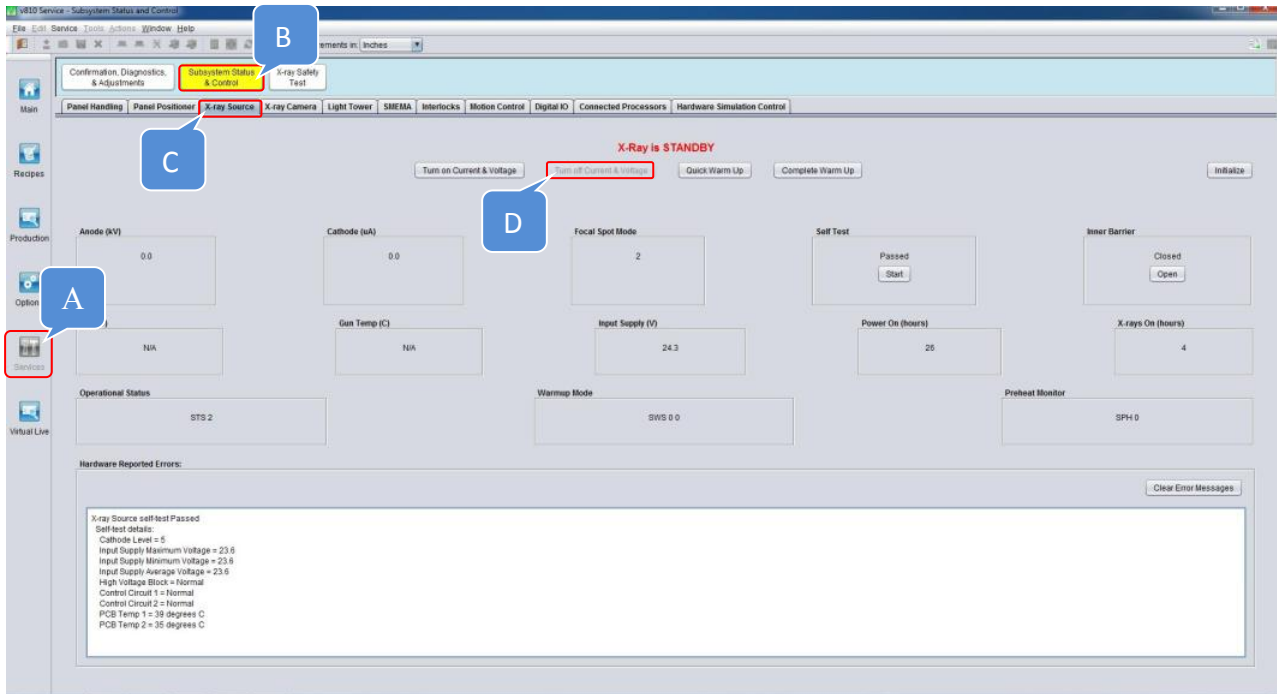


Figure 1 X ray Source

3. At Panel Handling tab, manually set the Rail Width to 8 inch
Services → Subsystem Status & Control → Panel Handling → Display unit to Inch → Initialize → 8 inch width → Open Left and right Outer Barrier → Open Front Access Door

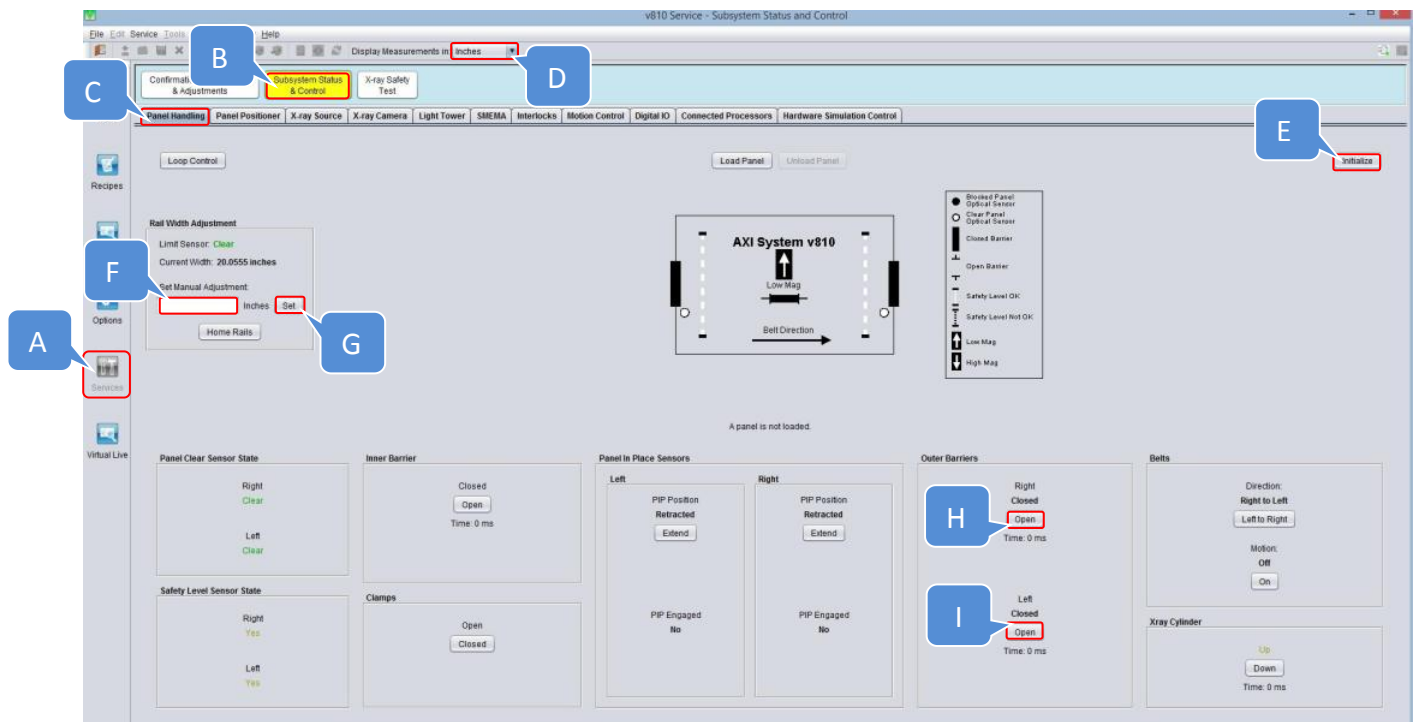


Figure 2 Rail Width Set

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 STD Adj Rail AWA Conveyor Belt Removal and Replacement Procedure	Effective Date	15 May 2016

4. Manually move XY stage. Loosen screw at Belt Tension Pulley at Adj Rail. Remove Conveyor Belt from Adj Rail Mount Pulley Assembly & Adj Rail End Pulley Assembly

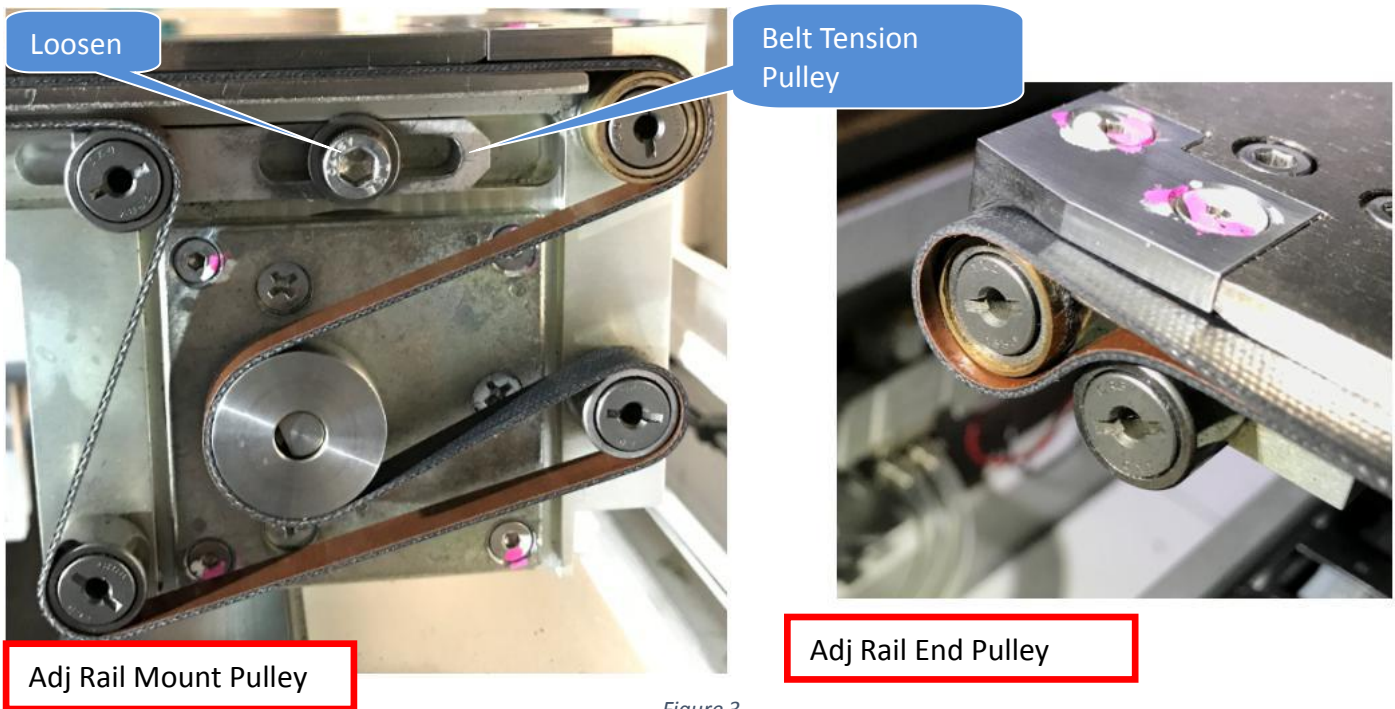


Figure 3

Replacement Procedure

5. Prepare new V810 Belt Replacement Kit (P/N, 4XASP-A025) as shown.

Remarks : 1 Kit Contain 2 pcs of Conveyor Belt



Figure 4 V810 Conveyor Belt Replacement Kit

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 STD Adj Rail AWA Conveyor Belt Removal and Replacement Procedure	Effective Date	15 May 2016

6. Route Conveyor as below Routing Diagram. Hand Tight Tension Pulley

Remarks :Belt Surface with Black Colour require to face upwards



Figure 5 V810 Std Conveyor Belt Routing

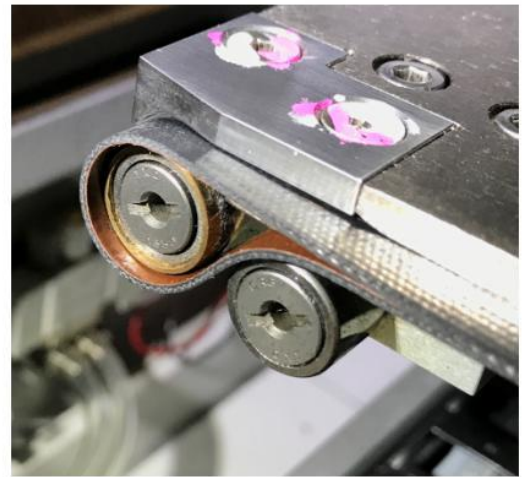
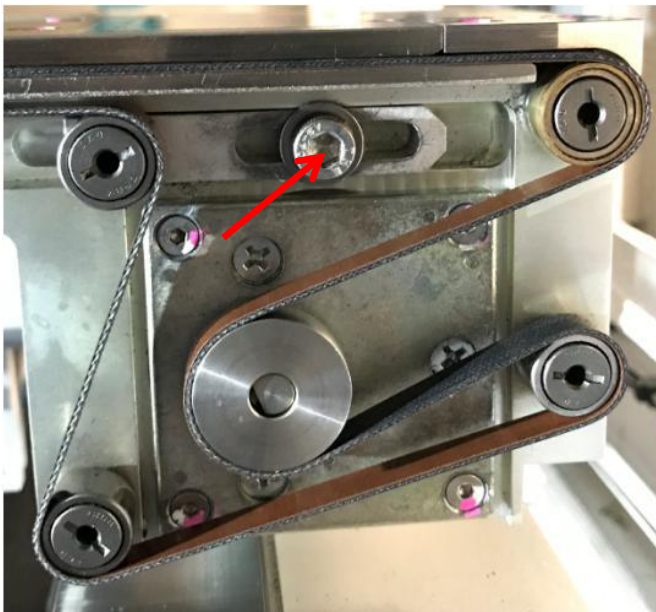


Figure 6

7. Visual Check Conveyor Belt where slot firmly along the track as below Figure 7

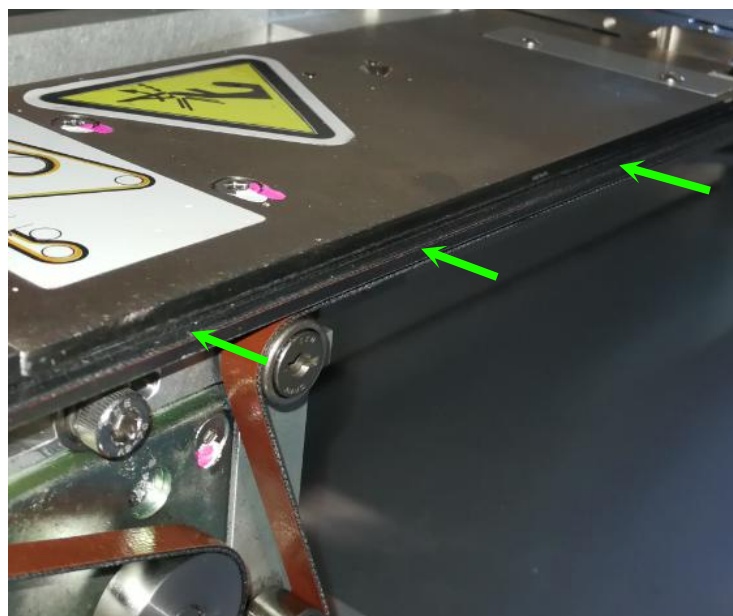


Figure 7

	Work Instruction	Doc. Revision	00
	AXI V810 STD Adj Rail AWA Conveyor Belt Removal and Replacement Procedure	Effective Date	15 May 2016

8. Prepare Belt Tension Kit (P/N, 4XASP-A114) as below Figure 8



Adjustable knob

Figure 8 Belt Tension Kit

9. Place Belt Tension Kit as below step

- a) Identify the Tiny Opening at Adj Rail Mount Pulley

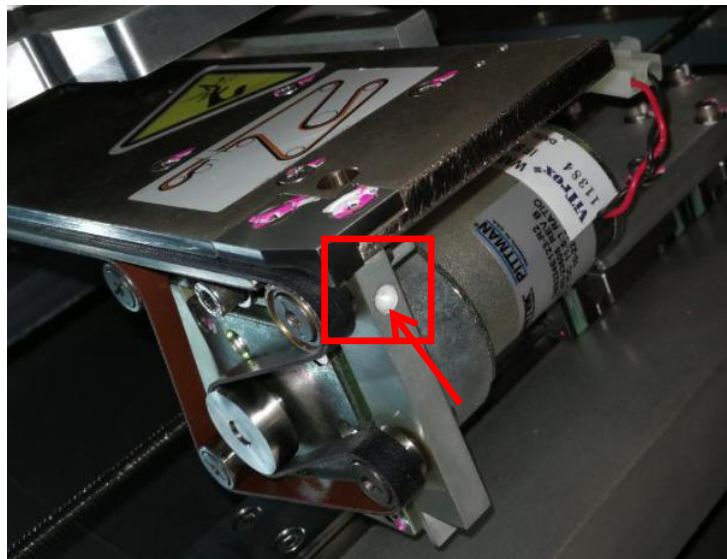


Figure 9 Tiny Opening

- b) Gently rest Belt Tension Adjustment Tip on Tiny Opening as below Figure 10 ,while other end will require to hook with the Tension Pulley.

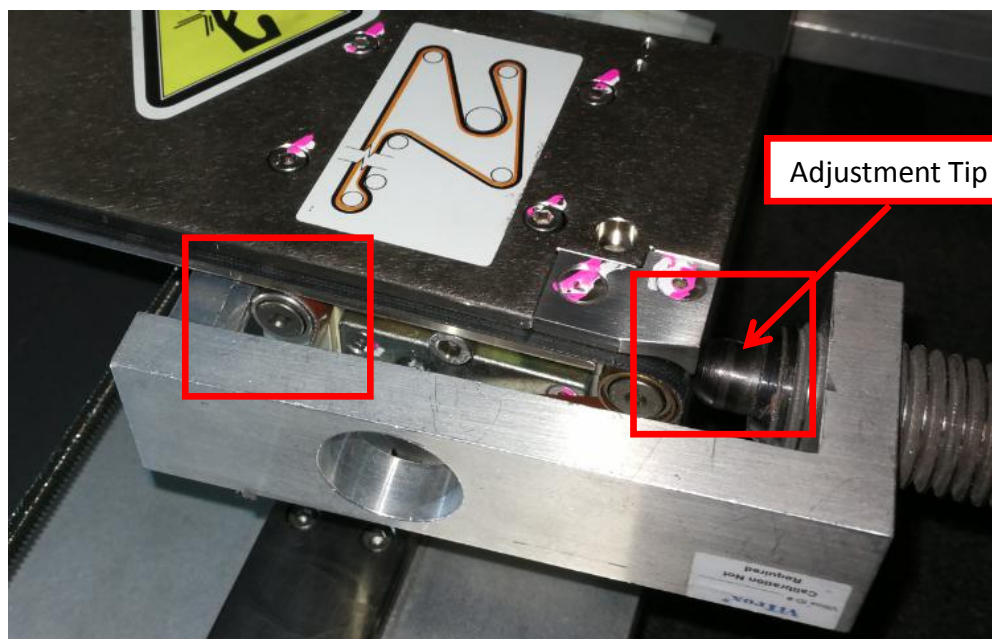


Figure 10 Belt Tension Kit Placement

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 STD Adj Rail AWA Conveyor Belt Removal and Replacement Procedure	Effective Date	15 May 2016

10. Loosen the Belt Tension Pulley Block screw. Gently adjust Adjustment Knob until Tension Block is within 3/4 adjustment scale. Then, tighten the Belt Tension Pulley Block Screw

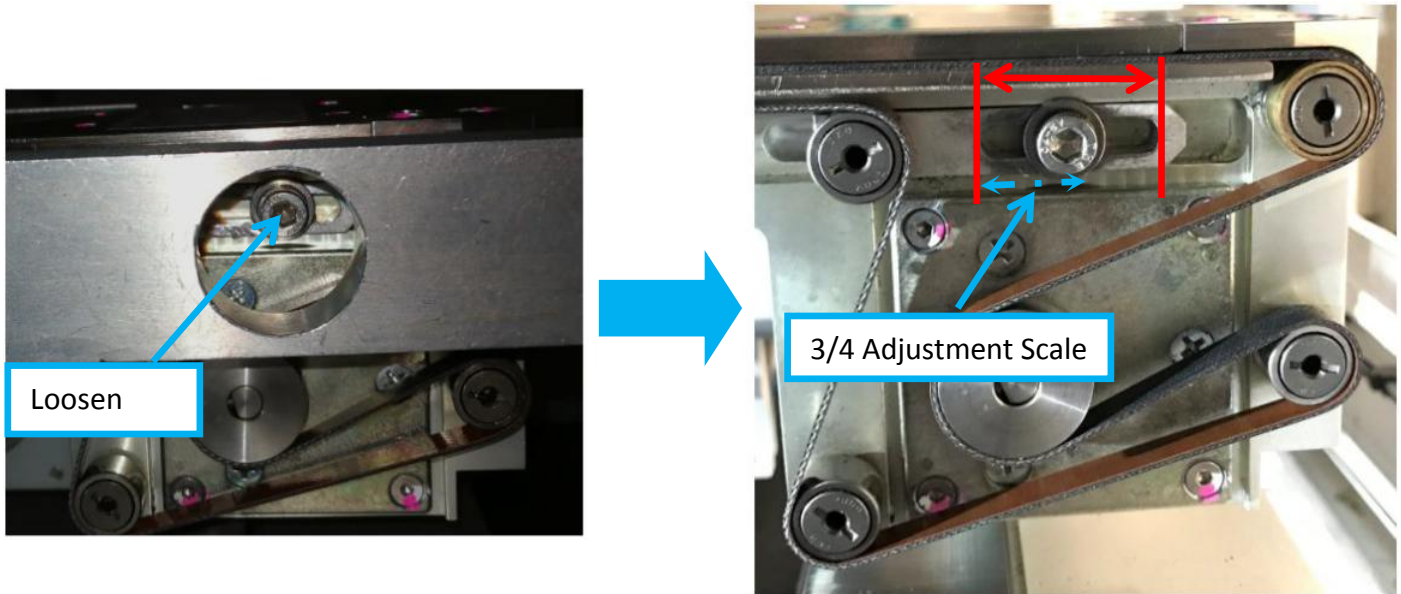


Figure 11 Belt Tension Pulleys

11. Release and remove Belt Tension Kit & tools from machine. Manually move the X axis towards Left Outer Barrier Loading direction

Belt Alignment Verification

12. Turn on Conveyor Motor at Digital IO Tab (Stage belt Motor ON).

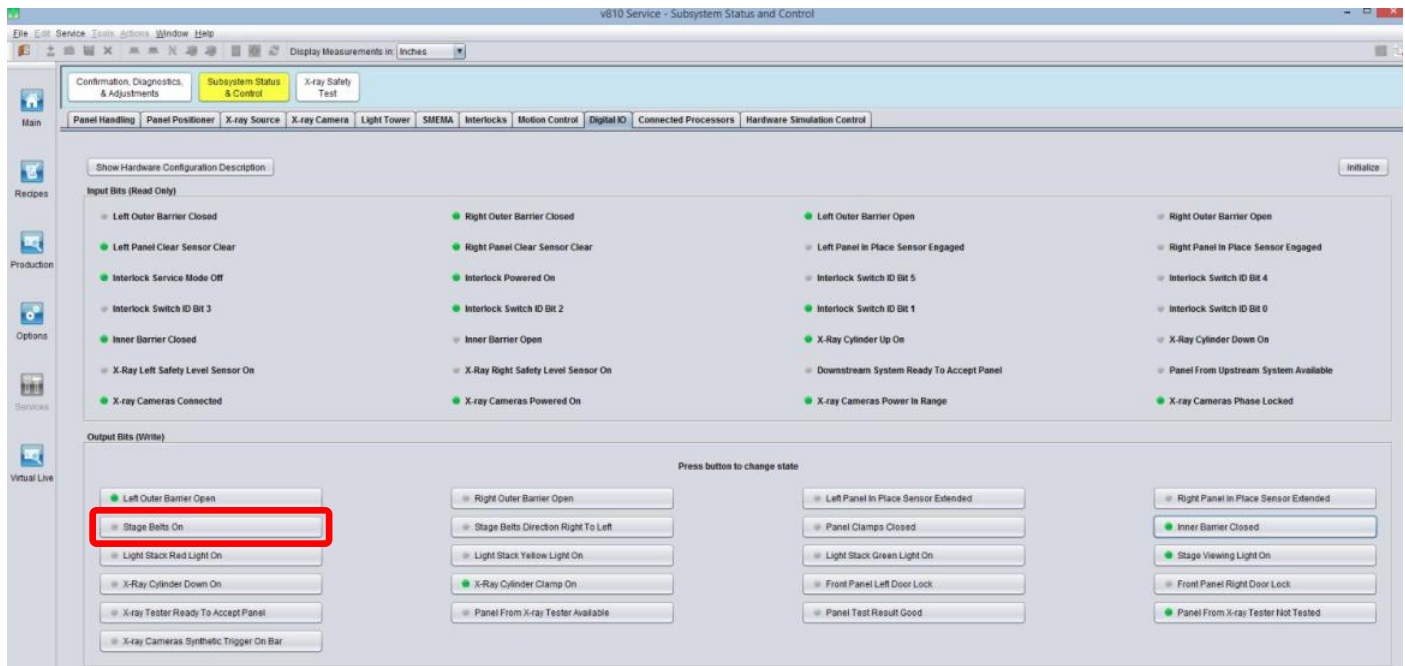


Figure 12 Belt Motor Toggle


	Work Instruction	Doc. Revision	00
	AXI V810 STD Adj Rail AWA Conveyor Belt Removal and Replacement Procedure	Effective Date	15 May 2016

13. Visual check Conveyor Belt Running condition



Belt flow towards
Outer Direction

Figure 13 Belt Flow (NG)

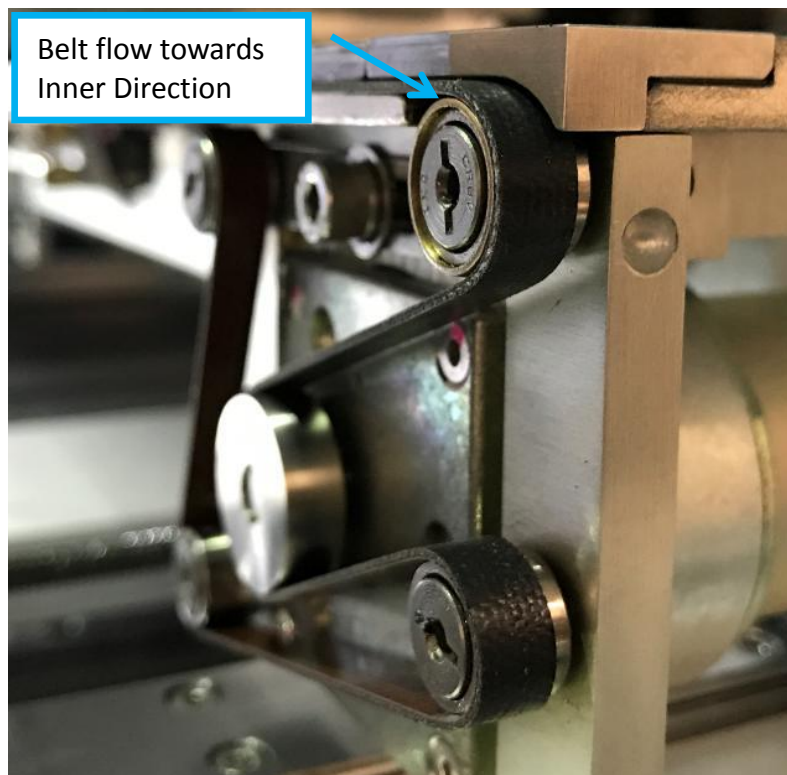

Belt flow towards
Inner Direction

Figure 14 Belt Flow (Good)

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 STD Adj Rail AWA Conveyor Belt Removal and Replacement Procedure	Effective Date	15 May 2016

14. Turn off the Belt Motor Motion at Digital IO Tab
15. Perform pulley alignment as below steps
 - a) Loosen 4 x Screws at Mount Pulley assembly as below Figure 15

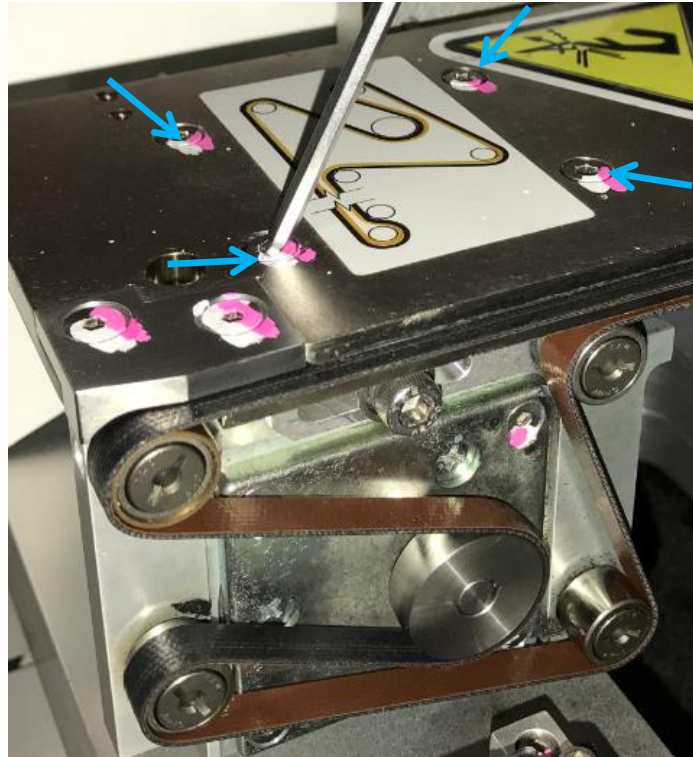


Figure 15 Adj Rail Mount Pulley Assembly

- b) Place L-ruler & Align Mount Pulley assembly as below Figure 16. Align Mount Pulley perpendicular with Adj Rail. Next, Tighten 4 x Screws

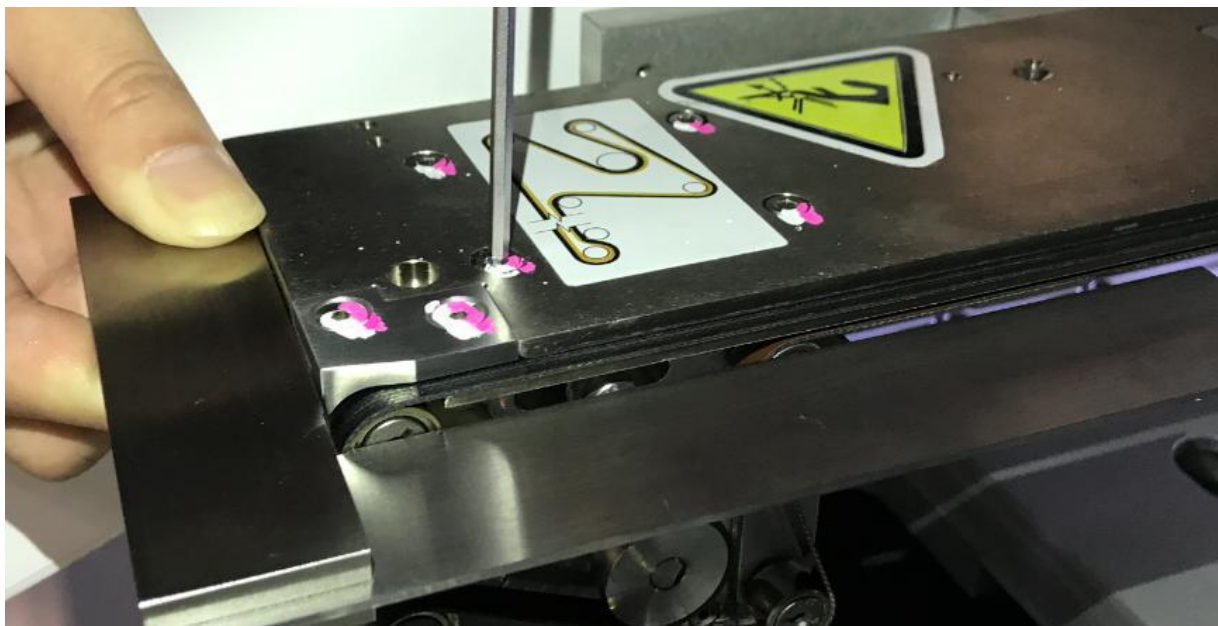


Figure 16 Adj Rail Mount Pulley Alignment

ViTrox 	Work Instruction	Doc. Revision	00
	AXI V810 STD Adj Rail AWA Conveyor Belt Removal and Replacement Procedure	Effective Date	15 May 2016

- c) Toggle “Stage belt Motor ON “at Digital IO tab.
- d) Slightly loosen End Pulley assembly as below Figure 17

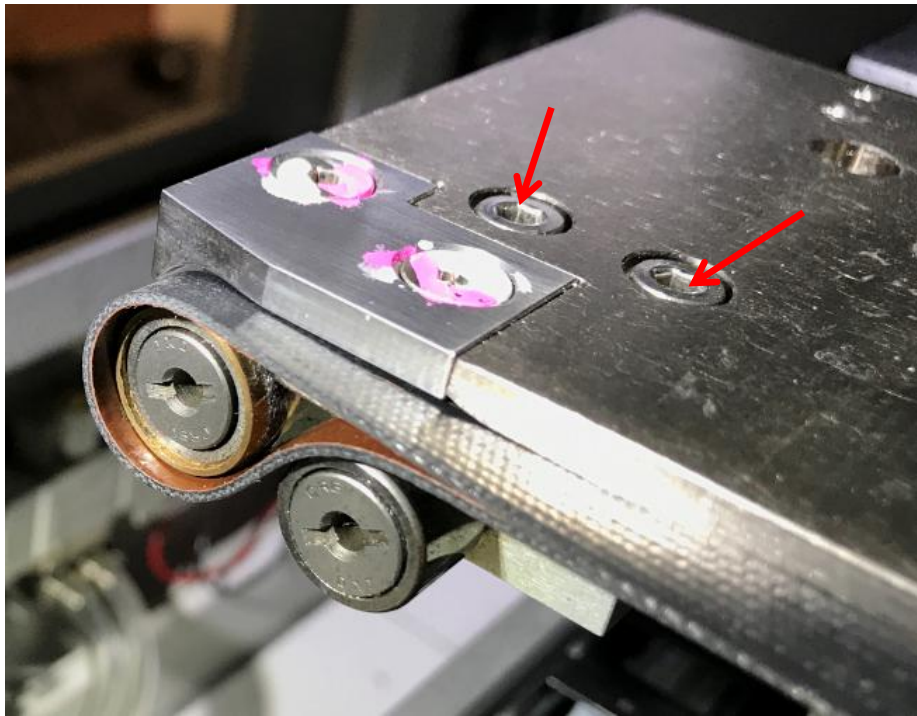


Figure 17 End Pulley Assembly

- e) Insert Allen Key to End Pulley as below Figure 18

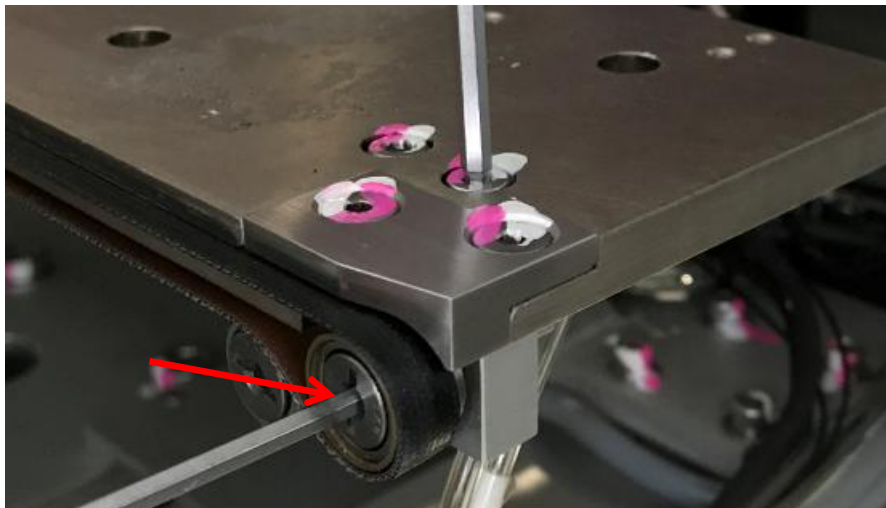


Figure 18 End Pulley Assembly

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 STD Adj Rail AWA Conveyor Belt Removal and Replacement Procedure	Effective Date	15 May 2016

- f) Align the End Pulley until Belt Flow towards Inner Direction as below Figure 19. Tighten 2 x Screws after desire alignment achieve

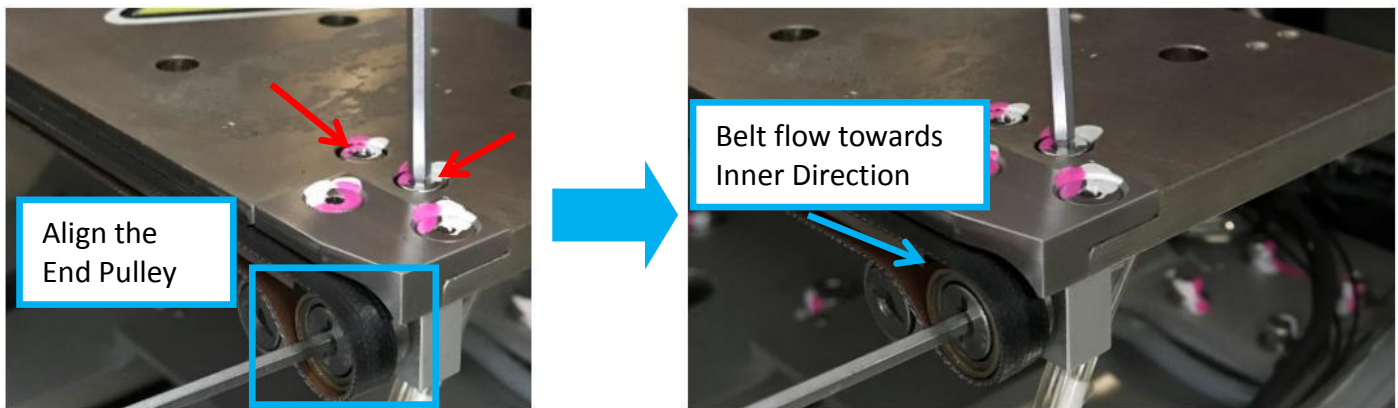


Figure 19 End Pulley Alignment

16. Toggle “Stage Belts Direction Right to Left “ while “Stage Belts On” remain ON.

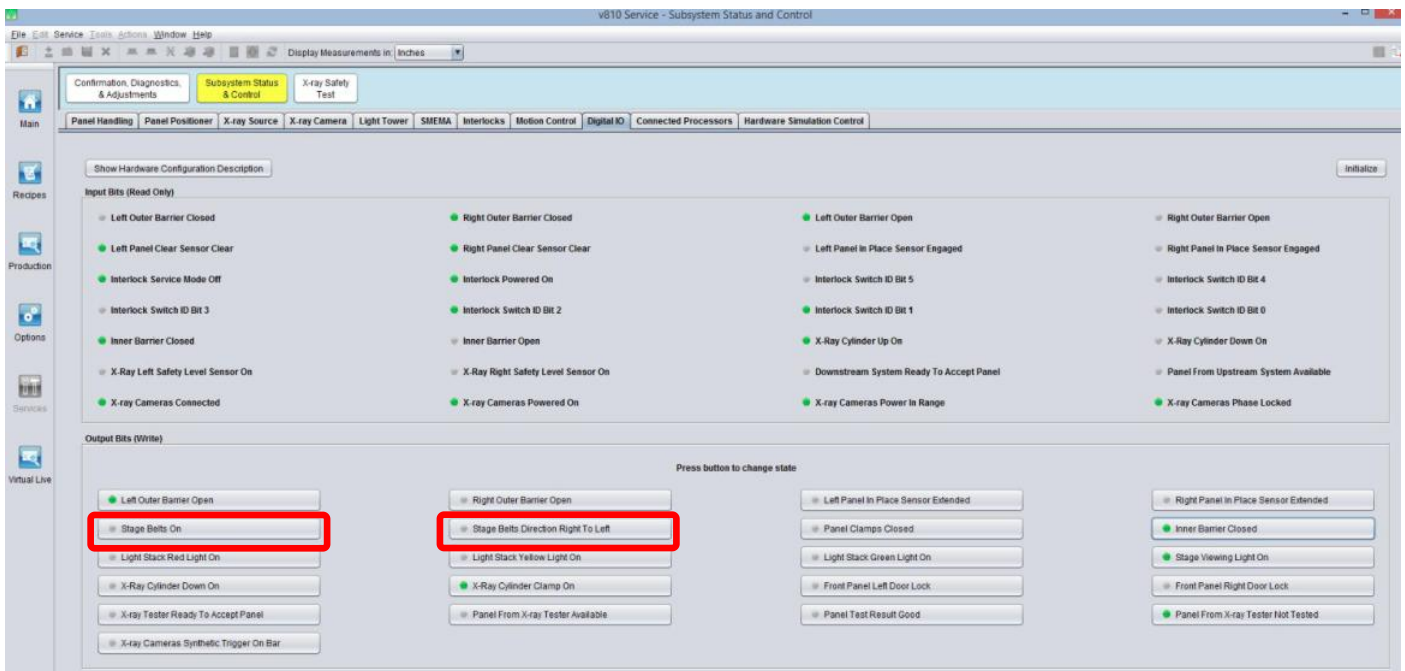


Figure 20 Digital IO (Belt Direction Switch)

17. Visual check Conveyor Belt Running Condition.
18. Repeat 14~16 if Conveyor Belt Running Condition fail
19. Toggle Off “Stage Belt On” at Digital IO tab
20. Toggle Off “ Stage Belt Direction Right to Left” at Digital IO tab
21. Remove all tools.Close all access door
22. Start machine as usual