

	Work Instruction	Doc. Revision	00
	AXI V810 STD Clamper Cylinder Removal & Replacement Procedure	Effective Date	30 May 2016

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	30 May 2016	First Release	Tan Liang Kai

	Work Instruction	Doc. Revision	00
	AXI V810 STD Clamper Cylinder Removal & Replacement Procedure	Effective Date	30 May 2016

Content

Clamper cylinder removal.....	3
Clamper cylinder replacement.....	7

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 STD Clamper Cylinder Removal & Replacement Procedure	Effective Date	30 May 2016

** This procedure is applicable for clamper cylinder on fixed & adjustable rail.

Clamper cylinder removal

1. Open V810 > Services > Subsystem & Status Control > Panel Handling > Initialize

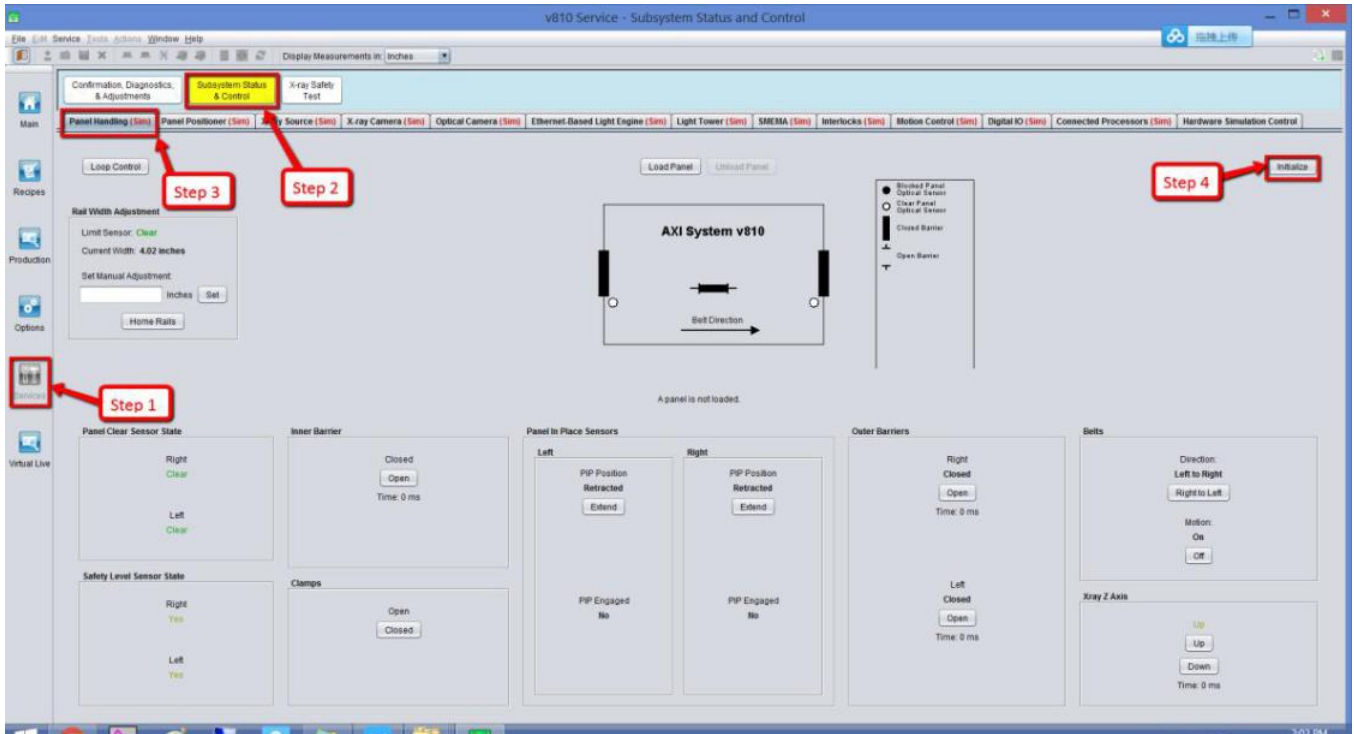


Figure 1 Initialize Panel Handling

2. Close X-ray source > Turn off Air Pressure > Open Front Access Doors.
3. Identify defective Clamper Cylinder location by refer to Figure 2.

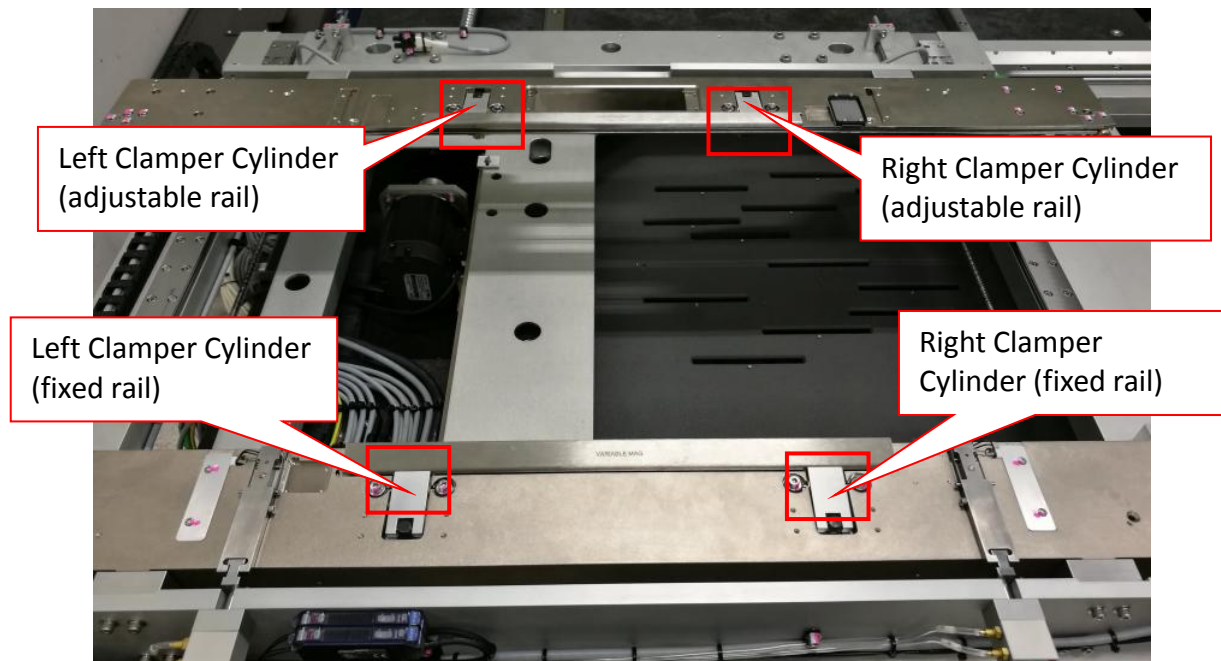


Figure 2 Clamper Cylinder Location

	Work Instruction	Doc. Revision	00
	AXI V810 STD Clamper Cylinder Removal & Replacement Procedure	Effective Date	30 May 2016

4. Loosen 2 x Screws. Remove 2 x Clamper Cylinder Fittings as shown in Figure 3.

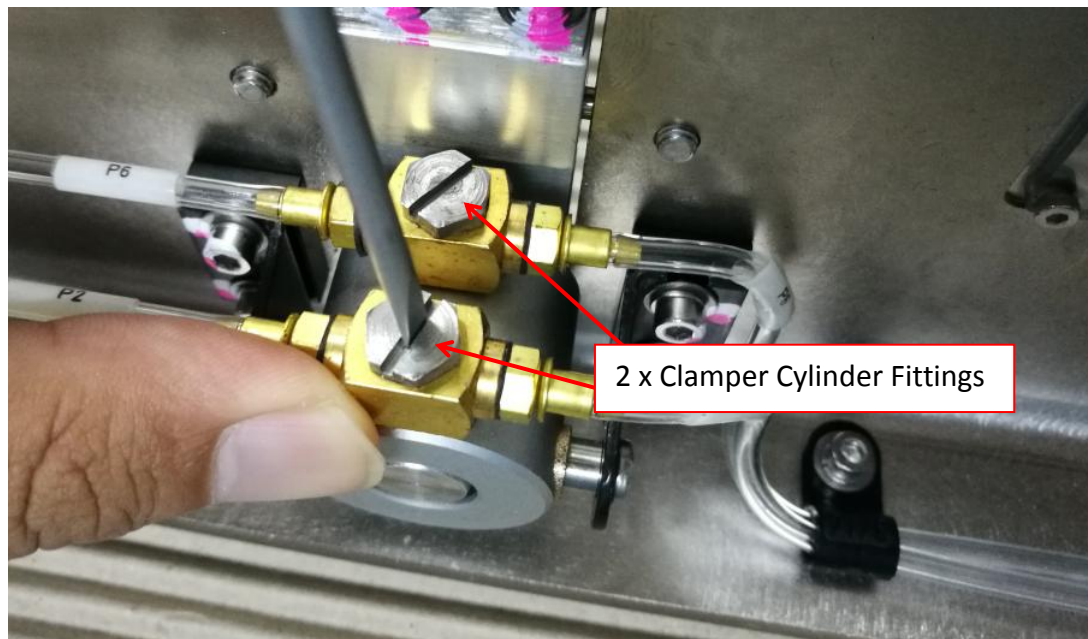


Figure 3 Clamper Cylinder Fittings

5. Loosen 4 x Screws (M3 x 12). Remove 2 x Spacers as shown in Figure 4.

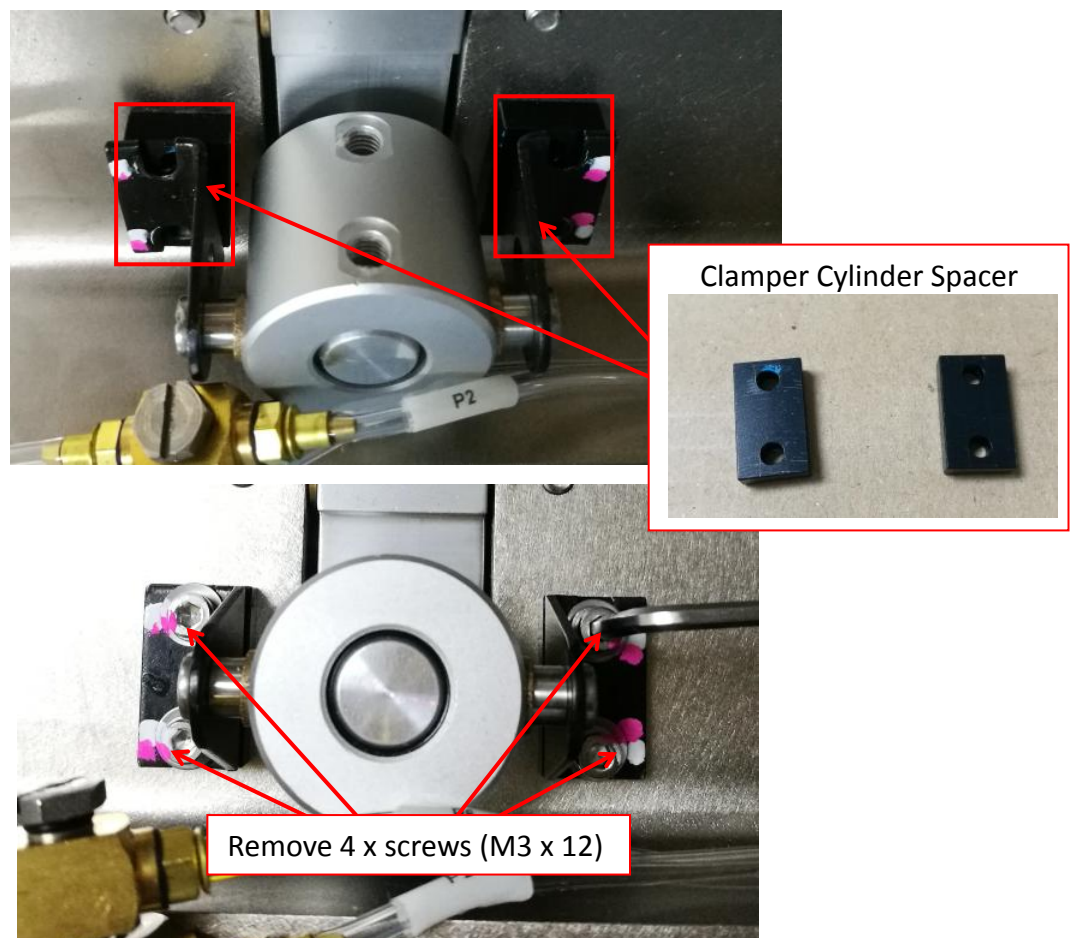


Figure 4 Clamper Cylinder Removal

	Work Instruction	Doc. Revision	00
	AXI V810 STD Clamper Cylinder Removal & Replacement Procedure	Effective Date	30 May 2016

6. Remove 4 x screws (M4 x 8) as shown in Figure 5.

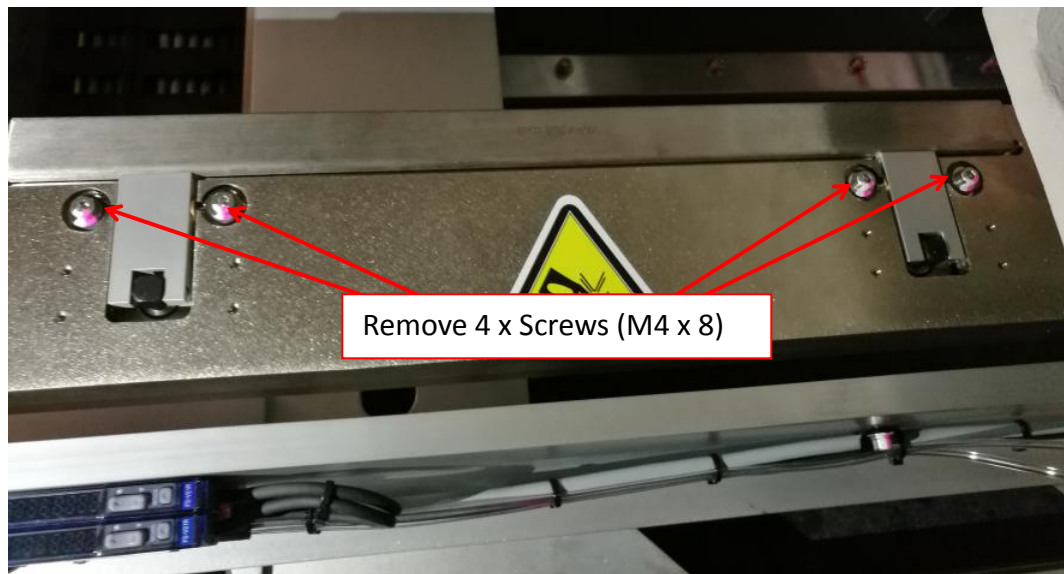


Figure 5 Clamper Screws Removal

7. Remove 4 x Washers as shown in Figure 6.

Remarks : Washer require to re-use upon replacement

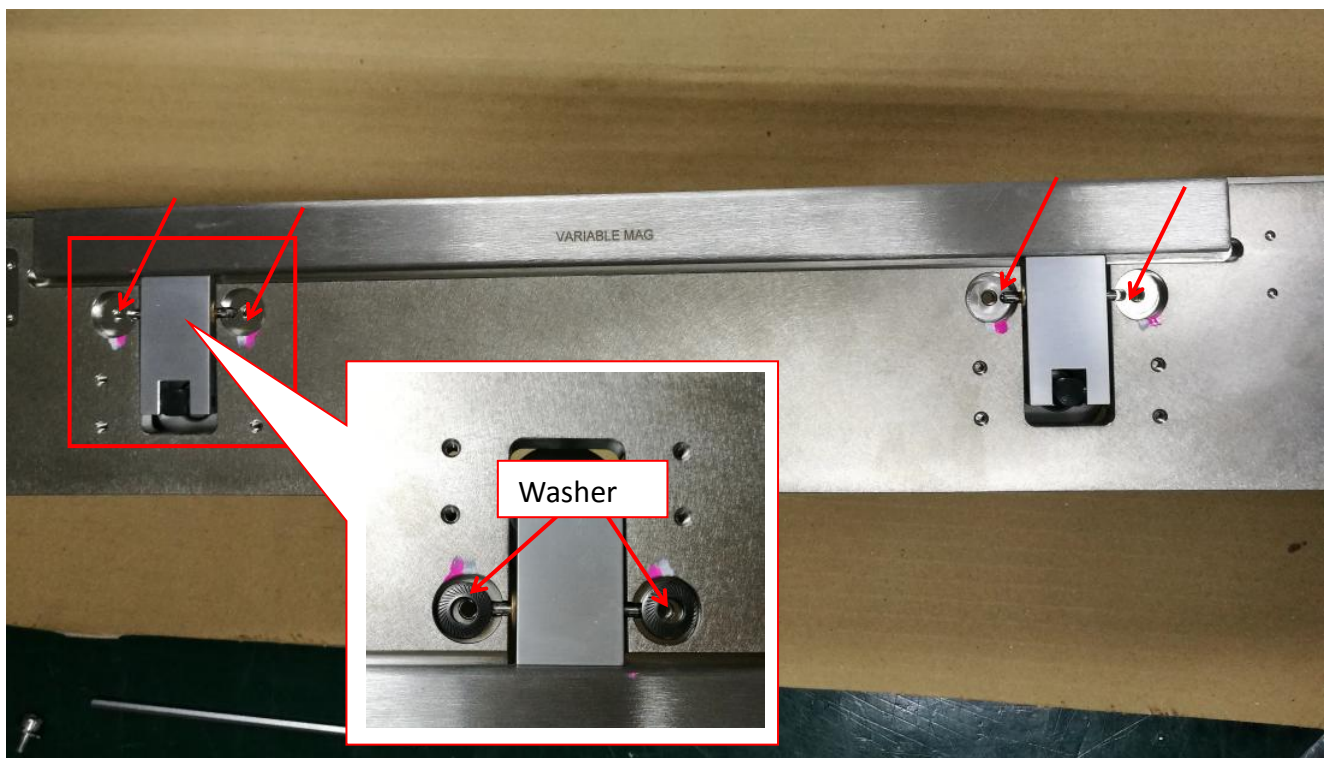


Figure 6 Washer Removal

	Work Instruction	Doc. Revision	00
	AXI V810 STD Clamper Cylinder Removal & Replacement Procedure	Effective Date	30 May 2016

8. Lift up Clamper Hinge Support as shown in Figure 7.



Figure 7 Clamper Removal

9. Prepare Clamper Cylinder Jig (Part ID: 1710-226) as shown in Figure 7.



Figure 8 Clamper Cylinder jig

10. Gently slot Clamper Cylinder Jig into "Shaft Step". While hold on Clamper Cylinder & rotate Clamper Cylinder Shaft in Anticlockwise Direction. May refer to Figure 9 & 10

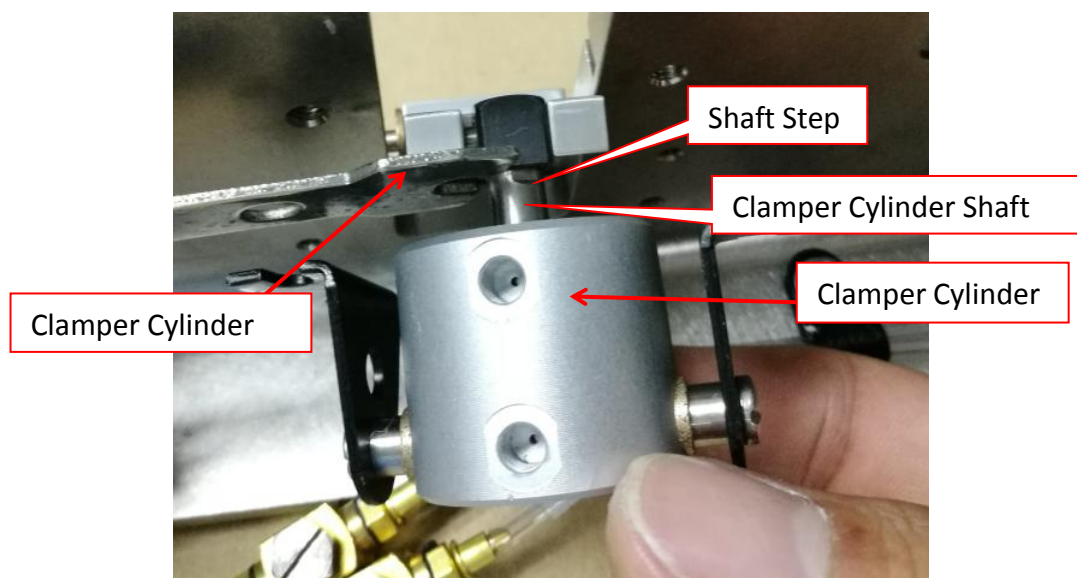


Figure 9 Clamper Cylinder Removal

	Work Instruction	Doc. Revision	00
	AXI V810 STD Clamper Cylinder Removal & Replacement Procedure	Effective Date	30 May 2016



Figure 10 Clamper Cylinder Removal

11. Remove Defective Clamper Cylinder by rotate in Anti Clockwise as shown in Figure 11.



Figure 11 Clamper Cylinder Removal

Clamper cylinder replacement

STD Clamper Cylinder Part ID: 2810-0001

1. Assemble New Clamper Cylinder into Clamper Hinge Support as shown in Figure 12.

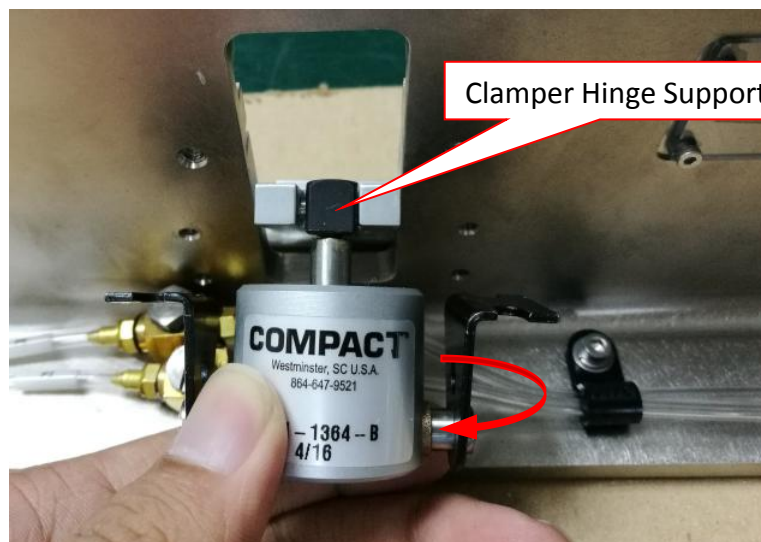


Figure 12 Clamper Cylinder Replacement

	Work Instruction	Doc. Revision	00
	AXI V810 STD Clamper Cylinder Removal & Replacement Procedure	Effective Date	30 May 2016

2. Gently slot Clamper Cylinder Jig into Shaft Step. Tighten up the Clamper Cylinder as shown in Figure 13.

Remarks : Cylinder Shaft MUST completely slot within Clamper Hinge Support

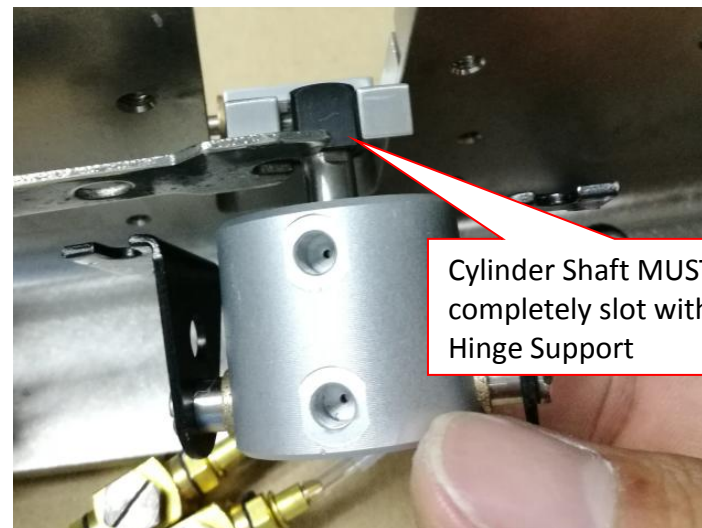
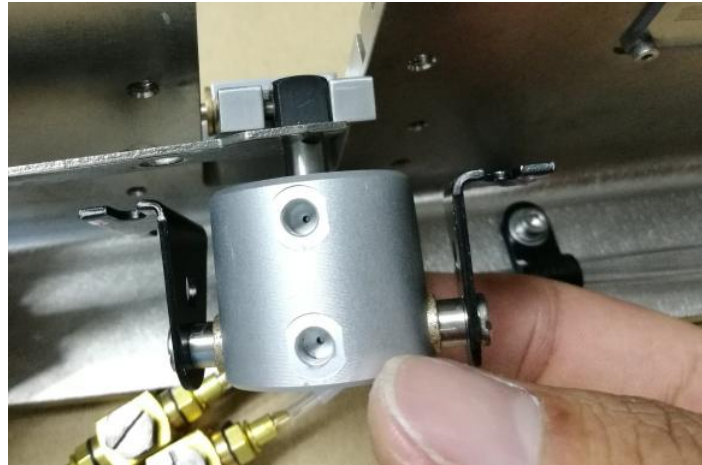


Figure 13 Clamper Cylinder Assembly

3. Gently position the Clamper as below Figure 14.



Figure 14 Clamper Positioning

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 STD Clamper Cylinder Removal & Replacement Procedure	Effective Date	30 May 2016

4. Align Dowel Pin into even length at both side. Apply Washer on top of the Dowel Pin as below
Figure 15

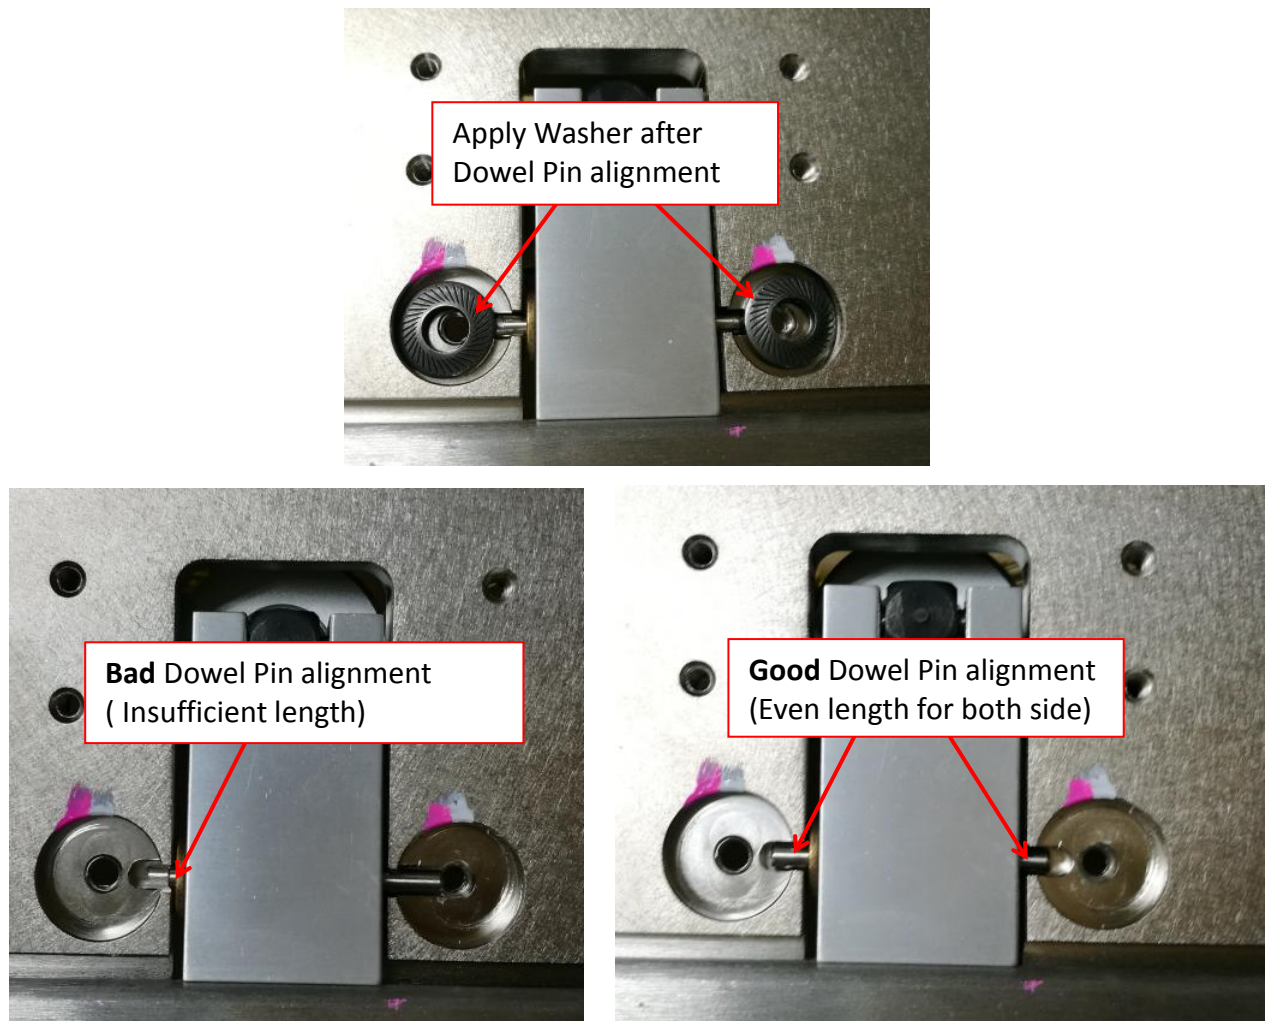


Figure 15 Dowel Pin alignment & Washer placement

5. Tighten 4 x screws (M4 x 8) as shown in Figure 16.

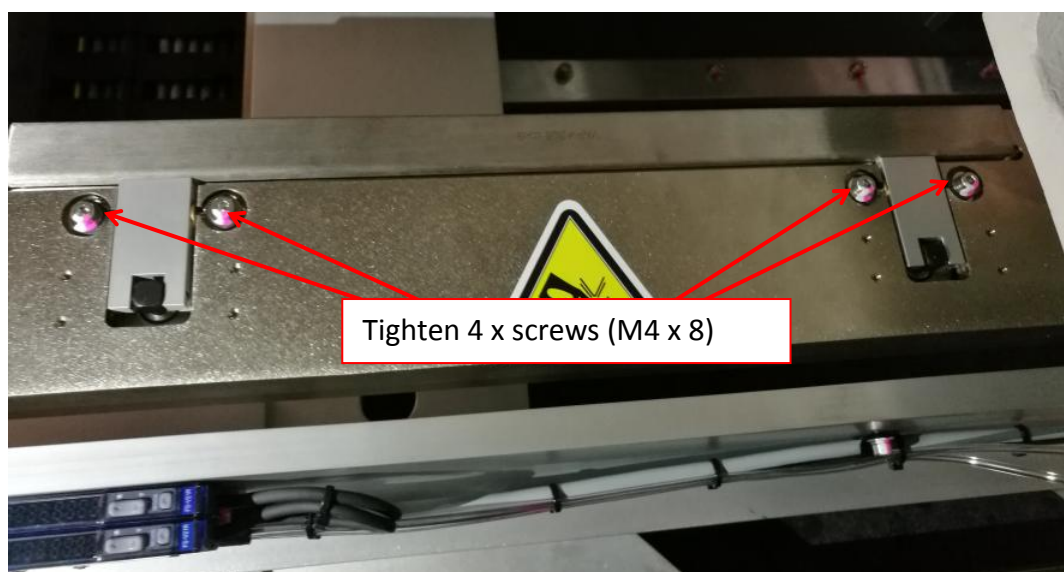


Figure 16 Clamper Assembly

	Work Instruction	Doc. Revision	00
	AXI V810 STD Clamper Cylinder Removal & Replacement Procedure	Effective Date	30 May 2016

6. Gently slot 2 x spacers. Tighten 4 x screws (M3 x 12) as shown in Figure 17

Remark: Caution on Clamper Cylinder Orientation for Fittings Assembly

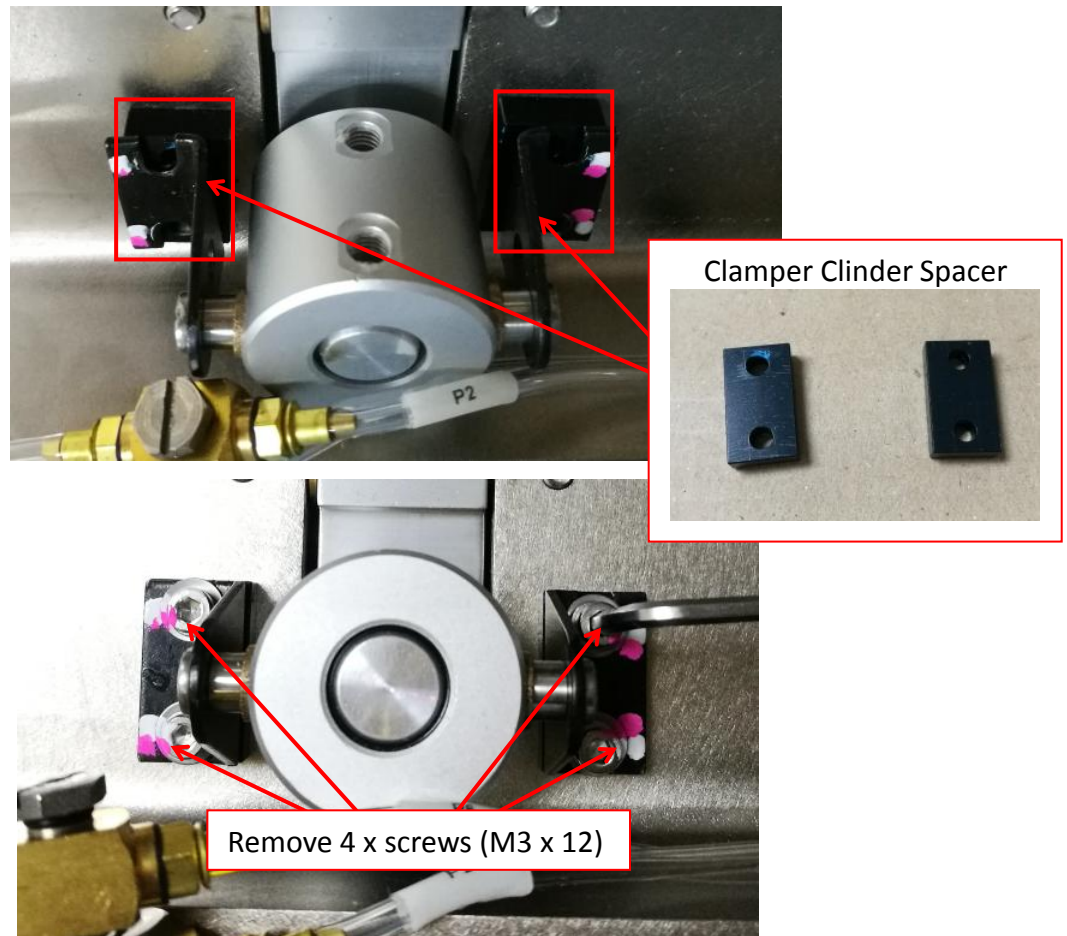


Figure 17 Clamper Cylinder Assembly

7. Apply Teflon tape at both Clamper Cylinder Fitting. Assemble Fittings at respective location by refer to "P6" & "P2" label marking. Tighten 2 x Clamper Fitting. May refer to below Figure 18

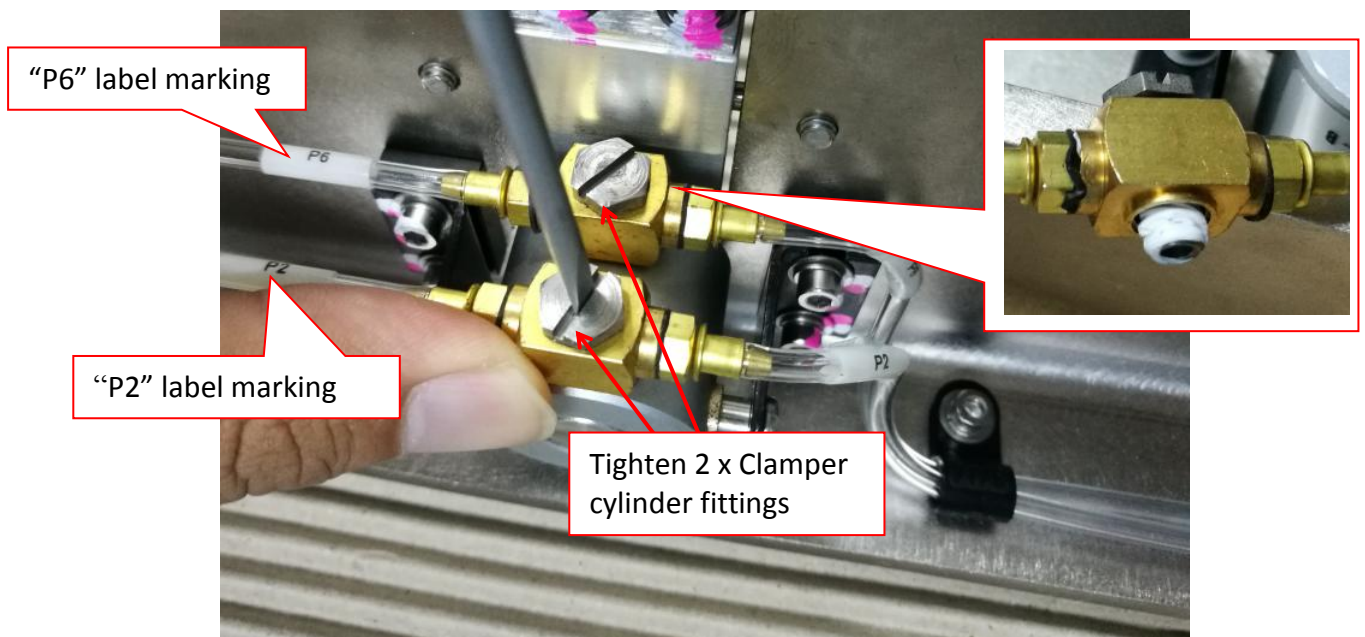


Figure 18 Clamper Cylinder Fittings Assembly

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 STD Clamper Cylinder Removal & Replacement Procedure	Effective Date	30 May 2016

8. Turn on & adjust Air Pressure Regulator until 80 psi.
9. Close front access door.
10. Obtain 1 x Dummy Board or Carrier for board clamping test.
11. Initialize Panel Handling
12. Set the parameters as shown in the Figure 19 and click Load Panel.

Panel width : Subjected to Dummy Board Or Carrier

Panel length : Subjected to Dummy Board Or Carrier

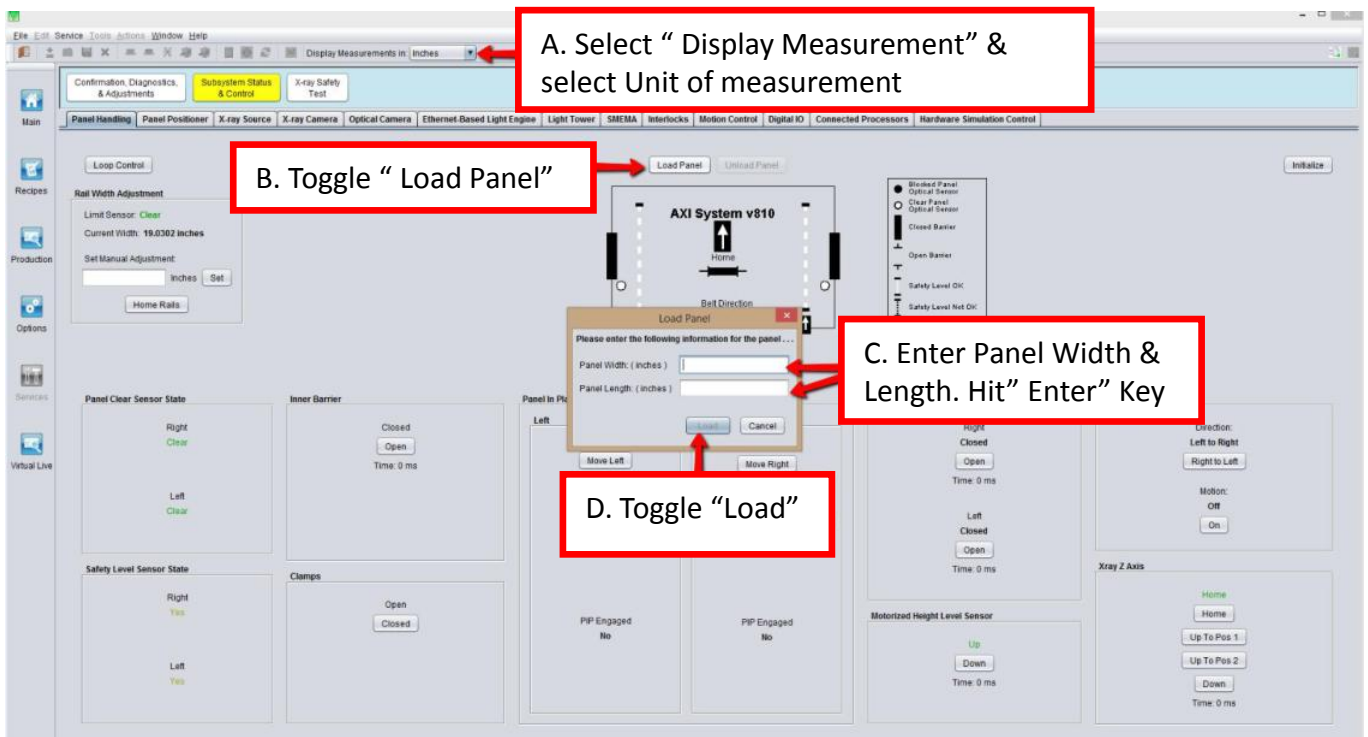


Figure 19 Panel Handling

	Work Instruction	Doc. Revision	00
	AXI V810 STD Clamper Cylinder Removal & Replacement Procedure	Effective Date	30 May 2016

13. Load the Dummy Board Or Carrier into machine after outer barrier open.
14. Close X ray Source after board in place
15. Open front access door
16. Manually move the Dummy Board Or Carrier.
17. Remarks : In ideally case, Dummy Board Or Carrier should non-movable. If yes, may repeat Step 7
& check any air leakage at Clamper Cylinder
18. Close front access door
19. Unload the Dummy Board Or Carrier
20. Open X-ray source & run one loop of CD&A.