

	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP FLAG REMOVAL & REPLACEMENT [FOR NEW PIP BOARD STOP]	Effective Date	2 Oct 2016

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	2 Oct 2016	First Release	ONG KEAN SHENG

	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP FLAG REMOVAL & REPLACEMENT [FOR NEW PIP BOARD STOP]	Effective Date	2 Oct 2016

Content

PIP Flag Removal Procedure.....	3
PIP Flag Replacement Procedure.....	4

	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP FLAG REMOVAL & REPLACEMENT [FOR NEW PIP BOARD STOP]	Effective Date	2 Oct 2016

PIP Flag Removal Procedure

1. Verify that there is no panel in the system.
2. Extend PIP Board Stop (Depends on which side PIP Flag that require to replace) at Digital IO tab.
3. Using the 2.5mm Hex Wrench and remove the screw which holding the PIP Sensor Flag on PIP Board Stop. May refer to below Figure 1.

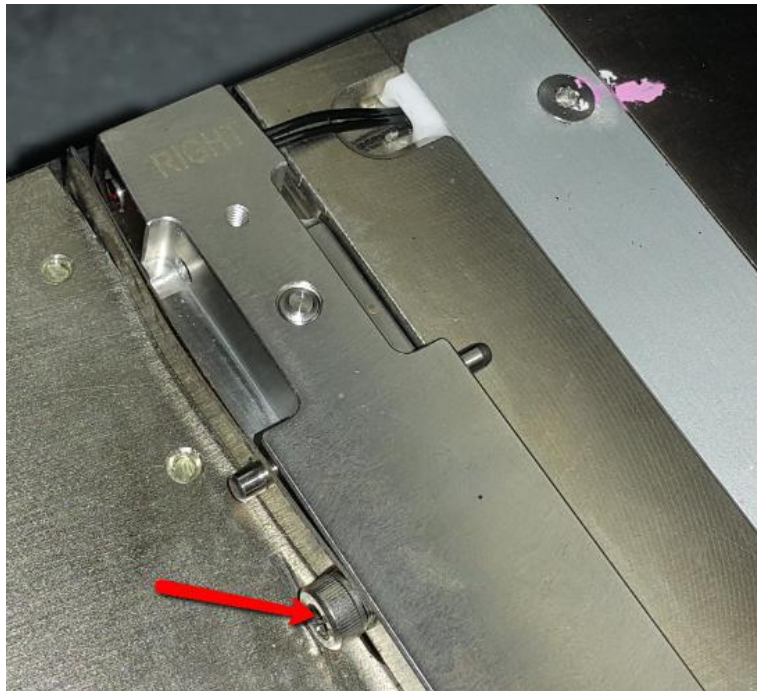


Figure 1 PIP Board Stop Screws Removal

4. Gently remove PIP Flag from PIP Board stop Locating Pin. May refer to below Figure 2.



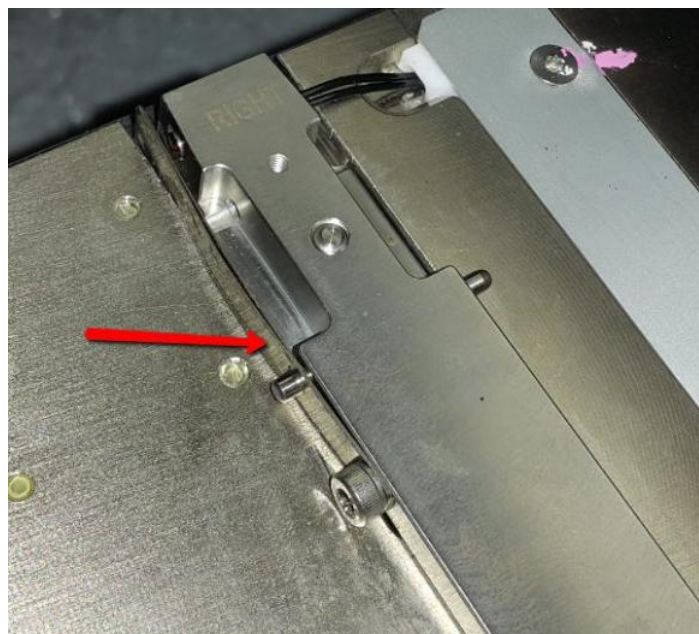


Figure 2 PIP Flag Removal

	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP FLAG REMOVAL & REPLACEMENT [FOR NEW PIP BOARD STOP]	Effective Date	2 Oct 2016

PIP Flag Replacement Procedure



5. Insert the new PIP Flag by sliding it onto the Flag Locating Pin. May refer to below Figure 2.
6. Perform minor alignment and fastening by refer 6a~6c
 - a) Align PIP Flag in vertical direction where
 - b) Check PIP Flag should not friction between belt and PIP Flag.
 - c) Tighten up the screw which secure the PIP Flag.

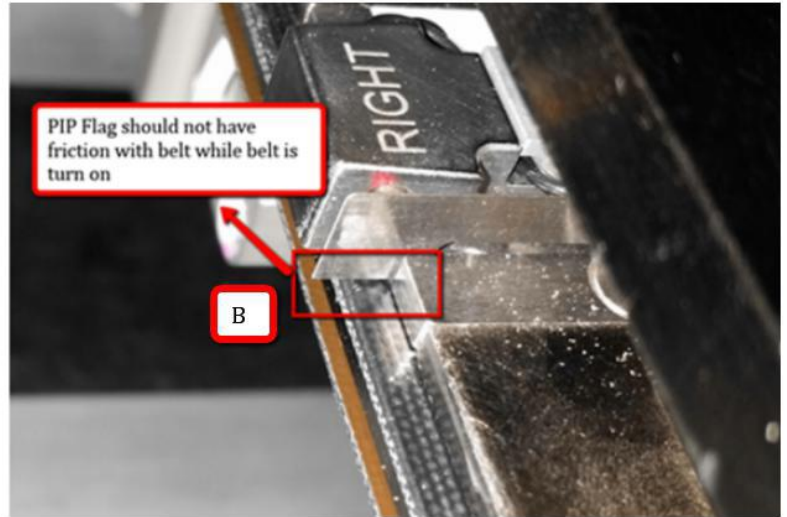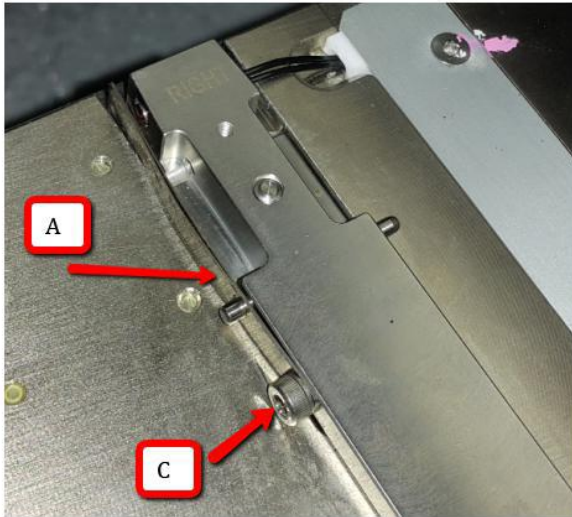

7. Initialize Digital IO & Toggle “PIP Sensor Extend”. (May ignore this step if PIP Sensor had extended)

	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP FLAG REMOVAL & REPLACEMENT [FOR NEW PIP BOARD STOP]	Effective Date	2 Oct 2016

8. Check PIP Sensor Status by refer to below table.

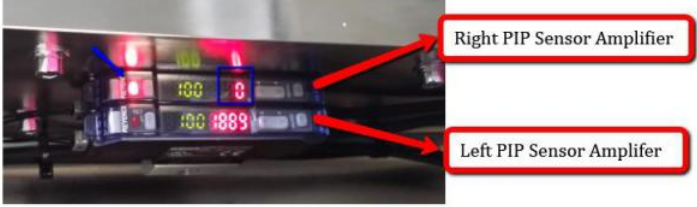Task	Digital IO Input Bit Interface	Physical Output
Manually press PIP Flag against PIP Hard Stop	 Or  (Depends which side PIP Flag had toggle)	 PIP Status : Engage - Threshold reading (Red Colour) – Close to 0 PIP Status : Disengage PIP Flag : Silver Colour - Threshold reading (Red Colour)- 1000~3000 PIP Status : Disengage PIP Flag : Blue Colour Threshold reading (Red Colour)- 150~400

9. Toggle “ Stage Belts On” at Digital IO Tab to counter check conveyor belt where should not contain any friction with PIP Flag.

10. Toggle “ Stage Belts On” at Digital IO tab to turn off Conveyor Motor.

11. Remove all tools from XY Stage & Close all access door.