

	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP FLAG REMOVAL & REPLACEMENT [FOR OLD PIP BOARD STOP]	Effective Date	2 Oct 2016

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☐	S1	☐	S2
V810 S2EX	☐			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	2 Oct 2016	First Release	ONG KEAN SHENG

	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP FLAG REMOVAL & REPLACEMENT [FOR OLD PIP BOARD STOP]	Effective Date	2 Oct 2016

Content

PIP Flag Removal Procedure.....	3
PIP Flag Replacement Procedure.....	4

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP FLAG REMOVAL & REPLACEMENT [FOR OLD PIP BOARD STOP]	Effective Date	2 Oct 2016

PIP Flag Removal Procedure

1. Verify that there is no panel in the system.
2. Extend PIP Board Stop (Depends on which side PIP Flag that require to replace) at Digital IO tab.
3. Using the 2.5mm Hex Wrench and remove the screw which holding the PIP Sensor Flag on PIP Board Stop. May refer to below Figure 1.

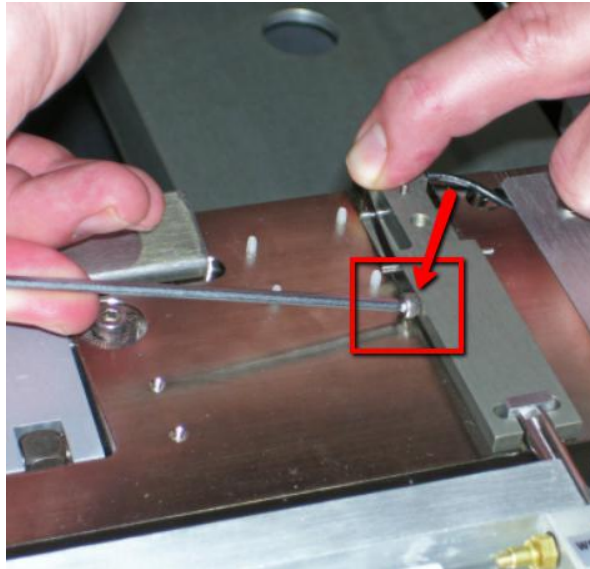


Figure 1 PIP Board Stop Screws Removal

4. Gently remove PIP Flag from PIP Board stop Locating Pin. May refer to below Figure 2.

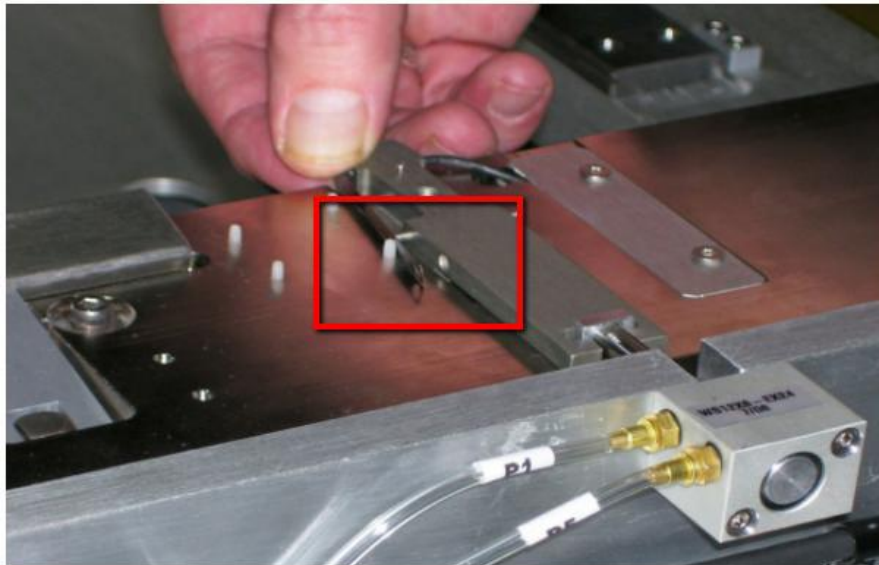


Figure 2 PIP Flag Removal

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP FLAG REMOVAL & REPLACEMENT [FOR OLD PIP BOARD STOP]	Effective Date	2 Oct 2016

PIP Flag Replacement Procedure

5. Insert the new PIP Flag by sliding it onto the Flag Locating Pin. May refer to below Figure 2.
6. Loosen Set Screw which allocate at on top of PIP Board Stop as below Figure 3.

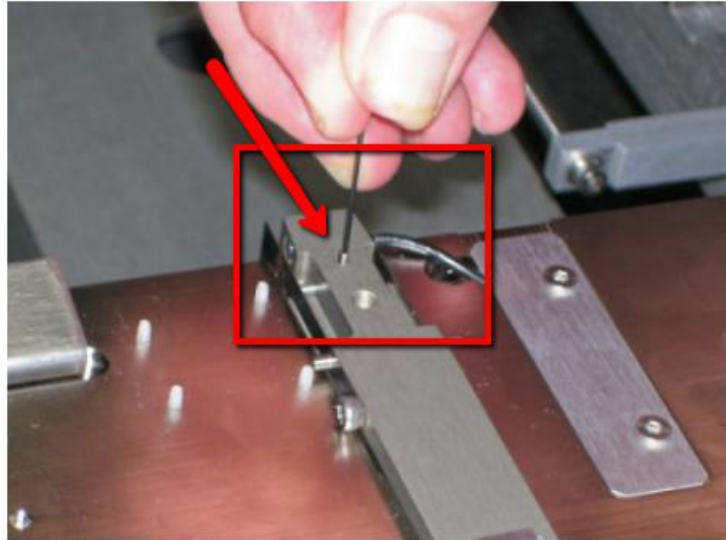


Figure 3 Top Set Screws Loosen

7. Gently slide the flag height adjustment pin towards outer direction. Position bottom edge of PIP Flag and rest on top of the dowel Pin. May refer to below Figure 4.

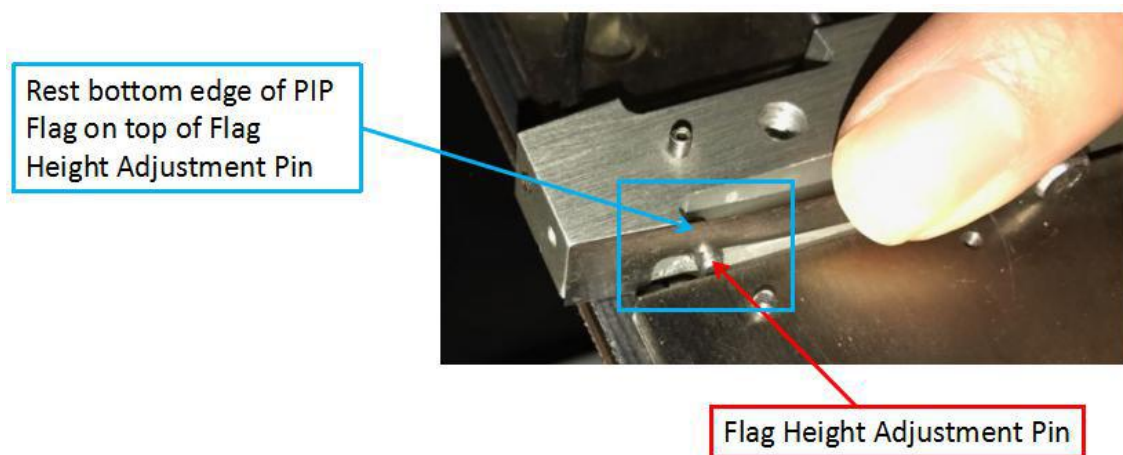


Figure 4 PIP Flag Height Positioning

	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP FLAG REMOVAL & REPLACEMENT [FOR OLD PIP BOARD STOP]	Effective Date	2 Oct 2016

8. While holding the flag firmly against on the flag height adjustment pin, tighten up the screws which secure on the PIP Flag. May refer to below Figure 5.

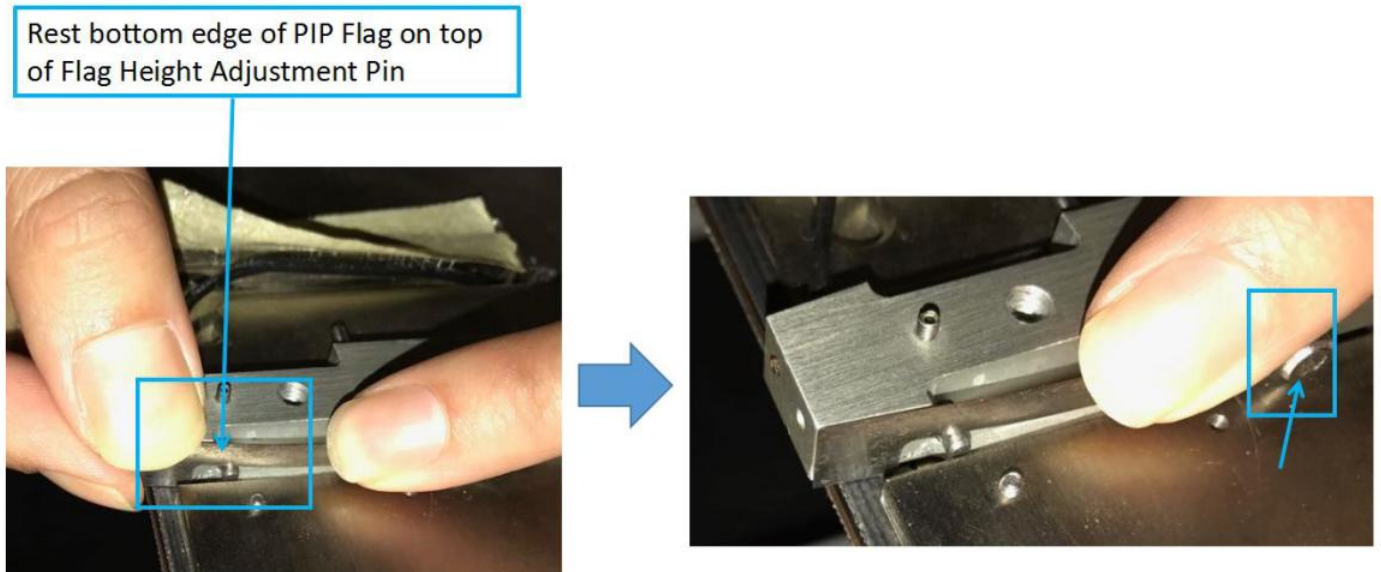


Figure 5 PIP Flag Screw Fastening

9. Gently slide the flag height adjustment pin away from the PIP flag and tighten up the set screws. May refer to below Figure 6.

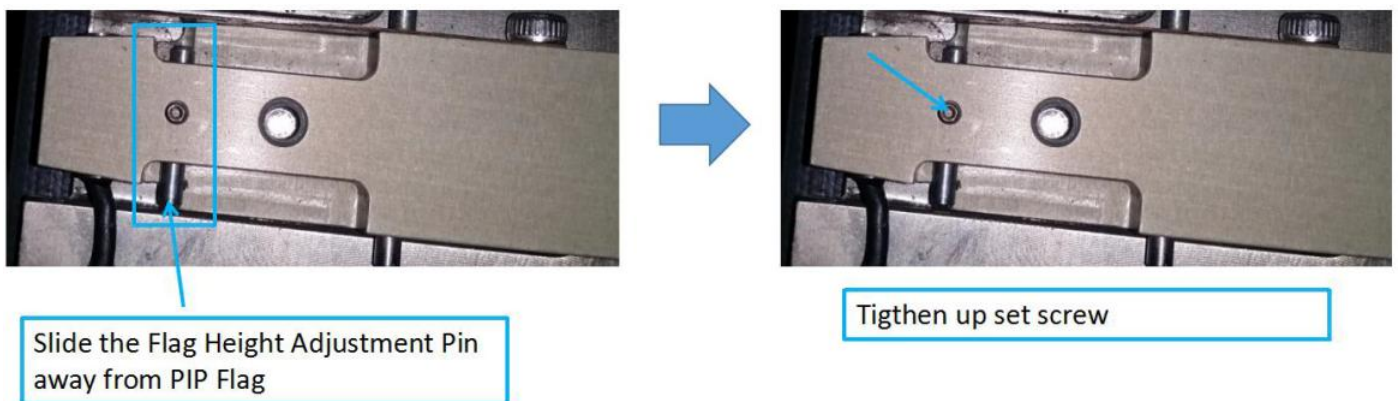
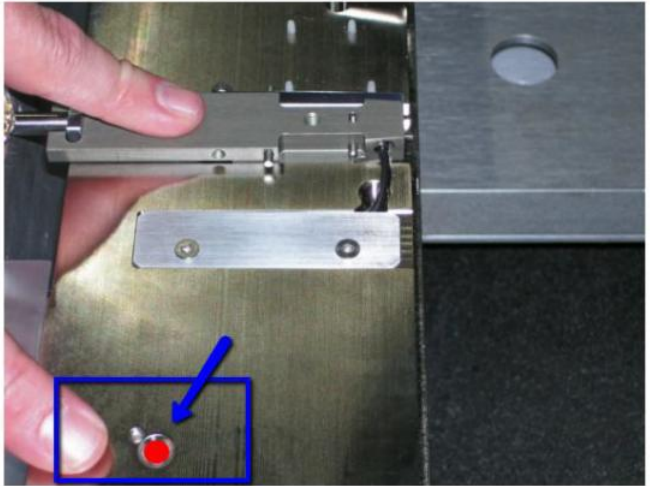


Figure 6 Flag Height Adjustment Pin

	Work Instruction	Doc. Revision	00
	AXI V810 STD PIP FLAG REMOVAL & REPLACEMENT [FOR OLD PIP BOARD STOP]	Effective Date	2 Oct 2016

10. Initialize Digital IO & Toggle “PIP Sensor Extend”.

11. Check PIP Sensor Status by refer to below table.

Task	Digital IO Input Bit Interface	Physical Output
Manually press PIP Flag against PIP Hard Stop	 Left Panel In Place Sensor Engaged Or  Right Panel In Place Sensor Engaged (Depends which side PIP Flag had toggle)	

12. Toggle “ Stage Belts On” at Digital IO Tab to counter check conveyor belt should not contain any friction with PIP Flag.

13. Toggle “ Stage Belts On” at Digital IO tab to turn off Conveyor Motor

14. Remove all tools from XY Stage & Close all access door.